

# Panasonic®

## Operating Instructions

Digital Camera/Lens Kit

Model No. **DMC-G2K**



### HDMI

### VIERA Link™

Before connecting, operating or adjusting this product, please read the instructions completely.

For USA and Puerto Rico assistance, please call: 1-800-211-PANA(7262) or, contact us via the web at: <http://www.panasonic.com/contactinfo>

For Canadian assistance, please call: 1-800-99-LUMIX (1-800-995-8649) or send e-mail to: [lumixconclerge@ca.panasonic.com](mailto:lumixconclerge@ca.panasonic.com)

**Dear Customer,**

**Thank you for choosing Panasonic!**

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, we're sure it will bring you and your family years of enjoyment. Please take time to fill in the model and serial numbers in the space below. The serial number is on the tag located on the underside of your Camera. Be sure to **retain this manual** as your convenient Camera information source. Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in these Operating Instructions.

**Carefully observe copyright laws.**

- Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

## Information for Your Safety

### **WARNING:**

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,**

- **DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.**
- **USE ONLY THE RECOMMENDED ACCESSORIES.**
- **DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

THE SOCKET OUTLET SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE.

Product Identification Marking is located on the bottom of units.

**THE FOLLOWING APPLIES ONLY IN CANADA.**

This Class B digital apparatus complies with Canadian ICES-003.

**THE FOLLOWING APPLIES ONLY IN THE U.S.A.****FCC Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** To assure continued compliance, follow the attached installation instructions and use only shielded interface cables with ferrite core when connecting to computer or peripheral devices.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**Declaration of Conformity**

Trade Name: Panasonic

Model No.: DMC-G2

Responsible party: Panasonic Corporation of North America  
One Panasonic Way, Secaucus, NJ 07094

Support Contact: Panasonic Consumer Electronics Company 1-800-211-PANA (7262)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



## ■ About the battery pack

### CAUTION

Battery pack (Lithium ion battery pack)

- Use the specified unit to recharge the battery pack.
- Do not use the battery pack with equipment other than the specified unit.
- Do not get dirt, sand, liquids, or other foreign matter on the terminals.
- Do not touch the plug terminals (+ and -) with metal objects.
- Do not disassemble, remodel, heat or throw into fire.

If any electrolyte should come into contact with your hands or clothes, wash it off thoroughly with water.

If any electrolyte should come into contact with your eyes, never rub the eyes. Rinse eyes thoroughly with water, and then consult a doctor.

### CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

- Do not heat or expose to flame.
- Do not leave the battery(ies) in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

### Warning

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C (140 °F) or incinerate.

## ■ About the battery charger

### CAUTION!

- **DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.**
- **DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.**
- **DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.**
- **DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.**

### Battery charger/AC adaptor

This battery charger/AC adaptor operates on AC between 110 V and 240 V.

But

- In the U.S.A. and Canada, the battery charger/AC adaptor must be connected to a 120 V AC power supply only.
- When connecting to an AC supply outside of the U.S.A. or Canada, use a plug adaptor to suit the AC outlet configuration.
- When connecting to a supply of greater than AC 125 V, ensure the cord you use is suited to the voltage of the AC supply and the rated current of the battery charger/AC adaptor.
- Contact an electrical parts distributor for assistance in selecting a suitable AC plug adaptor or AC cord set.

- The battery charger is in the standby condition when the AC power supply cord is connected. The primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

#### ■ Care of the camera

- **Do not strongly shake or bump the camera by dropping or hitting it. Do not subject to strong pressure.**

The camera may malfunction, recording pictures may become impossible, or the lens, the LCD monitor or the external case may be damaged.

- **Be particularly careful in the following places as they may cause this unit to malfunction.**

– Places with a lot of sand or dust.

– Places where water can come into contact with this unit such as when using it on a rainy day or on a beach.

- **Do not touch the lens or the sockets with dirty hands. Also, be careful not to allow liquids, sand and other foreign matter to get into the space around the lens, buttons etc.**
- **This camera is not waterproof. If water or seawater splashes on the camera, use a dry cloth to wipe the camera body carefully.**  
**If the unit does not operate normally, please contact the dealer where you purchased the camera or the repair service center.**
- **Do not place your hands inside the mount of the digital camera body. Since the sensor unit is a precision apparatus, it may cause a malfunction or damage.**

#### ■ About Condensation (When the lens, the viewfinder or LCD Monitor is fogged up)

- Condensation occurs when the ambient temperature or humidity changes. Be careful of condensation since it causes lens and LCD monitor stains, fungus and camera malfunction.
- If condensation occurs, turn the camera off and leave it for about 2 hours. The fog will disappear naturally when the temperature of the camera becomes close to the ambient temperature.

#### ■ Read together with the "Cautions for Use". (P185)

-If you see this symbol-

#### Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.



# Contents

Information for Your Safety.....	2
----------------------------------	---

---

---

## Before Use

---

---

Standard Accessories.....	9
Names of the Components.....	11
Rotating the LCD Monitor.....	14
How to Use the Touch Panel.....	15
• What can be done by touch operation.....	16
Operating the Rear Dial.....	17
About the Lens.....	18

---

---

## Preparation

---

---

Attaching/Detaching the Lens.....	20
Attaching the Lens Hood.....	22
Attaching the Shoulder Strap.....	23
Charging the Battery.....	24
• Approximate operating time and number of recordable pictures.....	26
Inserting and Removing the Card (optional)/the Battery.....	28
About the Card.....	29
Setting Date/Time (Clock Set).....	30
• Changing the clock setting.....	30
Setting the Menu.....	31
• Setting menu items.....	32
Setting the Quick Menu.....	33
About the Setup Menu.....	35
Holding and using Your Camera.....	40
Selecting the [REC] Mode, and Recording Still Pictures or Motion Pictures.....	43

---

---

## Basic

---

---

Taking Pictures using the Automatic Function (Intelligent Auto Mode).....	46
• Scene detection.....	47
• AF Tracking Function.....	48
• Settings in Intelligent Auto Mode.....	49
Taking Pictures with Your Favorite Settings (Program AE Mode).....	51
• Setting the Focus Mode (AFS/AFC/MF).....	52

• Focusing.....	53
• When the subject is not in focus.....	53
• Preventing jitter (camera shake).....	53
• Taking pictures using the Touch Shutter function.....	54
• Program Shift.....	54
Taking Pictures with the Zoom.....	55
• Using the Optical Zoom/using the Extended Optical Zoom (EZ)/using the Digital Zoom.....	55
Playing Back Pictures.....	57
• Changing the information displayed on the playback screen.....	58
• Displaying multiple screens (Multi Playback).....	58
• Displaying Pictures by Recording Date (Calendar Playback).....	59
• Using the Playback Zoom.....	60
Deleting Pictures.....	61
• To delete a single picture.....	61
• To delete multiple pictures (up to 50) or all the pictures.....	61

---

---

## Advanced (Recording pictures)

---

---

Switching the Display of the LCD Monitor/Viewfinder.....	63
• Switching the Information Displayed on the recording screen.....	63
Taking Pictures using the Built-in Flash.....	66
• Switching to the appropriate flash setting.....	66
• Adjust the flash output.....	70
• Setting to the 2nd Curtain Synchro.....	71
Compensating the Exposure.....	72
Taking Pictures using Burst Mode.....	73
Taking Pictures using Auto Bracket.....	75
Taking Pictures with the Self-timer.....	77
Setting the Method used to Focus (AF Mode).....	78
Taking Pictures with Manual Focus.....	83
Fixing the Focus and the Exposure (AF/AE Lock).....	85
Adjusting the White Balance.....	86
• Setting the White Balance manually.....	87
• Setting the color temperature.....	88
• Finely adjusting the White Balance.....	88
• White Balance Bracket.....	89
Setting the Light Sensitivity.....	89

Change Tone of the Color for the Picture to be taken (Film Mode) .....	91	• Recording Dates/Times at Overseas Travel Destinations (World Time) ...	125
• Adjusting each Film Mode to the desired setting .....	92	Using the [REC] Mode Menu .....	126
• Multi Film Bracket .....	93	•  [ASPECT RATIO] .....	126
Taking Pictures by Specifying the Aperture/Shutter Speed .....	94	•  [PICTURE SIZE] .....	126
• Aperture-priority AE .....	94	•  [QUALITY] .....	127
• Shutter-priority AE .....	94	•  [FACE RECOG.] .....	128
Taking Picture by Setting the Exposure Manually .....	95	•  [METERING MODE] .....	128
Confirm the Effects of Aperture and Shutter Speed (Preview Mode) .....	97	•  [STABILIZER] .....	129
Taking Expressive Portraits and Landscape Pictures (Advanced Scene Mode) .....	98	•  [FLASH] .....	129
• [PORTRAIT] .....	99	•  [RED-EYE REMOVAL] .....	130
• [SCENERY] .....	100	•  [FLASH SYNCHRO] .....	130
• [SPORTS] .....	100	•  [FLASH ADJUST.] .....	130
• [CLOSE-UP] .....	101	•  [I.RESOLUTION] .....	130
• [NIGHT PORTRAIT] .....	102	•  [I.EXPOSURE] (Intelligent exposure adjustment) .....	131
Taking Pictures that match the Scene being recorded (Scene Mode) .....	103	•  [ISO LIMIT SET] .....	131
•  [SUNSET] .....	103	•  [ISO INCREMENTS] .....	131
•  [PARTY] .....	104	•  [LONG SHTR NR] .....	132
•  [BABY1]/ [BABY2] .....	104	•  [EX. OPT. ZOOM] .....	132
•  [PET] .....	105	•  [DIGITAL ZOOM] .....	132
•  [PERIPHERAL DEFOCUS] .....	105	•  [BURST RATE] .....	132
Taking Pictures while Adjusting Color (My Color Mode) .....	106	•  [AUTO BRACKET] .....	133
• Adjusting the custom settings to achieve desired effects .....	107	•  [SELF-TIMER] .....	133
Registering Personal Menu Settings (Registering custom settings) .....	108	•  [COLOR SPACE] .....	133
Taking Pictures in Custom Mode .....	109	•  [AUDIO REC.] .....	134
Recording Motion Picture .....	110	Using the [MOTION PICTURE] Mode Menu .....	134
• Changing [REC MODE] and [REC QUALITY] .....	113	•  [REC MODE] .....	134
Recording Motion Pictures with the Desired Settings (Motion Picture P Mode) .....	115	•  [REC QUALITY] .....	135
Taking a Picture with Face Recognition Function .....	117	•  [CONTINUOUS AF] .....	135
• Face Settings .....	118	•  [WIND CUT] .....	135
• Setting Auto Registration/Sensitivity .....	121	Using the [CUSTOM] Menu .....	136
• Auto Registration .....	122	Entering Text .....	144
Useful Functions at Travel Destinations .....	123		
• Recording which Day of the Vacation You Take the Picture .....	123		

---



---










## Advanced (Playback)

---



---

Playing Back Motion Pictures/Pictures with Audio .....	145
• Motion pictures .....	145
• Pictures with audio .....	146
Creating Still Pictures from a Motion Picture .....	146
Using the [PLAYBACK] Mode Menu .....	147
•  [SLIDE SHOW] .....	147
•  [PLAYBACK MODE] .....	148
•  [TITLE EDIT] .....	149
•  [TEXT STAMP] .....	150
•  [VIDEO DIVIDE] .....	153

•  [RESIZE] Reducing the picture size (number of pixels).....	154
•  [CROPPING].....	155
•  [ASPECT CONV.].....	156
•  [ROTATE]/  [ROTATE DISP.] ....	157
•  [FAVORITE].....	158
•  [PRINT SET].....	159
•  [PROTECT].....	160
•  [FACE REC EDIT] .....	161

Specifications .....	206
Digital Camera Accessory System .....	210
Digital Camera Accessory Order Form (For USA and Puerto Rico Customers).....	212
Limited Warranty (ONLY FOR U.S.A. AND PUERTO RICO)...	213
Index.....	216
Useful Information (For Latin American Countries Only) ....	219

---



---

## Connecting to other equipment

---



---

Playing Back Pictures on a TV Screen .....	162
• Playing back pictures using the AV cable (supplied).....	162
• Playing back pictures on a TV with an SD Memory Card slot.....	163
• Playing back on the TV with HDMI socket.....	163
Saving the Recorded Still Pictures and Motion Pictures.....	168
• Copy the playback image using an AV cable.....	168
• Copying to a PC using "PHOTOfunSTUDIO 5.0 HD Edition".....	169
Connecting to a PC .....	170
Printing the Pictures .....	173
• Selecting a single picture and printing it.....	174
• Selecting multiple pictures and printing them .....	174
• Print Settings .....	175

---



---

## Others

---



---

Using an External Flash (optional) .....	177
Using the Protector/Filter (optional).....	178
Using the Remote Shutter (optional) ....	179
Using the External Microphone (optional).....	180
Using the AC Adaptor.....	181
LCD Monitor Display/Viewfinder Display.....	182
Cautions for Use.....	185
Message Display .....	189
Troubleshooting.....	192
Number of Recordable Pictures and Available Recording Time.....	201




## Standard Accessories

Check that all the accessories are included before using the camera.

Product numbers correct as of March 2010. These may be subject to change.


- 1 Digital Camera Body  
(This is referred to as **camera body** in these operating instructions.)
  - 2 Interchangeable Lens  
“LUMIX G VARIO 14–42 mm/F3.5–5.6 ASPH./MEGA O.I.S.”  
(This is referred to as **lens** in these operating instructions.)
  - 3 Lens Hood
  - 4 Lens Cap  
(This is attached to the interchangeable lens at the time of purchase.)
  - 5 Lens Rear Cap  
(This is attached to the interchangeable lens at the time of purchase.)
  - 6 Lens Storage Bag
  - 7 Battery Pack  
(Indicated as **battery pack** or **battery** in the text)  
Charge the battery before use.
  - 8 Battery Charger/AC Adaptor  
(Indicated as **battery charger** or **charger** in the text)
  - 9 AC Cable
  - 10 AV Cable
  - 11 USB Connection Cable
  - 12 Body Cap  
(This is attached to the camera body at the time of purchase.)
  - 13 CD-ROM
    - Software:  
Use it to install the software to your PC.
  - 14 Shoulder Strap
  - 15 Stylus pen
- SD Memory Card, SDHC Memory Card and SDXC Memory Card are indicated as **card** in the text.
  - **The card is optional.**
  - Description in these operating instructions is based on the 14–42 mm/F3.5–5.6 lens included in DMC-G2K.
  - For information about optional accessories, refer to the “Digital Camera Accessory System”. (P210)
  - If any accessories are lost, customers in the USA and Puerto Rico should contact Panasonic's parts department at 1-800-833-9626 and customers in Canada should contact 1-800-99-LUMIX (1-800-995-8649) for further information about obtaining replacement parts.

<p><b>1</b></p> 	<p><b>2</b></p>  <p>H-FS014042</p>	<p><b>3</b></p>  <p>VYC1009</p>	<p><b>4</b></p>  <p>VYF3201</p>	<p><b>5</b></p>  <p>VFC4315</p>
<p><b>6</b></p>  <p>VFC4456</p>	<p><b>7</b></p>  <p>DMW-BLB13PP</p>	<p><b>8</b></p>  <p>DE-A49B</p>	<p><b>9</b></p>  <p>K2CA2EA00002</p>	<p><b>10</b></p>  <p>K1HA08CD0020</p>
<p><b>11</b></p>  <p>K1HA08AD0003</p>	<p><b>12</b></p>  <p>VKF4385</p>	<p><b>13</b></p> 	<p><b>14</b></p>  <p>VFC4538</p>	<p><b>15</b></p>  <p>VGQ0C14</p>

## Names of the Components

### ■ Camera body

- 1 Flash (P66)
- 2 Sensor
- 3 Self-timer indicator (P77)  
AF Assist Lamp (P138)
- 4 Lens release button (P21)
- 5 Lens lock pin
- 6 Mount
- 7 Lens fitting mark (P20)

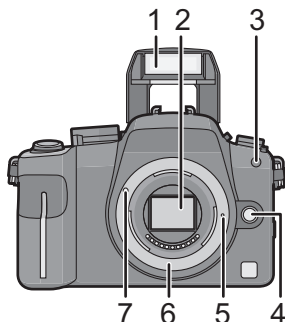


Rear dial is described as follows in these operating instructions.

e.g.: Rotating left or right




 e.g.: Pressing the rear dial



- Refer to P17 for operation of the rear dial.

- 8 [LVF/LCD] button (P42)
- 9 Diopter adjustment dial (P42)
- 10 Viewfinder (P42, 64, 182)
- 11 Eye sensor (P42)
- 12 Playback button (P57, 61, 145, 162, 163, 165)
- 13 [AF/AE LOCK] button (P85)
- 14 Camera ON/OFF switch (P30)
- 15 Rear dial (P54, 58, 59, 72, 94, 95, 115, 147, 155)
- 16 [DISPLAY] button (P58, 63, 97)
- 17 Eye Cup (P186)
- 18 Touch panel/LCD monitor (P15, 40, 58, 63, 182)
- 19 [Q.MENU] button (P33, 48, 78, 83)
- 20 Delete button (P61)/  
Preview button (P97)/  
Flicker Reduction Function (P116)
- 21 [MENU/SET] button (P30)
- 22 Cursor buttons
  - ▲/ISO (P89)
  - ◀/Film Mode (P91)
  - ▼/Function button (P136)

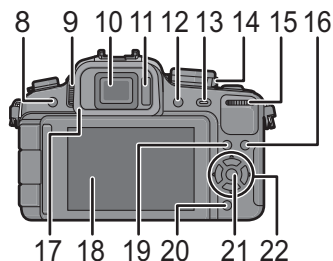


Assign Menu to ▼ button. It is convenient to register a Menu that is used often.  
 [FOCUS AREA SET]/[ASPECT RATIO]/[QUALITY]/[METERING MODE]/  
 [I.RESOLUTION]/[I.EXPOSURE]/[EX. OPT. ZOOM]/[GUIDE LINE]/[REC AREA]/  
 [REMAINING DISP.]

▶/WB (White Balance) (P86)

In these operating instructions, the cursor buttons are described as shown in the figure below or described with ▲/▼/◀/▶.

e.g.: When you press the ▼ (down) button

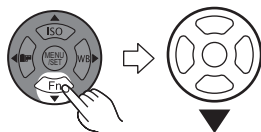

or

Press ▼

23 Focus mode lever (P46, 51, 52, 78, 83, 111)

24 Auto focus mode dial

Face Detection ([]) (P79):

AF Tracking ([]) (P81):

23-area-focusing ([]) (P82):

1-area-focusing ([]) (P82):

25 Microphone (P111, 134)

26 Drive mode lever

Single (P51):

Burst (P73):

Auto Bracket (P75):

Self-timer (P77):

27 Shutter button (P45, 46)

28 Focus distance reference mark (P84)

29 Flash open lever (P66)

30 Hot shoe (P177, 180)

31 Mode dial (P43)

32 Status indicator (P46)

33 Motion picture button (P45, 110)

34 Intelligent Auto button (P46)



35 [MIC/REMOTE] socket (P179, 180)

36 Shoulder strap eyelet (P23)


- Be sure to attach the shoulder strap when using the camera to ensure that you will not drop it.

37 [HDMI] socket (P163, 165)

38 [AV OUT/DIGITAL] socket (P162, 168, 171, 173)

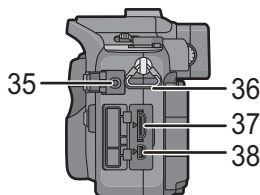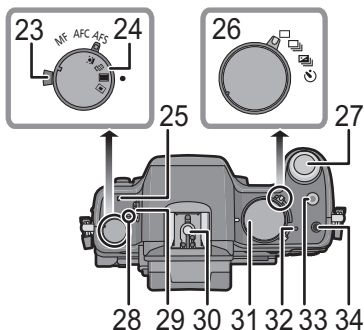

## 39 DC cable cover (P181)

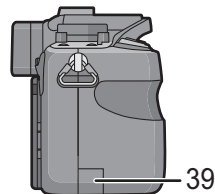


## 40 Card/Battery door (P28)

## 41 Release lever (P28)

## 42 Tripod receptacle (P189)

- When you use a tripod, make sure the tripod is stable when the camera is attached to it.

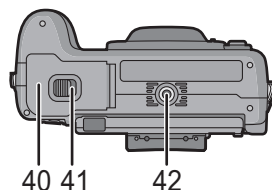

### ■ Lens

#### H-FS014042 (LUMIX G VARIO 14–42 mm/F3.5–5.6 ASPH./MEGA O.I.S.)

## 43 Tele

## 44 Lens surface


## 45 Focus ring (P83)

## 46 Wide

## 47 Zoom ring (P55)

## 48 Contact point

## 49 Lens fitting mark (P20)

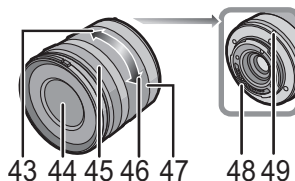


### ■ Battery charger/AC adaptor (P24, 181)

## 50 Power input socket [AC IN]

## 51 [CHARGE] indicator


## 52 Power output socket [DC OUT]

## 53 Battery holder

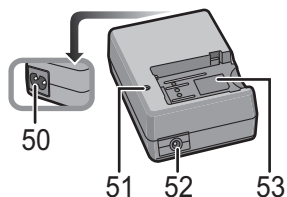

## Rotating the LCD Monitor


At the time when this camera is purchased, the LCD monitor is stowed in the camera body. Bring out the LCD monitor as shown below.

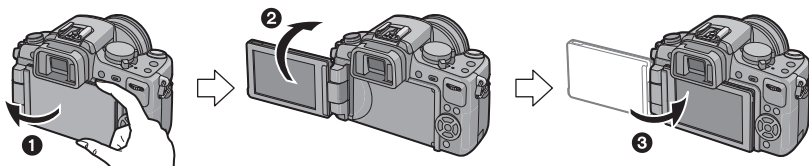

- ❶ Open the LCD monitor. (Maximum 180°)
- ❷ It can be rotated 180° forward.
- ❸ Return the monitor to its original position.

### Rotation range of the LCD monitor

#### ■ Horizontal opening direction

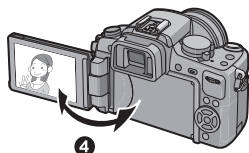

- ❹ Maximum 180°


- ❺ 180°

- It can be rotated 180° forward.

- ❻ 90°


- It can only be rotated 90° towards you.

#### ■ Vertical rotating direction

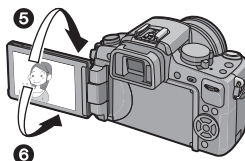

#### 📌 Note

- **Only rotate the LCD monitor after opening it wide enough, and be careful not to use excessive force as it may be damaged.**
- When holding the edge of the LCD monitor, there may be some distortion, however this is not a malfunction. Moreover, this has no effect on the taken pictures or playback.
- When not using the LCD monitor it is recommended that you close it with the screen facing inward to prevent dirt and scratches.

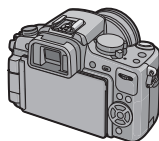


## How to Use the Touch Panel

You can operate by directly touching the LCD monitor (touch panel) with your finger.

### ■ Touch

To touch and release the touch panel. It is used to select an icon or picture.


- It may not operate properly when multiple icons are touched simultaneously, so try to touch the center of the icon.

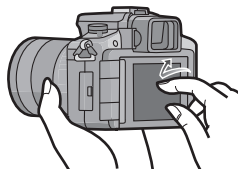

### ■ Drag


A movement without releasing the touch panel. It is used to change the range of displayed pictures, or switch the screen with the slide bar.

- If you select a wrong icon, you can drag to a different icon, and that icon will be selected by releasing your finger.

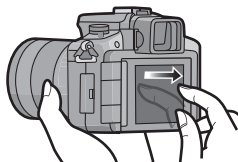

### ● Note

- The touch panel does not operate when the LCD monitor is turned off.
- This touch panel is a type that detects pressure. **Touch a little stronger** if you have a commercially available protection sheet affixed.
- If you use a commercially available liquid crystal protection sheet, please follow the instructions that accompany the sheet. (Some liquid crystal protection sheets may impair visibility or operability.)
- Touch panel will not operate if the hand holding the unit is touching the touch panel.
- Do not press on the LCD monitor with hard pointed tips, such as ball point pens.
- Do not operate with your fingernails.
- Wipe the LCD monitor with a dry soft cloth when it gets dirty with finger prints or other.
- Do not scratch or press the LCD monitor too hard.

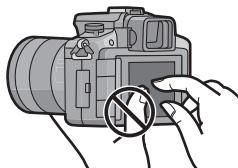

## About the Stylus pen

It is easier to use the stylus pen (supplied) for detailed operation or if it is hard to operate with your fingers.

- Only use the supplied stylus pen.
- Do not place it where small children can reach.

## What can be done by touch operation

By using the touch panel, you can move the AF area by touching the subject to focus on, or change the setting directly by touching the icons, making it easier to operate during recording or setting.

Following are examples of what can be done by touch operation.


### When recording



Touch Tracking (P48, 81)  
Touch 1-area AF (P82)  
Face Recognition Touch  
1-area AF (P79)  
Touch Multi AF Area  
Selection (P82)  
Touch MF Assist Enlarge  
(P83)



Touch Shutter (P54)  
During recording, a picture is taken automatically after focusing on the subject that is touched.

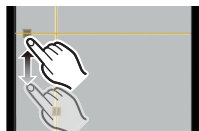


Guide Line Position  
Movement (P65)  
Histogram Position  
Movement (P66)

### When recording



Touch Quick Menu (P33)  
LCD Recording Information Display Touch Operation (P34)

### When playing back

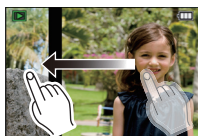

Picture Playback (P57)  
Playback Zoom (P60)

### Note

- When the guide as shown on the right is displayed on the screen, it is also possible to operate using  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$  of the cursor button and [MENU/SET] button.  
 $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ : Selection of items or setting of values etc. is performed.  
[MENU/SET]: Confirmation of setting contents or exit from menu is performed.
- Menu item cannot be set with touch operation. Set with the cursor button or rear dial. (P32)
- Touch operation is not possible while using the viewfinder. Perform the setting using the cursor button or rear dial (P17).





## Operating the Rear Dial


There are 2 ways to operate the rear dial, rotating left or right, and by pressing.

### Rotating:

Selection of items or setting of values is performed during the various settings.

### Pressing:

Operations that are the same as [MENU/SET] button, such as selection of settings and exiting the menu, are performed during the various settings.

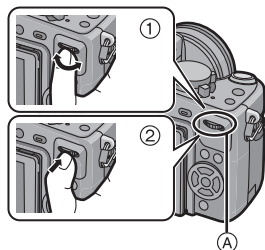

### Example of operation during Recording/ Playback screen

	① "Rotating"	② "Pressing"
*1	Adjustments of Program Shift (P54), Aperture (P94), Shutter Speed (P94), etc.	Switching to compensating the exposure (P72) etc.
*2	Multi (Calendar) Playback (P59), Playback Zoom (P60)	Switching to Normal Playback (during Multi Playback), move images while zoomed (while using Playback Zoom)

Ⓐ Rear dial

\*1 Recording

\*2 Playback

### Note

- The sound of the rear dial operation may be recorded when operated during motion picture recording.

## About the Lens

This unit can use the dedicated lenses compatible with the Micro Four Thirds™ System lens mount specification (Micro Four Thirds mount).

Select a lens that matches the scene being recorded and your use of the pictures.

### ■ “Micro Four Thirds Mount”

This is the lens mount standard for the “Micro Four Thirds System”.

This was newly developed as an interchangeable lens mount dedicated for digital cameras.



### ■ About the functions of your lens

- Depending on the type of lens, you may not be able to use some functions such as the Direction Detection function (P41), [STABILIZER] (P129), Quick AF (P137) and Continuous AF (P137).
- The available flash range etc. differs depending on the aperture value of the lens you are using.
- Take some test pictures with the lens you are using.
- Lens with the Four Thirds™ mount specification can be used by using the mount adaptor (DMW-MA1; optional). Because of its structure, Micro Four Thirds mount specification lenses cannot be used on the Four Thirds mount specification cameras. It can only be used on the Micro Four Thirds mount specification cameras.
- When you use the M mount adaptor or R mount adaptor (DMW-MA2M, DMW-MA3R; optional), you can use Leica M Mount or Leica R Mount interchangeable lenses.
  - For certain lenses, the actual distance at which the subject is in focus may differ slightly from the rated distance.
  - When using a Leica lens mount adaptor, set [SHOOT W/O LENS] (P143) to [ON].
- The focal distance of the employed lens is effectively doubled. (A 50 mm lens is equivalent to a 100 mm lens.)



## Interchangeable lenses that can be used with this unit and Auto Focus/Auto Aperture Operation (As of March 2010)

(○: Usable, ●: Some functions/features limited, —: Not usable)

Lens type		when recording still pictures		while recording motion pictures	
		Auto Focus	Auto aperture setting	Auto Focus	Auto aperture setting
Micro Four Thirds mount specification lens	The Lens included in DMC-G2K. (H-FS014042)	○ ([AFS], [AFC])	○	●*4, 5	●*7
	Other Micro Four Thirds mount specification lens*3				
	Micro Four Thirds mount specification lens compatible to HD motion pictures (LUMIX G VARIO HD)	○ ([AFS], [AFC])	○	○*4	○
Four Thirds mount specification lens*1	Four Thirds mount specification lens compatible to contrast AF	● ([AFS])	○	●*6	●*7
	Four Thirds mount specification lens not compatible to contrast AF	●*8 ([AFS])	○	●*6, 8	●*7
Leica mount specification lens*2	Interchangeable lens for Leica	—	—	—	—

\*1 Mount adaptor (DMW-MA1; optional) is necessary to use with this unit.

\*2 A Leica lens mount adaptor (DMW-MA2M or DMW-MA3R; optional) is necessary.

\*3 This function is not supported by some Micro Four Thirds mount specification lenses. For lens operations, please see our website.

\*4 When recording motion pictures, the focus is continuously adjusted for both [AFS] and [AFC] (P52).

\*5 AF tracking is slower than the HD motion picture compatible lens (LUMIX G VARIO HD lens), also the sound of Auto Focus operation may be recorded.

\*6 Auto Focus is activated only when the shutter button is pressed halfway. The sound of Auto Focus operation may be recorded at this time.

\*7 The sound of Aperture operation may be recorded.

\*8 AF performance may differ depending on the lens used. Refer to the website for details.

Refer to catalogues/Web pages for most current information regarding compatible lenses.




<http://panasonic.jp/support/global/cs/dsc/> (This Site is English only.)

## Attaching/Detaching the Lens

- Check that the camera is turned off.
- Close the flash.

### Attaching a lens to the camera body


- 1** Turn the lens rear cap **A** and the body cap **B** in the direction of the arrow to detach them.

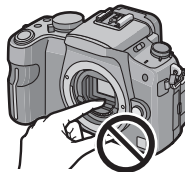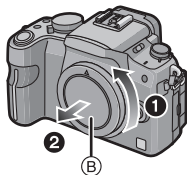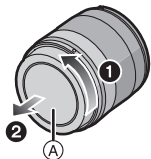

- Do not put your hands inside the mount.


- 2** Align the lens fitting marks **C** (red marks) on the camera body and the lens and then rotate the lens in the direction of the arrow until it clicks.

- Do not press the lens release button **D** when you attach a lens.
- Do not try to attach the lens when holding it at an angle to the camera body as the lens mount may get scratched.
- Check that the lens is attached correctly.

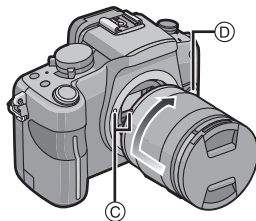

- 3** Detach the lens cap.

- Detach the lens cap before taking pictures.

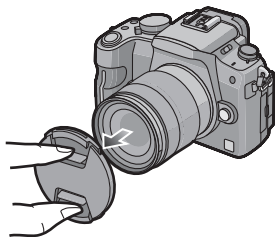

## ■ Optical Image Stabilizer


The lens included in DMC-G2K has a stabilizer function.

- There is no [O.I.S.] switch on the 14–42 mm/F3.5–5.6 lens included in DMC-G2K. Set the [STABILIZER] settings in the [REC] Mode menu. (P129)

When using a lens with an [O.I.S.] switch, it is possible to set to enable the Optical Image Stabilizer by switching the [O.I.S.] switch on the lens to [ON].

- You can change the Optical Image Stabilizer Mode in the [REC] Mode menu. (P129) It is set to [MODE1] at the time of purchase.
- It is recommended to disable the Optical Image Stabilizer when using a tripod. [(OFF)] is displayed on the screen at that time.

**Example when a lens with the [O.I.S.] switch is mounted.**

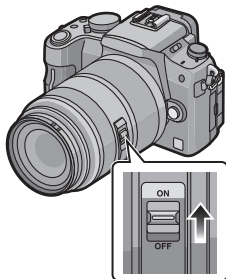


## Detaching a lens from the camera body

**1** Attach the lens cap.

**2** Press the lens release button **D** while turning the lens as far as possible in the direction of the arrow to detach it.

- Always attach the body cap to the camera body so that dirt or dust does not get inside.
- Attach the lens rear cap so that the lens contact point does not get scratched.

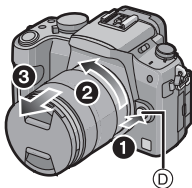

### Note

- Change lenses where there is not a lot of dirt or dust. Refer to P186 when dirt or dust gets on the lens.
- When you turn the camera off or carry the camera, attach the lens cap to protect the surface of the lens.
- **Be careful not to lose the lens cap, the lens rear cap and the body cap.**

## Attaching the Lens Hood


In bright sunlight or backlight, the lens hood will minimize lens flare and ghosting. The lens hood cuts off excess lighting and improves the picture quality.

- Check that the camera is turned off.
- Close the flash.

To attach the lens hood (flower shape) that came with the 14–42 mm/F3.5–5.6 lens included in DMC-G2K


Insert the lens hood into the lens with the short sides at the top and bottom, and turn in the direction of the arrow until it stops.

- (A) Fitting to the mark.

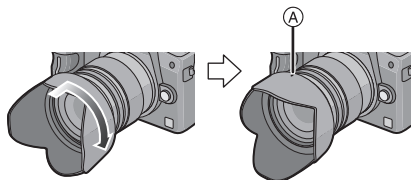


### ■ Temporarily storing the lens hood

- 1 Turn the lens hood in the direction of the arrow to detach it.

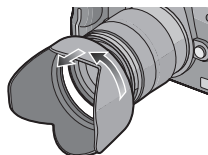

- 2 Reverse the lens hood and then attach it in the same way as shown previously.

- Attach the lens cap.
- When temporarily storing the lens hood, check that it is firmly attached and that it does not appear in the picture.

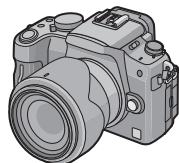

### Note


- Hold the short sides of the flower shaped lens hood when attaching or detaching it.
- When taking pictures with flash with the lens hood attached, the lower portion of the photo may turn dark (vignetting effect) and the control of the flash may be disabled because the photo flash may be obscured by the lens hood. We recommend detaching the lens hood.
- When using the AF Assist Lamp in the dark, detach the lens hood.

## Attaching the Shoulder Strap


- We recommend attaching the shoulder strap when using the camera to prevent it from dropping.

- 1** Pass the shoulder strap through the shoulder strap eyelet on the camera body.


(A): Shoulder strap eyelet

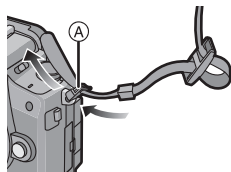

- 2** Pass the end of the shoulder strap through the ring in the direction of the arrow and then pass it through the stopper.

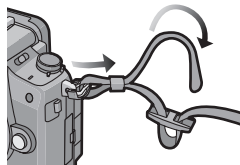


- 3** Pass the end of the shoulder strap through the hole on the other side of the stopper.

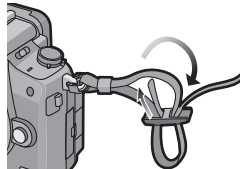

- 4** Pull the other side of the shoulder strap and then check that it will not come out.

- Perform steps **1** to **4** and then attach the other side of the shoulder strap.

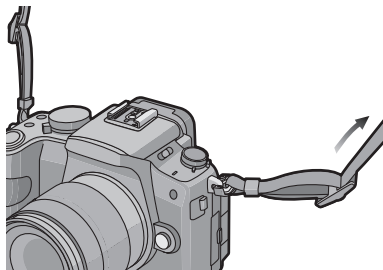

### Note

- Attach the shoulder strap so that the "LUMIX" LOGO is on the outside.
- Use the shoulder strap around your shoulder.
  - Do not wrap the strap around your neck.
  - It may result in injury or accident.
- Do not leave the shoulder strap where an infant can reach it.
  - It may result in an accident by mistakenly wrapping around the neck.

## Charging the Battery

### ■ About batteries that you can use with this unit

The battery that can be used with this unit is DMW-BLB13PP.

It has been found that counterfeit battery packs which look very similar to the genuine product are made available to purchase in some markets. Some of these battery packs are not adequately protected with internal protection to meet the requirements of appropriate safety standards. There is a possibility that these battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack. To ensure that safe products are used we would recommend that a genuine Panasonic battery pack is used.


- Use the dedicated charger and battery.
- The camera has a function for distinguishing batteries which can be used safely. The dedicated battery (DMW-BLB13PP) supports this function. The only batteries suitable for use with this unit are genuine Panasonic products and batteries manufactured by other companies and certified by Panasonic. (Batteries which do not support this function cannot be used). Panasonic cannot in any way guarantee the quality, performance or safety of batteries which have been manufactured by other companies and are not genuine Panasonic products.

### ■ Charging

- The battery is not charged when the camera is shipped. Charge the battery before use.
- Charge the battery with the charger indoors.
- Charge the battery in a temperature between 10 °C to 30 °C (50 °F to 86 °F). (The battery temperature should also be the same.)


#### 1 Connect the AC cable.

- The battery cannot be charged when the DC cable (DMW-DCC3; optional) is connected to the AC adaptor.

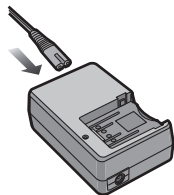

#### 2 Attach the battery with attention to the direction of the battery.

- Disconnect the charger from the electrical socket and detach the battery after charging is completed.

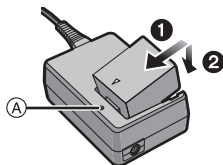



## ■ About the [CHARGE] indicator

**The [CHARGE] indicator turns on:** The [CHARGE] indicator (A) is turned on and charging will start.

**The [CHARGE] indicator turns off:** The [CHARGE] indicator (A) of the charger will turn off once the charging has completed without any problem.

### • When the [CHARGE] indicator flashes

- The battery temperature is too high or too low. Please charge the battery again in a temperature between 10 °C to 30 °C (50 °F to 86 °F).
- The terminals of the charger or the battery are dirty. In this case, wipe them with a dry cloth.

## ■ Charging time

Charging time	Approx. 155 min
<ul style="list-style-type: none"> <li>• The indicated charging time is for when the battery has been discharged completely. The charging time may vary depending on how the battery has been used. The charging time for the battery in hot/cold environments or a battery that has not been used for a long time may be longer than normal.</li> </ul>	

- The indicated charging time is for when the battery has been discharged completely. The charging time may vary depending on how the battery has been used. The charging time for the battery in hot/cold environments or a battery that has not been used for a long time may be longer than normal.

Charging time and number of recordable pictures with the optional battery pack (DMW-BLB13PP) are the same as above.

## ■ Battery indication

The battery indication is displayed on the screen.

[It does not appear when you use the camera with the AC adaptor (P181) connected.]



- The indication turns red and blinks if the remaining battery power is exhausted. (The status indicator also blinks) Recharge the battery or replace it with a fully charged battery.

### Note

- Do not use any other AC cables except the supplied one.
- The battery becomes warm after using it and during and after charging. The camera also becomes warm during use. This is not a malfunction.
- The battery can be recharged even when it still has some charge left, but it is not recommended that the battery charge be frequently topped up while the battery is fully charged. (Since characteristic swelling may occur.)
- **Do not leave any metal items (such as clips) near the contact areas of the power plug. Otherwise, a fire and/or electric shocks may be caused by short-circuiting or the resulting heat generated.**

## Approximate operating time and number of recordable pictures

### ■ Recording still pictures (when using the LCD monitor) (By CIPA standard in Program AE Mode)

	When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is used
Number of recordable pictures	Approx. 360 pictures
Recording time	Approx. 180 min

### ■ Recording still pictures (when using the viewfinder) (By CIPA standard in Program AE Mode)


	When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is used
Number of recordable pictures	Approx. 390 pictures
Recording time	Approx. 195 min

#### Recording conditions by CIPA standard

- CIPA is an abbreviation of [Camera & Imaging Products Association].
- Temperature: 23 °C (73.4 °F)/Humidity: 50% when LCD monitor is on.
- Using a Panasonic SD Memory Card (2 GB).
- Using the supplied battery.
- Starting recording 30 seconds after the camera is turned on.
- **Recording once every 30 seconds** with full flash every second recording.
- Turning the camera off every 10 recordings and leaving it until the temperature of the battery decreases.

The number of recordable pictures varies depending on the recording interval time. If the recording interval time becomes longer, the number of recordable pictures decreases. [For example, if you were to take one picture every two minutes, then the number of pictures would be reduced to approximately one-quarter of the number of pictures given above (based upon one picture taken every 30 seconds).]

## ■ Recording motion pictures (when using the LCD monitor)

– [AVCHD Lite] (Recording with picture quality set to [SH] ())

	When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is used
Continuous recordable time (motion pictures)	Approx. 180 min
Actual recordable time (motion pictures)	Approx. 100 min

– [MOTION JPEG] (Recording with picture quality set to [HD] ())

	When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is used
Continuous recordable time (motion pictures)	Approx. 180 min*
Actual recordable time (motion pictures)	Approx. 100 min*

- These times are for an ambient temperature of 23 °C (73.4 °F) and a humidity of 50%. Please be aware that these times are approximate.
- Actual recordable time is the time available for recording when repeating actions such as switching the power supply [ON]/[OFF], starting/stopping recording etc.
- \* Motion picture recorded continuously in [MOTION JPEG] is up to 2 GB. Only the maximum recordable time for 2 GB is displayed on the screen.

## ■ Playback (when using the LCD monitor)

	When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is used
Playback time	Approx. 330 min

### Note


- **The operating times and number of recordable pictures will differ according to the environment and the operating conditions.**  
For example, in the following cases, the operating times shorten and the number of recordable pictures is reduced.
  - In low-temperature environments, such as on ski slopes.
  - When using [AUTO POWER LCD] or [POWER LCD] (P36).
  - When flash is used repeatedly.
- When the operating time of the camera becomes extremely short even after properly charging the battery, the life of the battery may have expired. Buy a new battery.

## Inserting and Removing the Card (optional)/the Battery

- Check that this unit is turned off.
- Close the flash.
- We recommend using a Panasonic card.

### 1 Slide the release lever in the direction of the arrow and open the card/battery door.


- Always use genuine Panasonic batteries (DMW-BLB13PP).
- If you use other batteries, we cannot guarantee the quality of this product.

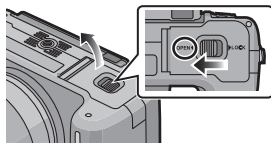

### 2 Battery: Insert until it is locked by the lever (A) being careful about the direction you insert it. Pull the lever (A) in the direction of the arrow to remove the battery.

**Card:** Push it fully until it clicks being careful about the direction you insert it. To remove the card, push the card until it clicks, then pull the card out upright.


- (B): Do not touch the connection terminals of the card.
- The card may be damaged if it is not fully inserted.

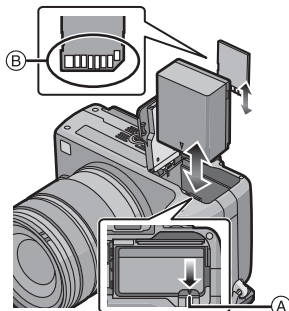

### 3 ①: Close the card/battery door.

### ②: Slide the release lever in the direction of the arrow.

- If the card/battery door cannot be completely closed, remove the card, check its direction and then insert it again.

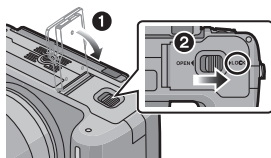

#### Note

- Remove the battery after use.
- Do not remove the battery while the power is on as the settings on the camera may not be stored properly.
- The supplied battery is designed only for the camera. Do not use it with any other equipment.
- The battery will be exhausted if left for a long period of time after being charged.
- Before removing the card or battery, turn the camera off, and wait until the status indicator has gone off completely. (Otherwise, this unit may no longer operate normally and the card itself may be damaged or the recorded pictures may be lost.)

## About the Card

### Access to the card

The access indication lights red when pictures are being recorded on the card.



### Card

The following cards which conform to the SD video standard can be used with this unit. (These cards are indicated as **card** in the text.)

Type of card which can be used with this unit	Remarks
<b>SD Memory Card (8 MB to 2 GB)</b>	<ul style="list-style-type: none"> <li>• SDHC Memory Card can be used with SDHC Memory Card or SDXC Memory Card compatible equipment.</li> <li>• SDXC Memory Card can only be used with SDXC Memory Card compatible equipment.</li> <li>• Check that the PC and other equipment are compatible when using the SDXC Memory Cards. <a href="http://panasonic.net/avc/sdcard/information/SDXC.html">http://panasonic.net/avc/sdcard/information/SDXC.html</a></li> </ul>
<b>SDHC Memory Card (4 GB to 32 GB)</b>	
<b>SDXC Memory Card (48 GB to 64 GB)</b>	

- Only cards bearing the SDHC logo (indicating that the card conforms to SD video standards) may be used as 4 GB to 32 GB cards.
- Only cards bearing the SDXC logo (indicating that the card conforms to SD video standards) may be used as 48 GB to 64 GB cards.
- Use a card with SD Speed Class\* with "Class 4" or higher when recording motion pictures in [AVCHD Lite]. Also, use a card with SD Speed Class with "Class 6" or higher when recording motion pictures in [MOTION JPEG].
- \* SD Speed Class is the speed standard regarding continuous writing.
- Please confirm the latest information on the following website.

<http://panasonic.jp/support/global/cs/dsc/>

(This Site is English only.)

### Note

- **Do not turn off the power or remove the battery, card, or the DC cable (DMW-DCC3; optional) (when the AC adaptor is in use), while the access indicator is lit, while writing, reading, or deleting the picture, formatting (P39), etc. Also, do not apply vibration, shock, or static electricity to the unit.**

**The card or the data on the card may be damaged, and this unit may no longer operate normally.**

**If operation fails due to vibration, impact or static electricity, perform the operation again.**

- Write-Protect switch (A) provided (When this switch is set to the [LOCK] position, no further data writing, deletion or formatting is possible. The ability to write, delete and format data is restored when the switch is returned to its original position.)
- The data on the card may be damaged or lost due to electromagnetic waves, static electricity or breakdown of the camera or the card. We recommend storing important data on a PC etc.
- Do not format the card on your PC or other equipment. Format it on the camera only to ensure proper operation. (P39)
- Keep the Memory Card out of reach of children to prevent swallowing.




## Setting Date/Time (Clock Set)


- The clock is not set when the camera is shipped.

### 1 Turn the camera on.

- (A) [MENU/SET] button

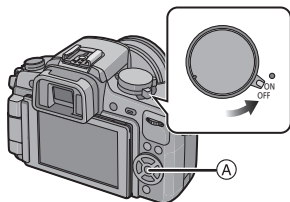

### 2 Press [MENU/SET].

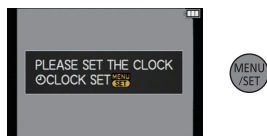


### 3 Press ◀/▶ to select the items (year, month, day, hour, minute, display sequence or time display format), and press ▲/▼ to set.

(A): Time at the home area

(B): Time at the travel destination (P125)

⏏: Cancel without setting the clock.

- Select either [24HRS] or [AM/PM] for the time display format.
- AM/PM is displayed when [AM/PM] is selected.
- When [AM/PM] is selected as the time display format, midnight is displayed as AM 12:00 and noon is displayed as PM 12:00. This display format is common in the US and elsewhere.

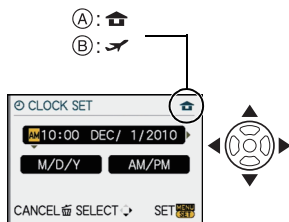

### 4 Press [MENU/SET] to set.

### 5 Press [MENU/SET].

- Press [⏏] to return to the settings screen.
- Turn the camera off after finishing setting the clock. Then turn it on and check that the clock setting is correct.
- When [MENU/SET] has been pressed to complete the settings without the clock having been set, set the clock correctly by following the “Changing the clock setting” procedure.

## Changing the clock setting

Select [CLOCK SET] in the [SETUP] menu, and press ▶. (P32)

- It can be changed in steps 3, 4 and 5 to set the clock.
- **The clock setting is maintained for 3 months using the built-in clock battery even without the battery. (Leave the charged battery in the unit for 24 hours to charge the built-in battery.)**


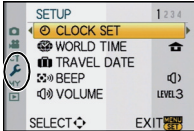
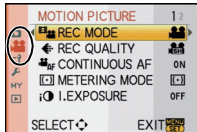
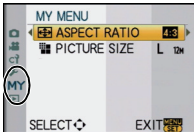

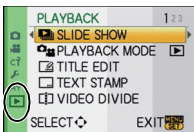
### Note

- The clock is displayed when [DISPLAY] is pressed several times during recording.
- You can set the year from 2000 to 2099.
- If the clock is not set, the correct date cannot be printed when you stamp the date on the pictures with [TEXT STAMP] (P150) or order a photo studio to print the pictures.
- If the clock is set, the correct date can be printed even if the date is not displayed on the screen of the camera.

## Setting the Menu

This camera offers menu selections that allow you to customize its operation to maximize your picture taking experience.

In particular, the [SETUP] menu contains some important settings relating to the camera's clock and power. Check the settings of this menu before proceeding to use the camera.

<p><b>[REC] Mode menu (P126 to 134)</b></p> <ul style="list-style-type: none"> <li>• This menu lets you set the aspect ratio, number of pixels and other aspects of the pictures you are recording.</li> </ul> 	<p><b>[SETUP] menu (P35 to 39)</b></p> <ul style="list-style-type: none"> <li>• This menu lets you perform the clock settings, select the operating beep tone settings and set other settings which make it easier for you to operate the camera.</li> </ul> 
<p><b>[MOTION PICTURE] Mode menu (P134 to 135)</b></p> <ul style="list-style-type: none"> <li>• This menu lets you set the [REC MODE], [REC QUALITY], and other aspects for motion picture recording.</li> </ul> 	<p><b>MY [MY MENU]</b></p> <ul style="list-style-type: none"> <li>• Up to 5 menu items used recently can be memorized. Items used a lot can be recalled easily.</li> </ul> 
<p><b>[CUSTOM] menu (P136 to 143)</b></p> <ul style="list-style-type: none"> <li>• Operation of the unit, such as displaying of the screen and button operations, can be set up according to your preferences. Also, it is possible to register the modified settings.</li> </ul> 	<p><b>[PLAYBACK] Mode menu (P147 to 161)</b></p> <ul style="list-style-type: none"> <li>• This menu lets you set the Protection, Cropping or Print Settings, etc. of recorded pictures.</li> </ul> 

### Note

- There are functions that cannot be set or used depending on the modes or menu settings being used on the camera due to the specifications.

## Setting menu items

This section describes how to select the [REC] Mode menu settings, and the same setting procedure can be used for the [MOTION PICTURE] Mode menu, [CUSTOM] menu, [SETUP] menu, [MY MENU] menu and [PLAYBACK] Mode menu as well.

- If you set [MENU RESUME] (P142) in the [CUSTOM] menu to [ON], the screen shows the last selected menu item when the camera was turned off.


It is set to [ON] at the time of purchase.

- Menu item cannot be set with touch operation. Set with the cursor buttons or the rear dial.

Example: Setting [I.EXPOSURE] from [OFF] to [HIGH] in the Program AE Mode

### 1 Turn the camera on.


- (A) [MENU/SET] button
- (B) Mode dial

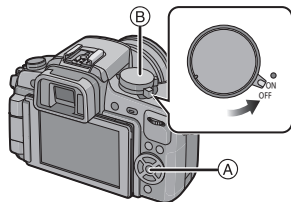

### 2 Set the mode dial to [P].

### 3 Press [MENU/SET] to display the menu.


- (C) Menu toggle icon
- (D) Menu item
- (E) Settings

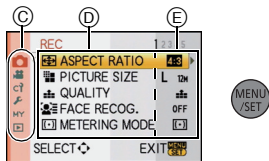


## Switching to other menus

e.g.: Switching to the [SETUP] menu

### 1 Press ◀.

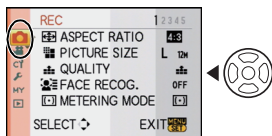

### 2 Press ▼ or rotate the rear dial to select the [SETUP] menu icon [⚙].

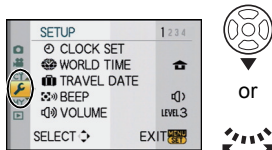

### 3 Press ▶ or the rear dial.


- Select a menu item next and set it.







#### 4 Press ▲/▼ or rotate the rear dial to select [I.EXPOSURE].

- Select the item at the very bottom, and press ▼ or rotate the rear dial right to move to the next screen.

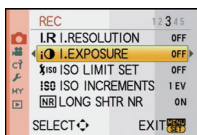

#### 5 Press ► or the rear dial.

 

- Depending on the item, its setting may not appear or it may be displayed in a different way.

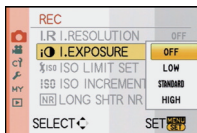

#### 6 Press ▲/▼ or rotate the rear dial to select [HIGH].


 
#### 7 Press [MENU/SET] or the rear dial to set.

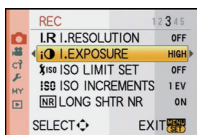

#### 8 Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

## Setting the Quick Menu

By using the Quick Menu, some of the menu settings can be easily found.

- The features that can be adjusted using Quick Menu are determined by the mode or a display style the camera is in.

#### ■ When operating the touch panel


Setting of the Quick Menu can be set using the touch panel.

#### 1 Touch [Q.MENU] to display the Quick Menu in recording status.



## 2 Touch the menu item and the setup.

- A Item
- B Settings

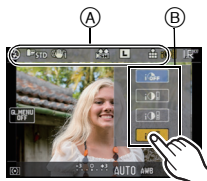

## 3 Touch [Q.MENU OFF] to close the Quick Menu.

### ■ When operating buttons

The Quick Menu can be set by pressing the [Q.MENU] button.

To close the Quick Menu, press the [Q.MENU] button again.

- Setup method is different depending on the displayed screen during recording. Refer to P63 about the displayed screen.

 
### [] (LCD monitor style)

After selecting the items with ◀/▶, you can select the setting contents with ▲/▼. Set by pressing [MENU/SET].

- You can also use the rear dial to set.



Q.MENU



### LCD recording information display in []

#### (LCD monitor style)

Select the item with ▲/▼/◀/▶, press [MENU/SET], and then select the setting contents with ▲/▼/◀/▶. Set by pressing [MENU/SET].

- You can also use the rear dial to set.



- You can change the settings by directly touching the items, without displaying the Quick Menu.



### [] (Finder style)

Select the item by rotating the rear dial, and then press the rear dial. Select the setting contents by rotating the rear dial, and then press the rear dial to set.

- You can also press ▲/▼/◀/▶ and [MENU/SET] to set.



Perform these settings if you need to.

## About the Setup Menu

[CLOCK SET], [ECONOMY] and [AUTO REVIEW] are important items. Check their settings before using them.

- In the Intelligent Auto Mode, only [CLOCK SET], [WORLD TIME], [BEEP], [LCD MODE] and [LANGUAGE] can be set.

For details on how to select the [SETUP] menu settings, refer to P32.

[CLOCK SET]	Setting Date/Time.
-------------	--------------------

- Refer to P30 for details.

[WORLD TIME]	Set the time in your home area and travel destination.	
	[DESTINATION]: Travel destination area	[HOME]: Your home area

- Refer to P125 for details.

[TRAVEL DATE]	Set the departure date and the return date of the vacation.	
	[TRAVEL SETUP] [OFF]/[SET]	[LOCATION] [OFF]/[SET]

- Refer to P123 for details.


[BEEP]	Set the volume of the focus confirmation beep, the self-timer beep and the alarm beep.	
	[X] (Muted) [1] (Low) [2] (High)	

[VOLUME]	Adjust the volume of the speaker to any of 7 levels.
----------	--

- When you connect the camera to a TV, the volume of the TV speakers does not change.

[MONITOR]/ [VIEWFINDER]	Brightness, color, or red or blue tint of the LCD monitor/viewfinder is adjusted.
----------------------------	---

- Adjust the brightness of the screen with ▲/▼, contrast and saturation with ◀/▶ or the rear dial.
- When [DISPLAY] is pressed in screen shown right, it will switch to the color adjustment screen. Adjust between red and green with ▲/▼, or between orange and blue with ◀/▶ or the rear dial. Press [MENU/SET] to return to the LCD adjustment screen.
- It will adjust the LCD monitor when the LCD monitor is in use, and the viewfinder when the viewfinder is in use.

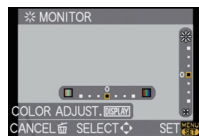


 
 
<b>LCD [LCD MODE]</b>	These menu settings make it easier to see the LCD monitor when you are in bright places.
	<p><b>[OFF]</b></p> <p><b>[A*] [AUTO POWER LCD]:</b> The brightness is adjusted automatically depending on how bright it is around the camera.</p> <p><b>[*] [POWER LCD]:</b> The LCD monitor becomes brighter and easier to see even when taking pictures outdoors.</p>





- The brightness of the pictures displayed on the LCD monitor is increased so some subjects may appear differently from actuality on the LCD monitor. However, this does not affect the recorded pictures.
- The LCD monitor automatically returns to normal brightness after 30 seconds when recording in Power LCD Mode. Press any button to make the LCD monitor bright again.
- If the screen is difficult to see because of light from the sun etc. shining on it, use your hand or another object to block the light.
- The number of recordable pictures decreases in Auto Power LCD and Power LCD Modes.
- [AUTO POWER LCD] cannot be selected when playing back pictures.
- [AUTO POWER LCD] is disabled during motion picture recording.
- When the menu screen is displayed in a dark environment etc., the LCD monitor becomes darker even if [LCD MODE] is set to [OFF].

<b>ECO [ECONOMY]</b>	You can conserve the battery life by setting these menus. Also, it will turn off the LCD monitor automatically when not in use to prevent discharge of the battery.
	<p><b>[SLEEP MODE]:</b> The camera is automatically turned off if the camera has not been used for the time selected on the setting. <b>[OFF]/[1MIN.]/[2MIN.]/[5MIN.]/[10MIN.]</b></p>
	<p><b>[OFF] [AUTO LCD OFF]:</b> The LCD monitor is automatically turned off if the camera has not been used for the time selected on the setting. <b>[OFF]/[15SEC.]/[30SEC.]</b></p>


- Press the shutter button halfway or turn the camera off and on to cancel [SLEEP MODE].
- [SLEEP MODE] is set to [5MIN.] in the Intelligent Auto Mode.
- [SLEEP MODE] is fixed to [2MIN.] when [AUTO LCD OFF] is set to [15SEC.] or [30SEC.].
- Press any button to turn on the LCD monitor again.
- It is recommended to use this mode with [LVF/LCD AUTO] (P141) in the [CUSTOM] menu is set to [OFF].
- [SLEEP MODE] does not work in the following cases.
  - When using the AC adaptor
  - When connecting to a PC or a printer
  - When recording or playing back motion pictures
  - During a slide show

 <b>[AUTO REVIEW]</b>	Set the length of time that the picture is displayed after taking it.
	<b>[OFF]/[1SEC.]/[3SEC.]/[5SEC.]</b> <b>[HOLD]:</b> The pictures are displayed until shutter button is pressed halfway.


- If it is set to [HOLD] when the camera is set to [  ] (P51) or [  ] (P77), switching of the playback screen display (P58) or enlargement by rotating the rear dial is possible during Auto Review.
- The Auto Review function is activated regardless of its setting when set to [H] for Burst Mode (P73), for Auto Bracket (P75) and for still pictures with audio (P134). (Will not hold) Also, you cannot set the Auto Review function.
- If [HIGHLIGHT] (P136) is set to [ON], white saturated areas appear blinking in black and white when the Auto Review function is activated.
- [AUTO REVIEW] does not work during Burst Mode when set to [M] or [L] or during recording motion pictures.
- When [AUTO REGISTRATION] in [FACE RECOG.] (P117) is set to [ON], [AUTO REVIEW] can only be set to [3SEC.] or [5SEC.].

 <b>[USB MODE]</b>	Select the USB communication system after or before connecting the camera to your PC or your printer with the USB connection cable (supplied).
	 <b>[SELECT ON CONNECTION]:</b> Select either [PC] or [PictBridge(PTP)] if you connected the camera to a PC or a printer supporting PictBridge.  <b>[PictBridge(PTP)]:</b> Set after or before connecting to a printer supporting PictBridge.  <b>[PC]:</b> Set after or before connecting to a PC.

- When [PC] is selected, the camera is connected via the "USB Mass Storage" communication system.
- When [PictBridge(PTP)] is selected, the camera is connected via the "PTP (Picture Transfer Protocol)" communication system.

 <b>[TV ASPECT]</b>	Set to match the type of TV.
	<b>[16:9]:</b> When connecting to a 16:9 screen TV. <b>[4:3]:</b> When connecting to a 4:3 screen TV.


- This will work when the AV cable is connected.

 <b>[HDMI MODE]</b>	Set the format for the HDMI output when playing back on the HDMI compatible high-definition TV connected with this unit using the HDMI mini cable (optional).
	<b>[AUTO]:</b> The output resolution is automatically set based on the information from the connected TV. <b>[1080i]:</b> The interlace method with 1080 available scan lines is used for output. <b>[720p]:</b> The progressive method with 720 available scan lines is used for output. <b>[480p]:</b> The progressive method with 480 available scan lines is used for output.








### • Interlace method/progressive method

 
i= interlace scanning is scanning the screen with half of the effective scanning lines every 1/60 seconds, where p= progressive scanning is a high density image signal that is scanning the screen with all the effective scanning lines every 1/60 seconds.

- The [HDMI] terminal on this unit is compatible with high-definition output [1080i]. It is necessary to have a compatible TV to enjoy progressive and high-definition images.
- If the images are not output on the TV when the setting is [AUTO], match with the image format your TV can display, and select the number of effective scanning lines. (Please read the operating instructions for the TV.)
- This will work when the HDMI mini cable (optional) is connected.
- Refer to P163 for details.

 <b>[VIERA Link]</b>	Setup so this unit can be controlled by the remote control of the VIERA equipment by automatically coupling this unit with the VIERA Link compatible equipment using HDMI mini cable (optional).
	<p><b>[OFF]:</b> Operation is performed with the buttons on this unit.</p> <p><b>[ON]:</b> Remote control operation of the VIERA Link compatible equipment is enabled. (Not all operations are possible) Button operation of the main unit will be limited.</p>


- This will work when the HDMI mini cable (optional) is connected.
- Refer to P165 for details.


 <b>[SCENE MENU]</b>	Set the screen that is displayed when the mode dial is set to  .     and  .
	<p><b>[OFF]:</b> The recording screen in the currently selected advanced Scene Mode (P98) or Scene Mode (P103) appears.</p> <p><b>[AUTO]:</b> The advanced Scene Mode or Scene Mode menu screen appears.</p>


 <b>[CALIBRATION]</b>	Adjust the position of the touch panel if a different thing gets selected from what you touched or touch operation does not respond.
	<p><b>1 Press [MENU/SET].</b></p> <p><b>2 Touch the orange [+] mark displayed on the screen in order with the stylus pen (supplied) (5 places).</b></p> <ul style="list-style-type: none"> <li>A message is displayed once the position is set.</li> </ul> <p><b>3 Press [MENU/SET] to finish.</b></p>




- Calibration is not done if correct position is not touched. Touch the [+] mark again.

 [LANGUAGE]	Set the language displayed on the screen.
	[ENGLISH]/[FRANÇAIS]/[ESPAÑOL]/[PORTUGUÊS]

 
- If you set a different language by mistake, select [] from the menu icons to set the desired language.

 [VERSION DISP.]	This enables the firmware versions of the camera and lens to be checked.
---	--


- [-. -] is displayed as the lens firmware when the lens is not mounted.

 [NO.RESET]	Reset the file number of the next recording to 0001.
--	--

- The folder number is updated and the file number starts from 0001. (P172)
- A folder number between 100 and 999 can be assigned.  
When the folder number reaches 999, the number cannot be reset. We recommend formatting the card (P39) after saving the data on a PC or elsewhere.
- To reset the folder number to 100, format the card first and then use this function to reset the file number.  
A reset screen for the folder number will then appear. Select [YES] to reset the folder number.

 [RESET]	The [REC] or [SETUP]/[CUSTOM] menu settings are reset to the initial settings.
---	--

- When the [REC] Mode settings are reset, data registered with [FACE RECOG.] will also be reset.
- When [SETUP]/[CUSTOM] menu settings are reset, the following settings are also reset. In addition, [FAVORITE] (P158) in [PLAYBACK] Mode menu is set to [OFF], and [ROTATE DISP.] (P157) is set to [ON].
  - The birthday and name settings for [BABY1]/[BABY2] (P104) and [PET] (P105) in Scene Mode.
  - The settings of [TRAVEL DATE] (P123) (departure date, return date, location)
  - The [WORLD TIME] (P125) setting.
- The folder number and the clock setting are not changed.

 [FORMAT]	The card is formatted. <b>Formatting permanently deletes all data on your memory card. Please be sure all pictures and motion pictures are saved elsewhere before using this feature.</b>
--	--

- Use a battery with sufficient battery power or the AC adaptor (P181) when formatting. Do not turn the camera off during formatting.
- If the card has been formatted on a PC or other equipment, format it on the camera again.
- If the card cannot be formatted, please try another card before contacting Panasonic or our Service Center.

For USA and Puerto Rico assistance, please call:  
1-800-211-PANA(7262) or, contact us via the web at:  
<http://www.panasonic.com/contactinfo>


For Canadian assistance, please call:  
1-800-99-LUMIX (1-800-995-8649) or  
send e-mail to: [lumixconciierge@ca.panasonic.com](mailto:lumixconciierge@ca.panasonic.com)

## Holding and using Your Camera

- The [LVF/LCD AUTO] (P141) is set to [ON] initially. It will switch to viewfinder display and the LCD monitor will be turned off when there is a hand or object near the eye sensor.

### Tips for taking good pictures


- Do not cover the flash, the AF Assist Lamp (A) or the microphone (B) with your fingers or other objects.**
- Hold the camera gently with both hands, keep your arms still at your side and stand with your feet slightly apart.
- Be careful not to move the camera when you press the shutter button.
- Do not touch the front of the lens. (P187)
- When taking pictures, make sure your footing is stable and there is no danger of colliding with another person, an object etc.

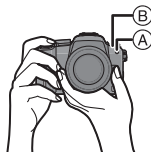

### LCD Monitor


The LCD monitor can be rotated to suit your needs. This is convenient as it allows you to take pictures from various angles by adjusting the LCD monitor. (P14)

#### ■ Taking pictures at a normal angle

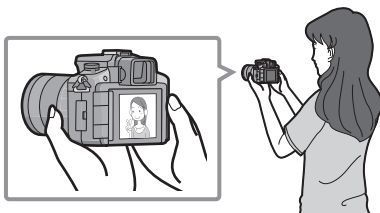


#### ■ Taking pictures at a high angle

Open the LCD monitor 180° toward you, and adjust the angle.

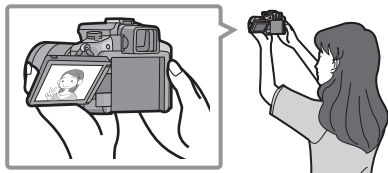

#### ■ Taking pictures at a low angle

Open the LCD monitor 180° toward you, and adjust the angle.

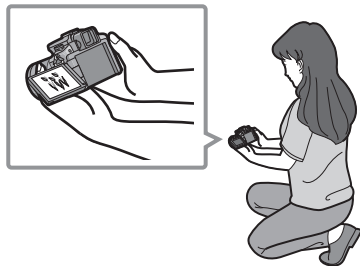

- This is convenient when there is someone in front of you and you cannot get close to the subject.

- This is convenient when taking pictures of flowers etc. that are in a low position.




## ■ Taking pictures with the camera held vertically


Open the LCD monitor and rotate it to an angle that makes it easy to see.

- Do not cover the AF Assist Lamp, the microphone with your fingers or other objects.


### Taking pictures at a normal angle

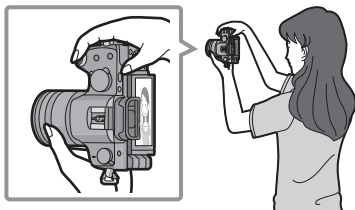

### Taking pictures at a high angle

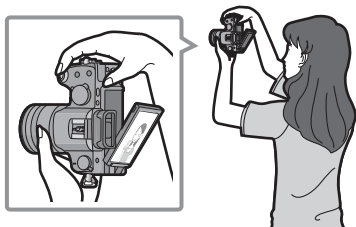

### Taking pictures at a low angle

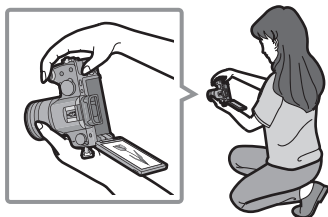

## Direction Detection Function

Pictures recorded with the camera held vertically are played back vertically (rotated). (Only when [ROTATE DISP.] (P157) is set to [ON])

- The Direction Detection Function may not operate correctly if recording is performed with the camera aimed up or down.
- Motion pictures taken with the camera held vertically are not displayed vertically.
- You can only use the Direction Detection Function when using a compatible lens. (Refer to the catalogue, website etc. for compatible lenses.)

## Switching the LCD monitor/Viewfinder

### ■ About the eye sensor automatic switching


Eye sensor is active when the [LVF/LCD AUTO] (P141) in the [CUSTOM] menu is set to [ON], switching automatically to viewfinder display when an eye or object is moved closer to the viewfinder, and to LCD monitor display when it is moved away.

- When the LCD monitor turns on, the viewfinder turns off (and vice versa).
- Eye sensor might not work properly depending on the shape of your eyeglasses, the way you hold the camera, or bright light shining around the eyepiece. Switch manually in that case.
- The eye sensor automatic switching works when the sensor recognizes things that come closer to it, therefore it is recommended that [LVF/LCD AUTO] be set to [OFF] in [ECONOMY] (P36).
- The eye sensor is disabled during motion picture playback, slide show, and output to TV.



### Press [LVF/LCD] to switch the monitor screen.

- (A) Viewfinder
- (B) Eye sensor
- (C) LCD monitor
- (D) [LVF/LCD] button
- (E) Eye cup


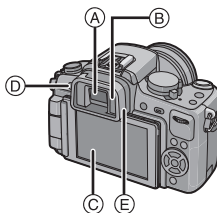


- It is possible to switch between the LCD (LCD monitor) and LVF (viewfinder) display manually.

### ■ Diopter adjustment

Adjust the diopter to suit your vision so that you can see the viewfinder clearly.

Look at the display on the viewfinder and rotate the diopter adjustment dial to where the screen is clearest.

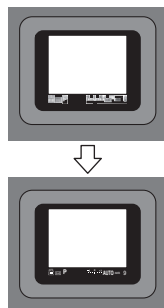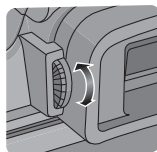

### Note

- The eye cup cannot be removed. Please read P186 for the cleaning and care.


## Mode switching

## Selecting the [REC] Mode, and Recording Still Pictures or Motion Pictures

**■ To select Intelligent Auto Mode**

Press [**iA**] **(A)**.

- [**iA**] button will light up when it is switched to Intelligent Auto Mode.

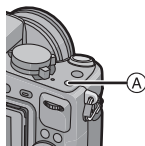**iA Intelligent Auto Mode (P46)**


The subjects are recorded using settings automatically selected by the camera.

**■ To select a [REC] Mode with the mode dial**

**Switching the mode by rotating the mode dial.**

Align a desired mode with part **(B)**.

- Rotate the mode dial slowly to adjust to each mode. (The mode dial rotates 360 °)
- The Recording Mode selected by the mode dial is disabled while the [**iA**] button is lit.

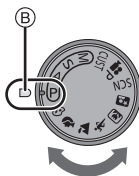

## ■ List of [REC] Modes

### **Program AE Mode (P51)**

The subjects are recorded using your own settings.

### **Aperture-Priority AE Mode (P94)**

The shutter speed is automatically determined by the aperture value you set.

### **Shutter-Priority AE Mode (P94)**

The aperture value is automatically determined by the shutter speed you set.

### **Manual Exposure Mode (P95)**

The exposure is adjusted by the aperture value and the shutter speed which are manually adjusted.

### **Custom Mode (P109)**

Use this mode to take pictures with previously registered settings.

### **Motion Picture P Mode (P115)**

Use this mode to record motion pictures with the desired settings.

### **Scene Mode (P103)**

This allows you to take pictures that match the scene being recorded.

### **My Color Mode (P106)**

Use this mode to check coloring effects, select a Color Mode from among eight Color Modes, and then take pictures.

## ■ Advanced Scene Mode

### **Portrait Mode (P99)**

Use this mode to take pictures of people.

### **Scenery Mode (P100)**

Use this mode to take pictures of scenery.

### **Sports Mode (P100)**

Use this mode to take pictures of sporting events, etc.

### **Close-up Mode (P101)**

Use this mode to take pictures of a close-by subject.


### **Night portrait Mode (P102)**

Use this mode to take pictures of night scenes and people against night time scenery.

## ■ Setting [AFS] or [AFC]


Set the focus mode lever to [AFS] or [AFC].

- Refer to page 52 for information about [AFS] and [AFC].

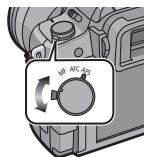

## Taking a still picture

- Make sure the drive mode lever is set to [□].

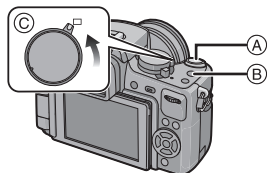


- (A) Shutter button
- (B) Motion picture button
- (C) Drive mode lever

**1 Press the shutter button halfway to focus.**

 **2 Press the shutter button fully (push it in further), and take the picture.**

- You can also take pictures using the Touch Shutter function (P54).

■ For more details, refer to the explanation of each Recording Mode.



## Recording a motion picture

**1 Press the motion picture button to start the recording.**

**2 Press the motion picture button again to stop the recording.**

- Sound will be heard when pressing the motion picture button indicating start/stop of motion picture recording.
- Sound volume can be set in [BEEP] (P35).



■ Recording of motion picture appropriate for each mode is possible. For more details, refer to “Recording Motion Picture” (P110).


[REC] Mode: **iA**

## Taking Pictures using the Automatic Function

(**iA**): Intelligent Auto Mode)

The camera will set the most appropriate settings to match the subject and the recording conditions so we recommend this mode for beginners or those who want to leave the settings to the camera and take pictures easily.

- The following functions are activated automatically.
  - Scene Detection/[RED-EYE REMOVAL]/Face Detection/Intelligent ISO sensitivity control/[I.EXPOSURE]/[LONG SHTR NR]/Quick AF/[FOCUS PRIORITY]/Backlight Compensation/[I.RESOLUTION]
- The status indicator **3** lights when you turn this unit on **2**. (**1**: Shutter button)

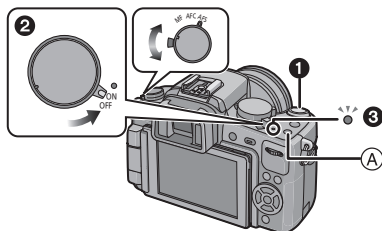

### 1 Press [**iA**] (A).


- [**iA**] button will light up when it is switched to Intelligent Auto Mode. [**iA**] button is turned off during recording to prevent the light reflecting on glass or similar, but this is not a malfunction.
- [**iA**] button is turned off when it is pressed again, and it will be set to the [REC] Modes selected by the mode dial.
- When the mode dial is set to [**iA**], motion pictures will reflect the setting of Intelligent Auto Mode. (P112)
- AF Mode will be set to [**AF**] regardless of the setting of the auto focus mode dial.

### 2 Set the focus mode lever to [AFS] or [AFC].

- Refer to P52 for [AFS] and [AFC].

### 3 Press the shutter button halfway to focus.

- The focus indication **1** (green) lights when the subject is focused.
- The AF area **2** is displayed around the subject's face by the Face Detection Function. In other cases, it is displayed at the point on the subject which is in focus.
- The focus indication blinks when the subject is not focused. In this case, a picture is not taken. Press the shutter button halfway to focus on the subject again.
- The focus range is different depending on the lens used.
  - When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is used: 0.3 m (0.99 feet) to ∞

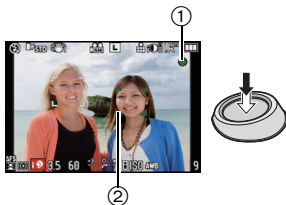

## 4 Press the shutter button fully (push it in further), and take the picture.



- In Intelligent Auto Mode, [FOCUS PRIORITY] (P138) is fixed to [ON]. This means you cannot take pictures until the subject is in focus.
- The access indication (P29) lights red when pictures are being recorded on the card.
- You can also take pictures using the Touch Shutter function (P54).

### ■ When taking pictures using the flash (P66)

- Open the flash when the flash is to be used.
- [i<sup>A</sup>], [i<sup>AE</sup>], [i<sup>SS</sup>] or [i<sup>S</sup>] is set depending on the type of subject and brightness.
- When [i<sup>SS</sup>] or [i<sup>S</sup>] is displayed, the Digital Red-Eye correction is turned on.
- Shutter speed will be slow when using [i<sup>SS</sup>] or [i<sup>S</sup>].
- Flash modes cannot be switched using the menu in the Intelligent Auto Mode.

### ■ When taking pictures using the zoom (P55)

- To adjust the exposure and take pictures at times when the image appears too dark (P72)

### ■ When taking pictures with Manual Focus (P83)

### ■ When recording motion pictures (P110)

- To take pictures using the Face Recognition function (which stores faces of frequent subjects with information such as their names and birthdays) (P117)

## Scene detection

When the camera identifies the optimum scene, the icon of the scene concerned is displayed in blue for 2 seconds, after which its color changes to the usual red.

	→		[i-PORTRAIT]
			[i-SCENERY]
			[i-MACRO]
			[i-NIGHT PORTRAIT]
			[i-NIGHT SCENERY]
			[i-SUNSET]
			[i-BABY]*

• Only when [i<sup>A</sup>] is selected

- [i<sup>A</sup>] is set if none of the scenes are applicable, and the standard settings are set.
- When [i<sup>AE</sup>], [i<sup>SS</sup>] or [i<sup>S</sup>] is selected, the camera automatically detects a person's face, and it will adjust the focus and exposure. **(Face Detection)** (P79)
- If a tripod is used, for instance, and the camera has judged that camera shake is minimal when the Scene Mode has been identified as [i<sup>SS</sup>], the shutter speed will be slower than normal. Take care not to move the camera while taking pictures.
- An optimum scene for the specified subject will be chosen when set to AF Tracking (P48).
- Depending on the scene detected, camera will automatically adjust the setting of the [i.RESOLUTION] (P130). [i.RESOLUTION] cannot be set via the [REC] Mode menu.
- When [FACE RECOG.] is set to [ON], and the face similar to the registered face is detected, [R] is displayed in the top right of [i<sup>SS</sup>], [i<sup>AE</sup>] and [i<sup>S</sup>].
- \* When [FACE RECOG.] is set to [ON], [i<sup>SS</sup>] will be displayed for birthdays of registered faces already set only when the face of a person 3 years old or younger is detected.

## Note

- Due to conditions such as the ones below, a different scene may be identified for the same subject.
  - Subject conditions: When the face is bright or dark, the size of the subject, the color of the subject, the distance to the subject, the contrast of the subject, when the subject is moving
  - Recording conditions: Sunset, sunrise, under low brightness conditions, when the camera is shaken, when zoom is used
- To take pictures in an intended scene, it is recommended that you take pictures in the appropriate Recording Mode.
- **The Backlight Compensation**
  - Backlight refers to when light comes from the back of a subject. In this case, the subject will become dark, so this function compensates the backlight by brightening the whole of the picture automatically. Backlight compensation is automatically applied in Intelligent Auto Mode.


## AF Tracking Function

It is possible to set the focus and exposure to the specified subject. Focus and exposure will keep following the subject automatically even if it moves.

### ■ When operating the touch panel

#### 1 Touch the subject.

- [F] is displayed in the lower left of the screen.
- AF Tracking frame will be displayed in yellow, and it will determine the most appropriate scene for the locked subject.
- AF Tracking is canceled when [CANCEL] is touched.

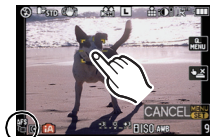


#### 2 Press the shutter button halfway to focus and then press it fully to take the picture.



### ■ When operating buttons

#### 1 Press and hold [Q.MENU] button until AF Tracking frame is displayed.

- [F] is displayed in the lower left of the screen.
- AF Tracking frame is displayed in the center of the screen.
- AF Tracking is canceled when [MENU/SET] is pressed.
- When the [FOCUS AREA SET] is set to [Fn BUTTON SET] (P136), AF Tracking frame can also be displayed by pressing ▼.

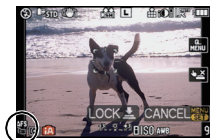


#### 2 Place the subject in the Tracking frame, and press the shutter button halfway to lock the subject.

- AF area will turn green when the camera detects the subject.
- AF Tracking frame will turn yellow when you release the shutter button and the optimum scene for the locked subject will be identified.
- Press [MENU/SET] to cancel.




 
### 3 Press the shutter button halfway to focus and then press it fully to take the picture.



#### Note

- [FACE RECOG.] does not work during AF tracking.
- Use AF Tracking with the Touch Shutter function canceled.
- Please read the Note regarding the AF tracking on P81.

## Settings in Intelligent Auto Mode

- Only the following functions can be set in this mode.

#### [REC] Mode menu

- [ASPECT RATIO] (P126)/[PICTURE SIZE] (P126)/[QUALITY] (P127)/[FACE RECOG.] (P128)/[STABILIZER]<sup>\*1</sup> (P129)

\*1 It cannot be set to [MODE3]. It will be fixed to [MODE1] when recording a motion picture even if it is set to [MODE2].

#### [MOTION PICTURE] Mode menu

- [REC MODE] (P113)/[REC QUALITY]<sup>\*2</sup> (P113)/[CONTINUOUS AF] (P135)/[WIND CUT] (P135)

\*2 [ ] for [MOTION JPEG] cannot be set.

#### [CUSTOM] menu

- [GUIDE LINE] (P136)/[LCD INFO.DISP.] (P140)/[REMAINING DISP.] (P141)

#### [SETUP] menu

- [CLOCK SET]/[WORLD TIME]/[BEEP]/[LCD MODE]/[LANGUAGE]

- Only [STANDARD] and [STANDARD] ( **B&W** ) in Film Mode (P91) can be selected.

- Use the Quick Menu (P33) to set the [ ] and [ ] for the [SELF-TIMER]<sup>\*3</sup> (P77).

\*3 It will be reset to [ ] when the Intelligent Auto Mode is canceled or when the power is switched [ON]/[OFF].

- The settings of the following items are fixed.

Item	Settings
[ECONOMY] ([SLEEP MODE]) (P36)	[5MIN.]
Flash (P66)	A/
[FLASH SYNCHRO] (P71)	[1ST]
[BURST RATE] (P73)	[H] (High speed)
[AUTO BRACKET] (P75)	[STEP]: [3•1/3] [SEQUENCE]: [0/-/+]
AF Mode (P78)	(Set to * <sup>4</sup> when a face cannot be detected)
[WHITE BALANCE] (P86)	[AWB]
[SENSITIVITY] (P89)	* <sup>5</sup> (Intelligent ISO) (The maximum ISO sensitivity: ISO800)
[METERING MODE] (P128)	
[RED-EYE REMOVAL] (P130)	[ON]
[I.EXPOSURE] (P131)	[STANDARD]
[LONG SHTR NR] (P132)	[ON]
[COLOR SPACE] (P133)	[sRGB]
[PRE AF] (P137)	
[FOCUS PRIORITY] (P138)	[ON]
[AF ASSIST LAMP] (P138)	[ON]

\*<sup>4</sup> It will be set to Multi Auto Focus Mode for motion pictures when a face cannot be detected while recording motion pictures.

\*<sup>5</sup> The setting is fixed to [AUTO] when recording motion pictures.

- The following functions cannot be used.

– [AUTO LCD OFF] of [ECONOMY]/AF/AE lock/White Balance fine adjustment/White Balance Bracket/Multi Film Bracket/Flash output adjustment/[ISO LIMIT SET]/[EX. OPT. ZOOM]/[DIGITAL ZOOM]/[AUDIO REC.]/[HIGHLIGHT]/[AF/AE LOCK]/[AF/AE LOCK HOLD]/[DIRECT FOCUS AREA]/[SHOOT W/O LENS]

- The other items on the [SETUP] menu and [CUSTOM] menu can be set in a mode such as the Program AE Mode. What is set will be reflected in the Intelligent Auto Mode.

[REC] Mode: **P**

## Taking Pictures with Your Favorite Settings

**(P: Program AE Mode)**

The camera automatically sets the shutter speed and the aperture value according to the brightness of the subject.

You can take pictures with greater freedom by changing various settings in the [REC] menu.


- Set the drive mode lever to [□].

### 1 Set the mode dial to [P].

- To change the setting while taking pictures, refer to “Using the [REC] Mode Menu” (P126) or “Using the [CUSTOM] Menu” (P136).

### 2 Set the focus mode lever to [AFS] or [AFC].

- Refer to P52 for [AFS] and [AFC].

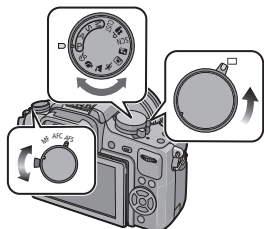

### 3 Press the shutter button halfway to focus.

- The focus indication (green) lights when the subject is focused.
- The focus indication blinks when the subject is not focused. In this case, a picture is not taken. Press the shutter button halfway to focus on the subject again.
- The focus range is different depending on the lens used.
  - When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is used: 0.3 m (0.99 feet) to ∞
- If the [SENSITIVITY] is set to [ISO100] and the aperture value is set to F3.5 (when the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is attached), the shutter speed is automatically set between about 30 seconds and 1/4000th of a second.



### 4 Press the halfway pressed shutter button fully to take a picture.

- A picture is not taken until the subject is brought into focus.
- If you want to press the shutter button fully to take a picture even when the subject is not focused, set [FOCUS PRIORITY] in the [CUSTOM] menu to [OFF]. (P138)
- The access indication lights (P29) red when pictures are being recorded on the card.
- You can also take pictures using the Touch Shutter function (P54).




- To adjust the exposure and take pictures at times when the image appears too dark (P72)
- To adjust the colors and take pictures at times when the image appears too red (P86)
- When recording motion pictures (P110)

## Setting the Focus Mode (AFS/AFC/MF)

### Fix the focus by pressing the shutter button halfway (AFS)

#### Set the focus mode lever to [AFS].

- “AFS” is an abbreviation of “Auto Focus Single”. The focus is adjusted when you press the shutter button halfway.
- Normally use the [AFS].
- Focus during the Burst Mode is fixed at the first picture. Refer to P73 for details.

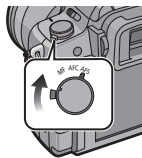


### Continuously focusing on a subject (AFC)

This mode allows you to compose a picture more easily by continuously focusing on the movement of the subject while the shutter button is pressed halfway. When taking pictures of a moving subject, the camera predicts the movement of the subject and focuses on it. (motion prediction)

- [AFC] will not operate with certain lenses. For details, refer to page 19.

#### Set the focus mode lever to [AFC].


- “AFC” is an abbreviation of “Auto Focus Continuous”. The camera is continuously focusing on the subject while the shutter button is pressed halfway.
- It may take time to focus on the subject if you rotate the zoom ring from Wide to Tele or suddenly change the subject from a distant one to a nearby one.
- Focusing will continue even after the shutter button is pressed during the Burst Mode. Refer to P73 for details.
- Set the [PRE AF] of [CUSTOM] menu item (P137) when you would like to set the focus before pressing the shutter button halfway.
- Focus sound will not be heard in [AFC] even if the subject comes into focus. Also, AF area will not be displayed if the AF Mode is set to [AF-ON].
- When brightness is not enough, the mode will turn to [AFS] and in that case the AF area will be displayed and the focus sound will beep when the subject comes into focus.
- Press the shutter button halfway again when it is difficult to focus on the subject.

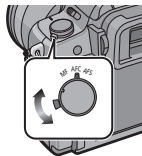

### Take a picture with Manual Focus (MF)

#### Set the focus mode lever to [MF].

- For details, refer to P83.

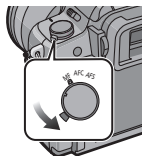

## Focusing

Align the subject to the screen, and then press the shutter button halfway.



Focus	When the subject is focused	When the subject is not focused
<b>Focus indication</b>	On	Blinks
<b>AF area</b>	Green	—
<b>Sound</b> <sup>*2</sup>	Beeps 2 times	—

- (A) Focus indication
- (B) AF area (normal)
- (C) AF area (when using the Digital Zoom or when it is dark)
- (D) Aperture value<sup>\*1</sup>
- (E) Shutter speed<sup>\*1</sup>
- (F) ISO sensitivity

- \*1 It will flash in red when appropriate exposure is not achieved. (Except when flash is activated)
- \*2 Sound volume can be set in [BEEP] (P35).

- When the AF Mode is set to [AF-ON], and multiple AF areas (up to 23 areas) have turned on, all the AF areas that have turned on are focused. If you would like to take a picture focused on a certain area, switch the AF Mode to [AF-ON]. (P78)
- Focus sound will not beep if the Focus Mode is set to [AFC]. Also, the AF area will not be displayed if the AF Mode is set to [AF-ON].

## When the subject is not in focus

- **Take pictures with different Focus Modes depending on the subject (P78)**
- **Subjects and recording conditions which are difficult to focus**

- Fast-moving subjects, extremely bright subjects or subjects without contrast
- When recording subjects through windows or near shiny objects
- When it is dark or when jitter occurs
- When the camera is too close to the subject or when taking a picture of both distant and near subjects

## Preventing jitter (camera shake)

When the jitter alert [JITTER] appears, use [STABILIZER] (P129), a tripod, the self-timer (P77) or the remote shutter (DMW-RSL1; optional) (P179).

- Shutter speed will be slower particularly in the following cases. Keep the camera still from the moment the shutter button is pressed until the picture appears on the screen. We recommend using a tripod.
  - Slow Sync.
  - Slow Sync./Red-Eye Reduction
  - [NIGHT PORTRAIT] and [NIGHT SCENERY] in the Advanced Scene Mode (P98)
  - [PARTY] in Scene Mode (P104)
  - When you set to a slow shutter speed

## Taking pictures using the Touch Shutter function

 
Just by touching the subject to focus, it will focus on the subject and take the picture automatically.


### 1 Touch in Recording Mode.

- Icon will change to , and taking a picture with the Touch Shutter function becomes possible.




### 2 Touch the subject you wish to focus on, and then take a picture.

- AF area with same function as  in AF Mode is displayed at the position you touch, and a picture is taken when it is focused. (It cannot be set to edge of the screen.)
- If the histogram is displayed on top of the subject you want to touch, touch the subject after first moving the histogram. (P66)

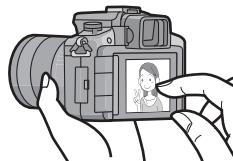

### 3 Touch to cancel the Touch Shutter function.

 
#### Note

- If [FOCUS PRIORITY] is [ON], when the Focus Mode is set to [AFS] and the Touch Shutter fails, AF area will disappear after turning red, and the picture will not be taken. When set to [AFC], the picture will not be taken if the focus indication is flashing green, but if the subject comes into focus while keeping touching the screen, the picture will be taken.
- It will not focus automatically when the camera is set to Manual Focus, so it will take a picture without performing the focus function.
- Touching will perform the same action as pressing the shutter button, even during the Burst Mode, Auto Bracket, or Self-timer Modes.
- Measurement of brightness is performed on the spot touched when the [METERING MODE] is set to . (P128)
- The Touch Shutter function will not work in the following cases.
  - During Motion Picture P Mode
  - In the LCD recording information display (P34)

## Program Shift



In Program AE Mode, you can change the preset aperture value and shutter speed without changing the exposure. This is called Program Shift.

You can make the background more blurred by decreasing the aperture value or record a moving subject more dynamically by slowing the shutter speed when taking a picture in Program AE Mode.

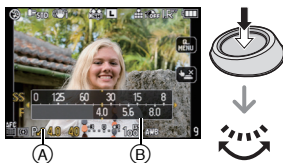

### 1 Press the shutter button halfway and display the aperture value and shutter speed value on the screen.
 
### 2 While the values are displayed (about 10 seconds), perform the Program Shift by rotating the rear dial.

- It will switch between Program Shift operation and Exposure Compensation operation (P72) every time the rear dial is pressed while the values are displayed.
- Rotate the rear dial to display the [EXPO.METER] . (P139)
- The Program Shift indication  appears on the screen when Program Shift is activated.
- To cancel Program Shift, turn the camera off or rotate the rear dial until the Program Shift indication disappears.


## ■ Example of Program Shift

(When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is used)

(A): Aperture value

(B): Shutter speed

- ① Program Shift amount
- ② Program Shift line chart
- ③ Program Shift limit

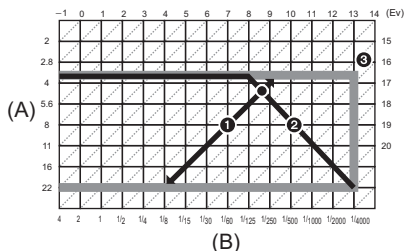

### Note

- How the Exposure Compensation is switched can be changed by [EXPO. SETTINGS] (P140) in the [CUSTOM] menu.
- If the exposure is not adequate when the shutter button is pressed halfway, the aperture value and shutter speed turn red and blink.
- Program Shift is canceled and the camera returns to normal Program AE Mode if more than 10 seconds pass after Program Shift is activated. However, the Program Shift setting is memorized.
- Depending on the brightness of the subject, Program Shift may not be activated.
- Program Shift is not possible when the [SENSITIVITY] is set to [ISO].

[REC] Mode: **TA PASM** CUST **SCN**      

## Taking Pictures with the Zoom

### Using the Optical Zoom/using the Extended Optical Zoom (EZ)/using the Digital Zoom

You can zoom-in to make people and objects appear closer or zoom-out to record landscapes in wide angle.

**To make subjects appear closer use (Tele)**

**Rotate the zoom ring towards Tele. (P13)**

**To make subjects appear further away use (Wide)**

**Rotate the zoom ring towards Wide. (P13)**

To enlarge further, set the [EX. OPT. ZOOM] to [ON] or the [DIGITAL ZOOM] to [2×] or [4×] in the [REC] Mode menu or the [MOTION PICTURE] Mode menu. Then you can take larger photos.

When the [EX. OPT. ZOOM] (max. 2×) is used in still picture recording, set each image Aspect Ratio (**4:3** / **3:2** / **16:9** / **1:1**) to a picture size other than [L].

## ■ Types of zooms

Feature	Optical Zoom	Extended Optical Zoom (EZ)	Digital Zoom
Recording magnification	When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is used		
	3×	2×*1 (when taking still pictures: 6×) 3.1×*2 (when recording motion pictures: 9.4×)	[2×] (including Extended Optical Zoom) when taking still pictures: 12×*1 when recording motion pictures: 18.7×*2 [4×] (including Extended Optical Zoom) when taking still pictures: 24×*1 when recording motion pictures: 37.5×*2
Picture quality	No deterioration	No deterioration	The higher the magnification level, the greater the deterioration.
Conditions	None	Set the [EX. OPT. ZOOM] (P132) in [REC] Mode menu or [MOTION PICTURE] Mode menu to [ON], and then when taking still pictures select number of recordable pixels with [EZ] (P126).	[DIGITAL ZOOM] (P132) on the [REC] Mode menu or [MOTION PICTURE] Mode menu is set to [2×] or [4×].

\*1 When a picture size of [S] (3 M), aspect ratio of [4:3] is selected.

The magnification level differs depending on [PICTURE SIZE] and [ASPECT RATIO] setting.

\*2 When Recording Mode [AVCHD Lite] is selected, or Recording Mode [MOTION JPEG] is selected with recording quality setting [FHD] or [Full]. When recording quality setting [FHD] or [Full] is selected, Extended Optical Zoom factor will change to 4.2.

## ■ Extended Optical Zoom mechanism

Example: When it is set to [SEZ] (equal to 3.1 million pixels), it will take the picture using the 3.1 million pixels in the center out of the 12 million pixels of the imaging device, resulting to be more of a telephoto picture.

### Note

- “EZ” is an abbreviation of “Extended Optical Zoom”.
- When the Extended Optical Zoom is used, angle of view for still pictures will be different from the angle of view for motion pictures because the zoom factor is different between them. Angle of view for recording can be checked beforehand by matching the [REC AREA] (P141) setting to the mode you wish to record in.
- If you use the zoom function after focusing on the subject, focus on the subject again.
- When using the Digital Zoom, [STABILIZER] may not be effective.
- When using the Digital Zoom, we recommend using a tripod and the self-timer (P77) for taking pictures.
- The AF Mode is fixed to [AF] when using the Digital Zoom.
- The Extended Optical Zoom cannot be used in the following cases.
  - In Intelligent Auto Mode
  - When [QUALITY] is set to [RAW], [RAW] or [RAW]




- [DIGITAL ZOOM] cannot be used in the following cases.
  - In Intelligent Auto Mode
  - In Advanced Scene Mode
  - In Scene Mode
  - When [QUALITY] is set to [RAW $\frac{1}{1}$ ], [RAW $\frac{1}{2}$ ] or [RAW]

## Playing Back Pictures

### 1 Press [▶].

Ⓐ [▶] button

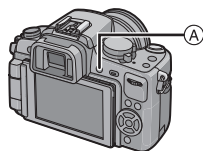


### 2 Forward or rewind the image by dragging (P15) the screen horizontally.

**Forward:** drag from right to left

**Rewind:** drag from left to right

- It is also possible to forward or rewind the image by pressing ◀▶ of the cursor button.
- Speed of picture forwarding/rewinding changes depending on the playback status.
- You can forward or rewind pictures continuously by keeping your finger on the left or right sides of the screen after forwarding/rewinding a picture.  
(Pictures are displayed reduced in size)

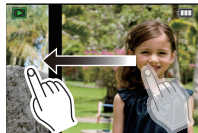

### ■ To finish playback

Press [▶] again, press the motion picture button or press the shutter button halfway.

#### Note


- This camera complies with the DCF standard “Design rule for Camera File system” established by JEITA “Japan Electronics and Information Technology Industries Association” and with Exif “Exchangeable Image File Format”. Files which do not comply with the DCF standard cannot be played back.

## Changing the information displayed on the playback screen

Press **[DISPLAY]** to switch the monitor screen.

**(A)** **[DISPLAY]** button

- When the menu screen appears, the **[DISPLAY]** button is not activated. During Playback Zoom (P60), while playing back motion pictures (P145) and during a slide show (P147), you can only select “Normal display **(B)**” or “No display **(F)**”.
- Refer to P65 for information about the histogram **(D)**.

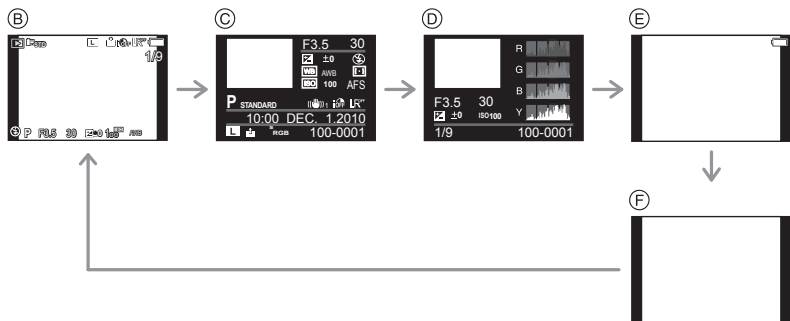

**(B)** Normal display

**(C)** Detailed information display

**(D)** Histogram display

**(E)** Highlight display\*

**(F)** No display

\* This is displayed if **[HIGHLIGHT]** (P136) in the **[CUSTOM]** menu is set to **[ON]**.

## Displaying multiple screens (Multi Playback)

Rotate the rear dial left.

1 screen → 12 screens → 30 screens → Calendar screen display

**(A)** Number of the selected picture and the total number of recorded pictures


**(B)** Slide bar

- Rotate the rear dial right to return to the previous screen.
- Screen can be switched by dragging the slide bar up or down (P15).
- The screen can be switched gradually by dragging the screen up or down (P15).
- Pictures are not rotated for display.
- Pictures displayed using **[!]** cannot be played back.

■ **To return to Normal Playback**

**Touch the picture to select.**

- You can also return to the one screen display by choosing images pressing the cursor button toward **▲/▼/◀/▶**, and then pressing **[MENU/SET]** or the rear dial.

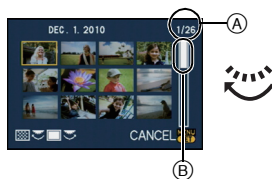

## Displaying Pictures by Recording Date (Calendar Playback)

You can display pictures by recording date.

- 1 Rotate the rear dial left to display the calendar screen.



- 2 Press ▲/▼/◀/▶ to select the date to be played back.

- If there were no pictures recorded during a month, the month is not displayed.

- 3 Press [MENU/SET] or the rear dial to display the pictures that were recorded on the selected date.

- Rotate the rear dial left to return to the calendar screen display.



or



- 4 Press ▲/▼/◀/▶ to select a picture and then press [MENU/SET] or the rear dial.

- The picture that was selected will appear.

### Note

- The recording date of the picture selected in the playback screen becomes the date selected when the calendar screen is first displayed.
- If there are multiple pictures with the same recording date, the first picture recorded on that day is displayed.
- You can display the calendar between January 2000 and December 2009.
- If the date is not set in the camera, the recording date is set as January 1st, 2010.
- If you take pictures after setting the travel destination in [WORLD TIME], the pictures are displayed by the dates at the travel destination in Calendar Playback.

## Using the Playback Zoom

### 1 Touch the part to enlarge.

1× → 2× → 4× → 8× → 16×

- Portion that is touched will be enlarged.
- Picture can be enlarged also by rotating the rear dial right.
- When you change the magnification, the zoom position indication (A) appears for about 1 second.
- The more a picture is enlarged, the more its quality deteriorates.



### 2 Move the position to be displayed by dragging the picture (P15).

- When you move the position to be displayed, the zoom position indication (A) appears for about 1 second.
- Position of the enlarged part can be also moved by pressing ▲/▼/◀/▶ of the cursor button.
- Picture will return to the original size (1×) by touching [Q<sub>1.0</sub>].
- Also, when you touch [Q] or rotate the rear dial left, the magnification becomes lower.



### Switching the displayed image while maintaining the Playback Zoom

You can switch the displayed image while maintaining the same zoom magnification and zoom position for the Playback Zoom.

### Switch to picture select operation by pressing the rear dial during Playback Zoom, and select pictures with ◀/▶.

- It will switch between picture select operation and move zoom position operation every time the rear dial is pressed during Playback Zoom.



### Note

- You can also delete the recording information etc. on the screen during Playback Zoom by pressing [DISPLAY].
- If you want to save the enlarged picture, use the Cropping function. (P155)
- The Playback Zoom may not operate if pictures have been recorded with other equipment.
- The zoom magnification and the zoom position are canceled when the camera is turned off (including Sleep Mode).
- The zoom position returns to the center in the following images.
  - Images with different aspect ratios
  - Images with different numbers of recorded pixels
  - Images with a different rotation direction (when [ROTATE DISP.] is set to [ON])
- Playback Zoom cannot be used during motion picture playback or pictures with audio playback.

## Deleting Pictures


Once deleted, pictures cannot be recovered.

Press [▶].

### To delete a single picture

- 1 Select the picture to be deleted, and then press [🗑️].

- A [▶] button
- B [DISPLAY] button
- C [🗑️] button

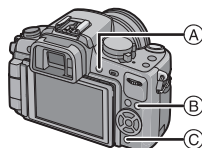

- 2 Press ◀ to select [YES] and then press [MENU/SET].



### To delete multiple pictures (up to 50) or all the pictures


- 1 Press [🗑️].

- 2 Press ▲/▼ to select [DELETE MULTI] or [DELETE ALL] and then press [MENU/SET].

- [DELETE ALL] → step 5.

- 3 Press ▲/▼/◀/▶ to select the picture, and then press [DISPLAY] to set. (Repeat this step.)

- [🗑️] appears on the selected pictures. If [DISPLAY] is pressed again, the setting is canceled.

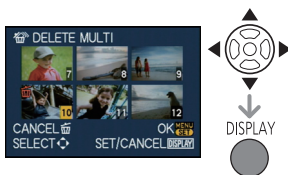

- 4 Press [MENU/SET].

- 5 Press ▲ to select [YES] and then press [MENU/SET] to set.

**■ When [DELETE ALL] has been selected with the [FAVORITE] (P158) setting**

The selection screen is displayed again. Select [DELETE ALL] or [ALL DELETE EXCEPT ★], press ▲ to select [YES] and delete the pictures. ([ALL DELETE EXCEPT ★] cannot be selected if no pictures have been set as [FAVORITE].)

**Note**

- Do not turn the camera off while deleting (while [⏏] is displayed). Use a battery with sufficient power or the AC adaptor (P181).
- If you press [MENU/SET] while deleting pictures using [DELETE MULTI], [DELETE ALL] or [ALL DELETE EXCEPT ★], the deleting will stop halfway.
- Depending on the number of pictures to be deleted, it may take some time to delete them.
- If pictures do not conform to the DCF standard or are protected (P160), they will not be deleted even if [DELETE ALL] or [ALL DELETE EXCEPT ★] is selected.


# Switching the Display of the LCD Monitor/ Viewfinder

## Switching the Information Displayed on the recording screen

Press **[DISPLAY]** to change.

Ⓐ [DISPLAY] button


- When the menu screen appears, the [DISPLAY] button is not activated.

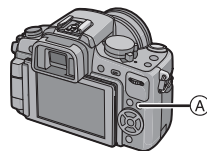

### LCD monitor display


With the [LCD DISP.STYLE] (P140) of the [CUSTOM] menu, you can choose the displayed screen on the LCD monitor to display in [ ] (LCD monitor style) or [ ] (viewfinder style).

When [ ] is set

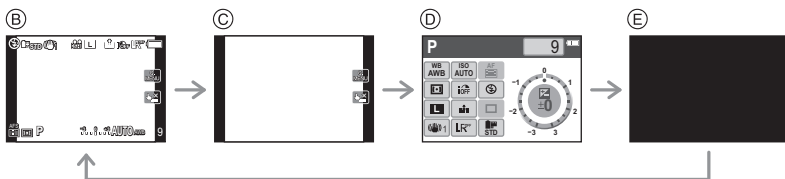

- Ⓑ Normal display\*1, 2
- Ⓒ No display\*1
- Ⓓ [LCD INFO.DISP.]\*3
- Ⓔ Turned off

When [ ] is set

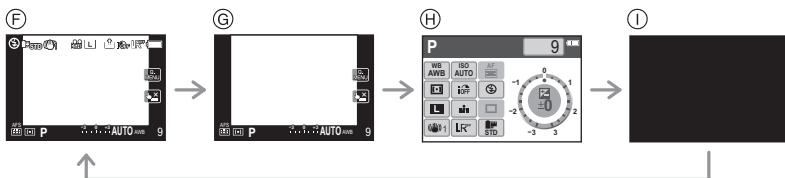


- Ⓕ Normal display+detailed information\*1, 2
- Ⓖ Normal display\*1
- Ⓗ [LCD INFO.DISP.]\*3
- Ⓘ Turned off

## Viewfinder display

With the [LVF DISP.STYLE] (P140) of the [CUSTOM] menu, you can choose the displayed screen on the viewfinder to display in [ ] (viewfinder style) or [ ] (LCD monitor style).


## When [ ] is set

- Ⓐ Normal display\*1
- Ⓑ Normal display+detailed information\*1, 2

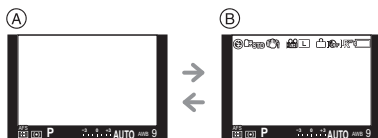

## When [ ] is set

- Ⓒ No display\*1
- Ⓓ Detailed information\*1, 2

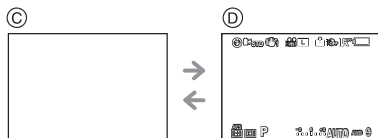

\*1 Guide lines are displayed when the [GUIDE LINE] of the [CUSTOM] menu is set to anything except [OFF].

It is possible to move the position of the guide line using the touch panel when it is set to [ ]. (P65)

\*2 Histograms are displayed when the [HISTOGRAM] of the [CUSTOM] menu is set to [ON].

It is possible to move the position of the histogram using the touch panel. (P66)

It is also possible to display the Exposure Meter by setting the [EXPO.METER] of the [CUSTOM] menu to [ON]. (P139)

\*3 It is displayed when the [LCD INFO.DISP.] of the [CUSTOM] menu is set to anything except [OFF]. Color of the screen can be selected from 3 colors of blue, red or black. (P140)




**Note**


- In [NIGHT PORTRAIT] (P102), the guide line is gray.



## ■ Recording guide line


When you align the subject on the horizontal and vertical guide lines or the cross point of these lines, you can take pictures with well-designed composition by viewing the size, the slope and the balance of the subject.

- Ⓐ : This is used when dividing the entire screen into 3×3 for taking pictures with a well-balanced composition.
- Ⓑ : This is used when you want to position the subject at the exact center of the screen.
- Ⓒ : Position of the guide line can be set. It is used to take well balanced pictures of subjects off the center of the image.

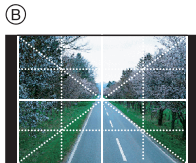


## ■ Set the position of the guide line with

- Set the [GUIDE LINE] in the [CUSTOM] menu to . (P136)

**Touch  above the guide line, and drag it to the position you want to move it to (P15).**

- You can also set the position of the guide line with ▲/▼/◀/▶ in the Quick Menu (P34) while in button operation or [CUSTOM] menu.
- When it is difficult to move the guide line on the screen edge by touch operation, use ▲/▼/◀/▶ to set the position.

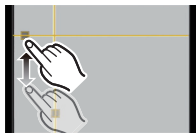


## ■ About the Histogram

A histogram is a graph that displays brightness along the horizontal axis (black to white) and the number of pixels at each brightness level on the vertical axis. It allows you to easily check a picture's exposure.

### Examples of histogram

- ① Properly Exposed
- ② Under Exposed
- ③ Overexposed
- \* Histogram

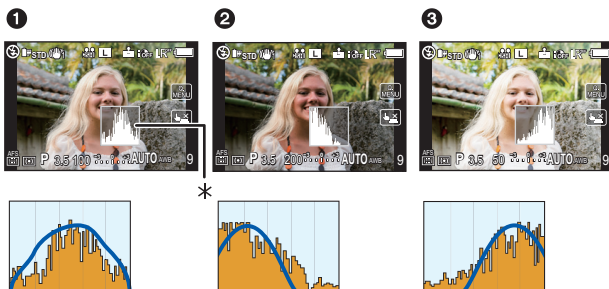


**■ Set the position of the histogram**

- Set the [HISTOGRAM] in the [CUSTOM] menu to [ON]. (P136)

**Touch the histogram and drag it to the position you want to move it to (P15).**

- You can also set the position of the histogram with ▲/▼/◀/▶ in the Quick Menu (P34) while in button operation or [CUSTOM] menu.

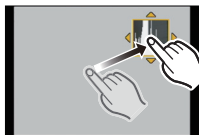**Note****• When the recorded picture and the histogram do not match each other under the following conditions, the histogram is displayed in orange.**


- When the Manual Exposure Assistance is other than [±0EV] during Exposure Compensation or in the Manual Exposure Mode
- When the flash is activated
- When the flash is closed
  - When the brightness of the screen is not correctly displayed in dark places
  - When the exposure is not adequately adjusted
- The histogram is an approximation in the Recording Mode.
- The histogram displayed in this camera does not match histograms displayed by picture editing software used in PCs etc.
- Histogram is displayed in R (red), G (green), B (blue), and Y (luminance) during the playback.

[REC] Mode: **P A S M** CUST SCN

**Taking Pictures using the Built-in Flash**

- (A)** To open the flash  
Slide the flash open lever.

- (B)** To close the flash  
Press the flash until it clicks.
- Be sure to close the flash when not in use.
  - The flash setting is fixed to [☺] while the flash is closed.

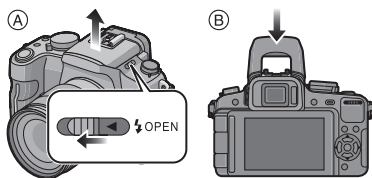**Note**

- Be careful not to catch a finger when closing a flash bulb.

**Switching to the appropriate flash setting**

**Applicable modes:** **P A S M** CUST SCN

Set the built-in flash to match the recording.

- Open the flash.

**1 Select [FLASH] in the [REC] Mode menu. (P32)**

## 2 Press ▲/▼ to select a mode and press [MENU/SET].

- For information about flash settings that can be selected, refer to "Available flash settings by Recording Mode". (P68)



## 3 Press [MENU/SET] to close the menu.




 
- You can also press the shutter button halfway to close the menu.





Item	Description of settings
⚡A: AUTO	The flash is automatically activated when the recording conditions make it necessary.
⚡AⓄ: AUTO/Red-Eye Reduction*	The flash is automatically activated when the recording conditions make it necessary. It is activated once before the actual recording to reduce the red-eye phenomenon (eyes of the subject appearing red in the picture) and then activated again for the actual recording. • Use this when you take pictures of people in low lighting conditions.
⚡: Forced Flash ON	The flash is activated every time regardless of the recording conditions. • Use this when your subject is back-lit or under fluorescent light.
⚡Ⓞ: Forced ON/Red-Eye Reduction*	The flash is activated every time regardless of the recording conditions. Simultaneously it reduces the red-eye phenomenon. • Use this when your subject is back-lit or under fluorescent light.
⚡S: Slow Sync.	When taking pictures against a dark background landscape, this feature will slow the shutter speed when the flash is activated. Dark background landscape will appear brighter. • Use this when you take pictures of people in front of a dark background. • Using a slower speed can cause motion blur. Using a tripod can enhance your photos.
⚡SⓄ: Slow Sync./Red-Eye Reduction*	When taking pictures against a dark background landscape, this feature will slow the shutter speed when the flash is activated. Dark background landscape will appear brighter. Simultaneously it reduces the red-eye phenomenon. • Use this when you take pictures of people in front of a dark background. • Using a slower speed can cause motion blur. Using a tripod can enhance your photos.
Ⓞ: Forced Flash OFF	The flash is not activated in any recording conditions. • Use this when you take pictures in places where the use of the flash is not permitted.

The flash is activated twice. The interval between the first and second flash is longer when [⚡AⓄ], [⚡Ⓞ] or [⚡SⓄ] is set. The subject should not move until the second flash is activated.

\* [RED-EYE REMOVAL] (P130) on the [REC] Mode menu is set to [ON], [🔪] appears on the flash icon.

## ■ About the Digital Red-Eye Correction

  





 

















When [RED-EYE REMOVAL] (P130) has been set to [ON] and Red-Eye Reduction ([, [, [) is selected, Digital Red-Eye Correction is performed whenever the flash is used. The camera automatically detects red-eye and corrects the picture. (Only available when the AF Mode is set to [) and face detection is active)

- Under certain circumstances, red-eye cannot be corrected.
- In the following cases, Digital Red-Eye Correction does not work.
  - When the flash setting is set to [, [] or [  - When [RED-EYE REMOVAL] is set to [OFF]
  - When the AF Mode is set to anything except [




























## ■ Available flash settings by Recording Mode

   
The available flash settings depend on the Recording Mode.

(○: Available, —: Not available, ●: Initial setting of Advanced Scene Mode and Scene Mode)

							
	○*	—	—	—	—	—	○
	○	○	○	○	○	○	○
	○	○	○	○	○	○	○
	○	○	○	○	—	—	○
	—	—	○	○	—	—	○
	—	—	—	—	—	—	○
	—	—	—	—	—	—	○
	○	●	○	—	—	—	○
	○	●	○	—	—	—	○
	●	○	○	—	—	—	○
	○	●	○	—	—	—	○
	○	●	○	—	—	○	○
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	●	—	○	—	—	—	○

							
	●	—	○	—	—	—	○
	●	—	○	—	—	—	○
	●	—	○	—	—	—	○
	●	—	○	—	—	—	○
	●	—	○	—	—	—	○
	●	—	○	—	—	—	○
	●	—	○	—	—	—	○
	—	—	—	—	—	●	○
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	○	●	○	—	—	—	○
	○	●	○	—	—	—	○
	●	—	○	—	—	—	○
	●	—	○	—	—	—	○
	●	○	○	—	—	—	○

\* [] is displayed. [, [, [] or [] is set depending on the type of subject and brightness.

- The flash setting may change if the Recording Mode is changed. Set the flash setting again if necessary.
- The flash setting is memorized even if the camera is turned off. However, the Advanced Scene Mode or the Scene Mode flash setting is reset to the initial setting when the Advanced Scene Mode or the Scene Mode is changed.
- Flash will not be activated when recording motion picture.

## ■ The available flash range to take pictures

- The available flash range is an approximation.

ISO sensitivity	When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is used	
	Available flash range	
	Wide	Tele
<b>AUTO</b>	45 cm (1.48 feet) to 6.2 m (20.3 feet)*	30 cm (0.99 feet) to 3.9 m (12.8 feet)*
<b>ISO100</b>	45 cm (1.48 feet) to 3.1 m (10.2 feet)	30 cm (0.99 feet) to 1.9 m (6.23 feet)
<b>ISO200</b>	45 cm (1.48 feet) to 4.4 m (14.4 feet)	30 cm (0.99 feet) to 2.7 m (8.85 feet)
<b>ISO400</b>	45 cm (1.48 feet) to 6.2 m (20.3 feet)	30 cm (0.99 feet) to 3.9 m (12.8 feet)
<b>ISO800</b>	50 cm (1.64 feet) to 8.8 m (28.9 feet)	30 cm (0.99 feet) to 5.5 m (18.0 feet)
<b>ISO1600</b>	80 cm (2.62 feet) to 12.5 m (41.0 feet)	50 cm (1.64 feet) to 7.8 m (25.6 feet)
<b>ISO3200</b>	1.1 m (3.61 feet) to 17.7 m (58.1 feet)	70 cm (2.29 feet) to 11.1 m (36.4 feet)
<b>ISO6400</b>	1.6 m (5.24 feet) to 25.1 m (82.3 feet)	1.0 m (3.28 feet) to 15.7 m (51.5 feet)

\* When the [ISO LIMIT SET] (P131) is set to [OFF]

- At the time of flash photography, when distance with the subject is near, the flash light is interrupted with the lens and a part of the picture being taken becomes dark. Check the distance between the camera and the subject when taking a picture. The distance from which the subject blocks the flash light differs according to the lens used.
  - When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is attached:
    - 45 cm (1.48 feet) or less (Wide)/30 cm (0.99 feet) or less (Tele)

## ■ Shutter speed for each flash setting

Flash setting	Shutter speed (Sec.)
	1/60*1 to 1/4000th
	1/60*2 to 1/160th

Flash setting	Shutter speed (Sec.)
	1 to 1/4000th
	60*3 to 1/4000th

\*1 This becomes 60 seconds in Shutter-Priority AE Mode

\*2 This becomes 60 seconds in Shutter-Priority AE Mode and B (Bulb) in the Manual Exposure Mode.

\*3 This becomes B (Bulb) in the Manual Exposure Mode.

- When the flash is activated, the shutter speed cannot be set to faster than 1/160th of a second.
- In Intelligent Auto Mode, shutter speed changes depending on the identified scene.

### Note

- **Do not bring the flash too close to objects or close the flash while it is activated. The objects may be discolored by its heat or lighting.**
- Do not close the flash soon after the flash is activated prior to taking pictures due to AUTO/Red-Eye Reduction etc. It causes a malfunction.
- When you take a picture beyond the available flash range, the exposure may not be adjusted properly and the picture may become bright or dark.
- When the flash is being charged, the flash icon blinks red, and you cannot take a picture even when you press the shutter button fully.
- The White Balance may not be properly adjusted if the flash level is insufficient for the subject.

- When you use certain lenses, light from the flash may be blocked or fail to cover the lens field of view, causing dark areas to appear in the resulting pictures.
- When taking a picture with the flash, we recommend removing the lens hood. In some cases it may not allow the scene to be illuminated properly.
- It may take time to charge the flash if you repeat taking a picture. Take a picture after the access indication disappears.
- The Red-Eye Reduction effect differs between people. Also, if the subject was far away from the camera or was not looking at the first flash, the effect may not be evident.
- When you attach an external flash, it takes priority over the built-in flash. Refer to P177 for the external flash.

## Adjust the flash output


Applicable modes: **P A S M** CUST SCN      

Adjust the flash output when the subject is small, or the reflectivity is very high or low.

**1** Select **[FLASH ADJUST.]** in the **[REC] Mode menu. (P32)**

**2** Press **◀/▶** to set the flash output and then press **[MENU/SET]**.

- You can adjust from  $[-2 \text{ EV}]$  to  $[+2 \text{ EV}]$  in steps of  $[1/3 \text{ EV}]$ .
- Select  $[0 \text{ EV}]$  to return to the original flash output.

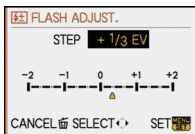

**3** Press **[MENU/SET]** to close the menu.

- You can also press the shutter button halfway to close the menu.

### Note

- $[+]$  or  $[-]$  is displayed on the flash icon in the screen when the flash level is adjusted.
- The flash output setting is memorized even if the camera is turned off.

## Setting to the 2nd Curtain Synchro

Applicable modes: **PASM** CUST **SCN**

2nd curtain synchro activates the flash just before the shutter closes when taking pictures of moving objects such as cars using a slow shutter speed.



**1** Select [FLASH SYNCHRO] in the [REC] Mode menu. (P32)

**2** Press ▼ to select [2ND] and then press [MENU/SET].



**3** Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

Item	Effect
1st curtain synchro	The normal method when taking pictures with the flash. 
2nd curtain synchro	The light source appears behind the subject and picture becomes dynamic. 

### Note

- Set it to [1ST] normally.
- [2nd] is displayed in the flash icon on the screen if you set [FLASH SYNCHRO] to [2ND].
- The flash sync. settings are also effective when using an external flash. (P177)
- When a fast shutter speed is set, the effect of [FLASH SYNCHRO] may deteriorate.
- You cannot set [A], [S] or [M] when [FLASH SYNCHRO] is set to [2ND].
- It can only be set with [PERIPHERAL DEFOCUS] in Scene Mode.

[REC] Mode: **TA** **PAS** **CUST** **P** **SCN** 

## Compensating the Exposure

Use this function when you cannot achieve appropriate exposure due to the difference in brightness between the subject and the background. Look at the following examples.

### Underexposed



### Properly exposed



### Overexposed



Compensate the exposure towards positive.


Compensate the exposure towards negative.

### 1 Press the rear dial to switch to Exposure Compensation operation.

### 2 Rotate the rear dial to compensate the exposure.

(A) Exposure Compensation value

(B) [EXPO.METER]

- Select [0] to return to the original exposure.
- Rotate the rear dial to display the [EXPO.METER]. (P139) (However, it does not appear in **TA**/**P**/**SCN**/ Mode.)



### 3 Take a picture.

#### Note

- EV is an abbreviation of [Exposure Value]. It refers to the amount of light given to the CCD by the aperture value and the shutter speed.
- The set exposure value is memorized even if the camera is turned off. However, the exposure value during the Intelligent Auto Mode is not memorized.
- The compensation range of the exposure will be limited depending on the brightness of the subject.
- Rotate the rear dial slowly but surely.
- When the aperture and shutter speed values are displayed in the screen in the Program AE Mode, Program Shift operation and Exposure Compensation operation is switched every time the rear dial is pressed.
- In the Aperture-Priority AE Mode, Aperture Setting operation (P94) and Exposure Compensation operation is switched every time the rear dial is pressed.
- In the Shutter-Priority AE Mode, Shutter Speed Setting operation (P94) and Exposure Compensation operation is switched every time the rear dial is pressed.
- Operation method can be changed with [EXPO. SETTINGS] in the [CUSTOM] menu. (P140)
- Exposure compensation can be performed by touching the Exposure Compensation display, and then using the slide bar in the Quick Menu (P33) while in touch operation.




- In the Quick Menu (P34) while in button operation, if set to [LCD] (LCD monitor style), exposure compensation can be set with ▲/▼ after selecting to display exposure compensation with ◀/▶ or the rear dial.
- In the Quick Menu (P34) while in button operation, if set to [VIEW] (viewfinder style), after selecting the Exposure Compensation display using the rear dial or ◀/▶, pressing the rear dial or [MENU/SET] will allow you to compensate the exposure with the rear dial or ◀/▶.

[REC] Mode: **TA PASM** CUST SCHN

## Taking Pictures using Burst Mode

Pictures are taken continuously while the shutter button is pressed.  
Select the ones you really like from among the pictures you have taken.

### 1 Set the drive mode lever to [ ].

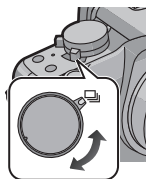

### 2 Focus on the subject and take a picture.

- Ⓐ When Burst Mode is set to high speed [H].
- Hold down the shutter button fully to activate the Burst Mode.



### ■ Changing the burst speed

- 1 Select [BURST RATE] in the [REC] Mode menu. (P32)
- 2 Press ▲/▼ to select the burst speed and then press [MENU/SET].
- 3 Press [MENU/SET] to close the menu.
  - You can also press the shutter button halfway to close the menu.



	[H] (High speed)	[M] (Middle speed)	[L] (Low speed)
Burst speed (pictures/second)	3.2	2.6	2
Live View during Burst Mode	None	Available	Available
*1	With RAW files	4 to 7*2	
	Without RAW files	Depends on the remaining capacity of the card*2	

\*1 Number of recordable pictures

\*2 Pictures can be taken until the capacity of the card becomes full. However the burst speed will become slower halfway. The exact timing of this depends on the aspect ratio, the picture size, the setting for the quality and the type of card used.

- First burst speed has no relation with the transfer speed of the card.
- The burst speed values given above apply when the shutter speed is 1/60 or faster and when the flash is not activated.
- The Burst Mode speed may become slower depending on the following settings.
  - [SENSITIVITY] (P89)/[PICTURE SIZE] (P126)/[QUALITY] (P127)/[FOCUS PRIORITY] (P138)/Focus Mode
- Refer to P127 for information about RAW files.

### ■ Focusing in Burst Mode

The focus changes depending on the setting for [FOCUS PRIORITY] (P138) in the [CUSTOM] menu and the Focus Mode setting.

Focus Mode	Focus Priority	Focus
AFS	ON	At the first picture
	OFF	
AFC*1	ON	Normal focusing*2
	OFF	Predicted focusing*3
MF	—	Focus set with Manual Focus

\*1 When subject is dark, the focus is fixed on the first picture.

\*2 The burst speed may become slower because the camera is continuously focusing on the subject.

\*3 Burst speed takes priority, and focus is estimated within possible range.



### Note

- We recommend using the remote shutter (DMW-RSL1; optional) when you want to keep the shutter button pressed fully while taking pictures in Burst Mode. Refer to P179 for information about the remote shutter.
- When the burst speed is set to [H], the exposure and White Balance are fixed at the settings used for the first picture for the subsequent pictures as well. When the burst speed is set to [M] or [L], they are adjusted each time you take a picture.
- If you are following a moving subject while taking pictures in a place indoors, outdoors etc. where there is a large difference between the light and shade (landscape), it may take time until the exposure is stable. If burst is used at this time, the exposure may not become optimal.
- Since the shutter speed becomes slower in dark places, the burst speed (pictures/second) may become slower.
- When set to [H], the Auto Review function is activated regardless of the Auto Review setting. (Will not hold) You cannot set the Auto Review function in the [SETUP] menu.
- When set to [M] or [L], Live View is displayed between burst frames.
- When the flash is activated, you can take only 1 picture.
- **White Balance Bracket (P89) will record 3 pictures at 1 recording, so it will take longer to be able to take the next picture.**
- **Maximum of 3 films will be recorded depending on the Multi Film Bracket setting during the Multi Film Bracket recording (P93).**
- The Burst Mode is disabled during recording of motion pictures.

[REC] Mode: **A P A S M** CUST SCN     

## Taking Pictures using Auto Bracket

Maximum of 7 pictures will be recorded with different exposure settings following the Exposure Compensation range every time the shutter button is pressed. You can select the picture with the desired exposure among different exposures.

### With Auto Bracket

[STEP]: [3•1/3], [SEQUENCE]: [0/-/+]

1st picture



 
±0 EV

2nd picture




-1/3 EV

3rd picture




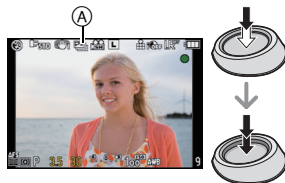
+1/3 EV

**1** Set the drive mode lever to .

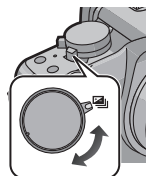


**2** Focus on the subject and take a picture.

- If you press and hold the shutter button, the number of pictures that you set is taken.
- The Auto Bracket indication  blinks until the number of pictures that you set is taken.
- The picture count is reset to [0] if you change the Auto Bracket setting, change the setting on the drive mode lever or turn the camera off before all the pictures that you set are taken.



## ■ Changing the settings for [STEP] and [SEQUENCE] in Auto Bracket

- 1 Select [AUTO BRACKET] in the [REC] Mode menu. (P32)
- 2 Press ▲/▼ to select [STEP] or [SEQUENCE] and then press ►.

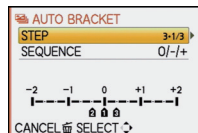

- 3 Press ▲/▼ to select the setting and then press [MENU/SET].

Item	Settings
[STEP]	[3•1/3] (3 pictures)
	[3•2/3] (3 pictures)
	[5•1/3] (5 pictures)
	[5•2/3] (5 pictures)
	[7•1/3] (7 pictures)
	[7•2/3] (7 pictures)

Item	Settings
[SEQUENCE]	[0/-/+]
	[-/0/+]

- 4 Press [MENU/SET] twice to close the menu.


- You can also press the shutter button halfway to close the menu.


### Note

- When taking pictures using Auto Bracket after setting the Exposure Compensation range, the pictures taken are based on the selected Exposure Compensation range.
- The exposure may not be compensated with Auto Bracket depending on the brightness of the subject.
- The Auto Review function is activated regardless of the Auto Review setting. (Will not hold) You cannot set the Auto Review function in the [SETUP] menu.
- When the flash is activated, you can take only 1 picture.
- Set number of pictures cannot be recorded if the recordable number of pictures is less than set number of pictures.
- **Settings for Multi Film Bracket have priority during the Multi Film Bracket recording (P93).**
- The Auto Bracket will be disabled during recording of the motion pictures.

[REC] Mode: **IA PASM CUST SCN**      


## Taking Pictures with the Self-timer


**1** Set the drive mode lever to .

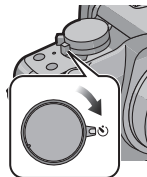

 **2** Press the shutter button halfway to focus and then press it fully to take the picture.


 
**A** When self-timer is set to .




- A picture is not taken until the subject is brought into focus. Focus and exposure will be set when the shutter button is pressed halfway.
- If you want to press the shutter button fully to take a picture even when the subject is not focused, set [FOCUS PRIORITY] in the [CUSTOM] menu to [OFF]. (P138)
- The self-timer indicator **B** blinks and the shutter is activated after 10 seconds (or 2 seconds).
- If you press [MENU/SET] while taking a picture with the self-timer, it is canceled.
- When  is selected, the self-timer indicator blinks again after the first and the second pictures are taken and the shutter is activated 2 seconds after it blinks.



### ■ Changing the time setting for the self-timer

**1** Select [SELF-TIMER] in the [REC] Mode menu. (P32)

**2** Press / to select the mode and then press [MENU/SET].

Item	Settings
	10 seconds
	10 seconds/3 pictures
	2 seconds

 



- If you set , after 10 seconds the camera takes 3 pictures at about 2 second intervals.

**3** Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

### Note

- When using a tripod etc., setting the self-timer to 2 seconds is a convenient way to avoid the jitter caused by pressing the shutter button.
- We recommend using a tripod when recording with the self-timer.
- Depending on the recording conditions, the recording interval may become more than 2 seconds when  is selected.
- The flash output may not be constant when  is set.

- Operation will be same as [AF] even if it is set to [AF] while Multi Film Bracket recording (P93).
- Use the Quick Menu (P33) to set when in Intelligent Auto Mode.
- Self-timer cannot be set to [AF] in Intelligent Auto Mode.
- The self-timer will be disabled during recording of the motion pictures.

[REC] Mode: **P A S M** CUST **AF** SCN

## Setting the Method used to Focus (AF Mode)


This allows the focusing method that suits the positions and number of the subjects to be selected.

Also, it is possible to set the focus and exposure to the subject specified on the touch panel.

Select the mode that matches the recording conditions and the composition.

**1** Set the focus mode lever to [AFS] or [AFC].

**2** Switching the auto focus mode dial.

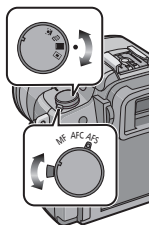

Auto focus mode dial/Item	Effect
[Face detection]	The camera automatically detects the person's face. The focus and exposure can then be adjusted to fit that face no matter what portion of the picture it is in. (max. 15 areas)
[AF Tracking]	Focus and exposure can be adjusted to a specified subject. Focus and exposure will keep on following the subject even if it moves. (Dynamic Tracking)
[23-area-focusing]	Up to 23 points for each AF area can be focused. This is effective when the subject is not in the center of the screen. (AF area frame will be same as image aspect ratio setting)
[1-area-focusing]	The camera focuses on the subject in the AF area on the screen. Position and size of the AF area can be changed.

## Note

- When the subject is not in the center of the composition in [□], you can bring the subject into the AF area, fix the focus and exposure by pressing the shutter button halfway, move the camera to the composition you want with the shutter button pressed halfway, and then take the picture. (Only when the focus mode lever is set to [AFS])
- The camera is focusing on all the AF areas using [ ] when multiple AF areas (max. 23 areas) light at the same time. If you want to determine the focus position to take pictures, switch the AF Mode to [□].
- If the AF Mode is set to [ ] or [ ], the AF area is not displayed until the picture is brought into focus. Also, if you set the Focus Mode to [AFC] in [ ], AF area will not be displayed even if the subject comes into focus.
- When it is set to [ ] during motion picture recording, it will switch to Multi Auto Focus Mode for motion pictures.
- The camera may detect the subjects other than a person as the face. In this case, switch the AF Mode to any modes other than [ ] and then take a picture.
- [FACE RECOG.] only works when [ ] is set.
- It is not possible to set [ ] in the following cases.
  - In [FOOD] in [CLOSE-UP]
  - In [NIGHT SCENERY] and [ILLUMINATIONS] in [NIGHT PORTRAIT]
- The AF Mode is fixed to [□] when using the Digital Zoom.
- AF area will be fixed to a small point in [PERIPHERAL DEFOCUS] in Scene Mode.
- It will be set to [□] when a recording is performed with the Touch Shutter function (P54).

## About [ ] (Face Detection)

When the camera detects a person's face, the following color AF area is displayed.

Yellow:

When the shutter button is pressed halfway, the frame turns green when the camera is focused.

White:

Displayed when more than one face is detected. Other faces that are the same distance away as faces within the yellow AF areas are also focused.

- When [ ] is selected and [METERING MODE] is set to multiple [ ], the camera will adjust the exposure to suit the person's face.
- Under certain picture-taking conditions including the following cases, the facial recognition function may fail to work, making it impossible to detect faces. The AF Mode is switched to [ ].
  - When the face is not facing the camera
  - When the face is at an angle
  - When the face is extremely bright or dark
  - When there is little contrast on the faces
  - When the facial features are hidden behind sunglasses, etc.
  - When the face appears small on the screen
  - When there is rapid movement
  - When the subject is other than a human being
  - When the camera is shaking



AF area can be moved when [ ] is selected. The size of AF area can also be changed.


### 1 Touch the subject.

- AF area setting screen is displayed.
- Press and hold the [Q.MENU] button until the AF area setting screen is displayed. AF area can then also be moved by pressing the cursor button toward ▲/▼/◀/▶.
- The AF area can be set freely at a position on the screen. (It cannot be set to edge of the screen)
- The AF area returns to the center when [ ] is pressed.
- When the [FOCUS AREA SET] is set to [Fn BUTTON SET] (P136), AF area setting screen can also be displayed by pressing ▼.



### 2 Touch the slide bar to change the size of the AF area frame.

- It can be changed to 4 different sizes of “spot” (A), “normal” (B), “large” (C), and “extra large” (D).
- It is also possible to rotate the rear dial to the right to make it larger. Rotate it to the left to make it smaller.

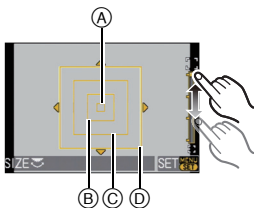

### 3 Touch [SET].

- AF area with same function as [ ] is displayed in the touched position, with the Face Recognition frame still displayed.
- AF area will turn yellow, and Face Recognition frame will turn white.
- Setting of the AF area frame is canceled when [CANCEL] is touched.





## Setting up [AF-ON] (AF Tracking)

### ■ When operating the touch panel

#### 1 Touch the subject.

- The AF area turns yellow and the subject is locked. It will continuously adjust the focus and exposure automatically following the movement of the subject. (Dynamic Tracking)
- Lock is canceled when [CANCEL] is touched.



#### 2 Press the shutter button halfway to focus and then press it fully to take the picture.

### ■ When operating buttons

#### 1 Bring the subject to the AF tracking frame, and press the shutter button halfway to lock the subject.

- (A) AF tracking frame (White)
- (B) AF tracking frame (Yellow)

Before locking

Locked



- When the subject is recognized, AF area will turn green and the subject will be locked. Focus and exposure will be fixed automatically and continuously in accordance with the movement of the subject when you release the shutter button (Dynamic Tracking). AF area will be displayed in yellow in this case.
- Lock is canceled when [MENU/SET] is pressed.

#### 2 Press the shutter button halfway to focus and then press it fully to take the picture.

#### Note

- If it fails to lock, AF area will flash in red, and disappear. Try to lock again.
- AF Tracking will not operate when it has failed to AF track. AF Mode will be switched to [AF-ON] in that case.
- [FACE RECOG.] does not work when AF tracking is active.
- In the following cases, [AF-ON] operates as [AF-ON]
  - When the Film Mode is [STANDARD]([B&W]), [DYNAMIC]([B&W]), [SMOOTH]([B&W])
  - When My Color Mode is [MONOCHROME]
- Dynamic Tracking function may not work in the following cases:
  - When the subject is too small
  - When the recording location is too dark or bright
  - When the subject is moving too fast
  - When the background has the same or similar color to the subject
  - When jitter is occurring
  - When zoom is operated


## About [ ] (23-area-focusing)

- AF areas up to a maximum of 23 are lit when the shutter button is pressed halfway, and each AF area can be brought into focus.

The 23 AF areas can be divided into 9 areas and the selected areas can be also brought into focus.

**Touch the screen to display the AF area setting screen, and select the AF area frame as shown in the figure on the right.**


- After releasing your finger from the touch panel for a while, AF area frame will disappear, and only [+ ] display (center point of selected AF area frame) will remain on the screen.
- Press and hold the [Q.MENU] button until the AF area setting screen is displayed. The AF area frame can then also be selected by pressing the cursor button toward  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$  or by rotating the rear dial.
- Setting of the AF area frame is canceled when [CANCEL] is touched.
- When the [FOCUS AREA SET] is set to [Fn BUTTON SET] (P136), AF area setting screen can also be displayed by pressing  $\blacktriangledown$ .

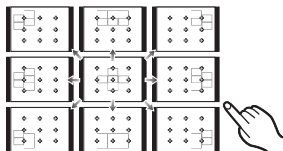

## About [ ] (1-area-focusing)


AF area can be moved when [  ] is selected. The size of AF area can also be changed.

### 1 Touch the subject to move the AF area.

- AF area setting screen is displayed.
- Press and hold the [Q.MENU] button until the AF area setting screen is displayed. AF area can then also be moved by pressing the cursor button toward  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ .
- You can set to arbitrary position of the screen. (It cannot be set to edge of the screen)
- The AF area returns to the center when [  ] is pressed.
- When the [FOCUS AREA SET] is set to [Fn BUTTON SET] (P136), AF area setting screen can also be displayed by pressing  $\blacktriangledown$ .

 
 

 



### 2 Touch the slide bar to change the size of the AF area frame.

- For details on enlarging the AF area frame, read step 2 of "About [  ] (Face Detection)" procedure on P79.

 
### 3 Touch [SET].

### ■ Move the AF area easily with button operations

When the [DIRECT FOCUS AREA] (P138) in the [CUSTOM] menu is set to [ON] while [  ], [  ] or [  ] is selected, it is possible to move the AF area directly with  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ . It is also possible to change the size of the AF area frame by rotating the rear dial in the screen to set the position for [  ] or [  ].

- [SENSITIVITY] (P89), [Fn BUTTON SET] (P136), [FILM MODE] (P91), or [WHITE BALANCE] (P86) cannot be set with  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ . Make the setting with the Quick Menu (P33).

### Note

- The spot metering target can also be moved to match the AF area when using [  ]. (P128)
- Set the size of AF area to "normal", "large", or "extra large" when it is hard to focus using the "spot".
- [DIRECT FOCUS AREA] is fixed to [OFF] in My Color Mode.

[REC] Mode: **PA** **SM** **CUST** **SCN** **Q** **Q** **Q** **Q** **Q** **Q** **Q**


## Taking Pictures with Manual Focus

Use this function when you want to fix the focus or when the distance between the lens and the subject is determined and you do not want to activate Auto Focus.

### 1 Set the focus mode lever to [MF].

### 2 Rotate the focus ring to focus on the subject.

- When the [MF ASSIST] (P139) in the [CUSTOM] menu is set to [ON], screen will be enlarged about 5 times as MF assist.
- MF guide (A) is displayed on the screen when the focus ring is rotated if the [MF GUIDE] (P139) in the [CUSTOM] menu is set to [ON]. You can check the direction of rotation of the focus ring is toward the near side or the far side.
- The enlarged area can be moved by dragging the screen (P15), or pressing the cursor button toward ▲/▼/◀/▶.
- MF assist is enlarged from 5 times to 10 times when [Q] is touched. It will return to 5 times by touching [Q].
- MF assist or MF guide will disappear about 10 seconds after you stop operating the focus ring, touch panel, or ▲/▼/◀/▶.

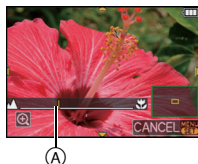

### 3 Take the picture.

#### ■ MF ASSIST

Even without rotating the focus ring, the MF assist can be displayed with the following operations.

#### When operating the touch panel

##### 1 Touch the place to enlarge, and display the MF assist.

- For the operations while displaying the MF assist, refer to step 2 of the “Taking Pictures with Manual Focus” procedure.

##### 2 Touch [CANCEL] to close MF assist.

- The screen returns to the previous screen.



#### When operating buttons

##### 1 Press and hold [Q.MENU] button until MF assist position setting screen is displayed.

- When the [FOCUS AREA SET] is set to [Fn BUTTON SET] (P136), MF assist position setting screen can also be displayed by pressing ▼.

##### 2 Press ▲/▼/◀/▶ to change the position of the MF assist screen.

- The following will return the MF assistance to the original position.
  - When the Focus Mode is set to other than [MF]
  - Changing [ASPECT RATIO] or [PICTURE SIZE].
  - Turning the camera off.



Q.MENU



**3 Press [MENU/SET] and enlarge the MF Assist position setting screen.**

- MF Assist is enlarged from 5 times to 10 times when the rear dial is rotated right. It will return to 5 times by rotating the rear dial left.
- For the operations while displaying the MF Assist, refer to step 2 of the “Taking Pictures with Manual Focus” procedure.

**4 Press [MENU/SET] to close MF Assist.**

- The screen returns to the previous screen.

**■ Move the MF Assist easily with button operations**

When the [DIRECT FOCUS AREA] (P138) in the [CUSTOM] menu is set to [ON], it is possible to move the MF Assist directly with ▲/▼/◀/▶.

- [SENSITIVITY] (P89), [Fn BUTTON SET] (P136), [FILM MODE] (P91), or [WHITE BALANCE] (P86) cannot be set with ▲/▼/◀/▶. Make the setting with the Quick Menu (P33).

**■ Technique for Manual Focus**


- 1 Rotate the focus ring to focus on the subject.
- 2 Rotate it a little more.
- 3 Finely focus on the subject by rotating the focus ring slowly in reverse.

**■ About the focus distance reference mark**

The focus distance reference mark is a mark used to measure the focus distance.

Use this when taking pictures with Manual Focus or taking close-up pictures.

- (A) Focus distance reference mark
- (B) Focus distance reference line
- (C) 0.3 m (0.99 feet) (When the 14–42 mm/ F3.5–5.6 lens included in DMC-G2K is used)

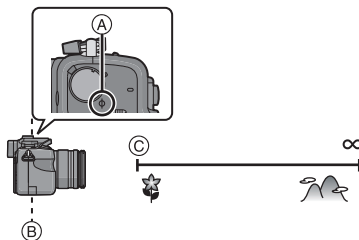

- If you are taking close-up pictures
  - We recommend using a tripod and the self-timer (P77).
  - The effective focus range (depth of field) is significantly narrowed. Therefore, if the distance between the camera and the subject is changed after focusing on the subject, it may become difficult to focus on it again.
  - The resolution of the periphery of the picture may decrease slightly. This is not a malfunction.

**Note**

- When the MF Assist is started by the touch panel operation or button operation, MF Assist will continue to display even after about 10 seconds have passed without operating the focus ring, touch panel, or ▲/▼/◀/▶.
- If you use the zoom function after focusing on the subject, focus on the subject again.
- The MF Assist does not appear when using the Digital Zoom or recording motion pictures.
- After canceling Sleep Mode, focus on the subject again.
- MF Assist or MF guide may not display depending on the lens used.

[REC] Mode: **PASM** CUST **P** SCN      

## Fixing the Focus and the Exposure (AF/AE Lock)

This is useful when you want to take a picture of a subject outside the AF area or the contrast is too strong and you cannot achieve appropriate exposure.


### ■ Fixing the exposure only

**1** Align the screen with the subject.

**2** Press and hold [AF/AE LOCK] to fix the exposure.

Ⓐ [AF/AE LOCK] button

- The aperture value and the shutter speed light.
- If you release [AF/AE LOCK], AE Lock is canceled.

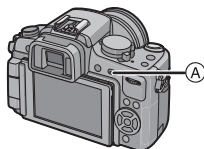

**3** While pressing [AF/AE LOCK], move the camera as you compose the picture.

Ⓑ AE lock indication



**4** Press the shutter button halfway to focus on the subject and then press it fully.




### ■ Fixing the focus or the focus/the exposure

**1** Select [AF/AE LOCK] in the [CUSTOM] menu. (P32)

**2** Press ▲/▼ to select [AF] or [AF/AE] and then press [MENU/SET].

**3** Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

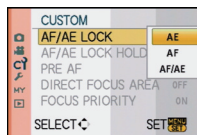

### Taking pictures when [AF] or [AF/AE] is set

**1** Aim the lens at the subject.

**2** Press and hold [AF/AE LOCK] to fix the focus and the exposure.

- When [AF] is selected, [AFL], the focus indication, aperture value, the shutter speed light when the subject is focused.
- When [AF/AE] is selected, [AFL], [AEL], the focus indication, aperture value and the shutter speed light when the subject is focused and the exposure is set.
- If you release [AF/AE LOCK], AF/AE Lock is canceled.

**3** While pressing [AF/AE LOCK], move the camera to the composition you would like to take and then press the shutter button fully.

**Note**

- If you set [AF/AE LOCK HOLD] in the [CUSTOM] menu to [ON], you can fix the focus and the exposure even if you release [AF/AE LOCK] after pressing it. (P137)
- The brightness of the image displayed on the LCD monitor/viewfinder (Live View) will be also locked when the AE lock is performed.
- AF Lock only is effective when taking pictures in Manual Exposure Mode.
- AE Lock only is effective during Manual Focus or Preview Mode.
- AE Lock and AF lock can be used during motion picture recording, but AE/AF lock cannot be performed again during motion picture recording. During motion picture recording only cancellation of AE/AF lock can be performed.
- The exposure is set, even if the brightness of the subject changes.
- The subject can be focused again by pressing the shutter button halfway even when AE is locked.
- Program Shift can be set even when AE is locked.

[REC] Mode: **P A S M** CUST      

## Adjusting the White Balance

In sunlight, under incandescent lights or in other such conditions where the color of white takes on a reddish or bluish tinge, this item adjusts to the color of white which is closest to what is seen by the eye in accordance with the light source.

**1** Press **▶ (WB)**.**2** Touch the White Balance to select.**3** Touch **[SET]**.

- You can also press the shutter button halfway to set.


Item	Recording conditions
[AWB]	Automatic adjustment
[☀]	When taking pictures outdoors under a clear sky
[☁]	When taking pictures outdoors under a cloudy sky
[🏠]	When taking pictures outdoors in the shade
[💡]	When taking pictures under incandescent lights
[WB]*	When taking pictures with the flash only
[P]/[S]	When using the preset White Balance
[K]	When using the preset color temperature setting

\*It will operate as [AWB] during motion picture recording.

## ■ Auto White Balance

Depending on the conditions prevailing when pictures are taken, the pictures may take on a reddish or bluish tinge. Furthermore, when a multiple number of light sources are being used or there is nothing with a color close to white, Auto White Balance may not function properly. In a case like this, set the White Balance to a mode other than [AWB].

- 1 Auto White Balance will work within this range.
  - 2 Blue sky
  - 3 Cloudy sky (Rain)
  - 4 Shade
  - 5 Sunlight
  - 6 White fluorescent light
  - 7 Incandescent light bulb
  - 8 Sunrise and sunset
  - 9 Candlelight
- K=Kelvin Color Temperature

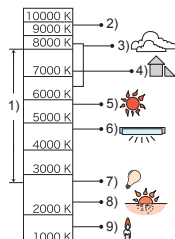

### Note

- The optimal White Balance will differ depending on the type of halogen lighting being recorded under so use [AWB], [] or [].
- The White Balance might not be adjusted for a subject that the flash cannot reach when the flash is used.
- The White Balance is memorized even if the camera is turned off, but [WHITE BALANCE] for the Advanced Scene Mode or the Scene Mode is set to [AWB] when the Advanced Scene Mode or the Scene Mode is changed.
- White Balance is fixed to [AWB] in following conditions.
  - In Intelligent Auto Mode
  - In [OUTDOOR PORTRAIT] and [INDOOR PORTRAIT] in [PORTRAIT]
  - In [SCENERY]
  - In [OUTDOOR SPORTS] and [INDOOR SPORTS] in [SPORTS]
  - In [FOOD] in [CLOSE-UP]
  - In [NIGHT PORTRAIT]
  - In [SUNSET] or [PARTY] in Scene Mode
  - My Color Mode
- The camera will not be able to operate with if the [DIRECT FOCUS AREA] (P138) is set to [ON]. Set using the Quick Menu (P33).

## Setting the White Balance manually

Set the White Balance value. Use to match the condition when taking photographs.

- 1 Select [] or [] and then touch [WHITE SET].

- The White Balance setting screen can also be displayed by pressing the cursor button toward .

- 2 Aim the camera at a sheet of white paper etc. so that the frame in the center is filled by the white object only and then touch [SET].



### Note

- You may not be able to properly set a White Balance if the subject is too bright or too dark. In this case, adjust the subject to an appropriate brightness and then reset the White Balance.

## Setting the color temperature

You can set the color temperature manually for taking natural pictures in different lighting conditions. The color of light is measured as a number in degrees Kelvin. As the color temperature increases, the picture becomes more bluish. As the color temperature decreases, the picture becomes more reddish.

### 1 Select [ ] and then touch [WB K SET].

- The color temperature setting screen can also be displayed by pressing the cursor button toward ▲.

### 2 Touch the color temperature setting bar.

- It is also possible to set the values by touching [▲]/[▼] or pressing ▲/▼ of the cursor button.
- You can set a color temperature from [2500K] to [10000K].

### 3 Touch [SET].



## Finely adjusting the White Balance [WB+]

You can finely adjust the White Balance when you cannot acquire the desired hue by setting the White Balance.

### 1 Select the White Balance and then touch [ADJUST].

- The White Balance adjust screen can also be displayed by pressing the cursor button toward ▼.

### 2 Touch within the frame to finely adjust.

- You can finely adjust also by touching [G+]/[M-]/[A]/[B], or pressing ▲/▼/◀/▶ of the cursor button.

- ◀ : A (AMBER: ORANGE)
- ▶ : B (BLUE: BLUISH)
- ▲ : G+ (GREEN: GREENISH)
- ▼ : M- (MAGENTA: REDDISH)




### 3 Touch [SET].

#### Note

- If you finely adjust the White Balance to A (amber), the White Balance icon on the screen will change to orange. If you finely adjust the White Balance to B (blue), the White Balance icon on the screen will change to blue.
- If you finely adjust the White Balance to G+ (green) or M- (magenta), [+ ] (green) or [- ] (magenta) appears beside the White Balance icon on the screen.
- Press [DISPLAY] to return to the center point.
- Select the center point if you are not finely adjusting the White Balance.
- The White Balance fine adjustment setting is reflected in the picture when using the flash.
- You can finely adjust the White Balance independently for each White Balance item.
- The White Balance fine adjustment setting is memorized even if the camera is turned off.





- The White Balance fine adjustment level returns to the standard setting (center point) in the following cases.
  - When you reset the White Balance in [  ] or [  ]
  - When you reset the color temperature manually in [  ]

## White Balance Bracket

Bracket setting is performed based on the adjustment values for the White Balance fine adjustment, and 3 pictures with different colors are automatically recorded when the shutter button is pressed once.

### 1 Finely adjust the White Balance in step 2 of the “Finely adjusting the White Balance” procedure, and touch [ ]/[ ] to set the bracket.

- Bracket settings can also be made by rotating the rear dial.

[  ] or rear dial right: Horizontal (A to B)

[  ] or rear dial left: Vertical (G+ to M–)



### 2 Touch [SET].

#### Note

- [BKT] is displayed in White Balance icon in the screen when the White Balance Bracket is set.
- The White Balance Bracket setting is released when the power has been turned off (including Sleep Mode).
- Pictures can be taken with White Balance Bracket regardless of the drive mode settings.
- You will only hear the shutter sound once.
- White Balance Bracket cannot be set when the [QUALITY] is set to [RAW], [RAW+], or [RAW].
- **White Balance Bracket will be disabled when the Multi Film Bracket is set.**
- White Balance Bracket does not work when recording motion pictures.

[REC] Mode: **PASM** CUST

## Setting the Light Sensitivity

This allows the sensitivity to light (ISO sensitivity) to be set. Setting to a higher figure enables pictures to be taken even in dark places without the resulting pictures coming out dark.


### 1 Press ▲ (ISO).




### 2 Touch the ISO sensitivity to select.

### 3 Touch [SET].

- You can also press the shutter button halfway to set.

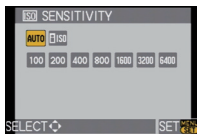


ISO sensitivity	100	6400
Recording location (recommended)	When it is light (outdoors)	When it is dark
Shutter speed	Slow	Fast
Noise	Less	Increased

ISO sensitivity	Settings
<b>AUTO*</b>	The ISO sensitivity is automatically adjusted according to the brightness.
 <b>ISO*</b> <b>(Intelligent)</b>	The ISO sensitivity is adjusted according to the movement of the subject and the brightness.
<b>100/200/400/800/1600/3200/6400</b>	The ISO sensitivity is fixed to various settings. <b>(When the [ISO INCREMENTS] in [REC] Mode menu (P131) is set to [1/3 EV], items of ISO sensitivity that can be set will increase.)</b>

\* **When the [ISO LIMIT SET] of [REC] Mode menu (P131) is set to anything except [OFF], it is set automatically within the value set in [ISO LIMIT SET].**

It is set as following when the [ISO LIMIT SET] is set to [OFF].

- When [AUTO] is selected, ISO sensitivity is adjusted automatically depending on brightness within a maximum setting of [ISO400].
- When setting to  [ISO], ISO sensitivity will adjust automatically depending on brightness within the maximum setting of [ISO800]. ([ISO400] when the flash is used)
- The ISO sensitivity will be set to [AUTO] when recording motion pictures. Also, the [ISO LIMIT SET] will not operate.








### ■ About (Intelligent ISO sensitivity control)

     The camera automatically sets the optimum ISO sensitivity and shutter speed to suit the movement of the subject and brightness of the scene to minimize the jitter of the subject.

- The shutter speed is not fixed when the shutter button is pressed halfway. It is continuously changing to match the movement of the subject until the shutter button is pressed fully. Confirm the actual shutter speed on the information display for the picture being played back.



#### Note

- The higher the value set for the ISO sensitivity, the more the jitter is reduced but the greater the amount of picture noise.
- Refer to P69 for the flash range.
- Depending on the brightness and how fast the subject is moving, jitter may not be avoided even if  is selected.
- Movements may not be detected when a moving subject is small, when a moving subject is at the edge of the screen or when a subject has moved at the very moment when the shutter button was pressed fully.
- The setting is fixed to  in the following cases.
  - In [BABY1]/[BABY2] and [PET] in Scene Mode
  - In [INDOOR PORTRAIT], [NORMAL SPORTS], [OUTDOOR SPORTS] and [INDOOR SPORTS] in Advanced Scene Mode
- Program Shift cannot be activated when the ISO sensitivity is set to .
- You cannot select  in Shutter-Priority AE Mode and Manual Exposure Mode. Also, you cannot select [AUTO] in Manual Exposure Mode.
- To avoid picture noise, we recommend reducing the ISO sensitivity, setting [NOISE REDUCTION] in [FILM MODE] towards [+ ] or setting the items except [NOISE REDUCTION] towards [- ] to take pictures. (P92)
- The camera will not be able to operate with  /  /  if the [DIRECT FOCUS AREA] (P138) is set to [ON]. Set using the Quick Menu (P33).

[REC] Mode: **IA PASM** CUST SCN 

## Change Tone of the Color for the Picture to be taken (Film Mode)

[You can only select [STANDARD] and [STANDARD] ( **B&W** ) in [IA], [SCN], [], [], [], [] and [] Mode.]


Just as each type of film for film cameras has its own color tone and contrast characteristics, Film Mode allows you to select up to 9 different “digital films”, color tones, in the same way as you would select different films for film cameras. Select different settings in Film Mode to match the photo look you wish to achieve.

**1** Press ( ).



**2** Touch []/[] to select an item.

- When you touch [] on the screen shown right, explanations about each Film Mode are displayed. (When you touch [CANCEL], the screen returns to the previous screen.)

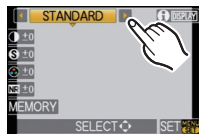

**3** Touch [SET].

- You can also press the shutter button halfway to set.

Item	Effect
[STANDARD] (COLOR)	This is the standard setting.
[DYNAMIC] (COLOR)	The saturation and contrast of the stored colors are increased.
[SMOOTH] (COLOR)	The contrast is lowered for smoother and clearer color.
[NATURE] (COLOR)	Brighter red, green and blue. Enhanced beauty of nature.
[NOSTALGIC] (COLOR)	Lower saturation and contrast. Reflecting passage of time.
[VIBRANT] (COLOR)	Higher saturation and contrast than dynamic.
[STANDARD] ( <b>B&amp;W</b> )	This is the standard setting.
[DYNAMIC] ( <b>B&amp;W</b> )	The contrast is increased.
[SMOOTH] ( <b>B&amp;W</b> )	Smooths the picture without losing the skin texture.
[MY FILM 1]/[MY FILM 2]	The saved setting is used.
[MULTI FILM]	It will take pictures changing the type of film in accordance with the setting every time the shutter button is pressed. (Up to 3 pictures)

### Note

- In Film Mode, the camera may do something equivalent to pull processing or push processing to create a picture with particular characteristics. The shutter speed may become very slow at this time.
- The camera will not be able to operate with // if the [DIRECT FOCUS AREA] (P138) is set to [ON]. Set using the Quick Menu (P33).

## Adjusting each Film Mode to the desired setting

**1** Touch the item.**2** Touch the slide bar.

- Registered settings are memorized even if the camera is turned off.

**3** Touch [MEMORY].**4** Touch [MY FILM 1] or [MY FILM 2].

- You can register 2 settings. ([MY FILM 1] and [MY FILM 2]) (After registering, the Film Mode name that was registered previously is displayed.)
- [STANDARD] is registered in [MY FILM 1] and [MY FILM 2] at the time of purchase.

**5** Touch [SET].

- You can also press the shutter button halfway to set.



Item		Effect
☾ [CONTRAST]	[+]	Increases the difference between the brightness and the darkness in the picture.
	[-]	Decreases the difference between the brightness and the darkness in the picture.
Ⓢ [SHARPNESS]	[+]	The picture is sharply defined.
	[-]	The picture is softly focused.
Ⓢ [SATURATION]	[+]	The colors in the picture become vivid.
	[-]	The colors in the picture become natural.
NR [NOISE REDUCTION]	[+]	The noise reduction effect is enhanced. Picture resolution may deteriorate slightly.
	[-]	The noise reduction effect is reduced. You can obtain pictures with higher resolution.

**Note**

- Noise may become visible when you take pictures in dark places. To avoid picture noise, we recommend setting [NOISE REDUCTION] towards [+] or setting the items except [NOISE REDUCTION] towards [-] to take pictures.
- If you adjust a Film Mode, [+] is displayed beside the Film Mode icon on the screen.
- You cannot adjust [SATURATION] in the black and white settings in Film Mode.
- Film Mode cannot be adjusted in the Intelligent Auto Mode, Advanced Scene Mode and Scene Mode.

## Multi Film Bracket

It will take pictures changing the type of film in accordance with the setting every time the shutter button is pressed. (Up to 3 pictures)

**1** Touch [◀]/[▶] to select [MULTI FILM].

**2** Select [MULTI FILM 1], [MULTI FILM 2], or [MULTI FILM 3], and then touch [◀]/[▶] to select the film to be set for each.

- [OFF] can be selected only for [MULTI FILM 3].

**3** Touch [SET].

- You can also press the shutter button halfway to set.

**4** Focus on the subject and take a picture.

- It will continuously take pictures by keeping the shutter button pressed when it is set to Burst Mode. (Up to 3 pictures)
- When using a self-timer, up to 3 pictures with set film will be taken if the shutter button is pressed. (It will operate same as [⏸] even if it is set to [⏸].)
- Multi film indication ([🎞️]) displayed on the screen will flash until all pictures of preset amount are taken.



### Note

- [STANDARD] is registered in [MULTI FILM 1], [MULTI FILM 2] and [OFF] is registered in [MULTI FILM 3] at the time of purchase.
- **White Balance Bracket will be disabled when the Multi Film Bracket is set.**
- Motion pictures are recorded with the settings for the [MULTI FILM 1] setting.

[REC] Mode: **[AS]**

## Taking Pictures by Specifying the Aperture/ Shutter Speed

### [A] Aperture-priority AE

Set the aperture value to a higher number when you want a sharp focus background. Set the aperture value to a lower number when you want a soft focus background.

**1** Set the mode dial to **[A]**.

**2** Rotate the rear dial to set the aperture value.

- It will switch between aperture setting operation and Exposure Compensation operation every time the rear dial is pressed.
- Rotate the rear dial to display the [EXPO.METER]. (P139)



**3** Take a picture.

### [S] Shutter-priority AE

When you want to take a sharp picture of a fast moving subject, set with a faster shutter speed. When you want to create a trail effect, set to a slower shutter speed.

**1** Set the mode dial to **[S]**.

**2** Rotate the rear dial to set the shutter speed.

- It will switch between shutter speed setting operation and Exposure Compensation operation every time the rear dial is pressed.
- Rotate the rear dial to display the [EXPO.METER]. (P139)



**3** Take a picture.

#### Note

- It will be a normal motion picture recording when recording a motion picture.
- How the Exposure Compensation is switched can be changed by [EXPO. SETTINGS] (P140) in the [CUSTOM] menu.
- In the Quick Menu (P33) while in touch operation, setting of the aperture value or shutter speed can be set by touching the aperture value or shutter speed, and then touching the Exposure Meter bar.
- The brightness of the LCD monitor/Viewfinder and the recorded pictures may differ. Check the pictures on the playback screen.

- Set the aperture value to a higher number when the subject is too bright in Aperture-Priority AE Mode. Set the aperture value to a lower number when the subject is too dim.
- When you use a lens with an aperture ring, the setting for the rear dial becomes effective if you rotate the aperture ring to the [A] position and the aperture ring setting takes priority if you rotate the aperture ring to a position other than [A] in Aperture-Priority AE Mode.
- The aperture value and the shutter speed displayed on the screen turn red and blink when the exposure is not adequate.
- We recommend using a tripod when the shutter speed is slow.
- When the flash is activated, the shutter speed cannot be set to faster than 1/160th of a second in Shutter-Priority AE Mode. (P69)
- If you press the shutter button fully when the shutter speed is slow, the shutter speed on the screen counts down in Shutter-Priority AE Mode.
- [S] and [S] cannot be set for Shutter-Priority AE Mode.
- The [SENSITIVITY] is automatically set to [AUTO] when you switch the Recording Mode to Shutter-Priority AE Mode while the [SENSITIVITY] is set to [ISO] (Intelligent).

[REC] Mode: [M]

## Taking Picture by Setting the Exposure Manually

Determine the exposure by manually setting the aperture value and the shutter speed. The Manual Exposure Assistance appears on the lower portion of the screen to indicate the exposure.

**1** Set the mode dial to [M].

**2** Rotate the rear dial to set the aperture and shutter speed.

- It will switch between aperture setting operation and shutter speed setting operation every time the rear dial is pressed.
- Rotate the rear dial to display the [EXPO.METER]. (P139)
- You can also set the focus manually by setting the focus mode lever to [MF]. (P83)






**3** Press the shutter button halfway.

- Ⓐ Manual Exposure Assistance
- Set the aperture value and the shutter speed again when the exposure is not adequate.



**4** Take the picture.

## Manual Exposure Assistance

	The exposure is adequate.
	Set to faster shutter speed or larger aperture value.
	Set to slower shutter speed or smaller aperture value.

- The Manual Exposure Assistance is an approximation. We recommend checking the pictures on the playback screen.

## About [B] (Bulb)

If you set the shutter speed to [B], the shutter stays open while the shutter button is pressed fully (up to about 4 minutes).

The shutter closes if you release the shutter button.

Use this when you want to keep the shutter open for a long time to take pictures of fireworks, a night scene etc.

- If you set the shutter speed to [B], [B] is displayed on the screen.
- When you take pictures with the shutter speed set to [B], use a sufficiently charged battery. (P24)
- We recommend using a tripod or the remote shutter (DMW-RSL1; optional) when you take pictures with the shutter speed set to [B]. Refer to P179 for information about the remote shutter.
- When you take pictures with the shutter speed set to [B], noise may become visible. To avoid picture noise, we recommend setting [LONG SHTR NR] in the [REC] Mode menu to [ON] before taking pictures. (P132)
- The Manual Exposure Assistance does not appear.



### Note

- **It will be a normal motion picture recording when recording a motion picture.**
- It is possible to change the switching method of aperture and shutter speed settings with the [EXPO. SETTINGS] (P140) in the [CUSTOM] menu.
- In the Quick Menu (P33) while in touch operation, setting of the aperture value or shutter speed can be set by touching the aperture value or shutter speed, and then touching the Exposure Meter bar.
- The brightness of the LCD monitor/Viewfinder may differ from the brightness of the actual pictures. Check the pictures using the playback screen.
- If the exposure is not adequate, the aperture value and the shutter speed turn red and blink when the shutter button is pressed halfway.
- [⚡A], [⚡AⓈ], [⚡S] and [⚡SⓈ] for flash cannot be set.
- The [SENSITIVITY] is automatically set to [ISO100] when you switch the Recording Mode to Manual Exposure while the [SENSITIVITY] is set to [AUTO] or [iSo] (Intelligent).
- If you press the shutter button fully when the shutter speed is slow, the shutter speed on the screen counts down.
- When you use a lens with an aperture ring, the aperture ring setting takes priority.



[REC] Mode: **IA PASM CUST SCN**

## Confirm the Effects of Aperture and Shutter Speed (Preview Mode)

### Confirm the effects of aperture

You can check the depth of field (effective focus range) before taking a picture by closing the leaf shutter to the aperture value you set.

Press [] **A** (preview button).

- Preview screen is displayed. It will return to previous screen when [] is pressed.



### ■ Depth of field properties

	Aperture value	Small	Large
*1	Focus length of the lens	Tele	Wide
	Distance to the subject	Near	Distant
	Depth of field (effective focus range)	Shallow (Narrow)*2	Deep (Wide)*3

\*1 Recording conditions

\*2 Example: When you want to take a picture with a blurred background etc.

\*3 Example: When you want to take a picture with everything in focus including the background etc.

### Confirm the effects of shutter speed

Movement can be confirmed by displaying the actual picture that will be taken with that shutter speed.


When the shutter speed is set for high speed, display in the shutter speed preview will be displayed like a time-release film. It is used in cases such as stopping the movement of running water.

Press [DISPLAY] while displaying the preview screen.

- Shutter speed preview screen is displayed. It will return to previous screen by pressing [DISPLAY] again.



DISPLAY

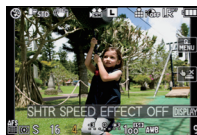

### Note

- Operation method of [] can be changed with [PREVIEW HOLD] of [CUSTOM] menu (P139).
- It is possible to record while in Preview Mode.
- Range for shutter speed effect check is 8 seconds to 1/1000th of a second.

[REC] Mode:     

## Taking Expressive Portraits and Landscape Pictures (Advanced Scene Mode)

You can take high-quality pictures of such subjects as people, scenery, sporting events and activities, flowers and people in night scenes in accordance with the surrounding conditions.


### 1 Set the mode dial.

### 2 Press ◀/▶ to select the Advanced Scene Mode.

- You can also use the rear dial to select.


### 3 Press [MENU/SET] to set.

- The menu screen is switched to the recording screen in the selected Advanced Scene Mode.

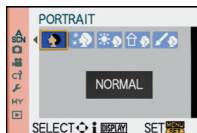



### ■ About the information

- If you press [DISPLAY] when selecting an Advanced Scene Mode in step 2, explanations about each Advanced Scene Mode are displayed. (If you press [DISPLAY] again, the screen returns to the screen shown in step 2.)

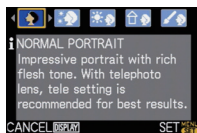


### Note

 - To change the Advanced Scene Mode, press [MENU/SET], and return to above step 2 by pressing ▶, while selecting the Advanced Scene Mode menu [] by pressing ▲/▼/◀/▶.
- The Advanced Scene Mode flash setting is reset to the initial setting when the Advanced Scene Mode is changed and then used.
- When you take a picture with a Advanced Scene Mode that is not adequate for the purpose, the hue of the picture may differ from the actual scene.
- The following items cannot be set in Advanced Scene Mode because the camera automatically adjusts them to the optimal setting.
  - [SENSITIVITY]/Items other than [STANDARD] and [STANDARD] () in Film Mode/[METERING MODE]/[FLASH SYNCHRO]/[I.RESOLUTION]/[I.EXPOSURE]/[ISO LIMIT SET]/[DIGITAL ZOOM]

### ■ About the aperture value and the shutter speed when you select a creative setting

- You can change the aperture value and the shutter speed if you select a creative setting in Advanced Scene Mode. If you cannot get an adequate exposure when you rotate the rear dial, the aperture value and the shutter speed or the selection cursor will turn red.
- You can also press ◀/▶ to set.
- It will switch between aperture setting or shutter speed setting operation and Exposure Compensation operation when the rear dial is pressed.

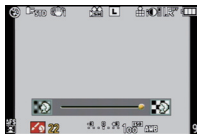

 [PORTRAIT]

The person stands out from the background and has a healthier complexion.

 [NORMAL PORTRAIT]

Shades the background and photographs skin color beautifully.

 [SOFT SKIN]

Makes the skin surface appear especially smooth.

- When [SOFT SKIN] is selected, if a part of the background etc. is a color close to skin color, this part is also smoothed.
- When [SOFT SKIN] is selected, this mode may not be effective when there is insufficient brightness.

 [OUTDOOR PORTRAIT]

Prevents faces from appearing dark when taking photographs outside.

 [INDOOR PORTRAIT]

Sets the ISO sensitivity setting to the appropriate setting to prevent blurring of photo subject for indoor photography.

 [CREATIVE PORTRAIT]


You can change the amount of background blurring by changing the aperture value (P94).

### ■ Technique for Portrait Mode

To make this mode more effective:

- 1 Rotate the zoom ring as far as possible to Tele.
- 2 Move close to the subject to make this mode more effective.

### Note

- In motion picture recording, [NORMAL PORTRAIT], [SOFT SKIN], [OUTDOOR PORTRAIT] and [INDOOR PORTRAIT] produce motion pictures using corresponding settings. [CREATIVE PORTRAIT] produces motion pictures using settings suitable for recording people.
- In [INDOOR PORTRAIT], the Intelligent ISO sensitivity control operates, and the maximum ISO sensitivity level becomes [ISO400].
- The initial setting for the AF Mode is [].

 [SCENERY]

This allows you to take pictures of a wide landscape.

 [NORMAL SCENERY]

The focus adjusts onto far away subjects as a priority.

 [NATURE]

The best setting for photographing natural scenery.

 [ARCHITECTURE]

This setting takes sharp photographs of architecture. The guide lines are displayed. (P65)

 [CREATIVE SCENERY]

The shutter speed (P94) can be changed in the [NORMAL SCENERY] setting.

 **Note**

- In motion picture recording, [NORMAL SCENERY], [NATURE] and [ARCHITECTURE] produce motion pictures using corresponding settings. [CREATIVE SCENERY] produces motion pictures using settings suitable for recording scenery.
- The flash setting is fixed to [☺].
- The initial setting for the AF Mode is [☐].

 [SPORTS]

Set here when you want to take pictures of sports scenes or other fast-moving events.

 [NORMAL SPORTS]

Controls the ISO sensitivity while stopping movement with a high shutter speed.

 [OUTDOOR SPORTS]

Fast shutter speed for stopping movement when taking photographs outdoors in good weather.

 [INDOOR SPORTS]

Increases the ISO sensitivity and increases the shutter speed to prevent blurring for indoor photography.

 [CREATIVE SPORTS]

The shutter speed (P94) can be changed in the [NORMAL SPORTS] setting.

 **Note**

- In motion picture recording, [NORMAL SPORTS], [OUTDOOR SPORTS] and [INDOOR SPORTS] produce motion pictures using corresponding settings. [CREATIVE SPORTS] produces motion pictures using settings suitable for recording sports.
- The initial setting for the AF Mode is [☐].

 [CLOSE-UP]

This mode allows you to take close-up pictures of a subject, e.g. when taking pictures of flowers.



(The distance from the subject when you take close-up pictures differs depending on the lens you are using.)

 [FLOWER]

Flowers outdoors are recorded with natural colors in macro settings. The guide lines are displayed. (P65)

 [FOOD]

You can take pictures of food with a natural hue without being affected by the ambient light in restaurants etc.

- When the AF Mode is set to , it will switch to .

 

 [OBJECTS]

You can take clear and vivid pictures of accessories or small objects in a collection.

 [CREATIVE CLOSE-UP]

You can change the degree of blurring of the background by changing the aperture value in the macro settings. (P94)

 Note


- **During motion picture recording, the motion picture will reflect the settings for each mode with [FLOWER], [FOOD] and [OBJECTS]. [CREATIVE CLOSE-UP] is suitable for near distance motion picture recording.**
- We recommend using a tripod and the self-timer.
- We recommend setting the flash to  when you take pictures at close range.
- Refer to “About the focus distance reference mark” on P84 for the focus range.
- When a subject is close to the camera, the effective focus range is significantly narrowed. Therefore, if the distance between the camera and the subject is changed after focusing on the subject, it may become difficult to focus on it again.
- Close-up Mode gives priority to a subject close to the camera, so it takes longer to focus on the further subjects.
- When you take pictures at close range, the resolution of the periphery of the picture may decrease slightly. This is not a malfunction.
- If the lens becomes dirty with fingerprints or dust, the lens may not be able to focus on the subject correctly.
- The initial setting for the AF Mode is .


 [NIGHT PORTRAIT]

This allows you to take pictures of a person and the background with near real-life brightness.

 [NIGHT PORTRAIT]


Used when taking photographs of people with night scenery as a background.


• **Open the flash.** (You can set to [  ].)



• The initial setting for the AF Mode is [  ].

  [NIGHT SCENERY]

Night scenery is vividly photographed with a slow shutter.

 
• **The flash setting is fixed to** [  ].


• The initial setting for the AF Mode is [  ].



• When the AF Mode is set to [  ], it will switch to [  ].

 [ILLUMINATIONS]

Illuminations are photographed beautifully.


• **The flash setting is fixed to** [  ].


• The initial setting for the AF Mode is [  ].

• When the AF Mode is set to [  ], it will switch to [  ].

 [CREATIVE NIGHT SCENERY]

The aperture value (P94) can be changed in the [NIGHT SCENERY] setting.


• **The flash setting is fixed to** [  ].

• The initial setting for the AF Mode is [  ].

### ■ Technique for Night Portrait Mode

- Since the shutter speed becomes slower, we recommend using a tripod and the self-timer for taking pictures.
- When [NIGHT PORTRAIT] is selected, keep the subject still for about 1 second after taking the picture.

 **Note**

- **During motion picture recording, low light settings [  ] are used, which will provide better pictures in dimly lit rooms or at nightfall.**
- Noise may become visible when you take pictures in dark places.
- The shutter may remain closed after taking the picture. This is due to signal processing and is not a malfunction.

[REC] Mode: **SCN**

## Taking Pictures that match the Scene being recorded (**SCN**: Scene Mode)

When you select a Scene Mode to match the subject and recording situation, the camera sets the optimal exposure and hue to obtain the desired picture.

**1** Set the mode dial to **[SCN]**.

**2** Press **▲/▼/◀/▶** to select the Scene Mode.

- You can also use the rear dial to select.


**3** Press **[MENU/SET]** to set.

- The menu screen is switched to the recording screen in the selected Scene Mode.



### ■ About the information **i**

- If you press **[DISPLAY]** when selecting a Scene Mode in step **2**, explanations about each Scene Mode are displayed. (If you press **[DISPLAY]** again, the screen returns to the Scene Mode menu.)

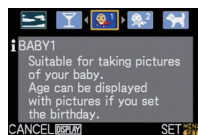

### 📌 Note

- To change the Scene Mode, press **[MENU/SET]**, and return to above step **2** by pressing **▶**, while selecting the Scene Mode menu **[SCN]** by pressing **▲/▼/◀/▶**.
- The Scene Mode flash setting is reset to the initial setting when the Scene Mode is changed and then used.
- When you take a picture with a Scene Mode that is not adequate for the purpose, the hue of the picture may differ from the actual scene.
- The following items cannot be set in Scene Mode because the camera automatically adjusts them to the optimal setting.
  - **[SENSITIVITY]**/Items other than **[STANDARD]** and **[STANDARD]** (**B&W**) in Film Mode/**[METERING MODE]**/**[FLASH SYNCHRO]**\*/**[I.RESOLUTION]**/**[I.EXPOSURE]**/**[ISO LIMIT SET]**/**[DIGITAL ZOOM]**
- \* Can be set only when **[PERIPHERAL DEFOCUS]** is set.

## **[SUNSET]**

Select this when you want to take pictures of a sunset view. This allows you to take vivid pictures of the red color of the sun.



### 📌 Note

- The flash setting is fixed to **[☺]**.
- The initial setting for the AF Mode is **[AF]**.

## [PARTY]

Select this when you want to take pictures at a wedding reception, an indoor party etc. This allows you to take pictures of people and the background with near real-life brightness.

### ■ Technique for Party Mode

- **Open the flash.** (You can set to [  ] or [  ].)
- We recommend using a tripod and the self-timer for taking pictures.



#### Note

- The initial setting for the AF Mode is [  ].

## [BABY1]/[BABY2]

This takes pictures of a baby with a healthy complexion. When you use the flash, the light from it is weaker than usual.

It is possible to set different birthdays and names for [BABY1] and [BABY2]. You can select to have these appear at the time of playback, or have them stamped on the recorded image using [TEXT STAMP] (P150).

### ■ Birthday/Name setting


- 1 Press **▲/▼** to select [AGE] or [NAME] and then press **▶**.
- 2 Press **▲/▼** to select [SET] and then press [MENU/SET].
- 3 Enter the birthday or name.

Birthday: **◀/▶**: Select the items (year/month/day).  
**▲/▼**: Setting.  
 [MENU/SET]: Exit.

Name: For details on how to enter characters, refer to "Entering Text" on P144.

- When the birthday or name is set, [AGE] or [NAME] is automatically set to [ON].
- If [ON] is selected when the birthday or name has not been registered, the setting screen appears automatically.

- 4 Press [MENU/SET] to finish.

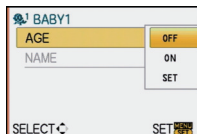


### ■ To cancel [AGE] and [NAME]

Select the [OFF] setting in step **2** of the "Birthday/Name setting" procedure.



#### Note

- **During motion picture recording, settings for [NORMAL PORTRAIT] are used. Also, still pictures recorded during motion picture recording (P112) will not record age or name.**
- The age and name can be printed out using the "PHOTOfunSTUDIO 5.0 HD Edition" bundled software on the CD-ROM (supplied).
- If [AGE] or [NAME] is set to [OFF] even when the birthday or name has been set, the age or name will not be displayed. Before taking pictures, set [AGE] or [NAME] to [ON].
- Intelligent ISO sensitivity control is activated, and maximum ISO sensitivity level becomes [ISO400].
- If the camera is turned on with [BABY1]/[BABY2] set, the age and name are displayed at the lower left of the screen for about 5 seconds, along with the current date and time.
- If the age is not properly displayed, check the clock and birthday settings.
- The Birthday Setting and Name Setting can be reset with [RESET].
- The initial setting for the AF Mode is [  ].



 [PET]

Select this when you want to take pictures of a pet such as a dog or a cat. You can set your pet's birthday and name. You can select to have these appear at the time of playback, or have them stamped on the recorded image using [TEXT STAMP] (P150). For information about [AGE] or [NAME], refer to [BABY1]/[BABY2] on P104.

 **Note**

- **It will be a normal motion picture recording during the motion picture recording.**
- The initial setting for the AF Assist Lamp is [OFF].
- Intelligent ISO sensitivity control is activated, and maximum ISO sensitivity level becomes [ISO800].
- The initial setting for the AF Mode is [ $\square$ ].
- Refer to [BABY1]/[BABY2] for other information about this mode.

 [PERIPHERAL DEFOCUS]

This mode makes it easy to pick out the subject on which to focus and blurs the background to make the subject stand out.

### ■ Setting the AF area

#### 1 Touch the subject to move the AF area.

- AF area can also be moved by pressing the cursor button toward  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ .
- You can position the AF area anywhere on the screen (except at the edges).

#### 2 Take the picture.

 **Note**




- **It will be a normal motion picture recording during the motion picture recording.**
- Quick AF is performed automatically.
- Set the [WHITE BALANCE] (P86), the [FILM MODE] (P91), the [Fn BUTTON SET] (P136) using the Quick Menu (P33).
- AF area setting screen is displayed by pressing  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ . Press [ $\square$ ] to return the AF area to the center of the screen.
- The obtained effects will differ depending on factors such as the distance to the subject and background, and the type of lens used. For best results, we recommend getting as close as possible to the subject when taking pictures. (P84)
- AF Mode will be fixed to [ $\square$ ] (size of AF area will be "spot").


[REC] Mode: 

## Taking Pictures while Adjusting Color

: My Color Mode

You can take pictures with a desired effect by previewing the subject on the LCD monitor or viewfinder (Live View) and setting the desired effect.

- 1 Set the mode dial to .
- 2 Touch []/[] to select an item.

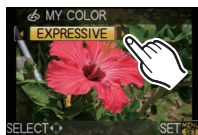

Item	Effect
[EXPRESSIVE]	This is a pop art style image effect that emphasizes the color.
[RETRO]	This is a soft image effect that gives the appearance of a tarnished photograph.
[PURE]	This is an image effect that uses a cool, bright light to give a feeling of freshness. (The image will come out bright and slightly bluish.)
[ELEGANT]	This is an image effect that creates a tranquil atmosphere and projects a feeling of stateliness. (The image will come out slightly dark and amberish.)
[MONOCHROME]	This is an image effect that captures the subject using tones characteristic of black and white photography, and with a whisper of color.
[DYNAMIC ART]	This is an impressive image effect that adjusts dark areas and bright areas to appropriate brightness, together with enhancements on colors.
[SILHOUETTE]	This is an image effect that enhances the subject in the shade as a black silhouette by using the background colors of the sky or sunset etc.
[CUSTOM]*	The color effects can be set according to your preferences.

\*For [CUSTOM] settings, refer to page 107.

- 3 Touch [SET].
  - You can also press the shutter button halfway to set.
  - Recording screen is displayed.

### ■ Readjust the My Color settings

Return to above step 2 by pressing rear dial or one of ///.

• [Fn BUTTON SET] (P136) cannot be set with . Make the setting with the Quick Menu (P33).

**Note**


- **During Motion Picture Recording, settings for My Color Mode are used.**
- My Color settings are memorized even if the camera is turned off.
- Auto Bracket cannot be used in My Color Mode.
- ISO sensitivity will be fixed to [AUTO].
- [I.EXPOSURE], [COLOR SPACE] can be set only when the My Color Mode is set to [CUSTOM].
- The following items cannot be set in My Color Mode because the camera automatically adjusts them to the optimal setting.
  - [FILM MODE]/[FLASH]/[FLASH SYNCHRO]/[ISO LIMIT SET]

## Adjusting the custom settings to achieve desired effects

By selecting [CUSTOM], you can take pictures with color, brightness and saturation adjusted to desired levels.

**1** Touch [◀]/[▶] to select [CUSTOM].

**2** Touch the item.

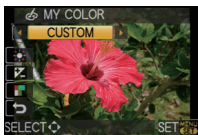


Item	Adjustment contents
[COLOR]	This will adjust the color of the image from red light to blue light. (11 steps in $\pm 5$ )
[BRIGHTNESS]	This will adjust the brightness of the image. (11 steps in $\pm 5$ )
[SATURATION]	This will adjust the color intensity of the image from black and white to vivid color. (11 steps in $\pm 5$ )
[RESET]	Return all settings to default

**3** Touch the slide bar.

**4** Touch [SET].

- You can also press the shutter button halfway to set.
- Recording screen is displayed.

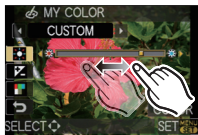

### Return [CUSTOM] settings to default

**1** Select [RESET] in above step 2.

**2** Touch [YES].

- Adjusted value for each item returns to standard (center point).

**Note**

- Adjustments made with [CUSTOM] are not in effect in other Recording Modes.
- Icons for the adjusted items are displayed in the screen when the [CUSTOM] are adjusted. Displayed icon is the one for direction of adjustment.
- AF tracking may not function if you adjust [SATURATION] to make the color lighter.

[REC] Mode: **PASM** CUST P SCN 

## Registering Personal Menu Settings


(Registering custom settings)

It is possible to register up to 3 sets of current camera settings as custom sets.

- Set to the mode dial to the desired mode and select the desired menu settings in advance.


**1** Select [CUST. SET MEM.] in the [CUSTOM] menu. (P32)

**2** Press ▲/▼ to select the custom set to register and then press [MENU/SET].

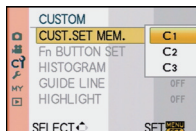

**3** Press ▲ to select [YES] and then press [MENU/SET].

- When [YES] is selected, the settings that were previously stored are overwritten.
- You cannot save the following menu items because they affect other Recording Modes.
  - [CLOCK SET], [TRAVEL DATE], [NO.RESET], [RESET], [LANGUAGE] and [SCENE MENU]
  - [BABY1]/[BABY2] or [PET] birthday and name settings in Scene Mode
  - Data registered with [FACE RECOG.]

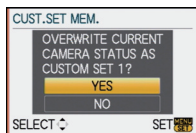

**4** Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

[REC] Mode: **CUST**

## Taking Pictures in Custom Mode

You can select one of your own custom settings saved with [CUST. SET MEM.] to suit the picture-taking conditions.

Initial setting of the Program AE Mode is registered as the custom settings initially.


### 1 Set the mode dial to **[CUST]**.

- (A) Display custom settings



(A)


### 2 Press **[MENU/SET]** to display the menu.

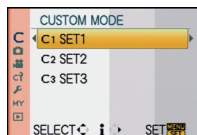

### 3 Press **▲/▼** to select the custom settings you want to use.

- Press **▶** to display the settings for each menu item. (Press **[⏪]** to return to the selection screen.)
- Only some of the menu items are displayed. (Refer to the following for the menu items that are displayed.)

<b>AFL</b> <b>AEL</b>	[AF/AE LOCK]	<b>P-AF</b>	[PRE AF]
<b>AF- HOLD</b>	[AF/AE LOCK HOLD]	<b>[Fn]</b>	[Fn BUTTON SET]
<b>+AF</b>	[AF+MF]		[AUTO REVIEW]
<b>FOCUS</b>	[FOCUS PRIORITY]	<b>[NR]</b>	[LONG SHTR NR]
<b>AF*</b>	[AF ASSIST LAMP]		[SHOOT W/O LENS]

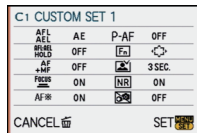

### 4 Press **[MENU/SET]** to enter the settings.

- (A) Saving of the selected custom settings is displayed on the screen.

#### ■ When changing the menu settings

Even if the menu settings are changed temporarily with [C 1 SET1], [C 2 SET2] or [C 3 SET3] selected, what has been registered will remain unchanged.

To change what has been registered, overwrite the registered data using [CUST. SET MEM.] (P108) on the [CUSTOM] menu.

#### Note

- You cannot register the settings of the following menu items as a Custom Mode. If they are changed, other Recording Modes will also be affected.
  - [CLOCK SET], [TRAVEL DATE], [NO.RESET], [RESET], [LANGUAGE] and [SCENE MENU]
  - [BABY1]/[BABY2] or [PET] birthday and name settings in Scene Mode
  - Data registered with [FACE RECOG.]

[REC] Mode: **IA P A S M** CUST  SCN      

## Recording Motion Picture

You can record motion pictures in high-definition format compliant with the AVCHD standard or in Motion JPEG format. Sound is recorded in mono.

Audio can also be recorded in stereo when the stereo microphone (DMW-MS1; optional) is mounted. Refer to P180 for the stereo microphone.

 
The functions available when recording motion pictures differ according to the lens you are using, and the operational sound of the lens may be recorded.

Refer to page 19 for details.












• It is possible to record still pictures while recording motion pictures.

### 1 Select the mode.

- (A) Mode dial
- (B) Motion picture button
- (C) Intelligent auto button



### ■ Modes that can be recorded for motion picture

Item	Settings/Note
 <b>Intelligent Auto Mode</b>	The camera will set the most appropriate settings to match the subject and the recording conditions, so you can leave the settings to the camera and take motion pictures easily.
<b>P/A/S/M Mode</b>	Record motion pictures by automatically setting aperture and shutter speed.
 <b>Motion Picture P Mode (P115)</b>	You can record motion pictures with changed Exposure Compensation and aperture settings.
 <b>Custom Mode</b>	Record motion pictures with selected Custom Mode settings.
 <b>Scene Mode</b>	Record motion pictures that match the scene being recorded. (P103 to 105)
 <b>[PORTRAIT]</b>	Record motion pictures with settings suitable for portraits.
 <b>[SCENERY]</b>	Record motion pictures with settings suitable for scenery.
 <b>[SPORTS]</b>	Record motion pictures with settings suitable for sporting events.
 <b>[CLOSE-UP]</b>	Record motion pictures with settings suitable for close-ups.
 <b>[NIGHT PORTRAIT]</b>	Record clear motion pictures with low light setting [  ] inside dim rooms or at dusk.
 <b>My Color Mode</b>	Record motion pictures in My Color Mode setting.

### 2 Set the focus mode.

## ■ About the Focus Mode settings

Focusing changes depending on the Focus Mode setting and the [CONTINUOUS AF] setting (P135) in the [MOTION PICTURE] Mode menu.


Focus Mode	[CONTINUOUS AF]	Settings
AFS/AFC	ON	You can have the camera focus continuously. Alternatively, you can have the camera focus when you press the shutter button halfway.
	OFF	You can have the camera focus when the shutter button is pressed halfway.
MF	ON	You can focus manually.
	OFF	

• Depending on the recording conditions or lens used, operational sound may be recorded when the Auto Focus is operated while recording a motion picture. It is recommended to record with [CONTINUOUS AF] (P135) set to [OFF], if the sound of operation bothers you to avoid recording the lens noise.

### 3 Start recording by pressing the motion picture button.

- (A) Elapsed recording time
- (B) Available recording time

- The audio is also recorded simultaneously from the built-in microphone on this unit. (Motion pictures cannot be recorded without audio.)

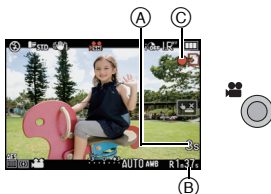




- The recording state indicator (red) (C) will flash while recording motion pictures.
- Press the shutter button halfway when it is difficult to focus on the subject.
- Check the battery status and make sure the power is on when using the stereo microphone (DMW-MS1; optional) (P180).

### 4 Stop the recording by pressing the motion picture button again.

  - Sound will be heard when pressing the motion picture button indicating start/stop of motion picture recording.  
Sound volume can be set in [BEEP] (P35).
- If the card becomes full in the middle of recording, the camera stops recording automatically.

#### Note

- Refer to P134 for the [MOTION PICTURE] Mode menu.
- The flash setting is fixed to [☺].
- Available recording time is displayed when the [REMAINING DISP.] (P141) in the [CUSTOM] menu is set to [REMAINING TIME].
- Refer to P205 for information about the available recording time.
- The available recording time displayed on the screen may not decrease regularly.
- Depending on the type of the card, the card access indication may appear for a while after recording motion pictures. This is not a malfunction.
- When recording a motion picture, do not cover the microphone with your fingers or other objects.

- The operational sound of the zoom or button operation may be recorded when it is operated during the recording of a motion picture.
- Audio will not be recorded for 0.5 seconds after it starts recording if the motion picture button is kept pressed. Release the motion picture button right after you press it.
- The screen may be blacked out momentarily, or the unit may record noise due to static electricity or electromagnetic waves etc. depending on the environment of the motion picture recording.
- When operating the zoom when recording motion pictures, it may take time to come into focus.
- When the [EX. OPT. ZOOM] is set to [ON], the angle of view will change when the screen is switched between the still picture screen and motion picture screen, because the zoom factor is different between still pictures and motion pictures. (P55)
- When the aspect ratio setting is different in still and motion pictures, the angle of view changes at the start of motion picture recording. When [  REC AREA] (P141) is set to [  ], angle of view during motion picture recording is displayed.
- The ISO sensitivity will be set to [AUTO] when recording motion pictures.
- When recording a motion picture, [STABILIZER] will be fixed to [MODE1] even if it is set to [MODE2] or [MODE3].
- When recording motion pictures, the following functions cannot be used.
  - [  ] in the AF Mode  
(It will switch to Multi Auto Focus Mode for motion pictures.)
  - Direction Detection Function
  - [FACE RECOG.]/[ISO LIMIT SET]
- It is recommended to use a fully charged battery or AC adaptor (P181) when recording motion pictures.
- If while recording motion pictures using the AC adaptor (P181) the power supply is cut off due to a power cut or if the AC adaptor is disconnected etc., the motion picture being recorded will not be recorded.
- Color or brightness of the screen may change or horizontal streaks may appear on the screen when the picture is taken under extremely bright light, or under fluorescent lamps, mercury lamps, or sodium lamps etc.

### About simultaneous recording (recording still pictures while recording motion pictures)

 
 



Still pictures can be recorded even while recording a motion picture.

#### During motion picture recording, press the shutter button fully to record a still picture.

- You can also take pictures using the Touch Shutter function (P54).



#### Note

- Simultaneously recorded still pictures will be recorded in an aspect ratio of [16:9] and picture size of [S] (2 M).  
The picture quality may be different to [S] (2 M) of standard pictures.
- Up to 20 still pictures can be recorded during recording of the motion picture.
- Even if [AUDIO REC.] is set to [ON], still pictures are recorded without audio.
- Only JPEG images are recorded when [QUALITY] is set to [RAW ], [RAW ] or [RAW]. (When set to [RAW], still pictures will be recorded in [QUALITY] of [  ].)
- Simultaneous recording is not possible in the following cases:
  - When [MOTION JPEG] is set to [  ] or [  ]
  - During Motion Picture P Mode






### When set to Intelligent Auto Mode

- When Intelligent Auto Mode is selected in step 1, motion picture recording matching to the subject or recording situation can be performed.



## ■ Scene detection

When the camera identifies the optimum scene, the icon of the scene concerned is displayed in blue for 2 seconds, after which its color changes to the usual red.

 →	 [i-PORTRAIT]
	 [i-SCENERY]
	 [i-LOW LIGHT]
	 [i-MACRO]

- [iA] is set if none of the scenes are applicable, and the standard settings are set.
- When [iA] is selected, the camera automatically detects a person's face, and it will adjust the focus and exposure. (**Face Detection**) (P79)

### Note


- Refer to P49 for settings in Intelligent Auto Mode.
- Due to conditions such as the ones below, a different scene may be identified for the same subject.
  - Subject conditions: When the face is bright or dark, the size of the subject, the color of the subject, the distance to the subject, the contrast of the subject, when the subject is moving
  - Recording conditions: Sunset, sunrise, under low brightness conditions, when the camera is shaken, when zoom is used
- To take pictures in an intended scene, it is recommended that you take pictures in the appropriate Recording Mode.


 
## Changing [REC MODE] and [REC QUALITY]

- 1 Select [REC MODE] from the [MOTION PICTURE] Mode menu, and press ►. (P32)




- 2 Press ▲/▼ to select the item and then press [MENU/SET].

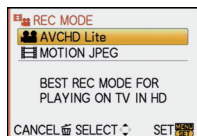

Recording format	Features
 [AVCHD Lite]	<ul style="list-style-type: none"> <li>• Select this format to record HD (high-definition) video for playback on your HDTV using an HDMI connection.</li> <li>• It can be played back as is by inserting the card into a device compatible with AVCHD. Refer to the instructions of the device used for details on compatibility.</li> <li>• Use a card with SD Speed Class* with "Class 4" or higher.</li> </ul>
 [MOTION JPEG]	<ul style="list-style-type: none"> <li>• Select this format to record standard definition video for playback on your PC. It can be recorded using less storage when there is not much space left on the memory card or when you want to attach the motion picture to an e-mail.</li> <li>• Use a card with SD Speed Class* with "Class 6" or higher.</li> </ul>

\*The SD Speed Class Rating is the speed standard for successive writes.

- 3** Press ▲/▼ to select [REC QUALITY] and then press ►.

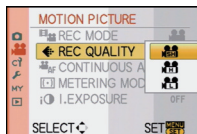

- 4** Press ▲/▼ to select the item and then press [MENU/SET].

When [AVCHD Lite] is selected in step 2

	Item	Quality (bit rate) <sup>*1</sup>	fps	Aspect ratio
High quality ↓ ↑ Longer time	([SH])	1280×720 pixels Approx. 17 Mbps <sup>*2</sup>	60p (Sensor output is 30 fps)	16:9
	([H])	1280×720 pixels Approx. 13 Mbps <sup>*2</sup>		
	([L])	1280×720 pixels Approx. 9 Mbps <sup>*2</sup>		

\*1 What is bit rate

This is the volume of data for definite period of time, and the quality becomes higher when the number gets bigger. This unit is using the “VBR” recording method. “VBR” is an abbreviation of “Variable Bit Rate”, and the bit rate (volume of data for definite period of time) is changed automatically depending on the subject to record. Therefore, the recording time is shortened when a subject with fast movement is recorded.

\*2 What is Mbps

This is an abbreviation of “Megabit Per Second”, and it represents the speed of transmission.

When [MOTION JPEG] is selected in step 2

	Item	Picture size	fps	Aspect ratio
High quality ↓ ↑ Longer time	([HD])	1280×720 pixels	30	16:9
	<sup>*3</sup> ([WVGA])	848×480 pixels		
	([VGA])	640×480 pixels		
	([QVGA])	320×240 pixels		4:3

\*3 This item cannot be set in the Intelligent Auto Mode.

- With the [AVCHD Lite] or [] for [MOTION JPEG], high quality motion picture can be enjoyed on the TV by using the HDMI mini cable (optional). For details, see “Playing back on the TV with HDMI socket” on P163.

- 5** Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

## Note

- The motion picture recording may stop in the middle when any of the following cards are used.
  - Cards on which recording and deleting have been repeated many times
  - Cards which have been formatted using a PC or other equipment

Before taking pictures, format (P39) the card in the unit. Because formatting will delete all data recorded on the card, save important data beforehand on the computer.

- You may not be able to record for a short while after turning the power [ON] when using a large capacity card.


- Motion pictures recorded in [AVCHD Lite] or [MOTION JPEG] may be played back with poor picture or sound quality or playback may not be possible even when played back with equipment compatible with these formats. Also, the recording information may not be displayed properly. In this case, use this unit.**

For details on AVCHD compatible devices, refer to the support site below.

<http://panasonic.jp/support/global/cs/dsc/>


(This Site is English only.)


- Motion picture recorded in [AVCHD Lite] does not comply with the "DCF/Exif", so some information will not display during playback.
- Sound from motion pictures (when [REC MODE] is set to [MOTION JPEG]) or pictures with audio recorded by this camera cannot be played back by older models of Panasonic digital cameras (LUMIX) launched before July 2008.**

[REC] Mode: 

## Recording Motion Pictures with the Desired Settings (: Motion Picture P Mode)

You can set the degree of peripheral defocus created by the exposure compensation or the aperture setting and record motion pictures.

- Set the mode dial to .
- Set the Focus Mode (P110)
- Press the rear dial to change the settings screen.

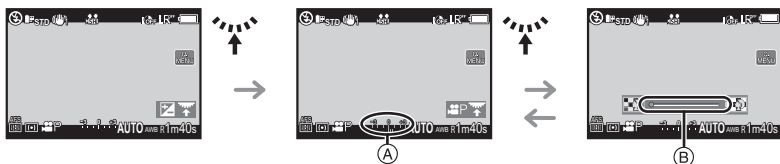

- (A) the exposure compensation  
(B) the degree of peripheral defocus

- With each press of the rear dial, the camera switches between Exposure Compensation and the degree of peripheral defocus setting operations.

**4** Rotate the rear dial to change the settings.

**5** Press the motion picture button to start the recording.


**6** Stop the recording by pressing the motion picture button again.



- If the card becomes full in the middle of recording, the camera stops recording automatically.
- You can also start/stop motion picture recording by pressing the shutter button.
- Sound will be heard when pressing the motion picture button or shutter button indicating motion picture recording start/stop.  
Sound volume can be set in [BEEP] (P35).

### ■ About the Flicker Reduction Function

If there is marked flicker or striping when recording motion pictures, the Flicker Reduction Function can be set to [ON].


**1** Press [  ].

- The Flicker Reduction Function will be forcefully activated, and the shutter speed will be adjusted to 1/100.

**2** Rotate the rear dial.

- It is possible to select the shutter speed to adjust from 1/50, 1/60, 1/100, or 1/120, and adjust to the optimal setting while viewing the screen.  
Note that you cannot set the degree of peripheral defocus in this case.

### Note

- ISO sensitivity will be fixed to [AUTO].
- [% REC AREA] (P141) is fixed to [  ].
- [REMAINING DISP.] (P141) is fixed to [REMAINING TIME].
- As the aperture is controlled within a certain range to get an adequate exposure in this mode, for some cases depending on the brightness of the subject, an actual aperture setting would not be changed in response to the movement of selection cursor, so that no change on the degree of peripheral defocus could be recognized. (For example, in dark places including in a room, the aperture would stay at the maximum aperture value, even for both ends of the selection cursor, so that no change on the degree of peripheral defocus could be recognized.)
- Refer to "Recording Motion Picture" on P110 for other settings, operations and information for recording motion pictures.

[REC] Mode: **IA PASM CUST SCN**       

## Taking a Picture with Face Recognition Function

Face Recognition is a function which finds a face resembling a registered face and prioritizes focus and exposure automatically. Even if the person is located towards the back or on the end of a line in a group photo, the camera can still take a clear picture.

**[FACE RECOG.] is initially set to [OFF] on the camera.**  
**[FACE RECOG.] will turn [ON] automatically when the face image is registered.**

• **The Face Recognition function includes the following.**  
**In Recording Mode**

- Display of corresponding name when camera detects a registered face\* (if name has been set for the registered face)
- The camera will remember the face that has been photographed many times and display the registration screen automatically (if [AUTO REGISTRATION] is set to [ON])




**In Playback Mode**

- Display of name and age (if information has been registered)
- Selective playback of pictures chosen from pictures registered with Face Recognition ([CATEGORY PLAY] (P148))

\* Names of up to 3 people are displayed. Precedence for the names displayed when taking pictures is determined according to the order of registration.

 **Note**

- [FACE RECOG.] only works when the AF Mode is set to .
- During the Burst Mode, [FACE RECOG.] picture information can be attached to only the first picture.
- After pressing the shutter halfway down, a different person's picture information may be added when the camera is turned to a different subject to photograph.
- [FACE RECOG.] cannot be used with the [FOOD] in [CLOSE-UP], [NIGHT SCENERY] and [ILLUMINATIONS] in [NIGHT PORTRAIT], [PERIPHERAL DEFOCUS] in Scene Mode and in recording motion pictures.
- When the Focus Mode is set to [MF], automatic registration is not available.
- The data registered with [FACE RECOG.] will be reset when the [REC] menu settings are reset with [RESET].
- [FACE RECOG.] will find a face similar to the registered face, and does not guarantee secure recognition of a person.
- Face Recognition may take more time to select and recognize distinctive facial features than regular face detection.
- Even when Face Recognition information has been registered, pictures taken with [NAME] set to [OFF] will not be categorized by Face Recognition in [CATEGORY PLAY].
- Even when Face Recognition information is changed (P121), Face Recognition information for the pictures already taken will not be changed.  
 For instance, if the name is changed, pictures recorded before the change will not be categorized by Face Recognition in [CATEGORY PLAY].
- To change the name information of the pictures taken, perform the [REPLACE] in [FACE REC EDIT] (P161).

## Face Settings

You can register information such as names and birthdays for face images of up to 6 people.

Registration can be facilitated by taking multiple face images of each person. (up to 3 pictures/registration)

### ■ Point of recording when registering the face images

- Face front with eyes open and mouth closed, making sure the outline of the face, the eyes, or the eyebrows are not covered with the hair when registering.
- Make sure there is no extreme shading on the face when registering. (Flash will not flash during registration.)

(Good example for registering)




### ■ When it is not recognising during recording

- Register the face of same person indoors and outdoors, or with different expressions or angles. (P121)
- Additionally register at the location of recording.
- Changing the [SENSITIVITY] setting. (P121)
- When a person who is registered is not recognized, correct by re-registering.

### Example of faces that are hard to recognize


Face Recognition may not be possible or may not recognize faces correctly even for registered faces in the following instances, depending on the facial expression and environment.


- Hair is covering the eyes or the eyebrows (A)
- The face is dark/the light is at an angle (B)
- The face is facing in angle or sideways
- The face is facing upward/downward
- The eyes are closed
- When the face is extremely bright or dark
- Hidden by sunglasses, glasses reflecting light, hair, hat, etc.
- When the face appears small on the screen
- The entire face is not in the screen
- When distinctive facial features have changed with age
- When parents and children or siblings closely resemble one another
- Facial expression is very different
- When there is little contrast on the faces
- When there is rapid movement
- When the camera is shaking
- When Digital Zoom is used

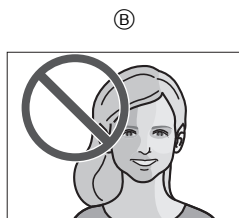


## Registering face image of new person

- 1 Select [FACE RECOG.] on the [REC] Mode menu and then press ►.  
(P32)
- 2 Press ▲/▼ to select [MEMORY] and then press [MENU/SET].
- 3 Press ▲/▼/◀/▶ to select the Face Recognition frame that is not registered, and then press [MENU/SET].
 


- 4 Take the picture adjusting the face with the guide.
  - The faces of subjects other than people (pets, etc.) cannot be registered.
  - When recognition fails, a message will appear and the display will return to the recording screen. In this case, try taking the picture again.

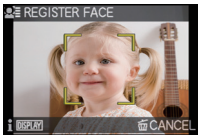


- 5 Press ▲ to select [YES] and then press [MENU/SET].

## 6 Select item to edit with ▲/▼, and then press ►.

- You can register up to 3 face images.

Item	Description of settings
[NAME]	<p>It is possible to register names.</p> <ol style="list-style-type: none"> <li>Press ▼ to select [SET] and then press [MENU/SET].</li> <li>Enter the name.           <ul style="list-style-type: none"> <li>For details on how to enter characters, refer to "Entering Text" section on P144.</li> </ul> </li> </ol>
[AGE]	<p>It is possible to register the birthday.</p> <ol style="list-style-type: none"> <li>Press ▼ to select [SET] and then press [MENU/SET].</li> <li>Press ◀/▶ to select the items (Year/Month/Day), and then press ▲/▼ to set and then press [MENU/SET].</li> </ol>
[ADD IMAGES]	<p>To add additional face images. (Add Images)</p> <ol style="list-style-type: none"> <li>Select the unregistered Face Recognition frame, and then press [MENU/SET].</li> <li>Perform steps 4 and 5 in "Registering face image of new person".</li> <li>Press [🗑️].</li> </ol>
	<p>To delete one of the face images. (Delete)</p> <ol style="list-style-type: none"> <li>Press ◀/▶ to select the face image to delete, and then press [MENU/SET].</li> <li>Press ▲ to select [YES] and then press [MENU/SET].</li> <li>Press [🗑️].</li> </ol> <p>• If there is only one image registered, it cannot be deleted.</p>

## 7 Press the shutter button halfway to close the menu.

### ■ About the information ⓘ

- When [DISPLAY] is pressed on the recording screen described in step 4 on P119, an explanation appears for taking face images. (Press again to return to the recording screen.)



## Change or delete the information for a registered person

You can modify the pictures or information of an already registered person. You can also delete the information of the registered person.

- 1** Select [FACE RECOG.] from the [REC] Mode menu, and then press **▶**. (P32)
- 2** Press **▼** to select [MEMORY] and press [MENU/SET].
- 3** Press **▲/▼/◀/▶** to select the face image to edit or delete and then press [MENU/SET].
- 4** Press **▲/▼** to select the item and then press [MENU/SET].



Item	Description of settings
[INFO EDIT]	Changing the information of an already registered person. <b>Perform step 6 in “Registering face image of new person”.</b>
[PRIORITY]	The focus and exposure are preferentially adjusted for higher-priority faces. <b>Press ▲/▼/◀/▶ to select the priority and then press [MENU/SET].</b>
[DELETE]	Deleting information of a registered person. <b>Press ▲ to select [YES] and then press [MENU/SET].</b>

- 5** Press the shutter button halfway to close the menu.

## Setting Auto Registration/Sensitivity

Setting of Auto Registration and Sensitivity for Face Recognition can be done.

- 1** Select [FACE RECOG.] from the [REC] Mode menu, and then press **▶**. (P32)
- 2** Press **▼** to select [SET] and then press [MENU/SET].
- 3** Press **▲/▼** to select the item and then press **▶**.

Item	Description of settings
[AUTO REGISTRATION]	<b>[OFF]/[ON]</b> <ul style="list-style-type: none"> <li>• When the [AUTO REGISTRATION] is set to [ON], [FACE RECOG.] will be set to [ON] automatically.</li> <li>• For details, see “Auto Registration” on P122.</li> </ul>
[SENSITIVITY]	<b>[HIGH]/[NORMAL]/[LOW]</b> <ul style="list-style-type: none"> <li>• Select [HIGH] when recognition proves to be difficult. The likelihood of recognition increases, but so does the likelihood of mistaken recognition.</li> <li>• Select [LOW] when mistaken recognition happens frequently.</li> <li>• To return to the original settings, select [NORMAL].</li> </ul>

- 4** Press the shutter button halfway to close the menu.

## Auto Registration

When [AUTO REGISTRATION] is set to [ON], the registration screen will display automatically after taking a picture of a face that has a high number of appearances.


- Registration screen is displayed after approximately 3 pictures. (It is not counted when Burst Mode, Auto Bracket, White Balance Bracket, Multi Film Bracket or [AUDIO REC.] is set.)
- It may be extremely hard to recognize only with [AUTO REGISTRATION], so register the face images with [FACE RECOG.] in the [REC] Mode menu beforehand.

### ■ Registering from the automatic registration screen

#### 1 Press **▲** to select [YES] and then press [MENU/SET].

- If there are no registered persons, proceed to step 3.
- Selection screen is displayed again when [NO] is selected, and when [YES] is selected with **▲**, [AUTO REGISTRATION] will be set to [OFF].

#### 2 Press **▲/▼** to select [NEW PERSON] or [ADDITIONAL IMAGE] and then press [MENU/SET].

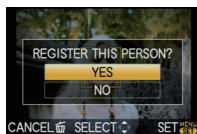

Item	Description of settings
[NEW PERSON]	<ul style="list-style-type: none"> <li>• A list of registered people is displayed when there are 6 people already registered. Select the person to be replaced.</li> </ul>
[ADDITIONAL IMAGE]	<p>To additionally register a face image for a registered person. <b>Press <b>▲/▼/◀/▶</b> to select the person to whom you wish add the picture, and then press [MENU/SET].</b></p> <ul style="list-style-type: none"> <li>• If 3 images have already been registered, the picture replacement screen will appear. In this case, select the picture you wish to replace.</li> </ul>

- After additionally registering or changing a face image, the screen returns automatically to the recording screen.

#### 3 Perform the operation in Step 6 and following in “Registering face image of new person”.

#### Note

- If the registration screen will not display, it may display easier by recording in the same conditions or with the same expressions.
- If a face is not recognized even though it is registered, it will make the recognition easier by registering the person again using the [FACE RECOG.] in the [REC] Mode menu in that environment.
- If the registration screen is displayed for a person that is already registered, it will make the recognition easier by additionally registering.
- It may make recognition harder when a picture recorded with flash is registered.

[REC] Mode: **PA** **SM** **CUST** **SCN** **TR** **SCN** **TR** **SCN** **TR** **SCN** **TR** **SCN**

## Useful Functions at Travel Destinations


### Recording which Day of the Vacation You Take the Picture

For details on the [SETUP] menu settings, refer to P32.


If you set the departure date or the travel destination of the vacation in advance, the number of days that have passed since the departure date (which day of the vacation it is) is recorded when you take the picture. You can display the number of days that have passed when playing back the pictures and stamp it on the recorded pictures with [TEXT STAMP] (P150).

- The number of days that have passed since the departure date can be printed out using the "PHOTOfunSTUDIO 5.0 HD Edition" bundled software on the CD-ROM (supplied).
- Select [CLOCK SET] to set the current date and time in advance. (P30)


- 1 Select [TRAVEL DATE] from the [SETUP] menu, and then press **▶**.

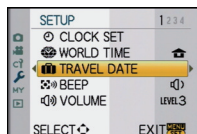


- 2 Press **▲** to select [TRAVEL SETUP] and then press **▶**.

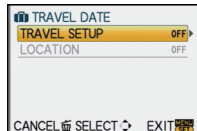

- 3 Press **▼** to select [SET] and then press [MENU/SET].

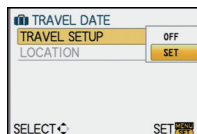


- 4 Press **▲/▼/◀/▶** to set the departure date (year/month/day), and then press [MENU/SET].

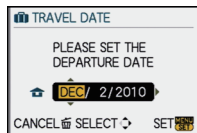


- 5 Press **▲/▼/◀/▶** to set the return date (year/month/day), and then press [MENU/SET].


- If you do not want to set the return date, press [MENU/SET] while the date bar is displayed.

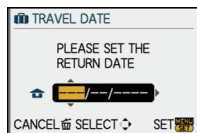

- 6** Press **▼** to select [LOCATION] and then press **▶**.

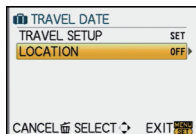

- 7** Press **▼** to select [SET] and then press [MENU/SET].

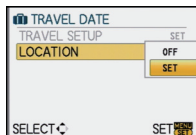


- 8** Enter the location.

- For details on how to enter characters, refer to "Entering Text" on P144.

- 9** Press [MENU/SET] twice to close the menu.

- 10** Take a picture.

- The number of days that have passed since the departure date is displayed for about 5 seconds if this unit is turned on etc. after setting the travel date or when the travel date is set.
- When the travel date is set,  appears on the lower right of the screen.

### ■ Canceling the travel date

The travel date is automatically canceled if the current date is after the return date. If you want to cancel the travel date before the end of the vacation, select [OFF] on the screen shown in step **3** or **7** and then press [MENU/SET] twice. If the [TRAVEL SETUP] is set to [OFF] in step **3**, [LOCATION] will be also set to [OFF].

### Note


- The travel date is calculated using the date in the clock setting and the departure date you set. If you set [WORLD TIME] (P125) to the travel destination, the travel date is calculated using the date in the clock setting and the travel destination setting.
- The travel date setting is memorized even if the camera is turned off.
- If [TRAVEL DATE] is set to [OFF], the number of days that have passed since the departure date will not be recorded. Even if [TRAVEL DATE] is set to [SET] after taking the pictures, which day of the vacation you took them is not displayed.
- If you set a departure date and then take a picture on a date before this departure date, [-] (minus) is displayed in orange and the day of the vacation that you took the picture is not recorded.
- If the travel date is displayed as [-] (minus) in white, there is a time difference that involves date change between the [HOME] and [DESTINATION]. (It will be recorded)
- [TRAVEL DATE] cannot be set for motion pictures recorded with [AVCHD Lite].
- [LOCATION] cannot be recorded when taking motion pictures.
- [TRAVEL DATE] cannot be set in the Intelligent Auto Mode. Setting of other Recording Mode will be reflected.

## Recording Dates/Times at Overseas Travel Destinations (World Time)

For details on the [SETUP] menu settings, refer to P32.


You can display the local times at the travel destinations and record them on the pictures you take.

• Select [CLOCK SET] to set the current date and time in advance. (P30)

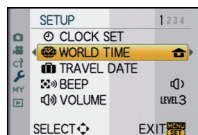

**1** Select [WORLD TIME] from the [SETUP] menu, and then press **▶**.


- When first using the camera after purchasing it, the [PLEASE SET THE HOME AREA] message appears. Press [MENU/SET], and set the home area on the screen in step 3.

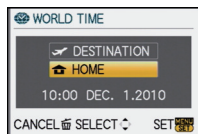

**2** Press **▼** to select [HOME], and then press [MENU/SET].


**3** Press **◀/▶** to select the home area, and then press [MENU/SET].

- (A) Current time
- (B) Time difference from GMT (Greenwich Mean Time)
- If daylight saving time [☀️] is used at the home area, press **▲**. Press **▲** again to return to the original time.
- The daylight saving time setting for the home area does not advance the current time. Advance the clock setting by one hour.

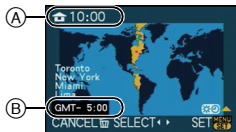


**4** Press **▲** to select [DESTINATION] and then press [MENU/SET] to set.

- (C) Depending on the setting, the time at the travel destination area or the home area is displayed.

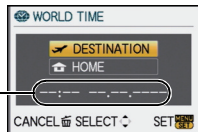

**5** Press **◀/▶** to select the area the travel destination is in and then press [MENU/SET] to set.

- (D) Current time of the destination area
- (E) Time difference
- If daylight saving time [☀️] is used at the travel destination, press **▲**. (The time advances by one hour.) Press **▲** again to return to the original time.

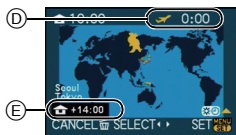

**6** Press [MENU/SET] to close the menu.

### Note

- Return the setting to [HOME] when the vacation is finished by performing steps 1, 2 and 3.
- If [HOME] is already set, change only the travel destination, and use.
- If you cannot find the travel destination in the areas displayed on the screen, set by the time difference from the home area.

## Using the [REC] Mode Menu

- [METERING MODE], [I.EXPOSURE], [EX. OPT. ZOOM], and [DIGITAL ZOOM] are common to both the [REC] Mode menu and [MOTION PICTURE] Mode menu. Changing these settings in one of these menus is reflected in other menu.

### [ASPECT RATIO]

For details on [REC] Mode menu settings, refer to P32.

This allows you to select the aspect ratio of the pictures to suit printing or the playback method.

Applicable modes:            

**[4:3]**: [ASPECT RATIO] of a 4:3 TV

**[3:2]**: [ASPECT RATIO] of a 35 mm film camera

**[16:9]**: [ASPECT RATIO] of a high-definition TV, etc.

**[1:1]**: Square aspect ratio

 
**[4:3]**




**[3:2]**



**[16:9]**



**[1:1]**

 

#### Note

- The ends of the recorded pictures may be cut at printing so check before printing. (P199)

### [PICTURE SIZE]

For details on [REC] Mode menu settings, refer to P32.

Set the number of pixels. The higher the numbers of pixels, the finer the detail of the pictures will appear even when they are printed onto large sheets.

Applicable modes:            

■ When the aspect ratio is **[4:3]**.

<b>[L] (12M)</b>	4000×3000 pixels
<b>[M] (6M)</b>	2816×2112 pixels
<b>[S] (3M)</b>	2048×1536 pixels

■ When the aspect ratio is **[3:2]**.

<b>[L] (10.5M)</b>	4000×2672 pixels
<b>[M] (5M)</b>	2816×1880 pixels
<b>[S] (2.5M)</b>	2048×1360 pixels

### ■ When the aspect ratio is [16:9].


<b>L (9M)</b>	4000×2248 pixels
<b>M (4.5M)</b>	2816×1584 pixels
<b>S (2M)</b>	1920×1080 pixels

### ■ When the aspect ratio is [4:3].

<b>L (9M)</b>	2992×2992 pixels
<b>M (4.5M)</b>	2112×2112 pixels
<b>S (2M)</b>	1504×1504 pixels

#### Note

- If you set [EX. OPT. ZOOM] (P132) to [ON], [EZ] is displayed on the screen when the picture size is set to a size other than the maximum picture size for each aspect ratio. "EZ" is an abbreviation of "Extended Optical Zoom".
- A digital picture is made of numerous dots called pixels. The higher the numbers of pixels, the finer the picture will be when it is printed on a large piece of paper or displayed on a PC monitor.
  - (A) Many pixels (Fine)
  - (B) Few pixels (Rough)
  - \* These pictures are examples to show the effect.
- If you change the aspect ratio, set the picture size again.
- Refer to P201 for information about the number of recordable pictures.

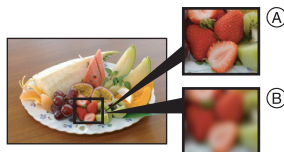

## QUALITY

### For details on [REC] Mode menu settings, refer to P32.

Set the compression rate at which the pictures are to be stored.

Applicable modes: **iA P A S M CUST SCN**     

- [FINE]**: Fine (when giving priority to the picture quality)
- [STD.]**: Standard (when using the standard picture quality and increasing the number of pictures to be recorded without changing the number of pixels)
- [RAW FINE]**: RAW+Fine (In addition to the [RAW] settings, a fine-equivalent JPEG image is simultaneously created.)\*<sup>1</sup>
- [RAW STD.]**: RAW+Standard (In addition to the [RAW] settings, a standard-equivalent JPEG image is simultaneously created.)\*<sup>1</sup>
- [RAW]**: RAW file (When the image is to be edited with a PC in high quality)\*<sup>2</sup>

\*1 If you delete a RAW file from the camera, the corresponding JPEG image will also be deleted.

\*2 It is fixed to maximum recordable pixels ([L]) for each image aspect ratio.

 **Note**

- Refer to P201 for information about the number of recordable pictures.
- You can enjoy more advanced picture editing if you use RAW files. You can save RAW files in a file format (JPEG, TIFF etc.) that can be displayed on your PC etc., develop them and edit them using the software "SILKYPIX Developer Studio" by Ichikawa Soft Laboratory on the CD-ROM (supplied).
- [RAW] images are recorded with a smaller data volume than [RAW<sub>ii</sub>] or [RAW<sub>iii</sub>].
- [PRINT SET] and [FAVORITE] cannot be set to a picture taken by [RAW].

 [FACE RECOG.]

For details on [REC] Mode menu settings, refer to P32.

Specify a person's face and use the Face Recognition functions.

Applicable modes:             

[OFF]/[ON]/[MEMORY]/[SET]

 **Note**

- Refer to P117 for details.

 [METERING MODE]

For details on [REC] Mode menu settings, refer to P32.

Type of optical measurement to measure brightness can be changed.

Applicable modes:       


: Multiple

 
This is the method in which the camera measures the most suitable exposure by judging the allocation of brightness on the whole screen automatically. Usually, we recommend using this method.




: Center weighted

This is the method used to focus on the subject on the center of the screen and measure the whole screen evenly.

: Spot

This is the method to measure the subject in the spot metering target .

 **Note**

 - When the AF Mode is set to  while  is selected, exposure is adjusted to the face of a person, and when it is set to , exposure is adjusted to the locked subject.



 [STABILIZER]

For details on [REC] Mode menu settings, refer to P32.

Using one of these modes, jitter during picture taking is detected, and the camera automatically compensates the jitter, enabling jitter-free images to be taken.

Applicable modes:             

[OFF]\*

[MODE1]: Jitter is always compensated during [REC] Mode.

[MODE2]: The jitter is compensated for when the shutter button is pressed.

[MODE3]: Camera shake is corrected for up/down movements. This mode is ideal for panning (a method of taking pictures which involves turning the camera to track the movements of a subject which continues to move in a fixed direction).

 **Note**

\*This can be selected only when using a lens without the [O.I.S.] switch.

- There is no [O.I.S.] switch on the 14–42 mm/F3.5–5.6 lens included in DMC-G2K.
- Confirm that the [O.I.S.] switch on the lens is set to [ON] when using a lens with the [O.I.S.] switch.
- [STABILIZER] cannot be selected when a lens without Stabilizer function is used.
- The stabilizer function may not be effective in the following cases.
  - When there is a lot of jitter.
  - When the zoom magnification is high.
  - When using the Digital Zoom.
  - When taking pictures while following a moving subject.
  - When the shutter speed becomes slower to take pictures indoors or in dark places.
- Be careful of camera jitter when you press the shutter button.
- The panning effect in [MODE3] is more difficult to achieve in the following cases.
  - In brightly lit places such as in broad daylight on a summer's day
  - When the shutter speed is faster than 1/100th of a second.
  - When you move the camera too slowly because the subject is moving slowly. (The background will not become a blur.)
  - When the camera does not keep up with the subject satisfactorily
- We recommend taking pictures with the viewfinder when panning in [MODE3].
- The setting is fixed to [MODE1] even if it is set to [MODE2] or [MODE3] in recording motion pictures.

 [FLASH]

For details on [REC] Mode menu settings, refer to P32.

You can switch the flash setting.

Applicable modes:         


 

[]/[]/[]/[]/[]/[]

 **Note**

- Refer to P66 for details.

## [RED-EYE REMOVAL]


For details on [REC] Mode menu settings, refer to P32.

When the flash is used with the Red-Eye Reduction (, , ) selected, it will automatically detect and correct the red-eye in the image data.

Applicable modes: **P A S M**       

[OFF]/[ON]

### Note

- It may not be able to correct the red-eye depending on the recording conditions.
- When the Digital Red-Eye correction is set to [ON],  appears on the flash icon.
- Refer to P68 for details.

## [FLASH SYNCHRO]

For details on [REC] Mode menu settings, refer to P32.

You can set to the 2nd curtain synchro.

Applicable modes: **P A S M**  

[1ST]/[2ND]

### Note

- Refer to P71 for details.

## [FLASH ADJUST.]

For details on [REC] Mode menu settings, refer to P32.

You can adjust the flash output.

Applicable modes: **P A S M**       

[-2 EV]/[-1 2/3 EV]/[-1 1/3 EV]/[-1 EV]/[-2/3 EV]/[-1/3 EV]/[0 EV]/[+1/3 EV]/  
[+2/3 EV]/[+1 EV]/[+1 1/3 EV]/[+1 2/3 EV]/[+2 EV]

### Note

- Refer to P70 for details.

## I,R [I.RESOLUTION]

For details on [REC] Mode menu settings, refer to P32.

Pictures with sharp profile and resolution can be taken by utilising the Intelligent Resolution Technology.

Applicable modes: **P A S M**  

[OFF]/[LOW]/[STANDARD]/[HIGH]

### Note

- Use the Quick Menu (P33) to set when in Motion Picture P Mode.

## [I.EXPOSURE] (Intelligent exposure adjustment)


For details on [REC] Mode menu settings, refer to P32.

Contrast and exposure will be adjusted automatically when there is a big difference in brightness between the background and subject, to bring the image close to how you see.

Applicable modes: **P A S M** CUST   

[OFF]/[LOW]/[STANDARD]/[HIGH]

### Note

- Even when the [SENSITIVITY] is set to [ISO100]/[ISO125], [SENSITIVITY] may be set higher than [ISO100]/[ISO125] if the picture is taken with [I.EXPOSURE] set to valid.
- Compensation effect may not be achieved depending on the conditions.
-  in the screen turns to yellow when [I.EXPOSURE] is in effect.
- [LOW], [STANDARD], or [HIGH] represents the maximum range of effect.

## [ISO LIMIT SET]


For details on [REC] Mode menu settings, refer to P32.

It will select optimal ISO sensitivity with set value as limit depending on the brightness of the subject.

Applicable modes: **P A S** CUST

[OFF]/[200]/[400]/[800]/[1600]

### Note

- The upper limit of the ISO sensitivity can be set.
- The higher the value set for the ISO sensitivity, the more the jitter is reduced but the greater the amount of picture noise.
- It will work when the [SENSITIVITY] is set to [AUTO] or .

## ISO [ISO INCREMENTS]

For details on [REC] Mode menu settings, refer to P32.

ISO sensitivity settings between [ISO100] and [ISO6400] are changed for every 1/3 EV.

Applicable modes: **P A S M** CUST     

[1/3 EV]: [100]/[125]/[160]/[200]/[250]/[320]/[400]/[500]/[640]/[800]/[1000]/[1250]/  
[1600]/[2000]/[2500]/[3200]/[4000]/[5000]/[6400]

[1 EV]: [100]/[200]/[400]/[800]/[1600]/[3200]/[6400]

### Note

- When the setting is changed from [1/3 EV] to [1 EV], ISO sensitivity will be set to value closest to the value set during the [1/3 EV]. (Set value will not restore when the setting is changed back to [1/3 EV]. It will stay as the setting selected for [1 EV].)

**NR [LONG SHTR NR]**

For details on [REC] Mode menu settings, refer to P32.

The camera automatically removes noise that appears when the shutter speed becomes slower to take pictures of night scenery etc. so you can take beautiful pictures.

Applicable modes: **P A S M** CUST SCN      

[OFF]/[ON]

**Note**

- If you set [ON], the countdown screen is displayed when the shutter button is pressed. Do not move the camera at this time. After the countdown is finished, [PLEASE WAIT...] is displayed for the same time as the selected shutter speed for signal processing.
- We recommend using a tripod when the shutter speed is slowed to take pictures.
- This does not operate during motion picture recording.

**EZ [EX. OPT. ZOOM]**

For details on [REC] Mode menu settings, refer to P32.

Enlarging a picture with no picture quality deterioration

Applicable modes: **P A S M** CUST  SCN      

[OFF]/[ON]

**Note**

- Refer to P55 for details.

** [DIGITAL ZOOM]**

For details on [REC] Mode menu settings, refer to P32.

This can enlarge subjects even more than the Optical Zoom or Extended Optical Zoom.

Applicable modes: **P A S M** CUST  

[OFF]/[2×]/[4×]

**Note**

- Refer to P55 for details.
- If camera shake (jitter) is a problem during zooming, it is recommended that [STABILIZER] be set to [MODE1].

** [BURST RATE]**

For details on [REC] Mode menu settings, refer to P32.

You can set the burst speed.

Applicable modes: **P A S M** CUST SCN      

[H]/[M]/[L]

**Note**

- Refer to P73 for details.

 [AUTO BRACKET]

For details on [REC] Mode menu settings, refer to P32.

You can set the compensation range of the exposure and the bracket order.

Applicable modes: **P A S M**        

[STEP]: [3•1/3]/[3•2/3]/[5•1/3]/[5•2/3]/[7•1/3]/[7•2/3]

[SEQUENCE]: [0/-/+]/[-/0/+]

 **Note**

- Refer to P75 for details.

 [SELF-TIMER]

For details on [REC] Mode menu settings, refer to P32.

You can set the time for the self-timer.

Applicable modes: **P A S M**        

[10] / [10] / [10] / [2]

 **Note**

- Refer to P77 for details.

 [COLOR SPACE]

For details on [REC] Mode menu settings, refer to P32.

Set this when you want to correct the color reproduction of the recorded pictures on a PC, printer etc.

Applicable modes: **P A S M**        

[sRGB]: Color space is set to sRGB color space.  
This is widely used in computer related equipment.

[AdobeRGB]: Color space is set to AdobeRGB color space.  
AdobeRGB is mainly used for business purposes such as professional printing because it has a greater range of reproducible colors than sRGB.

 **Note**

- Depending on the color space setting, the file name of the recorded picture changes as shown.

P1000001.JPG

└─ P: sRGB

└─ \_: AdobeRGB


- Set to sRGB if you are not very familiar with AdobeRGB.
- The setting is fixed to [sRGB] when recording motion pictures.

 [AUDIO REC.]
**For details on [REC] Mode menu settings, refer to P32.**

Audio can be recorded simultaneously with the image. You can record the conversation during the shooting or the situation as a memo.





**Applicable modes:**            

**[OFF]:** Audio will not be recorded.

**[ON]:**  is displayed on the screen.  
Audio will be recorded as soon as the image is recorded.  
(It will stop in 5 seconds)

- If you press [MENU/SET] during audio recording, the audio recording is canceled.

 **Note**

- Audio is recorded from the built-in microphone on the camera.
- When recording audio, do not cover the microphone with your fingers or other objects.
- Audio recorded with this unit may not playback on other equipment.
- Sound from motion pictures or pictures with audio recorded by this camera cannot be played back by older models of Panasonic digital camera (LUMIX) launched before July 2008.
- [AUDIO REC.] cannot be set in the following cases.
  - When recording with Auto Bracket
  - During burst shooting
  - When [SELF-TIMER] is set to 
  - When recording with White Balance Bracket
  - When recording with Multi Film Bracket
  - When [QUALITY] is set to [RAW , [RAW , or [RAW 

## Using the [MOTION PICTURE] Mode Menu

- [METERING MODE], [I.EXPOSURE], [EX. OPT. ZOOM], and [DIGITAL ZOOM] are common to both the [REC] Mode menu and [MOTION PICTURE] Mode menu. Changing these settings in one of these menus is reflected in other menu.
  - For details, refer to the explanation for the corresponding setting in [REC] Mode menu.

 [REC MODE]
**For details on [MOTION PICTURE] Mode menu settings, refer to P32.**

This sets up the data format of motion pictures.

**Applicable modes:**             

 [AVCHD Lite]]/[ [MOTION JPEG]]


 **Note**

- Refer to P113 for details.

## [REC QUALITY]

For details on [MOTION PICTURE] Mode menu settings, refer to P32.  
This sets up the picture quality of motion pictures.

Applicable modes:             

■ When [REC MODE] is [ AVCHD Lite].

[]/[]/[]

■ When [REC MODE] is [ MOTION JPEG]].

[]/[]/[]/[]



### Note

- Refer to P113 for details.

## [CONTINUOUS AF]

For details on [MOTION PICTURE] Mode menu settings, refer to P32.  
You can set the camera to always maintain the focus or fix the focus.

Applicable modes:             

[OFF]/[ON]



### Note

- Set to [OFF] when you would like to fix the focus.
- It is recommended to set the Auto Focus to [OFF] if the sound of operation bothers you.

## [WIND CUT]

For details on [MOTION PICTURE] Mode menu settings, refer to P32.  
This reduces the wind noise in the audio recording.

Applicable modes:             

[OFF]/[LOW]/[STANDARD]/[HIGH]



### Note

- Sound quality will be different than usual when [WIND CUT] is set.
- [WIND CUT] does not function when taking still pictures with audio.

Perform these settings if you need to.

## Using the [CUSTOM] Menu

- In the Intelligent auto mode, only [GUIDE LINE], [LCD INFO.DISP.] and [REMAINING DISP.] can be set.

For details on how to select the [CUSTOM] menu settings, refer to P32.


[CUST. SET MEM.]	Up to 3 current camera settings can be registered as custom settings.
	[C1] [C2] [C3]

- Refer to P108 for details.

[Fn BUTTON SET]	Assign [REC] Mode menu or [CUSTOM] menu to ▼ button. It is convenient to register functions that are used often.
	[FOCUS AREA SET]/[ASPECT RATIO]/[QUALITY]/ [METERING MODE]/[I.RESOLUTION]/[I.EXPOSURE]/ [EX. OPT. ZOOM]/[GUIDE LINE]/[ % REC AREA]/ [REMAINING DISP.]

- When set to [FOCUS AREA SET], it is possible to display the position setting screen of either AF area or MF assist by pressing ▼. Refer to P48, 79 and 83 for details.
- Refer to P126 for details about [REC] Mode menu.
- The camera will not be able to operate with ▲/▼/◀/▶ if the [DIRECT FOCUS AREA] (P138) is set to [ON]. Set using the Quick Menu (P33).

[HISTOGRAM]	This allows you to set either to display or not display the histogram. (P65)
	[OFF]  [ON]: Position of the histogram can be set. Refer to P66 on how to set.

[GUIDE LINE]	This will set the pattern of guide lines displayed when taking a picture. (P65)		
	[OFF]/[  <table border="1"> <tr> <td rowspan="2">[HIGHLIGHT]</td> <td>When the Auto Review function is activated or when playing back, white saturated areas appear blinking in black and white.</td> </tr> <tr> <td>[OFF]/[ON]</td> </tr> </table>	[HIGHLIGHT]	When the Auto Review function is activated or when playing back, white saturated areas appear blinking in black and white.
[HIGHLIGHT]	When the Auto Review function is activated or when playing back, white saturated areas appear blinking in black and white.		
	[OFF]/[ON]		




• If there are any white saturated areas, we recommend compensating the exposure towards negative (P72) referring to the histogram (P65) and then taking the picture again. It may result in a better quality picture.

• There may be white saturated areas if the distance between the camera and the subject is too close when taking pictures with the flash.

If [HIGHLIGHT] is set to [ON] in this case, the area directly illuminated by the photo flash will become white saturated and appear blinking in black and white.

• The LCD/EVF will display overexposed portions of the image as white blinking areas. These only exist on the camera's display, not on the actual photo.

• This does not work while in Multi Playback (P58), Calendar Playback (P59), or Playback Zoom (P60).

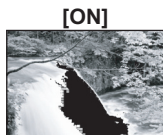

[AF/AE LOCK]	This will set what will be fixed by the [AF/AE LOCK] button when taking a picture with fixed focus or exposure.
	[AE]: Only the exposure is locked.
	[AF]: Only the focus is locked.
	[AF/AE]: Both focus and exposure are locked.

• Refer to P85 for details.

[AF/AE LOCK HOLD]	This will set the operation of [AF/AE LOCK] button when taking a picture with fixed focus or exposure.
	[OFF]: The focus and the exposure are fixed only while you are pressing [AF/AE LOCK]. (P85) If you release [AF/AE LOCK], AF/AE Lock is canceled.
	[ON]: The focus and the exposure remain fixed even if you release [AF/AE LOCK] after pressing it. If you press [AF/AE LOCK] again, AF/AE Lock is canceled.

[PRE AF]	Depending on the setting, camera will adjust the focus automatically before pressing the shutter button halfway.
	[OFF]
	[Q <sub>AF</sub> ]: Quick AF [C <sub>AF</sub> ]: Continuous AF

#### About [Q<sub>AF</sub>] and [C<sub>AF</sub>]

[Q<sub>AF</sub>] will adjust the focus automatically when the jitter of the camera gets small. [C<sub>AF</sub>] will adjust the focus at all times (continuous AF operation).

The camera will adjust the focus automatically, and the focus adjustment when the shutter button is pressed becomes faster. It is effective when you do not want to miss the photo opportunity.

 **Note**

- The battery will be consumed faster than usual.
- Press the shutter button halfway again when it is difficult to focus on the subject.
- When [PRE AF] is set to [C:AF], it may take time to focus on the subject if you rotate the zoom ring from Wide to Tele or suddenly change the subject from a distant one to a nearby one.
- [PRE AF] does not work during the Preview Mode.
- [PRE AF] does not work with lenses that do not allow Auto Focus and Four Thirds mount specification lens not compatible to contrast AF. [C:AF] does not work with lenses for which the Focus Mode cannot be set to [AFC]. (P19)

<b>[DIRECT FOCUS AREA]</b>	Move the AF area or MF assist easily during recording.
	<b>[OFF]:</b> <b>[ON]:</b> When [👤], [📷] or [📐] is selected in AF Mode, it is possible to move the AF area freely with ▲/▼/◀/▶. Move the MF assist during the Manual Focus.

- Refer to P82, 84 for details.

<b>[FOCUS PRIORITY]</b>	It will set so no picture can be taken when it is out of focus.
	<b>[OFF]:</b> This gives priority to the best time to take a picture so you can take a picture when the shutter button is pressed fully. <b>[ON]:</b> You cannot take a picture until the subject is brought into focus.

- If you set [OFF], be careful as the picture may not be properly focused even if [AFS] or [AFC] in Focus Mode is set.
- This does not operate during motion picture recording.

<b>[AF ASSIST LAMP]</b>	Illuminating the subject makes it easier for the camera to focus when recording in low light conditions that make focusing difficult.
	<b>[OFF]:</b> The AF Assist Lamp does not turn on. <b>[ON]:</b> When taking pictures in dark places, the AF Assist Lamp lights while the shutter button is pressed halfway. (Larger AF areas are now displayed.)

- The effective range of the AF Assist Lamp is different depending on used lens.
  - When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is attached and at Wide: Approx. 1.0 m (3.28 feet) to 3.0 m (9.84 feet)
- The AF Assist Lamp is valid only for the subject in the center of the screen. Use it by positioning the subject in the center of the screen.
- Remove the lens hood.
- When you do not want to use the AF Assist Lamp (e.g. when taking pictures of animals in dark places), set the [AF ASSIST LAMP] to [OFF]. In this case, it will become more difficult to focus on the subject.
- The AF Assist Lamp gets slightly blocked when the lens included in the DMC-G2K is used, but it does not affect the performance.
- The AF Assist Lamp may be greatly blocked, and it may become harder to focus when a lens with large diameter is used.
- The setting for the [AF ASSIST LAMP] is fixed to [OFF] in [SCENERY] Mode, [NIGHT SCENERY] or [CREATIVE NIGHT SCENERY] in [NIGHT PORTRAIT] Mode, and [SUNSET] in Scene Mode.

<b>[AF+MF]</b>	It is possible to adjust focus manually after it was adjusted automatically.
	<b>[OFF]</b> <b>[ON]:</b> It is possible to finely adjust the focus manually by rotating the focus ring while AF lock (Focus Mode is set to [AFS] and shutter button is half-way pressed, or AF lock with [AF/AE LOCK]).

<b>[MF ASSIST]</b>	In Manual Focus, the assistance screen appears on the screen to facilitate focusing on the subject.
	<b>[OFF]</b> <b>[ON]:</b> Center of the screen will be enlarged automatically when the focus ring is rotated.

• Refer to P83 for details.

<b>[MF GUIDE]</b>	In Manual Focus, it is possible to check if the focus position is near side or far side.
	<b>[OFF]</b> <b>[ON]:</b> MF guide is displayed on the screen when the focus ring is rotated.

• Refer to P83 for details.

<b>[PREVIEW HOLD]</b>	This will set the operation of the [⊗] button when displaying the preview screen.
	<b>[OFF]:</b> Preview screen is displayed only when the [⊗] is pressed. It will return to previous screen when [⊗] is released. <b>[ON]:</b> Preview screen is displayed even after the [⊗] is released after pressing. (P97) It will return to previous screen when [⊗] is pressed again.




<b>[EXPO.METER]</b>	Select whether or not to display the Exposure Meter when the mode dial is switched to <b>P/A/S/M</b> etc.
	<b>[OFF]/[ON]</b>

- Set to [ON] to display the [EXPO.METER] when correcting exposure, performing program shift, setting aperture, and setting shutter speed.
- Unsuitable areas of the range are displayed in red.
- The Exposure Meter will only be displayed when the camera is set to display information on the LCD monitor or viewfinder (P63)
- The [EXPO.METER] disappears after approximately 4 seconds if no operation is performed.





<b>[EXPO. SETTINGS]</b>	Change the method of Exposure Compensation setting switching when the mode dial is set to <b>P</b> , <b>A</b> , <b>S</b> and <b>M</b> .
	<p><b>[SWITCH BY PRESSING THE REAR DIAL]:</b> Press the rear dial to switch between Exposure Compensation, Program Shift, aperture setting, and shutter speed setting.</p> <p><b>[SWITCH BY PRESSING THE LVF/LCD BUTTON]:</b> Press [LVF/LCD] to switch between Exposure Compensation, Program Shift, aperture setting, and shutter speed setting.</p>



### Setting items for each [REC] Mode

		 or 
<b>P</b>	Program Shift	Exposure Compensation
<b>A</b>	Aperture	Exposure Compensation
<b>S</b>	Shutter speed	Exposure Compensation
<b>M</b>	Shutter speed	Aperture

- You cannot switch between LCD monitor and viewfinder by pressing [LVF/LCD] when it is set to [SWITCH BY PRESSING THE LVF/LCD BUTTON].
- [EXPO. SETTINGS] is disabled when you set [LVF/LCD AUTO] to [OFF].

<b>[LVF DISP.STYLE]</b>	This will set the display style of the viewfinder.
	<p>: Viewfinder style</p> <p>: LCD monitor style</p>

- Refer to P64 for details.

<b>[LCD DISP.STYLE]</b>	This will set the display style of the LCD monitor.
	<p>: Viewfinder style</p> <p>: LCD monitor style</p>

- Refer to P63 for details.

<b>[LCD INFO.DISP.]</b>	This will set the color of the information display screen on the LCD monitor. (P63)
	<b>[OFF]</b>
	<b>[ 1 ]</b> : Blue colors
	<b>[ 2 ]</b> : Red colors
	<b>[ 3 ]</b> : Black colors

<b>[LVF/LCD AUTO]</b>	It will switch automatically to viewfinder display when an eye or object gets near the viewfinder using an eye sensor. It will return to LCD monitor display when it goes away.
	<b>[OFF]/[ON]</b>

- LCD monitor display and viewfinder display can be switched manually by pressing [LVF/LCD]. (P42)

<b>[FA] BUTTON SWITCH</b>	It is possible to set how the <b>[FA]</b> button to toggle to Intelligent Auto Mode will operate.
	<b>[SINGLE PRESS]:</b> It will switch to Intelligent Auto Mode by pressing <b>[FA]</b> .
	<b>[PRESS AND HOLD]:</b> It will switch to Intelligent Auto Mode by pressing <b>[FA]</b> for a while.

<b>[MOTION] BUTTON</b>	Enables/disables the motion picture button.
	<b>[OFF]/[ON]</b>

<b>[REC AREA]</b>	This changes the angle of view during motion picture recording and still picture recording.
	<b>[P] (Picture)/[M] (Motion picture)</b>

- The recording area indicated is a guide line.

<b>[REMAINING DISP.]</b>	This will switch display between the number of recordable pictures and available recording time.
	<b>[REMAINING SHOTS]:</b> This will display the number of recordable pictures for still pictures.
	<b>[REMAINING TIME]:</b> This will display the available recording time for motion pictures.

<b>[TOUCH Q.MENU]</b>	Enables/disables the Quick Menu during the touch operation.
	<b>[OFF]:</b> Touch Quick Menu icon is not displayed on the screen, and the Touch Quick Menu is disabled.
	<b>[ON]:</b> Touch Quick Menu icon is displayed on the screen, and the setting by the Touch Quick Menu is enabled when touched the icon.

<b>[TOUCH SHUTTER]</b>	Enables/disables the Touch Shutter function.
	<p><b>[OFF]:</b> Touch Shutter icon is not displayed on the screen, and the Touch Shutter function is disabled.</p> <p><b>[ON]:</b> Touch Shutter icon is displayed on the screen, and [ON]/[OFF] of the Touch Shutter function can be switched when the icon is touched.</p>

<b>[TOUCH GUIDE]</b>	When playing back the pictures, this allows you to set either to display or not display the guide screen of the touch panel.
	<b>[OFF]/[ON]</b>

<b>[TOUCH SCROLL]</b>	This allows you to set the speed of continuously forwarding or rewinding pictures using touch operation.
	<b>[H]:</b> High speed
	<b>[L]:</b> Low speed

<b>[DIAL GUIDE]</b>	Sets if the operation switch guide when the mode dial is switched to <b>P</b> , <b>A</b> , <b>S</b> and <b>M</b> is to be displayed or not.
	<b>[OFF]/[ON]</b>

- It will display dial operation guide to the screen that is possible to perform Exposure Compensation, Program Shift, aperture setting, or shutter speed setting when set to [ON].

Ⓐ Dial operation guide



<b>[MENU RESUME]</b>	The last operated menu position is saved even if the camera is turned off.
	<b>[OFF]/[ON]</b>

<b>[PIXEL REFRESH]</b>	It will perform optimization of imaging device and image processing.
------------------------	--

- Imaging device and image processing is optimized when the camera is purchased. Use this function when bright spots not in subject get recorded, and it is bothering you.
- Turn the camera off and on after the pixels are corrected.

<b>[SENSOR CLEANING]</b>	Dust reduction to blow off the debris and dust that have affixed to the front of the imaging device is performed.
--------------------------	---

- Dust reduction function will operate automatically when the camera is turned on, but you can use this function when you see dust. (P186)

<b>[SHOOT W/O LENS]</b>	It is possible to setup so the shutter will not operate when there is no lens on the unit.	
	<b>[OFF]:</b>	You cannot press the shutter button when a lens is not attached to the camera body or is not attached correctly.
	<b>[ON]:</b>	Shutter will operate regardless of the lens on the unit.

- When using a Leica lens mount adaptor (DMW-MA2M, DMW-MA3R; optional), set it to [ON].

## Entering Text


It is possible to enter babies' and pets' names and the names of travel destinations when recording. (Only alphabetical characters and symbols can be entered.)

### 1 Display the entry screen and press ▼ to move to the character selection section.

- You can display the entry screen via the following operations.
  - [NAME] of [BABY1]/[BABY2] or [PET] (P104) in Scene Mode.
  - [NAME] in [FACE RECOG.] (P120)
  - [LOCATION] in [TRAVEL DATE] (P123)
  - [TITLE EDIT] (P149)

### 2 Press ▲/▼/◀/▶ to select text and then press [MENU/SET] to register.

- Press [DISPLAY] to switch text between [A] (capitals), [a] (lower case) and [&/1] (special characters and numbers).
- The entry position cursor can be moved left and right with the rear dial.
- To enter a blank, move the cursor to [SPACE], to delete an entered character, move the cursor to [DELETE], or to stop editing during text entry, move the cursor to [CANCEL], and press [MENU/SET].
- A maximum of 30 characters can be entered. (Maximum of 9 characters when setting names in [FACE RECOG.]

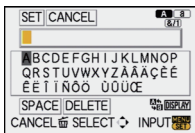

### 3 Press ▲/▼/◀/▶ to move the cursor to [SET] and then press [MENU/SET] to end text input.

- Display will return to the appropriate setting screen.

#### Note

- Text can be scrolled if all of the entered text does not fit on the screen.





## Playing Back Motion Pictures/Pictures with Audio

- This unit was designed to play motion pictures and still pictures with audio using the QuickTime Motion JPEG and AVCHD Lite formats that were taken with this model (only).
- Only [AVCHD Lite] motion pictures recorded with this unit and Panasonic digital cameras (LUMIX) can be played back with this unit as AVCHD Lite format.

Press .

### Motion pictures


Select a picture with a motion picture icon (such as ), and then press  to play back.

- (A) Motion picture icon
  - (B) The motion picture recording time
- After playback starts, the elapsed playback time is displayed on the upper right of the screen.


For example, 8 minutes and 30 seconds is displayed as [8m30s].

- Some information (recording information, etc.) is not displayed for motion pictures recorded in [AVCHD Lite].

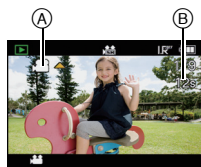



[AVCHD Lite]

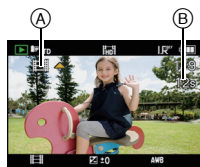


[MOTION JPEG]



### ■ Operations performed during motion picture playback

 




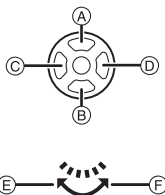

The cursor displayed during playback is the same as  /  /  / .

 - (A) Play/Pause
  - (B) Stop
  - (C) Fast rewind, Frame-by-frame rewind\*
  - (D) Fast forward, Frame-by-frame forward\*
- \* These operations can be performed only in the Pause Mode.



- (E) Reduce volume level
- (F) Increase volume level

### • About fast forward/rewind playback

- Press  during playback to fast forward (press  to rewind). The fast forward/rewind speed increases if you press  /  again. (The display on the screen changes from  to .)
- Press  to resume Normal Playback speed.
- When using a high capacity card, it is possible that fast rewinding may be slower than usual.

### Note


- Please note that the bundled software includes QuickTime or "PHOTOfunSTUDIO 5.0 HD Edition" to play back motion picture files created with the camera on the PC.
- QuickTime Motion JPEG motion pictures that were recorded with a PC or other equipment may have lower image quality or may not be able to play back with this unit.

## Pictures with audio

Select a picture with the audio icon [  ] and then press **▲** to play back.

(A) Audio icon

- Refer to [AUDIO REC.] (P134) for information about how to create still pictures with audio.

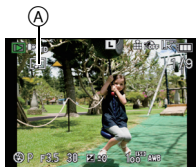

### Note

- Sound can be heard through the speaker. Refer to [VOLUME] (P35) for information about how to adjust the volume in the [SETUP] menu.
- Pictures with audio recorded with other equipment may not playback on this unit.

[PLAYBACK] Mode: 



## Creating Still Pictures from a Motion Picture

You can create a single still picture from a recorded motion picture.




**1** Press **▲** to pause motion picture playback.

**2** Press [MENU/SET].

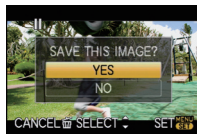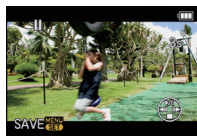**3** Press **▲** to select [YES] and then press [MENU/SET].







## Picture size

[AVCHD Lite]	Picture size
 ([SH]) /  ([H]) /  ([L])	[S] (2 M)

- [QUALITY] is fixed to [..].

### Note

- Still pictures cannot be created from motion pictures recorded with [MOTION JPEG] set to [  ] or [  ].
- You may not be able to save still pictures from a motion picture taken on other equipment.

[MOTION JPEG]	Picture size
 ([HD]) /  ([WVGA])	[S] (2 M)

## Using the [PLAYBACK] Mode Menu

You can use various functions in Playback Mode to rotate pictures, set protection for them etc.

- With [TEXT STAMP], [RESIZE], [CROPPING] or [ASPECT CONV.], a new edited picture is created. A new picture cannot be created if there is no free space on the card so we recommend checking that there is free space and then editing the picture.

### [SLIDE SHOW]

You can play back the pictures you have taken in synchronisation with music, and you can do this in sequence while leaving a fixed interval between each of the pictures.


You can also put together a slide show composed of only still pictures, only motion pictures, only pictures of a particular category, or only favorites.

We recommend this feature when you view your pictures by connecting the camera to a TV.

#### 1 Select [SLIDE SHOW] on the [PLAYBACK] Mode menu. (P32)

#### 2 Press ▲/▼ to select the item and then press [MENU/SET].


- [FAVORITE] can be selected only when [FAVORITE] on the [PLAYBACK] menu (P158) is at [ON] and there are pictures already set as favorites.
- During [CATEGORY SELECTION], press ▲/▼/◀/▶ to select a category, and then press [MENU/SET] to proceed to step 3. For details on categories, refer to P149.

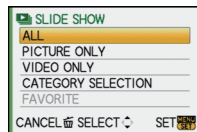

#### 3 Press ▲ to select [START] and then press [MENU/SET].

#### 4 Press ▼ to finish the slide show.

- Normal Playback resumes after the slide show finishes.

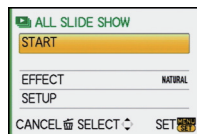


#### ■ Operations performed during slide show

The cursor displayed during playback is the same as ▲/▼/◀/▶.

- The menu screen is restored when [MENU] is pressed.

- (A) Play/Pause
- (B) Stop
- (C) Back to previous picture\*
- (D) Ahead to next picture\*
- \* These operations can be performed only in the Pause Mode or during motion picture playback.

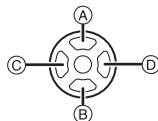


- (E) Reduce volume level
- (F) Increase volume level



## ■ Changing the slide show settings

You can change the settings for slide show playback by selecting [EFFECT] or [SETUP] on the slide show menu screen.

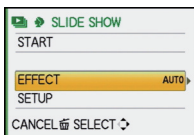

### [EFFECT]

This allows you to select the screen effects when switching from one picture to the next.

[NATURAL], [SLOW], [SWING], [URBAN], [OFF], [AUTO]

- When [URBAN] has been selected, the picture may appear in black and white as a screen effect.
- [AUTO] can be used only when [CATEGORY SELECTION] has been selected. The pictures are played back with the recommended effects in each category.
- [EFFECT] is set to [OFF] when playing a slide show with motion pictures only.
- Some [EFFECT] will not operate when playing back pictures displayed vertically.

### [SETUP]

[DURATION] or [REPEAT] can be set.

Item	Settings
[DURATION]	1SEC./2SEC./3SEC./5SEC.
[REPEAT]	OFF/ON
[SOUND]	<p>[OFF]: There will be no sound.</p> <p>[AUTO]: Music is played when the still pictures are played back, and audio is played when the motion pictures or still pictures with audio are played back.</p> <p>[MUSIC]: Music is played back.</p> <p>[AUDIO]: Audio (only for motion pictures and still pictures with audio) is played back.</p>

- [DURATION] can be set only when [OFF] has been selected as the [EFFECT] setting.

### Note

- It is not possible to add new music.


## 🔊 [PLAYBACK MODE]

Playback in [NORMAL PLAY], [PICTURE PLAY], [AVCHD Lite PLAY], [MOTION JPEG PLAY], [CATEGORY PLAY] or [FAVORITE PLAY] can be selected.

### 1 Select [PLAYBACK MODE] on the [PLAYBACK] Mode menu. (P32)

### 2 Press ▲/▼ to select the item and then press [MENU/SET].


- [FAVORITE PLAY] can be selected only when [FAVORITE] on the [PLAYBACK] menu (P158) is at [ON] and there are pictures already set as favorites.
- Refer to P57 for information about how to play back pictures in [NORMAL PLAY], [PICTURE PLAY], [AVCHD Lite PLAY], [MOTION JPEG PLAY] or [FAVORITE PLAY] can be selected.

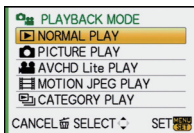

## When [CATEGORY PLAY] is selected in step 2

**3** Press ▲/▼/◀/▶ to select the category and then press [MENU/SET] to set.

- If a picture is found in a category, the category icon turns blue.
- It may take time to search the picture files if there are a lot on the card.
- If you press [STOP] while searching, the searching will stop halfway.
- Pictures are sorted into the categories shown below.

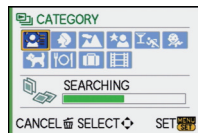

[CATEGORY]	Recording information e.g. Scene Modes
	[FACE RECOG.]*
	[PORTRAIT], [i-PORTRAIT], [NIGHT PORTRAIT], [i-NIGHT PORTRAIT], [BABY1]/[BABY2], [i-BABY]
	[SCENERY], [i-SCENERY], [SUNSET], [i-SUNSET]
	[NIGHT PORTRAIT], [i-NIGHT PORTRAIT], [i-NIGHT SCENERY]
	[SPORTS], [PARTY]

[CATEGORY]	Recording information e.g. Scene Modes
	[BABY1]/[BABY2], [i-BABY]
	[PET]
	[FOOD]
	[TRAVEL DATE]
	[AVCHD Lite], [MOTION JPEG]

- \*Press ▲/▼/◀/▶ to select the person to playback and then press [MENU/SET].  
Face Recognition may not be possible or may not recognize faces correctly even for registered faces, depending on the facial expression and environment.  
Also, if there are multiple faces that are already registered in the picture, it will be categorized only once to the person found first in the registration.

### [TITLE EDIT]

You can add text (comments) to pictures. After text has been registered, it can be included in prints using [TEXT STAMP] (P150). (Only alphabetic characters and symbols can be entered.)

**1** Select [TITLE EDIT] on the [PLAYBACK] Mode menu. (P32)

**2** Press ▲/▼ to select [SINGLE] or [MULTI] and then press [MENU/SET].



### 3 Select the picture, and then press [MENU/SET] to set.

- [ ] is displayed for pictures with titles already registered.

#### [MULTI] setting

Press [DISPLAY] to set (repeat), and then press [MENU/SET] to set.


- The setting is canceled when [DISPLAY] is pressed again.

[SINGLE]



Press ◀▶ to select the picture.

[MULTI]

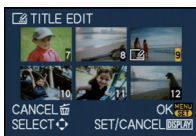

Press ▲/▼/◀▶ to select the pictures.

### 4 Enter the text. (P144)

### 5 Press [ ] to return to the menu screen.\*

- \*The menu screen is automatically restored when [MULTI] is selected.
- Press [MENU/SET] to close the menu.

#### Note

- To delete the title, erase all the text in the text input screen.
- Text can be scrolled if all of the registered text does not fit on the screen.
- You can print out texts (comments) using the "PHOTOfunSTUDIO 5.0 HD Edition" bundled software on the CD-ROM (supplied).
- You can set up to 50 pictures at one time with [MULTI].
- You cannot use title edit for the following pictures.
  - Motion pictures
  - Protected pictures
  - Pictures taken with [RAW], [RAW] or [RAW]
  - Pictures recorded with other equipment


## [ ] [TEXT STAMP]

You can stamp the recording date/time, name, location, travel date or title onto the recorded pictures.


It is suitable for regular size printing. (Pictures with a picture size larger than [S] will be resized when stamping the date etc. on them.)

### 1 Select [TEXT STAMP] on the [PLAYBACK] Mode menu. (P32)

### 2 Press ▲/▼ to select [SINGLE] or [MULTI] and then press [MENU/SET].

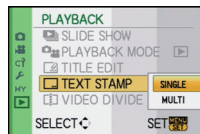

### 3 Select the picture, and then press [MENU/SET] to set.

 -  appears on screen if the picture is stamped with text.

#### [MULTI] setting

Press [DISPLAY] to set (repeat), and then press [MENU/SET] to set.


- The setting is canceled when [DISPLAY] is pressed again.

[SINGLE]

[MULTI]



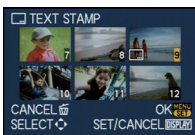

Press ◀/▶ to select the picture.



Press ▲/▼/◀/▶ to select the pictures.

### 4 Press ▲/▼ to select text stamp items, and then press ▶.

### 5 Press ▲/▼ to select the settings, and then press [MENU/SET].

Item	Setting item
[SHOOTING DATE]	[OFF] [W/OTIME]: Stamp the year, month and date. [WITHTIME]: Stamp the year, month, day, hour and minutes.
[NAME]	[OFF]  : Name registered in Face Recognition will be stamped.  : Stamps names on pictures that already have been registered name settings of [BABY1]/[BABY2] or [PET] in Scene Mode.
[LOCATION]	[OFF] [ON]: Stamps the travel destination name set under [LOCATION].
[TRAVEL DATE]	[OFF] [ON]: Stamps the travel date set under [TRAVEL DATE].
[TITLE]	[OFF] [ON]: Title input in the [TITLE EDIT] will be stamped.

## 6 Press [MENU/SET].

- If you set [TEXT STAMP] for a picture with a picture size larger than [S], the picture size will become smaller as shown below.

Aspect ratio setting	Picture size
4:3	L / M → S
3:2	L / M → S
16:9	L / M → S
1:1	L / M → S

- When selecting [ ] or [ ], press ▲ to select [YES] for stamping [AGE], and then press [MENU/SET] and proceed to step 7.

## 7 Press ▲ to select [YES] and then press [MENU/SET].

- The message [SAVE NEW PICTURES?] appears if the picture was recorded with a picture size [S].



## 8 Press [ ] to return to the menu screen.\*

- \*The menu screen is automatically restored when [MULTI] is selected.
- Press [MENU/SET] to close the menu.

### Note

- When you print pictures stamped with text, the date will be printed over the stamped text if you specify printing of the date at the photo shop or on the printer.
- You can set up to 50 pictures at one time in [MULTI].
- The picture quality may deteriorate when text stamping is carried out.
- Depending on the printer being used, some characters may be cut at printing. Check before printing.
- Text and dates cannot be stamped on the pictures in the following cases.
  - Motion pictures
  - Pictures with audio
  - Pictures recorded without setting the clock and title
  - Pictures that were previously stamped with [TEXT STAMP]
  - Pictures taken with [RAW], [RAW] or [RAW]
  - Pictures recorded with other equipment



## [VIDEO DIVIDE]

Recorded motion picture can be divided in two. It is recommended for when you want to divide a part you need with a part you do not need.

**Motion picture before the dividing will be deleted.**

**1** Select [VIDEO DIVIDE] on the [PLAYBACK] Mode menu. (P32)

**2** Press ◀/▶ to select the motion picture to divide, and then press [MENU/SET].

- Motion picture is played back.



**3** Press ▲ at the location to divide.


- Motion picture is paused.
- Motion picture is played back from the same location when ▲ is pressed again.



**4** Press ▼ to execute divide.

**5** Press ◀ to select [YES] and then press [MENU/SET].

- Motion picture may be lost if the card or battery is removed while processing the dividing.

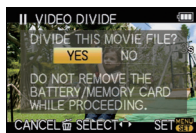

**6** Press [🗑️] to return to the menu screen.

- Press [MENU/SET] to close the menu.

### Note


- The [PRINT SET] setting is canceled when the motion picture set in [PRINT SET] is divided.
- Motion pictures cannot be divided at a location close to the start or end of the motion picture.
- [VIDEO DIVIDE] may not be performed on motion pictures recorded with other equipment.
- With [MOTION JPEG] motion pictures, the order of pictures will change if divided.
- It is recommended to display these motion pictures by using Calendar Playback (P59) or [MOTION JPEG PLAY] in the [PLAYBACK MODE] (P148).
- With [AVCHD Lite] motion pictures, the order of pictures will not change.
- Motion pictures cannot be divided in the following cases.
  - Motion pictures set as [FAVORITE]
  - Protected motion pictures
  - Motion pictures with a short recording time

## [RESIZE] Reducing the picture size (number of pixels)

To allow easy posting to web pages, attachment to e-mail etc., picture size (number of pixels) is reduced.

**1** Select [RESIZE] on the [PLAYBACK] Mode menu. (P32)

**2** Press  $\blacktriangle/\blacktriangledown$  to select [SINGLE] or [MULTI] and then press [MENU/SET].

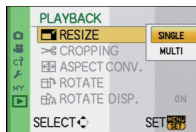

**3** Select the picture and size.  
[SINGLE] setting

**1** Press  $\blacktriangleleft/\blacktriangleright$  to select the picture, and then press [MENU/SET].

**2** Press  $\blacktriangleleft/\blacktriangleright$  to select the size\*, and then press [MENU/SET].

\* Only the sizes to which the pictures can be resized is displayed.

[MULTI] setting

**1** Press  $\blacktriangle/\blacktriangledown$  to select the size, and then press [MENU/SET].



**2** Press  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$  to select the picture, and then press [DISPLAY].

- Repeat this step for each picture, and press [MENU/SET] to set.

[SINGLE]



[MULTI]

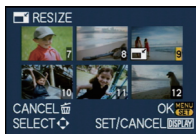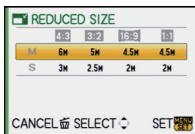

**4** Press  $\blacktriangle$  to select [YES] and then press [MENU/SET].

**5** Press  $\text{trash}$  to return to the menu screen.\*

\*The menu screen is automatically restored when [MULTI] is selected.

- Press [MENU/SET] to close the menu.



### Note

- You can set up to 50 pictures at one time in [MULTI].
- The picture quality of the resized picture will deteriorate.
- It may not be possible to resize pictures recorded with other equipment.
- Motion pictures, pictures with audio, pictures stamped with [TEXT STAMP] and pictures taken with [RAW], [RAW], or [RAW] cannot be resized.

## ✂ [CROPPING]

You can enlarge and then clip the important part of the recorded picture.

**1** Select [CROPPING] on the [PLAYBACK] Mode menu. (P32)

**2** Press ◀▶ to select the picture, and then press [MENU/SET].



**3** Use the rear dial and press ▲/▼/◀▶ to select the parts to be cropped.




Rear dial (right):  
Enlargement  
Rear dial (left): Reduction  
▲/▼/◀▶: Move



Reduction



Enlargement

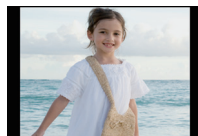

Move the position

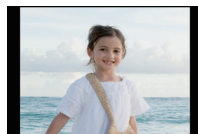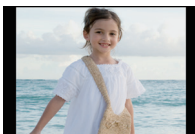

**4** Press [MENU/SET].

**5** Press ▲ to select [YES] and then press [MENU/SET].

**6** Press [🗑] to return to the menu screen.

• Press [MENU/SET] to close the menu.



### Note

- Depending on the cut size, the picture size of the cropped picture may become smaller than that of the original picture.
- The picture quality of the cropped picture will deteriorate.
- It may not be possible to crop pictures recorded with other equipment.
- Motion pictures, pictures with audio, pictures stamped with [TEXT STAMP] and pictures taken with [RAW], [RAW+], or [RAW+] cannot be cropped.
- Information regarding the Face Recognition in the original picture will not be copied to images having undergone [CROPPING].

## ⇄ [ASPECT CONV.]

You can convert pictures taken with a [16:9] aspect ratio to a [3:2], a [4:3] or a [1:1] aspect ratio.

**1** Select [ASPECT CONV.] on the [PLAYBACK] Mode menu. (P32)

**2** Press ▲/▼ to select [3:2], [4:3] or [1:1] and then press [MENU/SET].




**3** Press ◀/▶ to select a picture taken with [16:9] aspect ratio, and then press [MENU/SET].




**4** Press ◀/▶ to determine the horizontal position, and press [MENU/SET] to set.

- Use ▲/▼ to set the frame position for pictures rotated vertically.

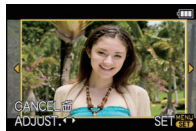

**5** Press ▲ to select [YES] and then press [MENU/SET].

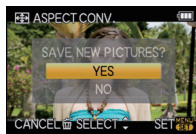

**6** Press [EXIT] to return to the menu screen.

- Press [MENU/SET] to close the menu.

### Note

- After converting the aspect ratio, the picture size may become larger than that of the original picture.
- You may not be able to convert pictures taken on other equipment.
- The [ASPECT CONV.] cannot be performed on the motion pictures, pictures with audio, pictures stamped with [TEXT STAMP] and pictures taken with [RAW], [RAW] or [RAW].
- Information regarding the Face Recognition in the original picture will not be copied to images having undergone [ASPECT CONV.].

## [ROTATE]/ [ROTATE DISP.]

This mode allows you to automatically display pictures vertically if they were recorded holding the camera vertically or rotate pictures manually in 90° steps.

### Rotate (The picture is rotated manually)

- 1 Select [ROTATE] on the [PLAYBACK] Mode menu. (P32)**
  - The [ROTATE] function is disabled when [ROTATE DISP.] is set to [OFF].

- 2 Press ◀/▶ to select the picture and then press [MENU/SET].**


- Motion pictures and protected pictures cannot be rotated.



- 3 Press ▲/▼ to select the direction to rotate the picture and then press [MENU/SET].**

➡: The picture rotates clockwise in steps of 90°.

⬅: The picture rotates counter-clockwise in steps of 90°.

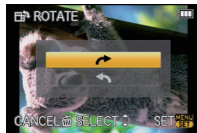

- 4 Press [EXIT] to return to the menu screen.**

- Press [MENU/SET] to close the menu.

### Rotate display (The picture is automatically rotated and displayed)

- 1 Select [ROTATE DISP.] on the [PLAYBACK] Mode menu. (P32)**

- 2 Press ▼ to select [ON] and then press [MENU/SET].**

- The pictures are displayed without being rotated when you select [OFF].
- Refer to P57 for information about how to play back pictures.



- 3 Press [MENU/SET] to close the menu.**

#### Note

- [ROTATE DISP.] can only be used with the lens (P18) compatible with the Direction Detection Function (P41).
- When you play back pictures on a PC, they cannot be displayed in the rotated direction unless the OS or software is compatible with Exif. Exif is a file format for still pictures which allows recording information etc. to be added. It was established by "JEITA (Japan Electronics and Information Technology Industries Association)".
- It may not be possible to rotate pictures that have been recorded with other equipment.
- The display is not rotated during Multi Playback (P58).
- Pictures recorded with the camera upside down will not be displayed rotated.

## ★ [FAVORITE]

You can do the following if a mark has been added to pictures and they have been set as favorites.

- Play back the pictures set as favorites only as a slide show.
- Play back only the pictures set as favorites. ([FAVORITE PLAY])
- Delete all the pictures not set as favorites. ([ALL DELETE EXCEPT ★])

**1** Select [FAVORITE] on the [PLAYBACK] Mode menu. (P32)

**2** Press ▼ to select [ON] and then press [MENU/SET].

- You cannot set pictures as favorites if [FAVORITE] is set to [OFF]. Also [★] will not appear when [FAVORITE] is set to [OFF] even if it was previously set to [ON].



**3** Press [MENU/SET] to close the menu.

**4** Press ◀/▶ to select the picture and then press ▼ to set it during playback.

- Repeat the above procedure.
- If ▼ is pressed again, the favorite setting is canceled.



#### ■ Canceling all the [FAVORITE] settings

**1** Select [CANCEL] on the screen shown in step 2 and then press [MENU/SET].

**2** Press ▲ to select [YES] and then press [MENU/SET].

**3** Press [MENU/SET] to close the menu.

- You cannot select [CANCEL] if not even one picture has been set as a favorite.
- [CANCEL] cannot be selected when in [PLAYBACK MODE].

#### Note

- You can set up to 999 pictures as favorites.
- When printing pictures at a photo printing store, [ALL DELETE EXCEPT ★] (P61) is useful so only the pictures you want to be printed remain on the card.
- You may not be able to set pictures taken with other equipment as favorites.
- The pictures that were taken with the [QUALITY] set to [RAW] cannot be set to [FAVORITE].

## [PRINT SET]

DPOF "Digital Print Order Format" is a system that allows the user to select which pictures to print, how many copies of each picture to print and whether or not to print the recording date on the pictures when using a DPOF compatible photo printer or photo printing store.

For details, ask at your photo printing store.

For more information visit:  
[http://panasonic.jp/dc/dpof\\_110/white\\_e.htm](http://panasonic.jp/dc/dpof_110/white_e.htm)

**1** Select [PRINT SET] on the [PLAYBACK] Mode menu. (P32)



**2** Press  $\blacktriangle/\blacktriangledown$  to select [SINGLE] or [MULTI] and then press [MENU/SET].



[SINGLE]

[MULTI]

**3** Select the picture, and then press [MENU/SET].

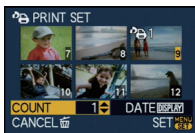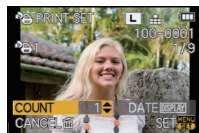

Press  $\blacktriangle/\blacktriangleright$  to select the picture.

Press  $\blacktriangle/\blacktriangledown/\blacktriangle/\blacktriangleright$  to select the pictures.

**4** Press  $\blacktriangle/\blacktriangledown$  to set the number of prints, and then press [MENU/SET] to set.

- When [MULTI] has been selected, repeat steps 3 and 4 for each picture. (It is not possible to use the same setting for a multiple number of pictures.)

**5** Press  $\left[\text{trash icon}\right]$  to return to the menu screen.

- Press [MENU/SET] to close the menu.

### ■ Canceling all the [PRINT SET] settings

- 1 Select [CANCEL] on the screen shown in step 2 and then press [MENU/SET].
- 2 Press  $\blacktriangle$  to select [YES] and then press [MENU/SET].
- 3 Press [MENU/SET] to close the menu.

- You cannot select [CANCEL] if not even one picture has been set for printing.

### ■ To print the date

After setting the number of prints, set/cancel printing with the recording date by pressing [DISPLAY].


- When you go to a photo printing store for digital printing, be sure to order the printing of the date additionally if required.
- Depending on the photo printing store or the printer, the date may not be printed even if you set to print the date. For further information, ask at your photo printing store or refer to the operating instructions for the printer.
- The date cannot be printed on pictures stamped with text.

**Note**

- The number of prints can be set from 0 to 999.
- With a printer supporting PictBridge, the date print settings of the printer may take precedence so check if this is the case.
- It may not be possible to use the print settings with other equipment. In this case, cancel all the settings, and reset the settings.
- If the file is not based on the DCF standard, the print setting cannot be set.
- [PRINT SET] cannot be set for motion pictures recorded in [AVCHD Lite] and pictures that were taken with the [QUALITY] set to [RAW].


**PROTECT**

You can set protection for pictures you do not want to be deleted by mistake.

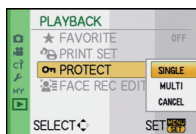**1 Select [PROTECT] on the [PLAYBACK] Mode menu. (P32)****2 Press ▲/▼ to select [SINGLE] or [MULTI] and then press [MENU/SET].**

[SINGLE]

[MULTI]

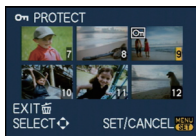

Press ◀▶ to select the picture. Press ▲/▼/◀▶ to select the pictures.

**3 Select the picture, and then press [MENU/SET].**

When [MULTI] has been selected

- Repeat these steps for each picture.
- The settings are canceled when [MENU/SET] is pressed again.

**4 Press [EXIT] to return to the menu screen.**

- Press [MENU/SET] to close the menu.

**Canceling all the [PROTECT] settings****1 Select [CANCEL] on the screen shown in step 2 and then press [MENU/SET].****2 Press ▲ to select [YES] and then press [MENU/SET].****3 Press [MENU/SET] to close the menu.**

- If you press [MENU/SET] while canceling protection, the canceling will stop halfway.

**Note**

- The protect setting may not be effective on other equipment.
- Even if you protect pictures on a card, they will be deleted if the card is formatted.
- Even if you do not protect pictures on a card, they cannot be deleted when the card's Write-Protect switch is set to [LOCK].




## [FACE REC EDIT]

You can clear and replace all information relating to Face Recognition in selected images.

**1** Select **[FACE REC EDIT]** on the **[PLAYBACK]** Mode menu. **(P32)**

**2** Press **▲/▼** to select **[REPLACE]** or **[DELETE]** and then press **[MENU/SET]**.

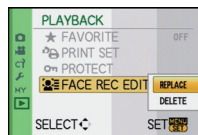

**3** Press **◀/▶** to select the picture and then press **[MENU/SET]**.

- You cannot select pictures for which Face Recognition information has not been registered.




**4** Press **◀/▶** to select the person and then press **[MENU/SET]**.

- **[DELETE]** → step 6.
- You cannot select a person who has not been registered.



**5** Press **▲/▼/◀/▶** to select the person to replace and then press **[MENU/SET]**.

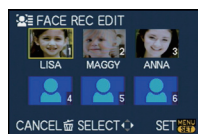

**6** Press **▲** to select **[YES]** and then press **[MENU/SET]**.



**7** Press **[🗑️]** to return to the menu screen.

- Press **[MENU/SET]** to close the menu.


### Note

- Cleared information regarding the **[FACE RECOG.]** cannot be restored.
- When all Face Recognition information in a picture has been canceled, the picture will not be categorised using Face Recognition in **[CATEGORY PLAY]**.
- You cannot edit the Face Recognition information of protected pictures.

## Playing Back Pictures on a TV Screen

### Playing back pictures using the AV cable (supplied)

Preparations: Set the [TV ASPECT]. (P37)  
Turn this unit and the TV off.

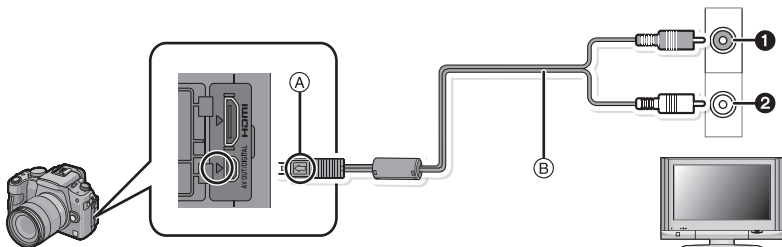

① Yellow: to the video input socket

② White: to the audio input socket

Ⓐ Align the marks, and insert.

Ⓑ AV cable (supplied)

• Check the directions of the connectors, and plug them straight in or unplug them straight out. (Otherwise the connectors may be bent out of shape which may cause malfunction.)

**1** Connect the AV cable Ⓑ (supplied) to the video input and the audio input sockets on the TV.

**2** Connect the AV cable to the [AV OUT] socket on the camera.

**3** Turn the TV on and select external input.

**4** Turn the camera on and then press [▶].

#### Note

- Depending on the [ASPECT RATIO], black bands may be displayed on the top and bottom or the left and right of the pictures.
- Do not use any other AV cables except the supplied one.
- Read the operating instructions for the TV.
- When you play back a picture vertically, it may be blurry.
- Audio will be played back in monaural.
- You cannot operate if you touch the Touch icon displayed on the TV screen.
- The viewfinder cannot be displayed when connected with a AV cable.

## Playing back pictures on a TV with an SD Memory Card slot

The recorded still pictures can be played back on a TV with an SD Memory Card slot.

### Note

- Depending on the TV model, pictures may not be displayed on the full screen.
- Motion pictures recorded with [AVCHD Lite] can be played back on Panasonic TVs (VIERA) with the AVCHD logo mark. In all other cases, connect the camera to the TV using the AV cable (supplied) and play back the motion picture.
- SDHC Memory Cards cannot be played back unless it is a TV compatible with SDHC Memory Cards or SDXC Memory Cards.
- SDXC Memory Cards cannot be played back unless it is a TV compatible with SDXC Memory Cards.

## Playing back on the TV with HDMI socket


You can enjoy high quality pictures and motion pictures on the TV by connecting the camera with the HDMI compatible high-definition TV using HDMI mini cable (optional).

### What is HDMI?

HDMI is the interface for digital devices. When this unit is connected to a HDMI compatible device, the image and audio can be output with a digital signal. If you connect this unit to a HDMI compatible high-definition TV and then play back the recorded high-definition images, you can enjoy them in high resolution with high quality sound.

If you connect this unit to a Panasonic TV compatible with VIERA Link, linked operations (VIERA Link) are possible. (P165)

Preparations: Check the [HDMI MODE]. (P37)  
Turn this unit and the TV off.

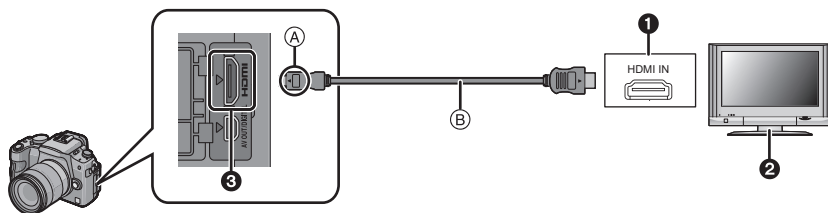

- 1 HDMI socket
  - 2 TV with HDMI socket
  - 3 HDMI mini (C type)
- (A) Align the marks, and insert.  
(B) HDMI mini cable (optional)
- Check the direction of the terminals and plug in/out straight holding onto the plug. (It may result in malfunction if it is plugged in obliquely or in the wrong direction.)

**1** Connect the HDMI mini cable (B) (optional) to the HDMI input socket on the TV.

**2** Connect the HDMI mini cable to the [HDMI] socket on the camera.

**3** Turn the TV on and switch to HDMI input.

**4** Turn the camera on and then press [▶].

- When [VIERA Link] (P38) is set to [ON] and the camera is connected to a TV supporting VIERA Link, input of the TV will be switched automatically and playback screen will be displayed (P165).

 **Note**

- Depending on the [ASPECT RATIO], bands may be displayed on the top and bottom or the left and right of the pictures.
- Do not use any other cables except a genuine Panasonic HDMI mini cable (RP-CDHM15, RP-CDHM30; optional).  
Part numbers: RP-CDHM15 (1.5 m) (5 feet), RP-CDHM30 (3.0 m) (10 feet)
- Output from the HDMI mini cable has priority when both AV cable and HDMI mini cable are connected.
- HDMI output is not possible even if you connect the HDMI mini cable while the unit is connected to the PC or the printer.
- HDMI connection is disabled and the connection with the USB connection cable will take priority when you connect the USB connection cable while it is outputting via the HDMI mini cable.
- During HDMI output, no picture is displayed on the LCD monitor or viewfinder.
- When pictures are displayed, they may not be displayed properly depending on the type of TV.
- Read the operating instructions for the TV.
- Audio will be played back in monaural.
- Audio recorded with the stereo microphone (DMW-MS1; optional) in [STEREO] will be played back as stereo. Refer to P180 for the stereo microphone.

## Playback using VIERA Link (HDMI) (HDAVI Control™)


### What is the VIERA Link?

- VIERA Link™ is a new name for EZ Sync™.
- This function allows you to use your remote control for the Panasonic TV for easy operations when this unit has been connected to a VIERA Link compatible device using a HDMI mini cable (optional) for automatic linked operations. (Not all operations are possible.)
- VIERA Link is a unique Panasonic function built on a HDMI control function using the standard HDMI CEC (Consumer Electronics Control) specification. Linked operations with HDMI CEC compatible devices made by other companies are not guaranteed. When using devices made by other companies that are compatible with VIERA Link, refer to the operating instructions for the respective devices.
- This unit is compatible with VIERA Link Ver.5. VIERA Link Ver.5 is the newest Panasonic version and is also compatible with existing Panasonic VIERA Link devices. (As of December 2009)

Preparations: Set the [VIERA Link] to [ON]. (P38)

- 1 Connect this unit to a Panasonic TV compatible with VIERA Link with a HDMI mini cable (optional) (P163).**
- 2 Turn the camera on and then press [▶].**
- 3 Operate with the remote control for the TV.**

Panasonic TV compatible with VIERA Link

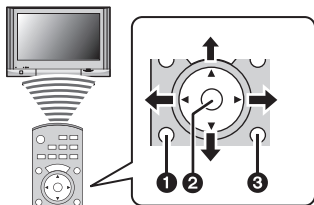




- 1** [SUB MENU]
- 2** [OK]
- 3** [RETURN]

\* The shape of the remote control varies depending on the region. Operate following the TV guide displayed on screen.

## ■ Usable functions

Operate with the remote control for the TV.

<p>Multi Playback</p> 	<p><b>This is displayed initially when using the VIERA Link.</b></p> <p>▲/▼/◀/▶: Select the image.          [OK]: Go to one screen display.          Red button: Switch the types of data to play back.          [SUB MENU]: Display the Playback Mode selection screen.</p> <ul style="list-style-type: none"> <li>• The type of data for playback changes in the order of [ALL] → [📷] → [👤] → [📺] → [ALL].</li> <li>• Either the [NORMAL PLAY], [SLIDE SHOW], [CATEGORY PLAY], [FAVORITE PLAY] or the [CALENDAR] can be selected in the Playback Mode selection screen when [ALL] is selected.</li> </ul>
<p>One screen display</p>  <p>(A)</p>	<p><b>Select the image while in Multi Playback, and then press [OK].</b></p> <p>◀/▶: Go to previous/next image.          ▲: Display the recording information.          ▼: Return to Multi Playback.          [OK]: Playback the motion picture (when motion picture is selected).          Playback the audio (when picture with audio is selected).          Red button: Start the Slide Show.          [SUB MENU]: Go to Slide Show setting screen.</p> <ul style="list-style-type: none"> <li>• During Motion Picture Playback, use ◀/▶ for back/forward and ▼ to stop playback.</li> </ul>
<p>Slide show</p>  <p>(A)</p>	<p><b>Press Red button during one screen display.</b></p> <p>◀/▶: Go to previous/next image (when Slide Show is paused/when motion picture is played back).          ▼: Finish the Slide Show and return to one screen display.          [OK]: Pause.          [SUB MENU]: Go to Slide Show setting screen.</p> <ul style="list-style-type: none"> <li>• To playback the audio of the motion pictures, set the [SOUND] in the Slide Show setting screen to [AUTO] or [AUDIO].</li> </ul>

(A) Operation icon

### Note

- Operation icons are hidden by pressing [RETURN], or if no operation is performed for a while when the operation icons are displayed. Operation icons are displayed when one of the following buttons is pressed while the operation icons are not displayed.  
 – ▲/▼/◀/▶, [OK], [SUB MENU], [RETURN], Red button, Green button, Yellow button
- It is recommended to connect this unit to an HDMI terminal other than the HDMI1 if there are 2 or more HDMI input terminals on the TV.
- When the [VIERA Link] (P38) of this unit is set to [ON], operation using the button on this unit will be limited.
- VIERA Link must be activated on the connected TV. (Read the operating instructions of the TV for how to set etc.)
- If you are not using VIERA Link, set [VIERA Link] (P38) to [OFF].

## ■ Other linked operations

### Turning the power off:

If you use the remote control for the TV to turn off the power, the power on this unit also turns off. (When connecting the unit to a PC with a USB cable, the power will not turn off.)

### Automatic input switching:

- If you connect with a HDMI mini cable and then turn on the power on this unit, and then press [▶], the input channel on the TV automatically switches to this unit's screen. If the TV's power is in standby status, it will turn on automatically (if [Set] has been selected for the TV's [Power on link] setting).
- Depending on the HDMI terminal on the TV, the input channel may not switch automatically. In this case, use the remote control for the TV to switch the input channel. (For details on how to switch input, please read the operating instructions for the TV.)
- If VIERA Link does not work properly, refer to page 198.



### Note

- If you are unsure whether or not the TV you are using are compatible with VIERA Link, read the operating instructions for the TV.
- Available linked operations between this unit and a Panasonic TV is different depending on the types of Panasonic TVs even if they are compatible with VIERA Link. Refer to the operating instructions of the TV for the operations that support on the TV.
- Operation is not possible with a cable that is not based on the HDMI standard. Do not use any other cables except a genuine Panasonic HDMI mini cable (RP-CDHM15, RP-CDHM30; optional).  
Part numbers: RP-CDHM15 (1.5 m) (5 feet), RP-CDHM30 (3.0 m) (10 feet)
- VIERA Link will not work even if you connect the HDMI mini cable while the unit is connected to the PC or the printer.
- [HDMI MODE] (P37) for this unit is determined automatically when the VIERA Link is operating.
- The resolution may switch automatically when an [AVCHD Lite] motion picture that was recorded with another camera is played back on this unit. The screen may turn black for a while when that occurs, but it is not a malfunction.

## Saving the Recorded Still Pictures and Motion Pictures


Methods to export still pictures and motion pictures to other devices will vary depending on the file format. (JPEG, RAW, AVCHD Lite, or Motion JPEG). Here are a few suggestions.

### Copy the playback image using an AV cable

File formats that can be used: [AVCHD Lite], [Motion JPEG]

Copy images played back with this unit to DVD disc, hard disk, or video using a DVD recorder, or video.

This can be played back with equipment that is not compatible with high-definition (AVCHD), so it is convenient for distributing copies. Image will be standard quality instead of high-definition at this time.

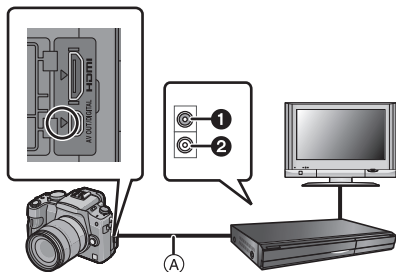

- ① Yellow: to the video input socket
- ② White: to the audio input socket
- Ⓐ AV cable (supplied)

- 1** Connect this unit with the recording equipment with an AV cable (supplied).
- 2** Start the playback of this unit.
- 3** Start the recording on the recording equipment.

- When ending the recording (copying), stop the playback on this unit after stopping the recording in recording equipment.

#### Note

- When you play back motion pictures on 4:3 aspect ratio TV, you must set [TV ASPECT] (P37) on this unit to [4:3] before starting a copy. The image will be vertically long if you play back motion pictures copied with [16:9] setting on a [4:3] aspect TV.
- Do not use any other AV cables except the supplied one.
- It is recommended to turn off the display of the screen by pressing the [DISPLAY] on the camera while copying. (P58)
- See the instruction manual for the recording equipment about the details of copying and playing back.



## Copying to a PC using “PHOTOfunSTUDIO 5.0 HD Edition”

File formats that can be used: [JPEG], [RAW]/[AVCHD Lite], [Motion JPEG]  
It is possible to acquire still pictures and motion pictures recorded in [AVCHD Lite] or [MOTION JPEG] formats, or create conventional standard quality DVD video from the motion picture that was recorded as [AVCHD Lite], using “PHOTOfunSTUDIO 5.0 HD Edition” in the CD-ROM (supplied). (P170)

Also, you can write images to DVD, combine multiple pictures to create a single panorama picture, or create a slide show by adding audio and/or music. These pictures can then be stored onto a DVD.



### 1 Install “PHOTOfunSTUDIO 5.0 HD Edition” to the PC.

- Read the separate operating instructions for the supplied software for more information about the software in the CD-ROM (supplied) and how to install it.

### 2 Connect camera to PC.

- For details on connecting, refer to “Connecting to a PC” (P170).

### 3 Copy the images to a PC using “PHOTOfunSTUDIO 5.0 HD Edition”.

- For details, refer to the operating instructions of “PHOTOfunSTUDIO 5.0 HD Edition” (PDF).

#### Note

- You will not be able to playback the acquired [AVCHD Lite] motion pictures when the files or folders related to the motion pictures are deleted, modified, or moved using Windows Explorer or similar, so make sure to acquire the [AVCHD Lite] motion pictures using “PHOTOfunSTUDIO 5.0 HD Edition”.

## Connecting to a PC

You can acquire recorded pictures to a PC by connecting the camera and the PC.

- Some PCs can read directly from the card removed from the camera. For details, refer to the operating instructions of your PC.
- **If the computer being used does not support SDXC Memory Cards, a message prompting you to format may appear. (Doing so will cause recorded images to be erased so do not choose to format.)**

**If the card is not recognized, please refer to the below support site.**

**<http://panasonic.net/avc/sdcard/information/SDXC.html>**

- You can easily print out or mail the pictures you have imported. Use of the "PHOTOfunSTUDIO 5.0 HD Edition" bundled software on the CD-ROM (supplied) is a convenient way of doing this.
- Read the separate operating instructions for the supplied software for more information about the software in the CD-ROM (supplied) and how to install it.

### ■ PC that can be used

	Windows			Macintosh
	98/98SE	Me/2000	XP/Vista/7	OS 9/OS X
Can the PHOTOfunSTUDIO be used?	—		○*1	—
Can the [AVCHD Lite] motion picture be acquired to the PC?	—		○*2	—
Can the still pictures and [MOTION JPEG] motion pictures in the digital camera be acquired to the PC using a USB connection cable?	—		○	○ (OS 9.2.2/OS X [10.1~10.6])


- PC with Windows 98/98SE or older, or Mac OS 8.x or older cannot be connected via USB, but it can acquire the pictures if an SD memory card reader/writer can be used.

\*1 It is necessary for Internet Explorer 6.0 or newer to be installed. PC with higher processing performance is required depending on the function to be used. It may not play back correctly or operate correctly depending on the environment of the PC used.

\*2 **Always acquire the [AVCHD Lite] motion pictures using the "PHOTOfunSTUDIO 5.0 HD Edition".**

## Acquiring of still pictures and [MOTION JPEG] motion pictures (other than [AVCHD Lite] motion pictures)

Preparations: Turn the LCD monitor so the LCD will show out.  
Turn on the camera and the PC.

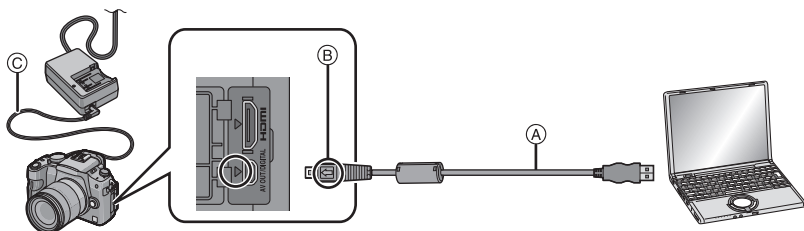


- Ⓐ USB connection cable (supplied)
    - Check the directions of the connectors, and plug them straight in or unplug them straight out. (Otherwise the connectors may be bent out of shape which may cause malfunction.)
  - Ⓑ Align the marks, and insert.
  - Ⓒ DC cable (DMW-DCC3; optional)
    - Use a battery with sufficient battery power or the AC adaptor (P181). If the remaining battery power becomes low while the camera and the PC are communicating, the status indicator blinks and the alarm beeps.
- Refer to “Disconnecting the USB connection cable safely” (P172) before disconnecting the USB connection cable. Otherwise, data may be destroyed.

### 1 Connect the camera to a PC via the USB connection cable Ⓐ (supplied).

- Do not use any other USB connection cables except the supplied one. Use of cables other than the supplied USB connection cable may cause malfunction.

### 2 Press ▲/▼ to select [PC], and then press [MENU/SET].

- If [USB MODE] (P37) is set to [PC] in the [SETUP] menu in advance, the camera will be automatically connected to the PC without displaying the [USB MODE] selection screen. Since there is no need to set this each time you connect to the PC, it is convenient.
- When the camera has been connected to the PC with [USB MODE] set to [PictBridge(PTP)], a message may appear on the PC's screen. Select [Cancel] to close the screen, and disconnect the camera from the PC. Then set [USB MODE] to [PC] again.

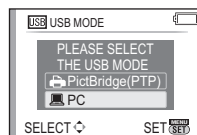

### 3 Double-click on [Removable Disk] in [My Computer].

- When using a Macintosh, the drive is displayed on the desktop. (“LUMIX”, “NO\_NAME” or “Untitled” is displayed.)

### 4 Double-click [DCIM] folder.

## 5 Using a drag-and-drop operation, move the pictures you want to acquire or the folder storing those pictures to any different folder on the PC.

### ■ Disconnecting the USB connection cable safely


- Proceed with the hardware removal using "Safely Remove Hardware" on the task tray of the PC. If the icon is not displayed, check that [ACCESS] is not displayed on the LCD monitor of the digital camera before removing the hardware.

### Note

- Turn the camera off before connecting or disconnecting the AC adaptor (P181).
- Before inserting or removing a card, turn the camera off and disconnect the USB connection cable. Otherwise, data may be destroyed.

### ■ Viewing the contents of the card using the PC (folder composition)

Folders and images processed in the PC cannot be played back on the camera. It is recommended to use the "PHOTOfunSTUDIO 5.0 HD Edition" bundled software on the CD-ROM (supplied) when you write the image from PC to a card.

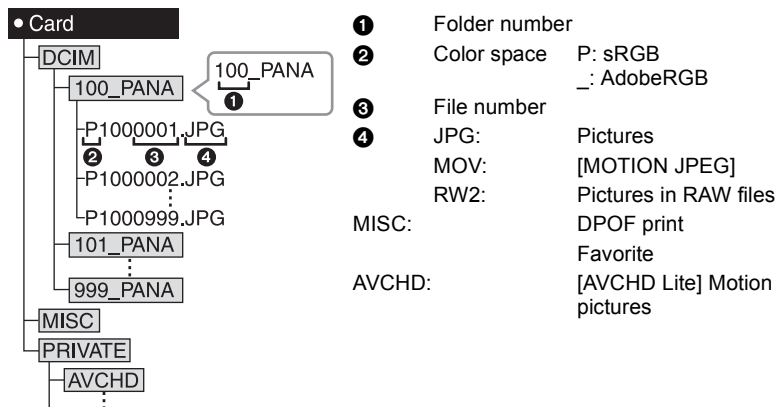

A new folder is created when pictures are taken in the following situations.

- After [NO.RESET] (P39) in the [SETUP] menu has been executed
- When a card containing a folder with the same folder number has been inserted (Such as when pictures were taken using another make of camera)
- When there is a picture with file number 999 inside the folder

### ■ Connection in the PTP Mode (Windows<sup>®</sup> XP, Windows Vista<sup>®</sup>, Windows<sup>®</sup> 7 and Mac OS X only)

Set [USB MODE] to [PictBridge(PTP)].

Data can now be read only from the card into the PC.

- When there are 1000 or more pictures on a card, the pictures may not be imported in the PTP mode.
- [AVCHD Lite] motion picture cannot be played back in PTP mode.


## Printing the Pictures

If you connect the camera to a printer supporting PictBridge, you can select the pictures to be printed out and instruct that printing be started on the camera's LCD monitor.

- Some printers can print directly from the card removed from the camera. For details, refer to the operating instructions of your printer.

Preparations: Turn on the camera and the printer.

Perform the print quality and other settings at the printer before printing the pictures.

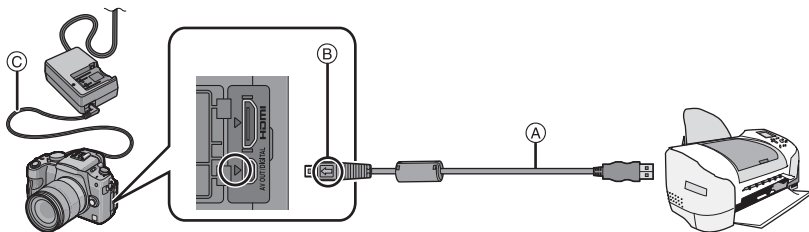

(A) USB connection cable (supplied)

- Check the directions of the connectors, and plug them straight in or unplug them straight out. (Otherwise the connectors may be bent out of shape which may cause malfunction.)

(B) Align the marks, and insert.


(C) DC cable (DMW-DCC3; optional)

- Use a battery with sufficient battery power or the AC adaptor (P181). If the remaining battery power becomes low while the camera and the printer are connected, the status indicator blinks and the alarm beeps. If this happens during printing, stop printing at once. If not printing, disconnect the USB connection cable.

### 1 Connect the camera to a printer via the USB connection cable (A) (supplied).

- When the camera is connected to the printer, the cable disconnect prohibit icon [ ] appears. Do not disconnect the USB cable while [ ] is displayed.

### 2 Press ▲/▼ to select [PictBridge(PTP)], and then press [MENU/SET].

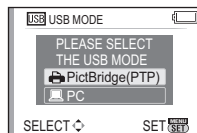


#### Note

- Do not use any other USB connection cables except the supplied one. Use of cables other than the supplied USB connection cable may cause malfunction.
- Turn the camera off before connecting or disconnecting the AC adaptor (P181).
- Before inserting or removing a card, turn the camera off, and disconnect the USB connection cable.
- Motion pictures recorded in [AVCHD Lite] cannot be printed out.

## Selecting a single picture and printing it


**1** Press ◀/▶ to select the picture and then press [MENU/SET].

- The message disappears in about 2 seconds.

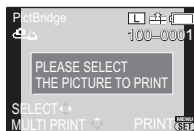

**2** Press ▲ to select [PRINT START] and then press [MENU/SET].

- Refer to P175 for the items which can be set before starting to print the pictures.
- Press [MENU/SET] to cancel printing halfway.
- Disconnect the USB connection cable after printing.

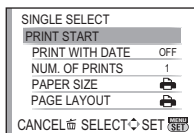


## Selecting multiple pictures and printing them

**1** Press ▲.

**2** Press ▲/▼ to select an item and then press [MENU/SET].

- If the print check screen has appeared, select [YES], and print the pictures.

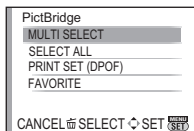


Item	Description of settings
[MULTI SELECT]	Multiple pictures are printed at one time. • Press ▲/▼/◀/▶ to select the pictures, and then When [DISPLAY] is pressed, [ ] appears on the pictures to be printed. (When [DISPLAY] is pressed again, the setting is canceled.) • After the pictures have been selected, press [MENU/SET].
[SELECT ALL]	Prints all the stored pictures.
[PRINT SET (DPOF)]	Prints the pictures set in [PRINT SET] only. (P159)
[FAVORITE]*	Prints the pictures set as favorites only. (P158)

\* Only when [FAVORITE] is at [ON] and when there are pictures set as favorites. (P158)


**3** Press ▲ to select [PRINT START] and then press [MENU/SET].


- Refer to P175 for the items which can be set before starting to print the pictures.
- Press [MENU/SET] to cancel printing.
- Disconnect the USB connection cable after printing.

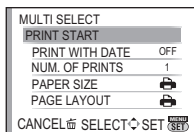

## Print Settings

 
Select and set the items both on the screen in step 2 of the “Selecting a single picture and printing it” and in step 3 of the “Selecting multiple pictures and printing them” procedures.

- When you want to print pictures on a paper size or a layout which is not supported by the camera, set [PAPER SIZE] or [PAGE LAYOUT] to  and then set the paper size or the layout on the printer. (For details, refer to the operating instructions of the printer.)
- When [PRINT SET (DPOF)] has been selected, the [PRINT WITH DATE] and [NUM. OF PRINTS] items are not displayed.

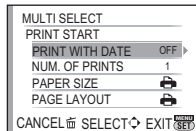

### [PRINT WITH DATE]

Item	Description of settings
[OFF]	Date is not printed.
[ON]	Date is printed.

- If the printer does not support date printing, the date cannot be printed on the picture.
- Since the printer's settings may take precedence over the print with date setting, check the printer's print with date setting as well.
- When printing images with a text stamp, please remember to set print with date to [OFF] or the date will print on top.
- In some printers, the picture date for pictures taken with the aspect ratio set to  will be printed vertically.

#### Note


**When asking the photo shop to print the pictures**

- By stamping the date using [TEXT STAMP] (P150) or setting date printing at the time of the [PRINT SET] (P159) setting before going to a photo shop, the dates can be printed at the photo shop.

### [NUM. OF PRINTS]






- You can set the number of prints up to 999.
- You can also use the rear dial to set.

## [PAPER SIZE]

Item	Description of settings
	Settings on the printer are prioritized.
[L/3.5"×5"]	89 mm×127 mm
[2L/5"×7"]	127 mm×178 mm
[POSTCARD]	100 mm×148 mm
[16:9]	101.6 mm×180.6 mm
[A4]	210 mm×297 mm
[A3]	297 mm×420 mm
[10×15cm]	100 mm×150 mm
[4"×6"]	101.6 mm×152.4 mm
[8"×10"]	203.2 mm×254 mm
[LETTER]	216 mm×279.4 mm
[CARD SIZE]	54 mm×85.6 mm

- Paper sizes not supported by the printer will not be displayed.


## [PAGE LAYOUT] (Layouts for printing that can be set with this unit)

Item	Description of settings
	Settings on the printer are prioritized.
	1 picture with no frame on 1 page
	1 picture with a frame on 1 page
	2 pictures on 1 page
	4 pictures on 1 page


- An item cannot be selected if the printer does not support the page layout.

### ■ Layout printing


#### When printing a picture several times on 1 sheet of paper

For example, if you want to print the same picture 4 times on 1 sheet of paper, set [PAGE LAYOUT] to  and then set [NUM. OF PRINTS] to 4 for the picture that you want to print.

#### When printing different pictures on 1 sheet of paper

For example, if you want to print 4 different pictures on 1 sheet of paper, set [PAGE LAYOUT] to  and then set [NUM. OF PRINTS] to 1 for each of the 4 pictures.

#### Note

- The camera is receiving an error message from the printer when the  indication lights orange during printing. After finishing printing, make sure there are no problems with the printer.
- If the number of prints is high, the pictures may be printed several times. In this case, the remaining number of prints indicated may differ from the number set.
- When the pictures in RAW files are to be printed, the JPEG pictures recorded simultaneously by the camera will be printed. If JPEG pictures do not exist, RAW file pictures cannot be printed.



## Using an External Flash (optional)

After attaching the external flash, the effective range will be increased when compared to the camera's built in flash.

Preparations:

- Turn off the camera and close the built-in flash.

### ■ Using the dedicated flash (DMW-FL220; optional)

#### 1 Attach the dedicated flash to the hot shoe (A) and then turn on the camera and the dedicated flash.

- Be sure to firmly secure to the dedicated flash with the lock ring (B).

#### 2 Select [FLASH] on the [REC] Mode menu. (P32)

#### 3 Press ▲/▼ to select the mode and then press [MENU/SET].



- While the external flash is connected, the following icons are displayed.

⚡: External flash Forced ON

⚡S: External flash Slow Sync.

#### 4 Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

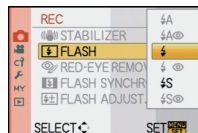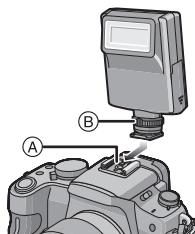

### ■ When using other commercially available external flashes without communication functions with the camera (DMC-G2)

- It is necessary to set the exposure on the external flash. If you want to use the external flash in Auto Mode, use an external flash that allows you to set the aperture value and the ISO sensitivity to match the settings on the camera.
- Set to Aperture-Priority AE Mode or Manual Exposure Mode on the camera and then set the same aperture value and ISO sensitivity on the external flash. (The exposure cannot be compensated adequately due to the change on the aperture value in Shutter-Priority AE Mode and the external flash cannot control the light adequately in Program AE Mode because the aperture value cannot be fixed.)

#### Note

- You can set the aperture value, the shutter speed and the ISO sensitivity on the camera even when attaching the external flash.
- Some commercial external flashes have synchro terminals with high-voltage or reversed polarity. Using such extra flashes may cause a malfunction or the camera may not operate normally.
- If you use commercially available external flashes with communication functions other than the dedicated one, they may not operate normally or they may be damaged. Do not use them.
- Even if the external flash is turned off, the camera may enter the external flash mode when the external flash is attached. When you are not using the external flash, detach it.

- When attaching the external flash, the built-in flash cannot be activated.
- Do not open the built-in flash when an external flash is attached.
- The camera will become unstable when attaching the external flash, it is recommended to use a tripod when taking picture.
- Turn off the camera when removing the external flash.
- Detach the external flash when carrying the camera.
- When attaching the external flash, do not hold only the external flash because it may detach from the camera.
- If you use the external flash when the White Balance is set to [  $\frac{4}{100}$  ] finely adjust the White Balance depending on the picture quality. (P88)
- If you take pictures close to the subject in Wide, the vignetting effect may appear on the bottom of the recorded picture.
- The external flash cannot be used while the stereo microphone (DMW-MS1; optional) is in use.
- Read the operating instructions of the external flash for details.


## Using the Protector/Filter (optional)

The MC protector (optional) is a transparent filter which affects neither the colors nor the amount of light, so it can always be used to protect the camera's lens.

The ND filter (optional) reduces the amount of light to approximately 1/8th (equal to adjusting the aperture value 3 increments) without affecting the color balance.

PL filter (optional) will suppress the reflected light from a metal or non spherical surfaces (flat non-metallic surfaces, water vapour or invisible particles in the air), making it possible to take a picture with enhanced contrast.

### Attach the filter.

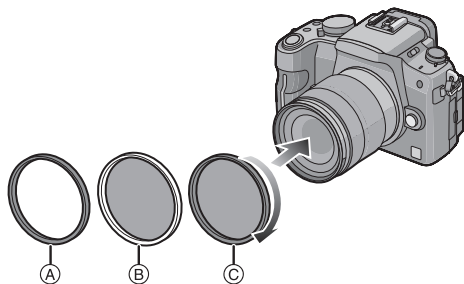

- (A) MC protector
- (B) ND filter
- (C) PL filter


### Note

- Do not attach multiple filters at the same time.
- If the filter is tightened too much, you may not be able to remove it. Do not tighten it too much.
- If the filter is dropped, it may be destroyed. Be careful not to drop it when attaching it to the camera.
- Be careful not to get a fingerprint, dirt, etc., on the filter when it is attached, otherwise the focus may be adjusted to the lens, resulting in the subject being out of focus.
- You can attach the lens cap or the lens hood when the filter is attached.
- Refer to the instructions for each filter for details.
- **MC**=“Multi-coated”  
**ND**=“Neutral Density”
- It is recommended to use the MC protector (DMW-LMC52; optional), the ND filter (DMW-LND52; optional), or the PL filter (DMW-LPL52; optional) with the lens included in DMC-G2K.
- Accessories other than filters, such as conversion lenses, cannot be mounted. It may cause malfunction.

## Using the Remote Shutter (optional)


If you use the remote shutter (DMW-RSL1; optional), you can avoid jitter (camera shake) when using a tripod and you can keep the shutter pressed fully when taking pictures with [B] (Bulb) or Burst Mode. The remote shutter works similar to the shutter button on the camera.

- 1 Firmly connect the remote shutter to the [REMOTE] socket on the camera as far as it will go.**

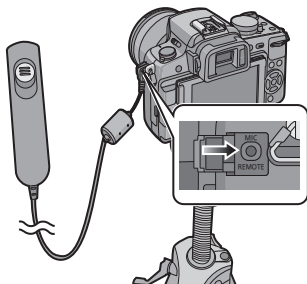


- 2 Take a picture.**

- 1 Press the button lightly to press halfway.
- 2 Press the button fully to take the picture.  
(Press it as far as it will go.)

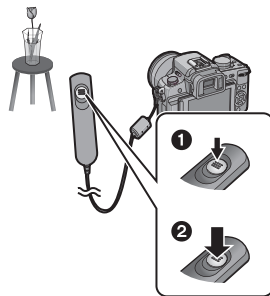

### ■ About [LOCK] on the remote shutter

 - You can keep the shutter button pressed fully. This is effective when taking pictures with Burst Mode (P73) or in [B] (Bulb) (P96).
- While pressing the shutter button fully, slide it to the [LOCK] side.
- Slide it to the other side to cancel [LOCK].



### Note

- Do not use any other remote shutters except DMW-RSL1 (optional).
- You cannot operate the camera with the remote shutter in the following cases.
  - When the Sleep Mode is canceled
- Record with Motion Picture P Mode (P115) when using for motion picture recording. Motion picture recording can be started/stopped with the remote shutter.
- The remote shutter cannot be used while the stereo microphone (DMW-MS1; optional) is in use.

## Using the External Microphone (optional)


If you use the stereo microphone (DMW-MS1; optional), you can switch to either stereo or monaural sound recording.

It is also possible to reduce the wind noise efficiently by switching the [WIND CUT OFF/ ON] switch to [ON].


Preparations: Turn off the camera and close the built-in flash.

### 1 Attach the stereo microphone to the hot shoe (A).

- Be sure to firmly secure to the stereo microphone with the lock ring (B).

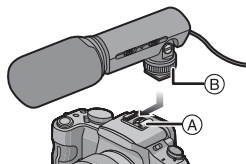

### 2 Firmly connect the stereo mini-plug cord to the [MIC] socket on the camera as far as it will go.

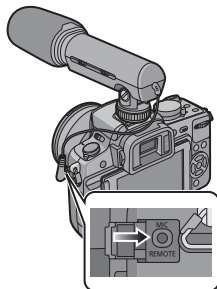

### 3 Turn on the camera and the stereo microphone.

- While the external microphone is connected, [🔊] is displayed on the screen.

#### ■ About the Off/On Mode Selector Switch

**[OFF]:** Turn off the stereo microphone power.

**[MONO]:** Records sound in front of the digital camera in monaural.

**[STEREO]:** Records sound in a wide area in stereo.

#### Battery Check Lamp [BATTERY]

- When the Off/On Mode Selector Switch is changed from [OFF] to [MONO] or [STEREO], the Battery Check Lamp [BATTERY] will light temporarily if there is still plenty of power in the battery. If the Battery Check Lamp [BATTERY] does not light temporarily, replace the battery with a new one.

#### Note


- When attaching the stereo microphone, do not hold only the stereo microphone because it may detach from the camera.
- Set the wind noise reduction only on the stereo microphone side.
- Do not open the built-in flash when the stereo microphone is attached.
- The stereo microphone cannot be used while the external flash (optional) is in use.
- The stereo microphone cannot be used while the remote shutter (DMW-RSL1; optional) is in use.
- To playback audio in stereo, use the HDMI mini cable (optional) and playback by connecting to a TV or playback with a PC.
- Read the operating instructions of the stereo microphone for details.

## Using the AC Adaptor

You can use the camera without worrying about battery discharge when it is connected to a PC or a printer if you use the DC cable (DMW-DCC3; optional) to connect the camera to the battery charger/AC adaptor and connect the AC cable.


- Check that the camera is turned off.
- Close the flash.

### 1 Connect the AC cable.

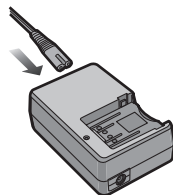

### 2 Connect the DC cable <sup>(A)</sup>.

- Pull open the DC cable cover ① and then connect the DC cable to the camera body using the same steps as "Inserting and Removing the Card (optional)/the Battery" (P28). Pull the DC cable through the opening as shown in the illustration and then close the battery door ②.
- Be careful not to catch the DC cable (DMW-DCC3; optional) when closing the battery door.
- You cannot charge the battery if you connect the DC cable.

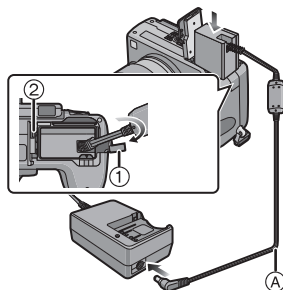

### Note

- Do not use any other AC cables except the supplied one.
- Do not use any other cables except a genuine Panasonic DC cable (DMW-DCC3; optional). If you use other DC cables, it may cause a malfunction.
- The camera becomes warm during use. This is not a malfunction.
- Disconnect the charger/AC adaptor and DC cable when the camera is not in use.
- It is recommended to use a fully charged battery or AC adaptor when recording motion pictures.
- If while recording motion pictures using the AC adaptor the power supply is cut off due to a power cut or if the AC adaptor is disconnected etc., the motion picture being recorded will not be recorded.
- The unit is in the standby condition when the AC adaptor is connected. The primary circuit is always "live" as long as the AC adaptor is connected to an electrical outlet.


## LCD Monitor Display/Viewfinder Display

- The following images are examples of when the display screen is set to [ ] (LCD monitor style) in the LCD monitor.

### ■ In recording


#### Recording in Program AE Mode [P] (Initial setting)

- Flash Mode (P66)
- Film Mode (P91)
- Optical Image Stabilizer (P129)/[ ]: Jitter alert (P53)
- [ ]: Single\*<sup>1</sup> (P51)  
[ ]: Burst (P73)  
[ ]: Auto Bracket (P75)  
[ ]: Self-timer (P77)
- REC MODE (when recording motion pictures) (P113)/Recording quality (P113)
- Picture size (P126)
- Quality (P127)
- Intelligent Exposure (P131)
- Intelligent Resolution (P130)
- Battery indication (P25)
- Card (P29) (displayed only during recording)
- Recording state (Flashes red./ Focus (P53) (Lights green.))
- Touch Quick Menu\*<sup>2</sup> (P33)
- Touch Shutter\*<sup>2</sup> (P54)
- Dial operation guide (P142)/ Elapsed recording time (P111)
- Number of recordable pictures\*<sup>3</sup> (P201)
- White Balance (P86)
- ISO sensitivity (P89)
- Exposure compensation value (P72)/Manual Exposure Assistance (P95)
- Shutter speed (P53)
- Aperture value (P53)
- Recording Mode (P43)
- Metering mode (P128)
- AF Mode (P78)
- Focus Mode (P52)
- Exposure Meter (P139)
- AF area (P53, 78)

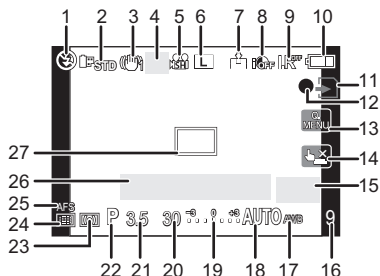


## ■ In recording (after settings)

- 28 Flash output adjustment (P70)
- 29 2nd curtain synchro (P71)
- 30 Audio recording (P134)
- 31 Extended Optical Zoom (when recording motion pictures) (P55, 132)
- 32 Extended Optical Zoom (when taking still pictures) (P55, 132)
- 33 Histogram (P65)
- 34 Travel date (P123)
- 35 Available recording time<sup>\*3</sup> (P111): R8m30s
- 36 White Balance Fine Adjustment (P88)
- 37 White Balance Bracket (P89)
- 38 My Color Mode adjustment (P106)
- 39 Current date and time<sup>\*2,4</sup>: Travel destination setting<sup>\*2,4</sup> (P125)
- 40 Custom settings (P108)
- 41 Program Shift (P54)
- 42 AE lock (P85)
- 43 Face Recognition (P117)
- 44 AF lock (P85)
- 45 Age<sup>\*2,5</sup> (P104)
- 46 Location<sup>\*2,4</sup> (P123)
- 47 Name<sup>\*2,5</sup> (P104)
- 48 Number of days that have passed since the departure date<sup>\*2,4</sup> (P123)
- 49 Self-timer<sup>\*6</sup> (P77)
- 50 Spot metering target (P128)
- 51 Digital Zoom (P55, 132)
- 52 WIND CUT (P135)

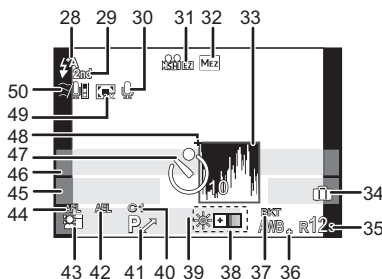

## LCD recording information

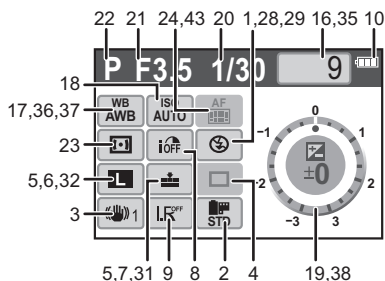

- \*1 Only displayed in the LCD recording information window.
- \*2 Only displayed in the LCD monitor.
- \*3 It is possible to switch the display between the number of recordable pictures and available recording time with the [REMAINING DISP.] setting in the [CUSTOM] menu. In displays other than the LCD recording information display, [9999+] is displayed if there are more than 10000 pictures remaining.
- \*4 This is displayed for about 5 seconds when the camera is turned on, after setting the clock and after switching from Playback Mode to Recording Mode.
- \*5 This is displayed for about 5 seconds when this unit is turned on in [BABY1]/[BABY2] or [PET] in Scene Mode.
- \*6 This is displayed during countdown.


## ■ In playback

- 1 Playback Mode (P57)
- 2 Film Mode (P91)
- 3 Protected picture (P160)
- 4 Number of prints (P159)
- 5 Picture size (P126)  
REC MODE (when recording motion pictures) (P113)/: Recording quality (P113)
- 6 Quality (P127)
- 7 Intelligent Exposure (P131)
- 8 Intelligent Resolution (P130)
- 9 Battery indication (P25)
- 10 Picture number/Total pictures
- 11 Elapsed playback time (P145): 8m30s
- 12 Motion picture recording time (P145): 8m30s
- 13 Favorites settings (P158)
- 14 Recording information\*7
- 15 Age (P104)
- 16 Name\*8 (P104, 120)/Location\*8 (P123)/Title\*8 (P149)
- 17 Number of days that have passed since the departure date (P123)
- 18 Audio playback (P146)  
: Motion picture playback (P145)
- 19 Stamped with text indication (P150)
- 20 Favorites (P158)  
Cable disconnection warning icon (P173)
- 21 Recorded date and time/  
World Time (P125)
- 22 Folder/File number\*7 (P172)
- 23 Color space\*9 (P133)
- 24 Histogram (P65)


\*7 This is not displayed for motion pictures recorded in [AVCHD Lite].

\*8 It is displayed in order of [TITLE], [LOCATION], [NAME] ([BABY1]/[BABY2], [PET]), [NAME] ([FACE RECOG.]).


\*9 This is not displayed for motion pictures recorded in [AVCHD Lite]/[MOTION JPEG].

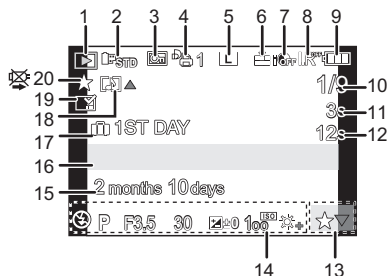

### Detailed information display

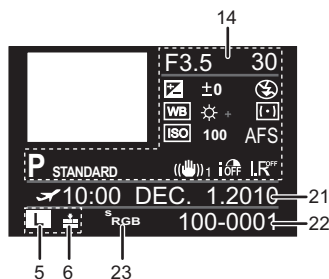

### Histogram display

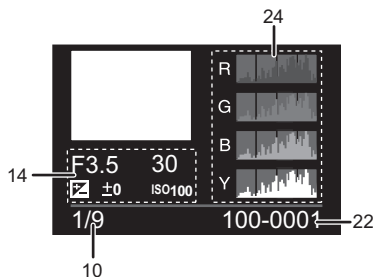



## Cautions for Use

### Optimal use of the camera

#### **Take care not to drop or knock the unit or put a lot of pressure on it.**

- Take care not to knock or drop the bag/case that you inserted the camera in as the shock may cause damage to the camera, lens or LCD monitor.
- Do not use a paper bag as it can easily rip causing the camera to fall and be damaged.
- We strongly recommend you purchase a good camera bag/case from your local dealer to protect your camera.

#### **Keep the camera as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).**

- If you use the camera on top of or near a TV, the pictures and sound on the camera may be disrupted by electromagnetic wave radiation.
- Do not use the camera near cell phones because doing so may result in noise adversely affecting the pictures and sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect the camera, disturbing the pictures and sound.
- If the camera is adversely affected by electromagnetic equipment and stops functioning properly, turn the camera off and remove the battery or disconnect AC adaptor. Then reinsert the battery or reconnect AC adaptor and turn the camera on.

#### **Do not use the camera near radio transmitters or high-voltage lines.**

- If you record near radio transmitters or high-voltage lines, the recorded pictures and sound may be adversely affected.

#### **Always use the supplied cords and cables. If you use optional accessories, use the cords and the cables supplied with them.**

#### **Do not extend the cords or the cables.**

#### **Do not spray the camera with insecticides or volatile chemicals.**

- If the camera is sprayed with such chemicals, the body of the camera may be damaged and the surface finish may peel off.
- Do not keep rubber or plastic products in contact with the camera for a long period of time.

### Cleaning

#### **Before cleaning the camera, remove the battery or disconnect the power plug from the outlet. Then wipe the camera with a dry soft cloth.**

- When the camera is soiled badly, it can be cleaned by wiping the dirt off with a wrung wet cloth, and then with a dry cloth.
- Wipe off any dirt or dust on the zoom ring and the focus ring with a dry, dustless cloth.
- Do not use solvents such as benzene, thinner, alcohol, kitchen detergents, etc., to clean the camera, since it may deteriorate the external case or the coating may peel off.
- When using a chemical cloth, be sure to follow the accompanying instructions.

### ■ About dirt on the image sensor

This camera features an interchangeable lens system so dirt may get inside the camera body when changing lenses. Depending on the recording conditions, dirt on the image sensor may appear on the recorded picture.

Do not change lenses where there is a lot of dust, and always attach the body cap when a lens is not attached to the camera, so that dirt or dust does not get inside the camera body. Remove any dirt on the body cap before attaching it.

#### Dust reduction function

This unit has a dust reduction function that will blow off the debris and dust that have affixed to the front of the imaging device. This function will function automatically when the camera is turned on, but if you see dust, perform the [SENSOR CLEANING] (P142) in the [CUSTOM] menu.

### Removing dirt on the image sensor

The image sensor is very precise and delicate, so be sure to observe the following when you do have to clean it yourself.

- Blow off the dust on the surface of the image sensor with a commercially available blower brush. Be careful not to blow too strongly.
- Do not put the blower brush further inside than the lens mount.
- Do not let the blower brush touch the image sensor as the image sensor may get scratched.
- Do not use any objects except a blower brush to clean the image sensor.
- If you cannot remove the dirt or dust with the blower, consult the dealer or your nearest Service Center.

### For care of the eye cup on the viewfinder

- As the eye cup cannot be removed, gently wipe it with a dry and soft cloth, and be careful not to remove it.
- If you wipe the eye cup too hard and it is removed, consult the dealer or your nearest Service Center.


### About the LCD monitor/Viewfinder

- Do not press the LCD monitor with excessive force. Uneven colors may appear on the LCD monitor and it may malfunction.
- If the camera is cold when you turn it on, the picture on the LCD monitor/Viewfinder will be slightly darker than usual at first. However, the picture will return to normal brightness when the internal temperature of the camera increases.

Extremely high precision technology is employed to produce the LCD monitor/Viewfinder screen. However there may be some dark or bright spots (red, blue or green) on the screen. This is not a malfunction. The LCD monitor/Viewfinder screen has more than 99.99% effective pixels with a mere 0.01% of the pixels inactive or always lit. The spots will not be recorded on pictures on a card.

## About the Lens

- Do not press the lens with excessive force.
- Do not leave the camera with the lens facing the sun as rays of light from the sun may cause it to malfunction. Also, be careful when placing the camera outside or near a window.
- When there is dirt (water, oil, and fingerprints, etc.) on the surface of the lens, the picture may be affected. Lightly wipe the surface of the lens with a soft, dry cloth before and after taking pictures.
- Do not place the lens mount facing downwards. Do not allow the lens mount contacts ① to become dirty.

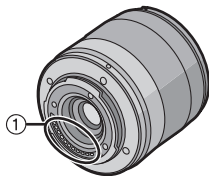

## Battery

**The battery is a rechargeable lithium ion battery. Its ability to generate power comes from the chemical reaction that takes place inside it. This reaction is susceptible to the surrounding temperature and humidity. If the temperature is too high or too low, the operating time of the battery will become shorter.**

**Always remove the battery after use.**

**If you drop the battery accidentally, check to see if the body of the battery and the terminals are damaged.**

- Inserting a damaged battery in the camera will damage the camera.

**Bring charged spare batteries when going out.**

- Be aware that the operating time of the battery becomes shorter in low temperature conditions such as at a ski resort.
- When you travel, do not forget to bring the battery charger (supplied) and the AC cable (supplied) so that you can charge the battery in the country that you are traveling in.

**Dispose of unusable battery.**

- The battery has a limited life.
- Do not throw the battery into fire because it may cause an explosion.
- The unusable battery should be discarded in accordance with battery recycling laws. Call the RBRC hotline at 1-800-822-8837 for information.

**Do not allow battery terminals to come into contact with metal objects (such as necklaces, hairpins etc.).**

- This can cause short circuiting or heat generation and you may be badly burned if you touch a battery.

## Charger

- If you use the battery charger near a radio, the radio reception may be disturbed.
- Keep the charger 1 m (3.28 feet) or more away from radio.
- The charger may generate whirring sounds when it is being used. This is not a malfunction.
- After use, be sure to disconnect the power supply device from the electrical outlet. (A very small amount of current is consumed if it is left connected.)
- Keep the terminals of the charger and battery clean.

## Card

**Do not leave the card where the temperature is high, where electromagnetic waves or static electricity are easily generated or exposed to direct sunlight.**

**Do not bend or drop the card.**

- The card may be damaged or the recorded content may be damaged or deleted.
- Put the card in the card case or the storage bag after use and when storing or carrying the card.
- Do not allow dirt, dust or water to get into the terminals on the back of the card and do not touch the terminals with your fingers.

**Notice for when transferring to another party, or disposing of the memory card**

- "Format" or "delete" using the camera or a PC will only modify the file management information, and it will not erase the data in the memory card completely.

It is recommended to physically destroy the memory card or use the commercially available computer data deletion software to completely erase the data in the memory card before transferring to another party or disposing.

Management of data in the memory card is the responsibility of the user.

## About the personal information

If a name or birthday is set for [BABY1]/[BABY2]/Face Recognition function, this personal information is kept in the camera and included in the recorded image.

### Disclaimer

- Information including personal information may be altered or vanish due to erroneous operation, effect of static electricity, accident, malfunction, repair, or other handlings. Please note in advance that Panasonic is not liable in any way for any direct or indirect damage from the alteration or vanishing of information or personal information.

**When requesting a repair, transferring to another party or disposing**

- Reset the settings to protect the personal information. (P39)
- Remove the memory card from the camera when requesting a repair.
- Settings may return to factory default when camera is repaired.
- Please contact the dealer where you purchased the camera or your nearest Service Center if above operations are not possible due to malfunction.

**When transferring to another party, or disposing of the memory card, please refer to "Notice for when transferring to another party, or disposing of the memory card" on P188.**

## When not using the camera for a long period of time

- Store the battery in a cool and dry place with a relatively stable temperature: [Recommended temperature: 15 °C to 25 °C (59 °F to 77 °F), Recommended humidity: 40% to 60%]
- Always remove the battery and the card from the camera.
- If the battery is left inserted in the camera, it will discharge even if the camera is turned off. If the battery continues to be left in the camera, it will discharge excessively and may become unusable even if charged.
- When storing the battery for a long period of time, we recommend charging it once a year. Remove the battery from the camera and store it again after it has completely discharged.
- We recommend storing the camera with a desiccant (silica gel) when you keep it in a closet or a cabinet.
- **Check all the parts before taking pictures when you have not used the camera for a long period of time.**

### About the picture data

- Recorded data may be damaged or lost if the camera breaks down due to inappropriate handling. Panasonic will not be liable for any damage suffered due to loss of recorded data.

### About tripods or unipods

- When you use a tripod, make sure the tripod is stable when this unit is attached to it.
- You may not be able to remove the card or the battery when using a tripod or unipod.
- Make sure that the screw on the tripod or unipod is not at an angle when attaching or detaching the camera. You may damage the screw on the camera if you use excessive force when turning it. Also, the camera body and the rating label may be damaged or scratched if the camera is attached too tightly to the tripod or unipod.
- When using this unit with a large-diameter lens, the lens may come into contact with the pedestal depending on the tripod/unipod. Tightening the screw with the lens and pedestal in contact with each other may damage this unit or the lens. Therefore it is recommended to attach the tripod adaptor (DMW-TA1; optional) before mounting on the tripod/unipod.
- Read the operating instructions for the tripod or unipod carefully.

### About the shoulder strap

- If you attach a heavy interchangeable lens (more than about 1 kg) to the camera body, do not carry the camera by the shoulder strap. Hold the camera and the lens when carrying them.

## Message Display

Confirmation messages or error messages will be displayed on the screen in some cases. The major messages are described below as examples.

#### [THIS MEMORY CARD IS WRITE-PROTECTED]

- The Write-Protect switch on the card is moved to [LOCK]. Move the switch back to unlock it. (P29)

#### [NO VALID PICTURE TO PLAY]

- Record a picture or insert a card with a recorded picture and then play it.

#### [THIS PICTURE IS PROTECTED]

- Delete the picture after canceling the protect setting. (P160)

#### [THIS PICTURE CANNOT BE DELETED]/[SOME PICTURES CANNOT BE DELETED]

- Pictures not based on the DCF standard cannot be deleted.
  - If you want to delete some pictures, format the card after saving necessary data on a PC etc. (P39)

**[NO ADDITIONAL SELECTIONS CAN BE MADE]**

- The number of pictures, which can be set at one time when [MULTI] has been selected for [DELETE MULTI] (P61), [FAVORITE] (P158), [TITLE EDIT] (P149), [TEXT STAMP] (P150) or [RESIZE] (P154) has been exceeded.
  - Reduce the number of pictures set, and then repeat the operation.
- More than 999 favorites have been set.

**[CANNOT BE SET ON THIS PICTURE]**

- [TITLE EDIT], [TEXT STAMP] or [PRINT SET] cannot be set for pictures not based on the DCF standard.

**[MEMORY CARD ERROR  
FORMAT THIS CARD?]**

- It is a format that cannot be used with this unit.
  - Format the card again with the camera after saving necessary data on a PC etc. (P39)

**[LENS NOT FOUND, OR “C” SHOOT W/O LENS IS SET TO OFF.]/  
[THE LENS IS NOT ATTACHED PROPERLY. DO NOT PUSH LENS RELEASE  
BUTTON WHILE LENS IS ATTACHED.]/  
[PLEASE CHECK THAT THE LENS IS ATTACHED CORRECTLY]**

- Do not press the lens release button while taking pictures.
- When using a Leica lens mount adaptor (DMW-MA2M or DMW-MA3R; optional), set [SHOOT W/O LENS] (P143) to [ON] in the custom menu.
- Detach the lens once, and then attach it again without pressing the lens release button. (P21)
  - Turn on the power again, and if it is still displaying, contact the dealer.

**[MEMORY CARD PARAMETER ERROR]/[THIS MEMORY CARD CANNOT BE USED]**

- Use a card compatible with this unit. (P29)
- SD Memory Card (8 MB to 2 GB)
- SDHC Memory Card (4 GB to 32 GB)
- SDXC Memory Card (48 GB to 64 GB)

**[INSERT SD CARD AGAIN]/[TRY ANOTHER CARD]**

- An error has occurred accessing the card.
  - Insert the card again.
  - Insert a different card.

**[READ ERROR/WRITE ERROR  
PLEASE CHECK THE CARD]**

- It has failed to read or write data.
  - Remove the card after turning the power [OFF]. Insert the card again, turn the power on, and try to read or write the data again.
- The card may be broken.
  - Insert a different card.

**[CANNOT RECORD DUE TO INCOMPATIBLE FORMAT (NTSC/PAL) DATA ON THIS  
CARD.]**

- If you want to delete some pictures, format the card after saving necessary data on a PC etc. (P39)
- Insert a different card.

### **[MOTION RECORDING WAS CANCELLED DUE TO THE LIMITATION OF THE WRITING SPEED OF THE CARD]**

- Use a card with SD Speed Class\* with "Class 4" or higher when recording motion pictures in [AVCHD Lite].  
Also, use a card with SD Speed Class with "Class 6" or higher when recording motion pictures in [MOTION JPEG].
- \* SD Speed Class is the speed standard regarding continuous writing.
- In the event that it stops even after using a "Class 4" card or higher, the data writing speed has deteriorated so it is recommended to make a backup and then format (P39).
- Depending on the type of the card, motion picture recording may stop in the middle.

### **[THIS CARD IS NOT FORMATTED WITH THIS CAMERA, AND NOT SUITABLE FOR MOVIE RECORDING.]**

- The writing speed is lower if the card has been formatted using a PC or other equipment. As a consequence, motion picture recording may stop in the middle. If this happens, make a backup of the data and format (P39) the card in this unit.

### **[A FOLDER CANNOT BE CREATED]**

- A folder cannot be created because there are no remaining folder numbers that can be used. (P172)  
→ Format the card after saving necessary data on a PC etc. (P39) If you execute [NO.RESET] in the [SETUP] menu after formatting, the folder number is reset to 100. (P39)

### **[PICTURE IS DISPLAYED FOR 16:9 TV]/[PICTURE IS DISPLAYED FOR 4:3 TV]**

- The AV cable is connected to the camera.  
→ Press [MENU/SET] if you want to delete this message at once.  
→ Select [TV ASPECT] in the [SETUP] menu if you want to change the TV aspect. (P37)
- This message also appears when the USB connection cable is connected to the camera only. In this case, connect the other end of the USB connection cable to a PC or a printer. (P171, 173)

### **[NO BATTERY POWER REMAINS]**

- The remaining battery power is low.  
→ Charge the battery.

### **[THIS BATTERY CANNOT BE USED]**

- The battery cannot be recognized by the camera.  
→ Use a genuine Panasonic battery. If this message is displayed even when a genuine Panasonic battery is used, contact the dealer or your nearest Service Center.
- The battery cannot be recognized as its terminal is dirty.  
→ Remove any dirt etc. from the terminal.

### **[PLEASE MAKE SURE TO TURN ON THE POWER OF EXTERNAL MICROPHONE.]**

- When attaching the stereo microphone (DMW-MS1; optional), check the battery status and make sure the power is on before use. (P180)

## Troubleshooting

First, try out the following procedures (P192–200).

If the problem is not resolved, it may be improved by selecting **[RESET] (P39)** on the **[SETUP] menu**.

### Battery and power source

#### The camera cannot be operated even when it is turned on.

- The battery is not inserted correctly. (P28)
- The battery is exhausted.
- Charge the battery.
- AC adaptor is not connected properly. (P181)

#### The LCD monitor turns off while the camera is turned on.

- Is the display set to viewfinder?  
→ Press [LVF/LCD] button to switch to LCD monitor display. (P42)
- Is [AUTO LCD OFF] (P36) of the [ECONOMY] Mode active?  
→ Press the shutter button halfway to cancel these modes.
- Is the LCD monitor switched off?  
→ Switch the display by pressing [DISPLAY]. (P63)
- The battery is exhausted.
- Charge the battery.

#### The camera turns off immediately after it is turned on.

- The battery is exhausted.
- Charge the battery.
- If you leave the camera on, the battery will be exhausted.  
→ Turn the camera off frequently by using the [ECONOMY] Mode etc. (P36)

#### This unit is turned off automatically.

- If you connect to a TV compatible with VIERA Link with a HDMI mini cable (optional) and turn off the power on the TV with the remote control for the TV, the power on this unit also turns off.  
→ If you are not using VIERA Link, set [VIERA Link] to [OFF]. (P38)

#### The [CHARGE] lamp flashes.

- Is the temperature of the battery excessively high or low? If it is, it will take longer than usual to charge the battery or charging may remain incomplete.
- Are the terminals of the charger or battery dirty?  
→ Wipe off the dirt using a dry cloth.



## Recording

### Taking pictures is not possible.

#### The shutter will not operate immediately when the shutter button is pressed.

- Is the subject focused?
  - [FOCUS PRIORITY] is set to [ON] at the time of purchase, and so you cannot take pictures until the subject is in focus. If you want to be able to take a picture when you press the shutter button fully even if the subject is not focused, set [FOCUS PRIORITY] in the [CUSTOM] menu to [OFF]. (P138)

### The recorded picture is whitish.

- Picture might look whitish when lens or image sensor gets dirty with finger print or similar.
  - If the lens is dirty turn the camera off and then gently wipe the lens surface with a soft dry cloth.
  - Refer to P186 when the image sensor gets dirty.

### The recorded picture is too bright or dark.

- Check that the exposure is correctly compensated. (P72)
- Is the AE Lock (P85) applied incorrectly?

### 2 or 3 pictures are taken at one time.

- Unset the settings of White Balance Bracket (P89).

### The subject is not focused properly.

- The subject is beyond the focus range of the camera. (P51)
- There is camera shake (jitter) or the subject is moving slightly. (P53)
- Is [FOCUS PRIORITY] in the [CUSTOM] menu set to [OFF]? (P138)  
In this case, the picture may not be properly focused even if [AFS] or [AFC] in Focus Mode is set.
- Is the AF Lock (P85) applied incorrectly?

### The recorded picture is blurred.

#### The Optical Image Stabilizer is not effective.

- The shutter speed will become slower and the Optical Image Stabilizer function may not work properly when taking pictures especially in dark places.
  - We recommend holding the camera firmly with both hands when taking pictures. (P40)
  - We recommend using a tripod and the self-timer (P77) when taking pictures with a slow shutter speed.

### Taking pictures using White Balance Bracket is not possible.

- Is the number of recordable pictures 2 or less?

### The recorded picture looks rough. Noise appears on the picture.

- Is the ISO sensitivity high or the shutter speed slow?  
(ISO sensitivity is set to [AUTO] when the camera is shipped. Therefore, when taking pictures indoors etc. noise will appear.)
  - Decrease the ISO sensitivity. (P89)
  - Increase the setting for [NOISE REDUCTION] in [FILM MODE] or lower the setting for each of the items other than [NOISE REDUCTION]. (P92)
  - Take pictures in bright places.
  - Set the [LONG SHTR NR] to [ON]. (P132)
- Is the [PICTURE SIZE] (P126) or the [QUALITY] (P127) set low?
- Is the [DIGITAL ZOOM] set? (P132)

### Under fluorescent lighting, flicker or horizontal bars may be seen.

- This is characteristic of MOS sensors which serve as the camera's pickup sensors.  
This is not a malfunction.
- If there is marked flicker or striping when recording motion pictures, the Flicker Reduction Function will be forcefully activated by setting the Flicker Reduction Function to [ON] (P116), which will adjust the shutter speed to 1/100. It is possible to select the shutter speed to adjust from 1/50, 1/60, 1/100, or 1/120 by rotating the rear dial.



### The brightness or the hue of the recorded picture is different from the actual scene.

- If recording under fluorescent light, the brightness or the hue may change slightly when the shutter speed becomes fast. This occurs due to the characteristics of fluorescent light. It is not a malfunction.

### Reddish horizontal streaks appear on the LCD monitor during recording.

- This is characteristic of MOS sensors which serve as the camera's pickup sensors. It appears when the subject has a bright part. Some unevenness may occur in the surrounding areas, but this is not a malfunction.  
It is recorded in motion pictures but is not recorded on still pictures.
- It is recommended that you take pictures while taking care not to expose the screen to sunlight or any other source of strong light.

### Bright spot not in subject is recorded.

- This could be an inactive pixel. Perform the [PIXEL REFRESH] (P142) in the [CUSTOM] menu.

### You cannot compensate the exposure.

- Are you in Exposure Compensation operation?
  - Press the rear dial to switch to Exposure Compensation operation. (P72)

### Subject cannot be locked. (AF tracking not possible)

- Set the AF area to the distinctive color of the subject if there is a part that is different from the surrounding color. (P81)

## Motion pictures

### Motion picture recording stops in the middle.

- Use a card with SD Speed Class\* with “Class 4” or higher when recording motion pictures in [AVCHD Lite].  
Also, use a card with SD Speed Class with “Class 6” or higher when recording motion pictures in [MOTION JPEG].  
\* SD Speed Class is the speed standard regarding continuous writing.
- Depending on the type of the card, recording may stop in the middle.  
→ If motion picture recording stops during use of a card of at least “Class 4” or if you use a card that has been formatted on a PC or other equipment, the data-writing speed is lower. In such cases, we recommend that you make a backup of the data and then format (P39) the card in this unit.

### Object seems to be warped.

- Object seems to be warped slightly when the object moves across the image very fast, but this is because the unit is using MOS for the image sensor. This is not a malfunction.

### In motion pictures, abnormal clicking and buzzing sounds are recorded. The recorded sound is very quiet.

- With recording in a quiet environment, depending on the lenses used, the sound of aperture and focus actions may be recorded in motion pictures. This is not a malfunction. Focus operation while recording motion pictures can be set to [OFF] with [CONTINUOUS AF] (P135).
- Be careful while recording motion pictures because the sounds of the zoom operations, buttons and dial operation etc. may be recorded.
- While recording motion pictures, plugging the aperture of the microphone with a finger may reduce the level of audio recording or audio may not record at all. Also be careful because the operation sound of lenses can easily be recorded at this time.

## Lens

### Recorded image may be warped, or nonexistent color is surrounding the subject.

- Depending on the lens used, picture may be warped slightly or you may see colors along the edge depending on the zoom factor, due to the characteristics of the lens. Also, the peripherals of the image might look warped because the perspective is enhanced when the wide angle is used. This is not a malfunction.

### When the lens is attached to another digital camera, stabilizer function cannot be turned off or stabilizer function does not work.

- The Optical Image Stabilizer function of the 14–42 mm/F3.5–5.6 lens included in DMC-G2K only works correctly with supported cameras.  
→ When older Panasonic digital cameras (DMC-GF1, DMC-GH1, DMC-G1) are used, [STABILIZER] in the [REC] Mode menu (P129) cannot be set to [OFF]. It is recommended to update the firmware of the digital camera at the following website.  
<http://panasonic.jp/support/global/cs/dsc/download/>  
→ When using this lens with another make of digital cameras, the Optical Image Stabilizer function will not work. (As of March 2010)  
For details, contact the respective company.

## Flash

### The flash is not activated.

- Is the flash closed?  
→ Slide the [⚡ OPEN] lever to open the flash. (P66)

### The flash is activated 2 times.

- The flash is activated 2 times. The interval between the first and second flash is longer when Red-Eye Reduction (P68) is set so the subject should not move until the second flash is activated.

## LCD monitor/Viewfinder

### The LCD monitor turns off although the camera is turned on.

- The LCD monitor turns off when [AUTO LCD OFF] (P36) is selected for the [ECONOMY] Mode. [This does not happen when using the AC adaptor (P181).]
- It will switch to viewfinder display if there is hand or object near the eye sensor. (P42)

### The LCD monitor/Viewfinder is too bright or dark.

- Adjust the brightness of the LCD monitor/viewfinder to a proper level. (P35)
- [POWER LCD] is activated. (P36)

### It may flicker for an instant or the brightness of the screen may change significantly for an instant.

- This occurs due to the aperture of the lens changing when the shutter button is pressed half-way, or when the brightness of the subject changes. This is not a malfunction.

### The picture is not displayed on the LCD monitor.

- Does the picture appear on the viewfinder?  
→ Press [LVF/LCD] to switch to LCD monitor display. (P42)
- Is the LCD monitor switched off?  
→ Switch the display by pressing [DISPLAY]. (P63)

### LCD monitor and viewfinder do not switch when [LVF/LCD] is pressed.

- Is the [EXPO. SETTINGS] set to [SWITCH BY PRESSING THE LVF/LCD BUTTON]? (P140)
- It is only displayed on the LCD monitor when the camera is connected to a PC or printer.

### Black, red, blue and green dots appear on the LCD monitor.

- This is not a malfunction.  
These pixels do not affect the recorded pictures.

### Noise appears on the LCD monitor.

- In dark places, noise may appear to maintain the brightness of the LCD monitor.

### **You see red, green, or blue flashes when you move your eyes in the viewfinder, or when the camera is moved rapidly.**

- This is a characteristic of the drive system of the viewfinder of this unit, and it is not a malfunction. There will be no problem with the recorded image.

## **Playback**

### **The picture being played back is not rotated, or is rotated in an unexpected direction, when displayed.**

- You can display the pictures without being rotated when [ROTATE DISP.] (P157) is set to [OFF].
- You can rotate pictures with the [ROTATE] function. (P157)
- You can only display the pictures rotated if you use a lens (P18) that supports the Direction Detection Function (P41) and [ROTATE DISP.] is set to [ON].

### **The picture is not played back. There are no recorded pictures.**

- Did you press [▶]?
- Is the card inserted?
- Is there a picture on the card?
- Is this a picture whose file name has been changed in the PC? If it is, it cannot be played back by this unit.
- Has [PLAYBACK MODE] been set for playback?  
→ Change to [NORMAL PLAY]. (P148)

### **The folder number and the file number are displayed as [—] and the screen turns black.**

- Is this a non-standard picture, a picture which has been edited using a PC or a picture which was taken by another make of digital camera?
- Did you remove the battery immediately after picture-taking or did you take the picture using a battery with a low remaining charge?  
→ Format the data to delete the pictures mentioned above. (P39)  
(Other pictures will be deleted as well and it will not be possible to restore them.  
Therefore, check well before formatting.)

### **Images with different date as recorded date are played back in the Calendar Playback.**

- Is the clock in the camera set properly? (P30)
- Images edited on a PC or images recorded on other cameras might display a different date to the recorded date during the Calendar Playback.

### **White round spots like soap bubbles appear on the recorded picture.**




 

 
- If you take a picture with the flash in a dark place or indoors, white round spots may appear on the picture caused by the flash reflecting of particles of dust in the air. This is not a malfunction.  
A characteristic of this is that the number of round spots and their position differ in every picture.



**[THUMBNAIL IS DISPLAYED] appears on the screen.**

- Is it a picture that has been recorded with other equipment? In such cases, these pictures may be displayed with a deteriorated picture quality.

**Red part of the recorded image has changed color to black.**

- When Digital Red-Eye Correction ([, [, []) is in operation, if you take a picture of subject with red color surrounded by a skin tone color, that red part may be corrected to black by the Digital Red-Eye Correction function.
  - It is recommend to take picture with Flash Mode set to [, [] or [, or [RED-EYE REMOVAL] on the [REC] Mode menu set to [OFF]. (P130)

**TV, PC and printer****The picture does not appear on the television.**

- Is the camera connected to the TV correctly?
  - Set the TV input to external input mode.
- Output from the [HDMI] socket is not possible when it is connected to the PC or the printer.
  - Connect it only to the TV.

**The display areas on the TV screen and the camera's LCD monitor are different.**

- Depending on the TV model, the pictures may be extended horizontally or vertically or they may be displayed with their edges cut off.


**The motion pictures cannot be played back on a TV.**

- Are you trying to play back the motion pictures by directly inserting the card in the card slot of the TV?
  - Connect the camera to the TV with the AV cable (supplied), or with the HDMI mini cable (optional), and then play back the motion pictures on the camera. (P162, 163)
  - Motion pictures recorded in [AVCHD Lite] can be played back on Panasonic televisions (VIERA) with the AVCHD logo.

**The picture is not displayed fully on the TV.**

- Check [TV ASPECT] setting. (P37)

 **VIERA Link does not work.**

- Is it connected properly with the HDMI mini cable (optional)? (P163)
  - Confirm that the HDMI mini-cable (optional) is firmly fitted.
  - Press [] on this unit.
- Is the [VIERA Link] on this unit set to [ON]? (P38)
  - Depending on HDMI terminal of the TV, the input channel may not switch automatically. In this case, use the remote control for the TV to switch input. (For details on how to switch input, please read the operating instructions for the TV.)
  - Check the VIERA Link setting on the connected device.
  - Turn the power to the unit off and then back on again.
  - Set [VIERA Link] to [Off] on the TV and then turn it back to [On]. (Refer to the operating instructions of the TV for details.)

### The picture cannot be transferred when the camera is connected to a PC.

- Is the camera connected to the PC correctly?
- Is the camera recognized by the PC correctly?  
→ Set to [PC] in [USB MODE]. (P37, 171)

### The card is not recognized by the PC.

- Disconnect the USB connection cable. Connect it again while the card is inserted in the camera.

### The card is not recognized by the PC. (SDXC memory card is used)

- Check if your PC is compatible with SDXC memory cards.  
<http://panasonic.net/avc/sdcard/information/SDXC.html>
- A message prompting to format the card may be displayed when connecting, but do not format.
- If the [ACCESS] displayed on the LCD monitor does not disappear, disconnect the USB connection cable after turning off the power.

### The picture cannot be printed when the camera is connected to a printer.

- Pictures cannot be printed using a printer which does not support PictBridge.  
→ Set to [PictBridge(PTP)] in [USB MODE]. (P37, 173)

### The ends of the pictures are cut at printing.



- When using a printer with a Cropping or borderless printing function, cancel this function before printing. (For details, refer to the operating instructions for the printer.)
- When you order photo studios to print pictures, ask the photo studio if the pictures can be printed with both ends.

## Others

### There is a sound from lens unit.

- It is a sound of lens movement or aperture operation when the power is turned [ON] or [OFF], and it is not a malfunction.
- You may hear a sound from the lens and image in the LCD monitor may suddenly change when the brightness has changed by zoom operation or moving the camera, but there is no effect on recording.  
The sound is caused by the automatic adjustment of the aperture. This is not a malfunction.

### An unreadable language was selected by mistake.

- Press [MENU/SET], select the [SETUP] menu icon [] and then select the [] icon to set the desired language. (P39)

### Part of the picture is flashing in black and white.

- This is a highlight function showing the white saturated area. (P136)
- Is the [HIGHLIGHT] set to [ON]?

### A red lamp sometimes turns on when the shutter button is pressed halfway.

- In dark places, the AF Assist Lamp (P138) lights red to make it easier to focus on a subject.

### **The AF Assist Lamp does not turn on.**

- Is [AF ASSIST LAMP] on the [CUSTOM] menu set to [ON]? (P138)
- The AF Assist Lamp does not turn on in bright places.

### **The camera becomes warm.**

- The surface of the camera and the reverse side of the LCD monitor may become warm during use. This does not affect the performance or quality of the camera.

### **The clock is reset.**

- If you do not use the camera for a long time, the clock may be reset.
  - [PLEASE SET THE CLOCK] message will be displayed; please re-set the clock. When taking pictures, it will not be possible to record the correct date without setting the clock. (P30)

### **The file numbers are not recorded consecutively.**

- When you perform an operation after taking a certain action, the pictures may be recorded in folders with different numbers from the ones used prior to the operation. (P172)

### **The file numbers are recorded in ascending order.**

- If the battery was inserted or removed without first turning the camera's power off, the folder and file numbers for the pictures taken will not be stored in the memory. When the power is then turned back on and pictures are taken, they may be stored under file numbers which should have been assigned to previous pictures.

### **Age is not displayed correctly.**

- Check the clock (P30) and birthday settings (P104).

### **A different thing gets selected from what you touched.**

- Perform the calibration (P38).











## Number of Recordable Pictures and Available Recording Time

- The number of recordable pictures and the available recording time are an approximation. (These vary depending on the recording conditions and the type of card.)
- The number of recordable pictures and the available recording time varies depending on the subjects.

### ■ Number of recordable pictures

- In displays other than the LCD recording information display, [9999+] is displayed if there are more than 10000 pictures remaining.

Aspect ratio		4:3							
Picture size		L (12M)				M (6M)			
Quality				RAW 	RAW 			RAW 	RAW 
Card	256 MB	34	71	11	13	63	125	13	14
	512 MB	70	140	22	26	125	250	26	29
	1 GB	140	280	45	54	250	510	52	59
	2 GB	290	570	92	105	520	1020	105	120
	4 GB	570	1130	180	210	1030	2000	210	230
	6 GB	870	1720	270	320	1560	3050	320	350
	8 GB	1160	2310	370	440	2090	4090	430	480
	12 GB	1760	3490	550	660	3160	6170	650	720
	16 GB	2350	4660	740	880	4220	8230	860	960
	24 GB	3410	6760	1080	1280	6130	11950	1260	1400
	32 GB	4710	9350	1490	1770	8470	16520	1740	1930
48 GB	6740	13000	2160	2560	12140	22760	2520	2800	
64 GB	9150	17650	2940	3480	16470	30890	3430	3800	

Aspect ratio		4:3				3:2			
Picture size		S (3M)				L (10.5M)			
Quality				RAW	RAW			RAW	RAW
Card	256 MB	100	200	14	15	38	77	12	14
	512 MB	200	400	28	30	77	150	24	29
	1 GB	400	800	57	61	155	310	50	60
	2 GB	820	1610	115	125	310	620	100	120
	4 GB	1620	3170	220	240	620	1220	200	240
	6 GB	2470	4820	340	370	940	1870	300	360
	8 GB	3310	6460	460	500	1270	2500	410	490
	12 GB	5000	9740	700	750	1910	3770	620	740
	16 GB	6670	13000	940	1010	2550	5040	830	980
	24 GB	9690	18880	1360	1460	3710	7320	1200	1430
	32 GB	13390	26080	1880	2020	5130	10110	1660	1980
	48 GB	18210	33110	2710	2910	7280	14000	2390	2840
64 GB	24710	44930	3680	3950	9880	19010	3250	3860	

Aspect ratio		3:2							
Picture size		M (5M)				S (2.5M)			
Quality				RAW	RAW			RAW	RAW
Card	256 MB	68	135	14	16	105	200	15	17
	512 MB	135	270	29	32	210	410	31	34
	1 GB	270	540	58	65	420	820	63	68
	2 GB	550	1070	115	130	850	1610	125	135
	4 GB	1090	2110	230	260	1670	3170	250	270
	6 GB	1660	3210	350	390	2540	4820	380	410
	8 GB	2230	4300	470	530	3400	6460	510	550
	12 GB	3360	6490	720	800	5140	9740	780	840
	16 GB	4490	8660	960	1070	6860	13000	1040	1120
	24 GB	6520	12580	1400	1560	9960	18880	1510	1630
	32 GB	9010	17390	1930	2150	13760	26080	2090	2250
	48 GB	12550	22760	2780	3080	19170	33110	3010	3220
64 GB	17040	30890	3770	4180	26010	44930	4080	4370	








Aspect ratio		16:9							
Picture size		L (9M)				M (4.5M)			
Quality				RAW	RAW			RAW	RAW
Card	256 MB	43	86	14	17	73	145	16	19
	512 MB	86	170	29	35	145	290	33	38
	1 GB	175	340	58	70	290	580	68	77
	2 GB	350	700	115	140	600	1180	135	155
	4 GB	700	1380	230	280	1180	2310	270	300
	6 GB	1060	2100	350	430	1790	3520	410	460
	8 GB	1420	2820	480	570	2400	4720	550	620
	12 GB	2150	4250	720	860	3630	7120	830	940
	16 GB	2870	5670	960	1150	4840	9500	1120	1260
	24 GB	4170	8240	1400	1680	7030	13790	1620	1830
	32 GB	5760	11390	1930	2320	9710	19060	2240	2530
	48 GB	8270	15830	2780	3310	13490	26010	3190	3600
64 GB	11230	21490	3770	4490	18300	35300	4330	4890	

Aspect ratio		16:9				4:3			
Picture size		S (2M)				L (9M)			
Quality				RAW	RAW			RAW	RAW
Card	256 MB	220	430	20	21	47	94	14	17
	512 MB	440	860	40	42	95	185	29	34
	1 GB	900	1720	81	84	190	380	59	69
	2 GB	1800	3410	160	170	380	760	120	140
	4 GB	3540	6700	320	330	760	1500	230	270
	6 GB	5390	10190	490	510	1160	2290	350	420
	8 GB	7220	13640	650	680	1560	3060	480	560
	12 GB	10890	20580	990	1030	2350	4620	720	850
	16 GB	14530	27450	1320	1380	3140	6170	970	1140
	24 GB	21100	39860	1920	2000	4560	8960	1400	1660
	32 GB	29150	55070	2650	2770	6310	12390	1940	2290
	48 GB	36420	60710	3750	3910	8880	16550	2780	3250
64 GB	49430	82380	5090	5310	12050	22460	3770	4410	

Aspect ratio		1:1							
Picture size		M (4.5M)				S (2M)			
Quality		■	■	RAW■	RAW■	■	■	RAW■	RAW■
Card	256 MB	85	165	16	19	210	390	19	20
	512 MB	170	330	34	37	410	790	38	40
	1 GB	340	670	68	76	830	1580	77	81
	2 GB	690	1360	135	150	1650	3070	155	165
	4 GB	1360	2680	270	300	3260	6030	300	320
	6 GB	2080	4070	410	460	4950	9170	470	490
	8 GB	2780	5450	550	610	6630	12270	630	660
	12 GB	4200	8230	840	930	10010	18520	950	990
	16 GB	5610	10980	1120	1240	13350	24700	1270	1320
	24 GB	8150	15940	1630	1800	19390	35870	1840	1920
	32 GB	11260	22020	2250	2490	26790	49560	2540	2660
	48 GB	15170	28010	3190	3530	36420	60710	3640	3790
64 GB	20590	38020	4330	4780	49430	82380	4940	5140	

Aspect ratio		4:3	3:2	16:9	1:1
Quality		RAW			
Card	256 MB	16	18	22	21
	512 MB	33	37	44	42
	1 GB	67	75	89	86
	2 GB	135	150	180	170
	4 GB	260	300	350	340
	6 GB	400	450	540	520
	8 GB	540	610	720	690
	12 GB	820	920	1090	1050
	16 GB	1090	1220	1450	1400
	24 GB	1590	1780	2110	2030
	32 GB	2190	2460	2920	2810
	48 GB	3190	3570	4180	4040
64 GB	4330	4840	5680	5490	

## ■ Available recording time (when recording motion pictures)

File format		[AVCHD Lite]			[MOTION JPEG]			
Recording quality setting								
Card	256 MB	Cannot be guaranteed in operation.			53 s	2 min 15 s	2 min 20 s	6 min 40 s
	512 MB	3 min 00 s	4 min 00 s	6 min 00 s	1 min 55 s	4 min 50 s	5 min 00 s	14 min 00 s
	1 GB	7 min 00 s	9 min 00 s	13 min 00 s	3 min 55 s	10 min 00 s	10 min 20 s	28 min 50 s
	2 GB	15 min 00 s	19 min 00 s	28 min 00 s	8 min 10 s	20 min 40 s	21 min 30 s	59 min 30 s
	4 GB	30 min 00 s	39 min 00 s	57 min 00 s	16 min 20 s	40 min 50 s	42 min 30 s	1 h 57 min
	6 GB	46 min 00 s	1 h 00 min	1 h 27 min	24 min 50 s	1 h 02 min	1 h 04 min	2 h 59 min
	8 GB	1 h 02 min	1 h 21 min	1 h 58 min	33 min 20 s	1 h 23 min	1 h 26 min	4 h 00 min
	12 GB	1 h 34 min	2 h 03 min	2 h 58 min	50 min 20 s	2 h 06 min	2 h 11 min	6 h 03 min
	16 GB	2 h 06 min	2 h 45 min	3 h 58 min	1 h 07 min	2 h 48 min	2 h 55 min	8 h 04 min
	24 GB	3 h 03 min	4 h 00 min	5 h 47 min	1 h 37 min	4 h 04 min	4 h 14 min	11 h 44 min
	32 GB	4 h 13 min	5 h 32 min	7 h 59 min	2 h 15 min	5 h 38 min	5 h 51 min	16 h 13 min
	48 GB	6 h 13 min	8 h 08 min	11 h 45 min	3 h 18 min	8 h 16 min	8 h 36 min	23 h 51 min
	64 GB	8 h 27 min	11 h 03 min	15 h 57 min	4 h 30 min	11 h 14 min	11 h 41 min	32 h 22 min

- Motion picture recorded continuously in [MOTION JPEG] is up to 2 GB. Only the maximum recordable time for 2 GB is displayed on the screen.
- Maximum time to record motion pictures continuously with [AVCHD Lite] is 13 hours 3 minutes 20 seconds. Screen will only display up to 13 hours 3 minutes 20 seconds. However, the recording may stop before that depending on the remaining battery level. (P26)

### Note

- The number of recordable pictures and the available recording time displayed on the screen may not decrease in order.
- If you set [EX. OPT. ZOOM] (P132) to [ON], [**7**] is displayed on the screen when the picture size is set to a size other than the maximum picture size for each aspect ratio.

## Specifications

### Digital Camera Body (DMC-G2):

Information for your safety

<b>Power Source:</b>	DC 9.3 V
<b>Power Consumption:</b>	2.6 W (When recording with LCD Monitor) (When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is used) 1.6 W (When playing back with LCD Monitor) (When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is used)

<b>Camera effective pixels:</b>	12,100,000 pixels
<b>Image sensor:</b>	4/3" Live MOS sensor, total pixel number 13,060,000 pixels, Primary color filter
<b>Digital Zoom:</b>	Max. 4×
<b>Extended Optical Zoom:</b>	ON/OFF simple enlargement (compatible with lenses from other manufacturers)
(Except for the maximum picture size for each aspect ratio)	
<b>Focus:</b>	Auto Focus/Manual Focus, Face Detection/AF Tracking/23-area-focusing/1-area-focusing (Touch focus area selection possible)
<b>Shutter system:</b>	Focal-plane shutter
<b>Burst recording</b>	
<b>Burst speed:</b>	3.2 pictures/second (High speed), 2.6 pictures/second (Middle speed), 2 pictures/second (Low speed)
<b>Number of recordable pictures:</b>	Max. 7 pictures (when there are RAW files) Depends on the capacity of the card (when there are no RAW files)
<b>ISO sensitivity (Standard Output Sensitivity):</b>	AUTO/ $\frac{1}{\text{ISO}}$ 100/200/400/800/1600/3200/6400 (1/3 EV step change possible)
<b>Shutter speed:</b>	B (Bulb) (max. 4 minutes), 60 seconds to 1/4000th of a second Taking still pictures during motion picture recording: 1/30th of a second to 1/16000th of a second
<b>Metering range:</b>	EV 0 to EV 18
<b>White Balance:</b>	Auto White Balance/Daylight/Cloudy/Shade/Incandescent lights/Flash/White set1/White set2/White Balance K set

<b>Exposure (AE):</b>	Program AE (P)/Aperture-priority AE (A)/Shutter-priority AE (S)/ Manual Exposure (M)/AUTO Exposure Compensation (1/3 EV Step, -3 EV to +3 EV)
<b>Metering Mode:</b>	Multiple/Center weighted/Spot
<b>LCD monitor:</b>	3.0" TFT LCD (Approx. 460,000 dots) (field of view ratio about 100%) Touch panel
<b>Viewfinder:</b>	Color LCD Viewfinder (Approx. 1,440,000 dots) (field of view ratio about 100%) (with diopter adjustment -4 to +4 diopter)
<b>Flash:</b>	Built-in pop up flash GN 11 equivalent (ISO100·m) Flash range: Approx. 45 cm (1.48 feet) to 6.2 m (20.3 feet) (When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is mounted, WIDE, [ISO AUTO] is set) AUTO, AUTO/Red-Eye Reduction, Forced ON, Forced ON/ Red-Eye Reduction, Slow Sync., Slow Sync./Red-Eye Reduction, Forced OFF
<b>Flash synchronization speed:</b>	Equal to or smaller than 1/160th of a second
<b>Microphone:</b>	Monaural
<b>Speaker:</b>	Monaural
<b>Recording media:</b>	SD Memory Card/SDHC Memory Card/SDXC Memory Card
<b>Picture size</b>	
<b>Still picture:</b>	When the aspect ratio setting is [4:3] 4000×3000 pixels, 2816×2112 pixels, 2048×1536 pixels When the aspect ratio setting is [3:2] 4000×2672 pixels, 2816×1880 pixels, 2048×1360 pixels When the aspect ratio setting is [16:9] 4000×2248 pixels, 2816×1584 pixels, 1920×1080 pixels When the aspect ratio setting is [1:1] 2992×2992 pixels, 2112×2112 pixels, 1504×1504 pixels
<b>Recording quality</b>	
<b>Motion pictures:</b>	[AVCHD Lite] (With audio) When set to [SH]: 1280×720 pixels (60p recording*/ Approx. 17 Mbps)/ When set to [H]: 1280×720 pixels (60p recording*/ Approx. 13 Mbps)/ When set to [L]: 1280×720 pixels (60p recording*/ Approx. 9 Mbps) (*Sensor output is 30 frames/sec.) [MOTION JPEG] (With audio) When set to [HD]: 1280×720 pixels (30 frames/sec.)/ When set to [WVGA]: 848×480 pixels (30 frames/sec.)/ When set to [VGA]: 640×480 pixels (30 frames/sec.)/ When set to [QVGA]: 320×240 pixels (30 frames/sec.)
<b>Quality:</b>	RAW/RAW+ Fine/RAW+ Standard/Fine/Standard

**Recording file format**

<b>Still Picture:</b>	JPEG (based on "Design rule for Camera File system", based on "Exif 2.21" standard)/DPOF corresponding
<b>Pictures with audio:</b>	JPEG (based on "Design rule for Camera File system", based on "Exif 2.21" standard)+"QuickTime"
<b>Motion pictures with audio:</b>	AVCHD Lite/QuickTime Motion JPEG

**Interface**

<b>Digital:</b>	"USB 2.0" (High Speed)
<b>Analog video/audio:</b>	NTSC Audio line output (monaural)

**Terminal**

<b>[MIC/REMOTE]:</b>	φ 2.5 mm jack
<b>[AV OUT/DIGITAL]:</b>	Dedicated jack (8 pin)
<b>[HDMI]:</b>	MiniHDMI TypeC
<b>[DC IN]:</b>	None (when using an AC adaptor, use optional DC cable)

**Dimensions:**

Approx. 124 mm (W)×83.6 mm (H)×74.0 mm (D)  
[4.88" (W)×3.29"(H)×2.91" (D)]  
(excluding the projecting parts)

**Mass (weight):**

Approx. 593 g/1.31 lb  
(with the 14–42 mm/F3.5–5.6 lens included in DMC-G2K, card and battery)  
Approx. 371 g/0.82 lb (camera body)

**Operating temperature:** 0 °C to 40 °C (32 °F to 104 °F)

**Operating humidity:** 10% to 80%

**Language select:** [ENGLISH]/[FRANÇAIS]/[ESPAÑOL]/[PORTUGUÊS]

**AC Adaptor (Panasonic DE-A49B):**

Information for your safety

<b>Input:</b>	110 V to 240 V ~ 50/60 Hz, 0.3 A
<b>Output:</b>	9.3 V --- 1.2 A (Unit operation) 8.4 V --- 0.65 A (Battery charging)

**Battery Pack (lithium-ion) (Panasonic DMW-BLB13PP):**

Information for your safety




 







<b>Voltage/capacity :</b>	7.2 V/1250 mAh
---------------------------	----------------







**Interchangeable Lens (H-FS014042)****“LUMIX G VARIO 14–42 mm/F3.5–5.6 ASPH./MEGA O.I.S.”**

<b>Focal length:</b>	f=14 mm to 42 mm (35 mm film camera equivalent: 28 mm to 84 mm)
<b>Aperture type:</b>	7 leaf shutters/iris diaphragm/circular diaphragm
<b>Aperture range:</b>	F3.5 (Wide) to F5.6 (Tele)
<b>Minimum aperture value:</b>	F22
<b>Lens construction:</b>	12 elements in 9 groups (1 non-spherical lenses)
<b>In focus distance:</b>	0.3 m (0.99 feet) to $\infty$ (from the focus distance reference line)
<b>Maximum image magnification:</b>	0.16 $\times$ (35 mm film camera equivalent: 0.32 $\times$ )
<b>Optical Image Stabilizer:</b>	Available
<b>[O.I.S.] switch:</b>	None (Setting of the [STABILIZER] is done in [REC] Mode menu.)
<b>Mount:</b>	“Micro Four Thirds Mount”
<b>Angle of view:</b>	75° (Wide) to 29° (Tele)
<b>Filter diameter:</b>	52 mm (2.05 inch)
<b>Max. diameter:</b>	Approx. 60.6 mm (2.39 inch)
<b>Overall length:</b>	Approx. 63.6 mm (2.50 inch) (from the tip of the lens to the base side of the lens mount)
<b>Mass (weight):</b>	Approx. 165 g/0.22 lb

# Digital Camera Accessory System

Accessory#	Figure	Description
DMW-BLB13PP		Lithium Ion Battery
DMW-FL220 DMW-FL360 DMW-FL500		Flash
H-H020 H-FS014045 H-FS045200 H-VS014140 H-F007014 H-ES045		Interchangeable Lens
Ⓐ : DMW-LMC52 Ⓑ : DMW-LND52 Ⓒ : DMW-LPL52		Ⓐ : MC Protector* <sup>1</sup> Ⓑ : ND Filter* <sup>1</sup> Ⓒ : PL Filter (Circular Type)* <sup>1</sup>
DMW-RSL1		Remote Shutter
DMW-MS1		Stereo Microphone
DMW-DCC3		DC Cable
DMW-BAL1		Leather Bag
DMW-BAG1		Soft Bag
DMW-CG1* <sup>2</sup> DMW-CG2		Soft Case
DMW-SSTL1 DMW-SSTG1 DMW-SSTG2 DMW-SSTG3		Shoulder Strap

Accessory#	Figure	Description
RP-CDHM15 RP-CDHM30		HDMI mini Cable
DMW-MA1 DMW-MA2M DMW-MA3R		Mount Adaptor
DMW-TA1*3		Tripod Adaptor
RP-SDW64GU1K RP-SDW48GU1K RP-SDW32GU1K RP-SDW16GU1K RP-SDW08GU1K RP-SDW04GU1K		Class 10 64 GB SDXC Memory Card Class 10 48 GB SDXC Memory Card Class 10 32 GB SDHC Memory Card Class 10 16 GB SDHC Memory Card Class 10 8 GB SDHC Memory Card Class 10 4 GB SDHC Memory Card
RP-SDP16GU1K RP-SDP08GU1K RP-SDP04GU1K RP-SDP02GU1K		Class 4 16 GB SDHC Memory Card Class 4 8 GB SDHC Memory Card Class 4 4 GB SDHC Memory Card Class 4 2 GB SD Memory Card
RP-SDR08GU1A RP-SDR04GU1A RP-SDR02GU1A		Class 2 8 GB SDHC Memory Card Class 2 4 GB SDHC Memory Card Class 2 2 GB SD Memory Card

Product numbers correct as of March 2010. These may be subject to change.

\*1 We recommend to use these filters for the lens included in DMC-G2K.

If you are using other lenses, please use the filters compatible with that lens.

\*2 When the 14–42 mm/F3.5–5.6 lens included in DMC-G2K is used

\*3 Use if the attached lens is in contact with the tripod pedestal.

- Read P18 for information about other lenses that can be used.
- Refer to P24 for information about the battery charging time and the number of recordable pictures.
- NOTE: Accessories and/or model numbers may vary between countries. Consult your local dealer.
- Refer to catalogues/Web pages for most current information regarding optional accessories.

<http://panasonic.jp/support/global/cs/dsc/>

(This Site is English only.)

# Digital Camera Accessory Order Form

(For USA and Puerto Rico Customers)

Please photocopy this form when placing an order.

1. Digital Camera Model # \_\_\_\_\_

2. Items Ordered

Accessory #	Description	Price Each	Quantity	Total Price
Subtotal				
Your State & Local Sales Tax				
Shipping & Handling				6.95
Total Enclosed				

3. Method of payment (check one)

- Check of Money Order enclosed (NO C.O.D.SHIPMENTS)
- VISA                      Credit Card # \_\_\_\_\_
- MasterCard              Expiration Date \_\_\_\_\_
- Discover                    Customer Signature \_\_\_\_\_

Make Check or Money Order to: PANASONIC ACCESSORIES

(Please do not send cash)

4. Shipping information (UPS delivery requires complete street address)

Ship To:

Mr.

Mrs.

Ms.

First \_\_\_\_\_ Last \_\_\_\_\_

Phone#:

Day ( ) \_\_\_\_\_

Street Address \_\_\_\_\_

Night ( ) \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

TO OBTAIN ANY OF OUR DIGITAL CAMERA ACCESSORIES YOU CAN DO ANY OF THE FOLLOWING:  
 VISIT YOUR LOCAL PANASONIC DEALER  
 OR  
 CALL PANASONIC'S ACCESSORY ORDER LINE AT 1-800-332-5368  
 [6 AM-6 PM M-F, PACIFIC TIME]  
 OR  
 MAIL THIS ORDER TO: PANASONIC SERVICE AND TECHNOLOGY COMPANY  
 ACCESSORY ORDER OFFICE  
 20421 84th Avenue South Kent, WA. 98032

In CANADA, please contact your local Dealer for more information about accessories.

## Limited Warranty (ONLY FOR U.S.A. AND PUERTO RICO)

**Panasonic Consumer Electronics Company,  
Division of Panasonic Corporation of North America**  
One Panasonic Way, Secaucus, New Jersey 07094

### Panasonic Digital Still Camera Products Limited Warranty

#### Limited Warranty Coverage (For USA and Puerto Rico Only)

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

Product or Part Name	Parts	Labor
Digital Still Camera	1 year	1 year
CCD	6 months	90 days
SD Memory Cards, Rechargeable Battery Pack (defective exchange)	90 days	Not Applicable

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. This Limited Warranty excludes both parts and labor for non-rechargeable batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is".

### Mail-In Service

For assistance in the U.S.A. and Puerto Rico in obtaining repairs, please ship the product prepaid to:

**Panasonic Exchange Center**  
**4900 George McVay Drive**  
**Suite B**  
**McAllen, TX 78503**  
**[panacare@us.panasonic.com](mailto:panacare@us.panasonic.com)**

When shipping the unit, carefully pack, include all accessories, and send it prepaid, adequately insured and preferably in the original carton. If Lithium Ion batteries are shipped by air the package must be labeled "Contains Lithium Ion Battery (No lithium metal)". Damaged batteries are prohibited from shipment by US Mail. Batteries must be securely packed in a manner to prevent short-circuiting and a package cannot contain more than 3 Lithium Ion batteries. Include a letter detailing the complaint, a return address and provide a daytime phone number where you can be reached. A valid registered receipt is required under the Limited Warranty.

**IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD, THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.**

### Limited Warranty Limits And Exclusions

This warranty **ONLY COVERS** failures due to defects in materials or workmanship, and **DOES NOT COVER** normal wear and tear or cosmetic damage. The warranty **ALSO DOES NOT COVER** damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE".**

**THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.**

(As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but for illustration only.)

**ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.**

**Customer Services Directory (United States and Puerto Rico)**

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/help>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:

1-800-211-PANA (7262)

Monday-Friday 9am-9pm, Saturday-Sunday 10am-7pm EST

**For hearing or speech impaired TTY users, TTY: 1-877-833-8855**

**Accessory Purchases (United States and Puerto Rico)**

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pstc.panasonic.com>

Or, send your request by E-mail to:

[npcparts@us.panasonic.com](mailto:npcparts@us.panasonic.com)

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only)

(Monday-Friday 9am-9pm EST)

Panasonic Service and Technology Company

20421 84th Avenue South, Kent, WA 98032

(We accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

**For hearing or speech impaired TTY users, TTY: 1-866-605-1277**

**As of November 2009**

# Index

## A

AC Adaptor .....	171, 173, 181
Access Indication .....	29
Advanced Scene Mode .....	98
AF Assist Lamp .....	138
AF Mode .....	78
AF Tracking .....	48, 81
AF/AE Lock .....	85
AF/AE Lock Hold .....	137
AFC .....	52, 78
AF+MF .....	139
AFS .....	52, 78
Aperture-priority AE .....	94
Aspect Ratio .....	126, 201
Aspect Ratio Conversion .....	156
Audio Recording .....	111, 134
Auto Bracket .....	75, 133
Auto LCD Off .....	36
Auto Power LCD .....	36
Auto Review .....	37
Auto White Balance .....	87
AV cable .....	162
Available Recording Time .....	205
AVCHD Lite .....	113

## B

Baby Mode .....	104
Backlight Compensation .....	48
Battery .....	24, 28
Beep .....	35
Body Cap .....	20
Built-in Flash .....	66
Bulb .....	96
Burst Mode .....	73
Burst Rate .....	73, 132

## C

Calendar Playback .....	59
Calibration .....	38
Card .....	28, 29
Center Weighted .....	128
Charger .....	187
Charging .....	24
Cleaning .....	185
Clock Set .....	30, 35
Close-up Mode .....	101
Color Space .....	133, 172

Color Temperature Setting .....	88
Condensation .....	5
Continuous AF (Motion Picture) .....	135
Continuous AF (Still picture) .....	137
Cropping .....	155
Custom Mode .....	109
Custom Set Memory .....	108, 136

## D

Date Printing .....	159, 175
DC Cable .....	171, 173, 181
DCF standard .....	57
Deleting Pictures .....	61
Dial Guide .....	142
Digital Red-eye Correction .....	68, 130
Digital Zoom .....	55, 132
Diopter Adjustment .....	42
Direct Focus Area .....	138
Direction Detection Function .....	41
Dust Reduction Function .....	186

## E

Economy Mode .....	36
Entering Text .....	144
Exposure .....	85
Exposure Compensation .....	72
Exposure Meter .....	139
Exposure Setting .....	140
Extended Optical Zoom .....	55, 132
External flash .....	177
External Microphone .....	180
Eye Cup .....	186
Eye Sensor .....	42
EZ .....	55, 56, 127, 205

## F

Face Detection .....	47, 79, 113
Face Recognition .....	117, 128
Face Recognition Edit .....	161
Favorite .....	158
File Number .....	39, 172
Film Mode .....	91
Fine .....	127
Flash .....	66, 129
Flash Adjust .....	70, 130
Flash Synchro .....	71, 130
Flicker Reduction Function .....	116
Fn Button Set .....	136
Focus .....	53, 85
Focus Distance Reference Mark .....	84



Focus Priority .....	138	Metering Mode .....	128
Folder Composition .....	172	MF .....	52, 83
Folder Number .....	39, 172	MF Assist .....	83, 139
Formatting .....	39	MF Guide .....	139
<b>G</b>		Microphone .....	111, 134
Guide Line .....	65, 136	Monitor/Viewfinder .....	35
<b>H</b>		Motion Picture P Mode .....	115
HDMI mini Cable .....	163	Multi Film Bracket .....	93
HDMI Mode .....	37	Multi Playback .....	58
Highlight Display .....	136	Multiple .....	128
Histogram .....	65, 136	My Color Mode .....	106
Hot shoe .....	177, 180	My Menu .....	31
<b>I</b>		<b>N</b>	
I.Resolution .....	130	ND Filter .....	178
IA Button Switch .....	141	Night Portrait Mode .....	102
Intelligent Auto Mode .....	46, 112	NO.RESET .....	39
Intelligent Exposure .....	131	Number of Prints .....	175
Intelligent ISO .....	90	Number of Recordable Pictures .....	201
Intelligent ISO sensitivity control .....	90	<b>O</b>	
ISO Increments .....	131	Optical Image Stabilizer .....	21, 129
ISO Limit Set .....	131	Optical Zoom .....	55
ISO Sensitivity .....	89	<b>P</b>	
<b>J</b>		Paper Size .....	176
Jitter .....	53	Party Mode .....	104
<b>L</b>		PC .....	37
Language Setting .....	39	Peripheral Defocus Mode .....	105
Layout .....	176	Personal Information .....	188
LCD Display Style .....	140	Pet Mode .....	105
LCD Information Display .....	140	PictBridge .....	173
LCD Mode .....	36	Picture Size .....	126, 201
LCD Monitor .....	40, 63, 182	Pictures with Audio .....	145, 146
Lens .....	18, 20	Pixel Refresh .....	142
Lens Cap .....	20	PL Filter .....	178
Lens Hood .....	22	Playback Mode .....	148
Lens Rear Cap .....	20	Playback Pictures on TV .....	162, 163
LONG SHUTTER NR .....	132	Playback Zoom .....	60
LVF Display Style .....	140	Playing Back Motion Pictures .....	145
LVF/LCD Auto .....	141	Portrait Mode .....	99
<b>M</b>		Power LCD .....	36
Manual Exposure Assistance .....	96	Pre AF .....	137
Manual Focus .....	83	Preview .....	97
MC Protector .....	178	Preview hold .....	139
Menu Resume .....	142	Print Setting .....	159
		Program AE .....	51
		Program Shift .....	55
		Protect .....	160

<hr/>	
<b>Q</b>	
<hr/>	
Quality .....	127, 201
Quick AF .....	137
Quick Menu .....	33
<hr/>	
<b>R</b>	
<hr/>	
RAW .....	127
RAW+Fine .....	127
RAW+Standard .....	127
Rec Area .....	141
Rec Mode .....	113, 134
Recording Motion Picture .....	110
Recording Quality Setting (Motion Picture Mode) .....	113, 135, 205
Remaining Display .....	141
Remote Shutter .....	179
Reset of Setting .....	39
Resizing .....	154
Rotate .....	157
Rotate Display .....	157
<hr/>	
<b>S</b>	
<hr/>	
Scene Detection .....	47, 113
Scene Menu .....	38
Scene Mode .....	103
Scenery Mode .....	100
Self-timer .....	77, 133
Sensor Cleaning .....	142
Setup Menu .....	35
Shoot without lens .....	143
Shoulder Strap .....	23
Shutter-priority AE .....	94
Sleep Mode .....	36
Slide Show .....	147
Sports Mode .....	100
Spot .....	128
Standard .....	127
Status Indicator .....	46
Stereo Microphone .....	180
Stylus Pen .....	9, 15
Sunset Mode .....	103
<hr/>	
<b>T</b>	
<hr/>	
Text Stamp .....	150
Thumbnail .....	198
Title Edit .....	149
Touch Guide .....	142
Touch Panel .....	15
Touch Q.MENU .....	141
<hr/>	
Touch Scroll .....	142
Touch Shutter .....	54, 142
Travel Date .....	35, 123
Tripod Adaptor .....	189, 211
Tripods .....	189
TV Aspect .....	37
<hr/>	
<b>U</b>	
<hr/>	
Unipods .....	189
USB Connection Cable .....	171, 173
USB Mode .....	37
<hr/>	
<b>V</b>	
<hr/>	
Version Display .....	39
Video Divide .....	153
VIERA Link .....	38, 165
Viewfinder .....	42, 63, 182
Volume of Speakers .....	35
<hr/>	
<b>W</b>	
<hr/>	
White Balance .....	86
White Balance Bracket .....	89
White Balance Fine Adjustment .....	88
Wind cut .....	135
World Time .....	35, 125
<hr/>	
<b>Z</b>	
<hr/>	
Zoom .....	55, 132

## Useful Information (For Latin American Countries Only)

### Customer Service

#### Customer Service Directory

Obtain product information and operative assistant; localize the closer distributor or Service Center; buy spare parts and accessories by our web site to Latin American:

**<http://www.lar.panasonic.com>**

Also you may contact us directly by our Contact Center:

Panama	800-PANA (800-7262)
Colombia	01-8000-94PANA (01-8000-947262)
Ecuador	1800-PANASONIC (1800-726276)
Costa Rica	800-PANA737 (800-7262737)
El Salvador	800-PANA (800-7262)
Guatemala	1-801-811-PANA (1-801-811-7262)
Chile	800-390-602
	From a cell phone: 797-5000
Venezuela	800-PANA-800 (800-7262-800)
Uruguay	0-800-PANA (0-800-7262)
Peru	0800-00726
Argentina	0800-333-PANA (0800-333-7262)
	0810-321-PANA (0810-321-7262)

### Mexico Service

To obtain information in the Republic of Mexico contact us at:

**[email: atencion.clientes@mx.panasonic.com](mailto:atencion.clientes@mx.panasonic.com)**

Or you may contact us in the next following phones numbers:

01800-VIP-PANA (01800-847-7262) - Interior  
(55) 5000-1200 - Mexico D.F. and Metropolitan Area

- G MICRO SYSTEM is a lens exchange type digital camera system of LUMIX based on a Micro Four Thirds System standard.
- Micro Four Thirds™ and Micro Four Thirds Logo marks are trademarks or registered trademarks of Olympus Imaging Corporation, in Japan, the United States, the European Union and other countries.
- Four Thirds™ and Four Thirds Logo marks are trademarks or registered trademarks of Olympus Imaging Corporation, in Japan, the United States, the European Union and other countries.
- SDXC Logo is a trademark of SD-3C, LLC.
- The "AVCHD", "AVCHD Lite" and the "AVCHD", "AVCHD Lite" logo are trademarks of Panasonic Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- VIERA Link™ is a trademark of Panasonic Corporation.
- EZ Sync™ is a trademark of Panasonic Corporation.
- HDAVI Control™ is a trademark of Panasonic Corporation.
- QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.
- Adobe is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.
- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.
- Other names, company names, and product names printed in these instructions are trademarks or registered trademarks of the companies concerned.



AVCHD Lite™



DIGITAL  
CREATOR



This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

For USA and Canada

Panasonic Consumer Electronics Company,  
Division of Panasonic Corporation of North America  
One Panasonic Way, Secaucus, NJ 07094

Panasonic Canada Inc.  
5770 Ambler Drive, Mississauga, Ontario, L4W 2T3

© Panasonic Corporation 2010



Printed in China  
VQT2S30  
F0410SM0