


# Please read

- If you still have questions, visit our website!  
 → (U.S.A.) [www.panasonic.com/dvdhelp/](http://www.panasonic.com/dvdhelp/)  
 (Canada) [www.panasonic.ca](http://www.panasonic.ca)

## Copy (One Touch Transfer)

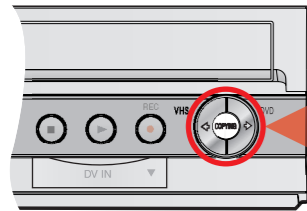

Main unit

While both DVD and VHS are stopped, press and hold for about 3 seconds or more.



### Discs you can record on

	DVD-RAM RAM4.7	DVD-R R4.7	DVD-R DL* R DL	DVD-RW RW	+R	+R DL*	+RW
Repeated recording	Yes	No	No	Yes	No	No	Yes
Copy-once recording (digital broadcasts)	Yes (CPRM compatible discs only)	No	No	No	No	No	No
Playing on other equipment (DVD-RAM compatible equipment only)	Yes	Yes	Yes	Yes	Yes	Yes	Yes

\* You can record onto the second layer of dual- or double-layer discs after closing the first layer.


To play **DVD-R** **DVD-R DL** **DVD-RW** **+R** **+R DL** on other equipment,

### Use the Finalize feature!


DVD-R, etc. recorded on this unit cannot be played on other players immediately after recording. Using the Finalize feature allows you to play these discs on other players. (However, once the disc is finalized you will no longer be able to record to the disc.)

**Preparation:** Select DVD side with pressing [DRIVE SELECT].  
 Insert the disc you want to finalize and stop play.

### 1 Display the Functions screen.

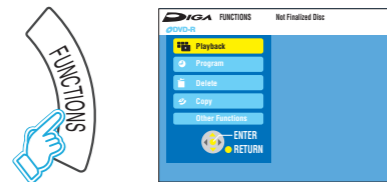

### 2 Display the Finalize screen.

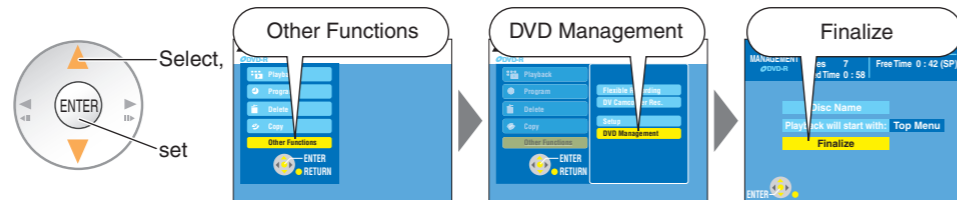

### 3 Follow the on-screen instructions to start finalizing.

- Finalizing takes up to 15 minutes.  
 (Do not disconnect the AC power supply cord while finalizing!)

# Panasonic®

# SET UP GUIDE

## DMR-ES35V



If you have any questions contact  
 (U.S.A.) 1-800-211-7262  
 (Canada) 1-800-561-5505

Connect and set as shown overleaf.

## Let's begin!

Before performing operations, be sure to select drive.

**DVD**

The DVD indicator lights up on the unit.

**VHS**


The VHS indicator lights up on the unit.

### Record


#### 1 Select the channel.



#### 2 Select the recording mode.

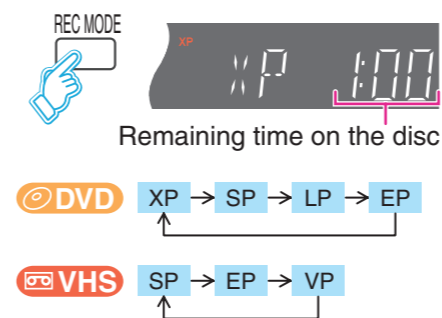

#### 3 Start recording.

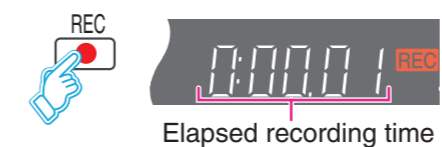


- To stop  
 → STOP


### Play

Playing discs **DVD**

#### 1 Display the title view.

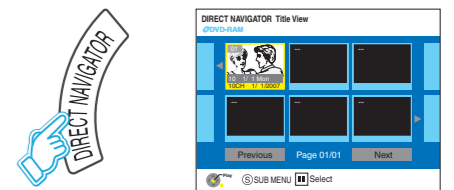

#### 2 Start playing.

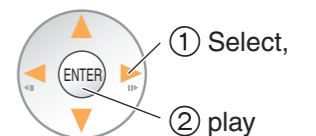

- To stop  
 → STOP

### Information

- To play DVD-R, DVD-R DL, DVD-RW, +R, +R DL on other equipment  
 → Finalize them on this unit first ("Please read")

- Other connections (when you also want to connect an amplifier, etc.).  
→ Operating Instructions (P. 13–15).


## With a TV

### Connection (with Audio/Video cable)

Connect in numerical order **1** to **4**.  
After this connection, set the RF output channel "OFF".  
→ Operating Instructions (P. 16).


### Connection (without Audio/Video cable)

You do not need to connect "**3**".  
After this connection, set the RF output channel "CH3" or "CH4".  
→ Operating Instructions (P. 16).

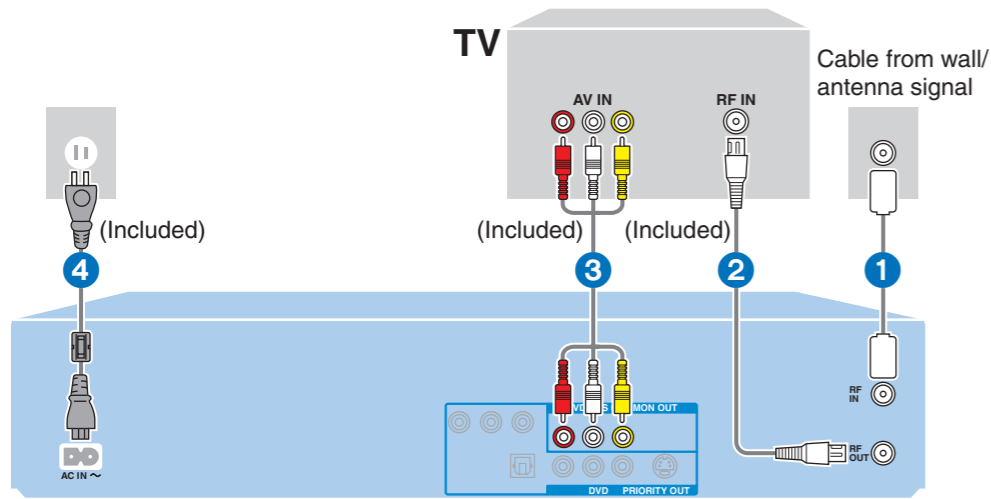

This unit

## With a TV and cable box or satellite receiver

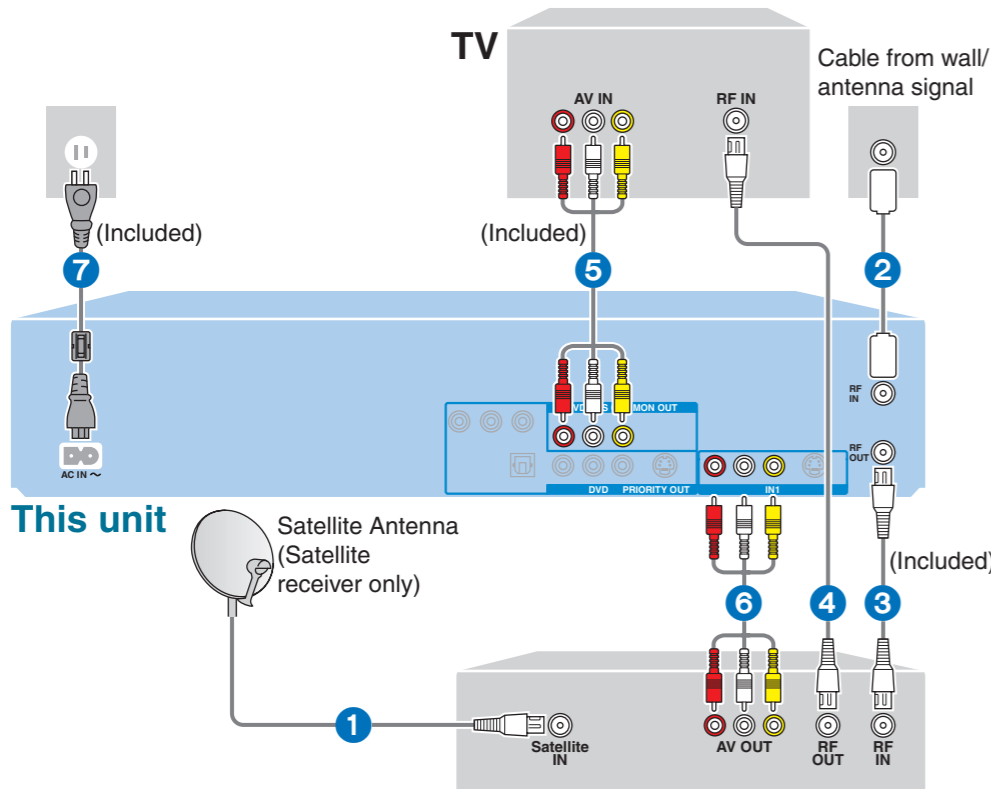


This unit

Cable box or Satellite receiver

## DVD output and DVD/VHS output

The unit has DVD/VHS COMMON output terminals and DVD PRIORITY output terminals.

### DVD/VHS COMMON output

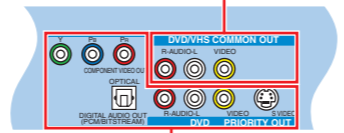

### DVD PRIORITY output

**DVD/VHS COMMON OUT**  
For DVD/VHS COMMON output terminals, both DVD and VHS signals can be output.

**DVD PRIORITY OUT**  
You can also playback a tape with the DVD PRIORITY output terminal except while recording, or making a scheduled recording, on the DVD.



## Preparing TV

On your TV's remote control


- 1 Turn the TV on.
- 2 Switch input to "AV input" etc.  
e.g. the TV/VIDEO or INPUT button

- 3 Turn this unit on.

DVD/VHS POWER





- 4 Select an RF output channel number.

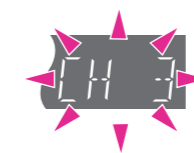

**Connection (with Audio/Video cable)**  
Select "OFF".



**Connection (without Audio/Video cable)**  
Select "CH3" or "CH4" which displays the screen of step 5.

- 5 Select the language.

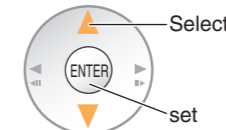
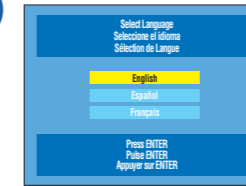


- If you make a mistake, press RETURN.



- 6 Select the type of TV you are using.

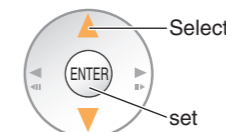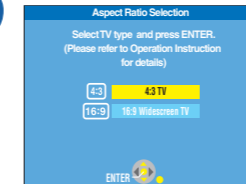

- 7 Select "On".

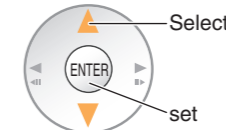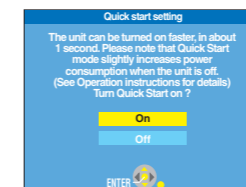


- 8 Select "Internal TV Tuner".

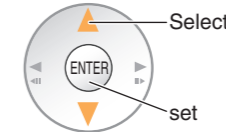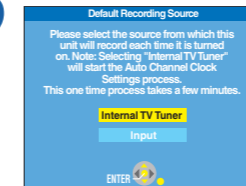

- 9 Complete the settings.

(If time is displayed...)

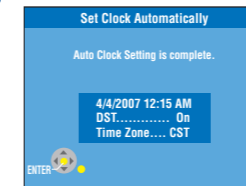

- When clock setting screen appears.

