

# Panasonic®

 
Model No. **KX-TG6431/KX-TG6432**  
**KX-TG6433/KX-TG6434**  
**KX-TG6441/KX-TG6442**  
**KX-TG6443/KX-TG6444**  
**KX-TG6445**

## Quick Guide

### Setting up


#### Base unit

- Use only the supplied Panasonic AC adaptor PQLV219.

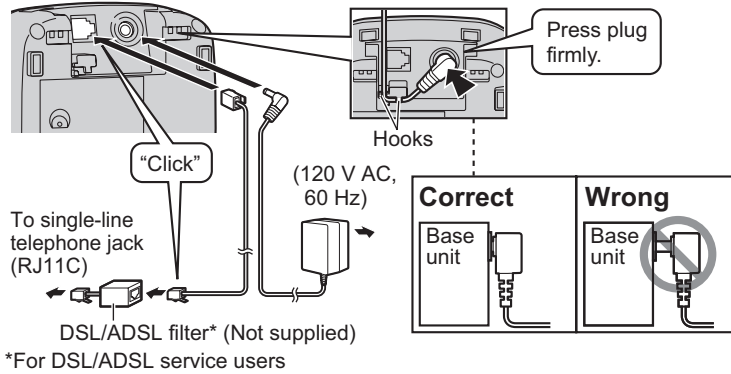


#### Handset

 - USE ONLY Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.
- Confirm correct polarities (⊕, ⊖).

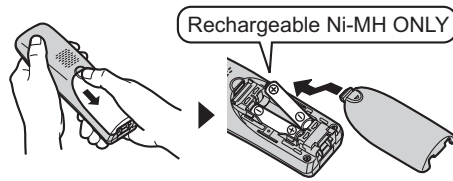


#### Charger

 - Use only the supplied Panasonic AC adaptor PQLV219.

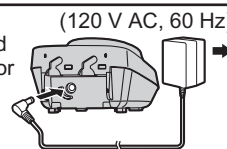



#### CHARGE FOR ABOUT 7 HOURS

 Confirm "Charging" is displayed.

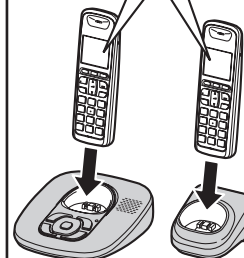


## Operating tips
 
### Navigator key/ (Volume) key

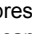
By pressing this key ( or ) repeatedly, you can:

 
- scroll through (up or down) various lists or items
- adjust the receiver or speaker volume (up or down) while talking
- move the cursor (left or right) to edit number or name

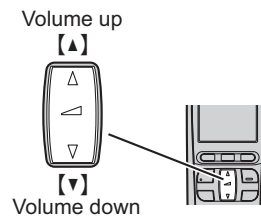

### Soft keys

The handset features 3 soft keys. By pressing a soft key, you can select the feature shown directly above it on the display.

 , **[MENU]**, **[REDIAL]**, and other additional functions are assigned to the soft keys. Pay attention to the display to see what functions the soft keys are assigned during handset operation.

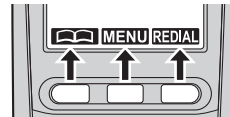


## Date and time (Handset)

 
- 1** **[MENU]** → **[#][1][0][1]**
- 2** Enter the current month, date, and year. → **[OK]**
- 3** Enter the current hour and minute (12-hour clock format).
- 4** **[AM/PM]**: Select “**AM**” or “**PM**”. → **[SAVE]** → **[OFF]**

 
For further information, visit <http://www.panasonic.com/help> or refer to operating instructions.

<b>Basic operations</b>	
<b>Making/Answering calls (Handset)</b>	
Making calls	Dial the phone number. → <b>[📞]/[📞]</b>
Answering calls	<b>[📞]/[📞]</b>
To hang up	<b>[OFF]</b>
To adjust the receiver or speaker volume	Press <b>[▲]</b> or <b>[▼]</b> repeatedly while talking.
Making a call using the redial list	<b>[REDIAL]</b> → <b>[▼]/[▲]</b> : Select the desired phone number. → <b>[📞]</b>
To adjust the handset ringer volume	<b>1 [MENU]</b> → <b>[#][1][6][0]</b> <b>2 [▼]/[▲]</b> : Select the desired volume. → <b>[SAVE]</b>
<b>Making/Answering calls (Base unit): KX-TG6441 series</b>	
Making calls	<b>[SP-PHONE]</b> → Dial the phone number.
Answering calls	<b>[SP-PHONE]</b>
To hang up	<b>[SP-PHONE]</b>
To adjust the speaker volume	Press <b>[▲]</b> or <b>[▼]</b> repeatedly while talking.
Redialing the last number dialed	<b>[SP-PHONE]</b> → <b>[REDIAL]</b>
To adjust the base unit ringer volume	Press <b>[▲]</b> or <b>[▼]</b> repeatedly to select the desired volume. <ul style="list-style-type: none"> <li>• To turn the ringer off, press and hold <b>[▼]</b> until the unit beeps 2 times.</li> </ul>
<b>Shared phonebook (Handset)</b>	
Adding entries	<b>1 [📁]</b> → <b>[ADD]</b> <b>2</b> Enter the party's name (16 characters max.). → <b>[OK]</b> <b>3</b> Enter the party's phone number (32 digits max.). → <b>[OK]</b> <b>4 [▼]/[▲]</b> : "Set Ringer ID" → <b>[SELECT]</b> <b>5 [▼]/[▲]</b> : Select the desired setting. → <b>[OK]</b> → <b>[SAVE]</b> → <b>[OFF]</b> <ul style="list-style-type: none"> <li>• To enter a name, see the character table in the operating instructions.</li> </ul>
Making calls	<b>[📁]</b> → <b>[▼]/[▲]</b> : Select the desired entry. → <b>[📞]</b>
<b>Answering system (Base unit)</b>	
Answering on/off	Press <b>[ANSWER ON]</b> to turn on/off the answering system.
Listening to messages	<b>[▶]</b>

Frequently asked questions	
Question	Cause/solution
Why is  displayed?	<ul style="list-style-type: none"> <li>• The handset is too far from the base unit. Move closer.</li> <li>• The base unit's AC adaptor is not properly connected. Reconnect AC adaptor to the base unit.</li> <li>• You are using the handset or base unit in an area with high electrical interference. Re-position the base unit and use the handset away from sources of interference.</li> <li>• The handset is not registered to the base unit. Register it.</li> </ul>
How can I increase the handset volume level?	<ul style="list-style-type: none"> <li>• Press the navigator key [<b>▲</b>] repeatedly while talking.</li> </ul>
Why is the conversation noisy or cutting off?	<ul style="list-style-type: none"> <li>• Try to relocate the base unit so that the distance to the handset is minimized.</li> <li>• If the same problem occurs even if the handset is next to the base unit, call Panasonic customer support at 1-800-211-PANA (1-800-211-7262).</li> </ul>
Can I add another accessory handset to my base unit?	<ul style="list-style-type: none"> <li>• Yes, you can add up to 6 handsets (including the handset(s) sold with your base unit) to a single base unit.</li> <li>• To purchase additional accessory handset(s) (KX-TGA641/KX-TGA740), please visit <a href="http://www.panasonic.com">http://www.panasonic.com</a> or call 1-800-332-5368. TTY users (hearing or speech impaired users) can call 1-866-605-1277.</li> </ul>
Can I keep the batteries charging all the time?	<ul style="list-style-type: none"> <li>• You can leave the handset on the base unit or charger anytime. This will not harm the batteries.</li> </ul>
How can I answer a call waiting call (2nd call)?	<ul style="list-style-type: none"> <li>• Press [<b>CALL WAIT</b>] when you hear the call waiting tone.</li> </ul>

For further information, visit <http://www.panasonic.com/help> or refer to operating instructions.

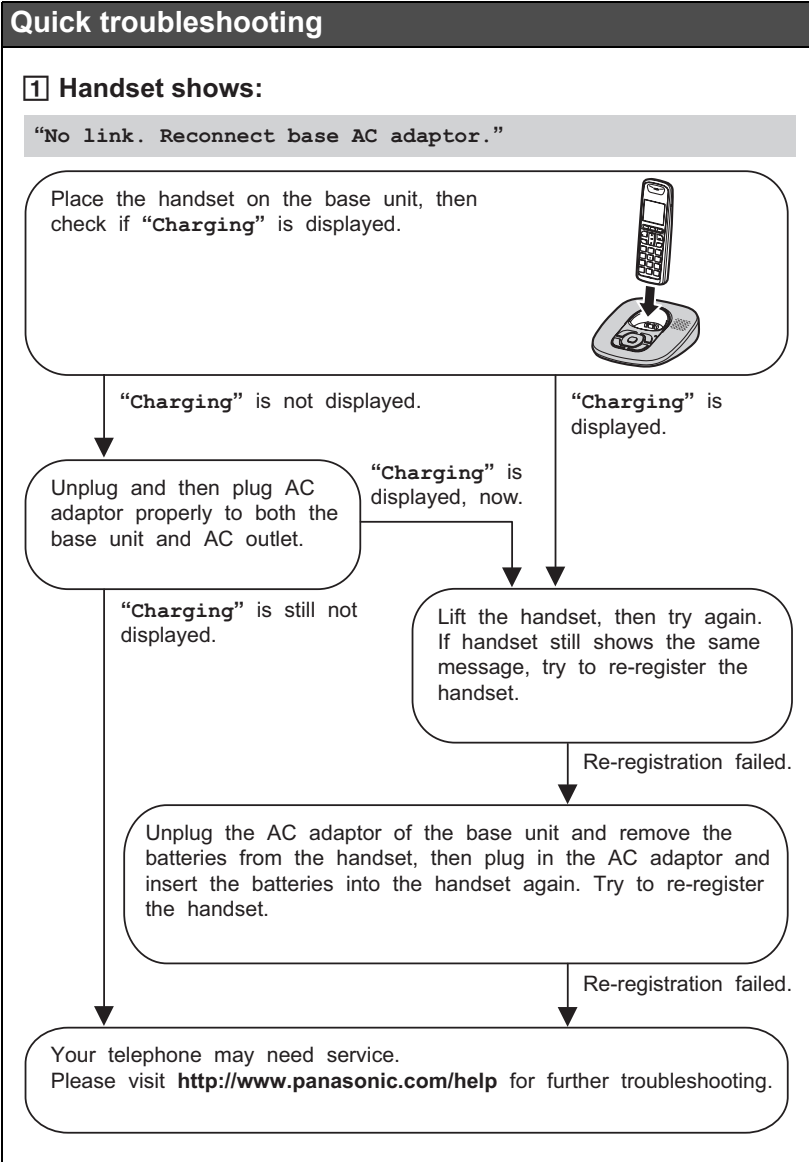

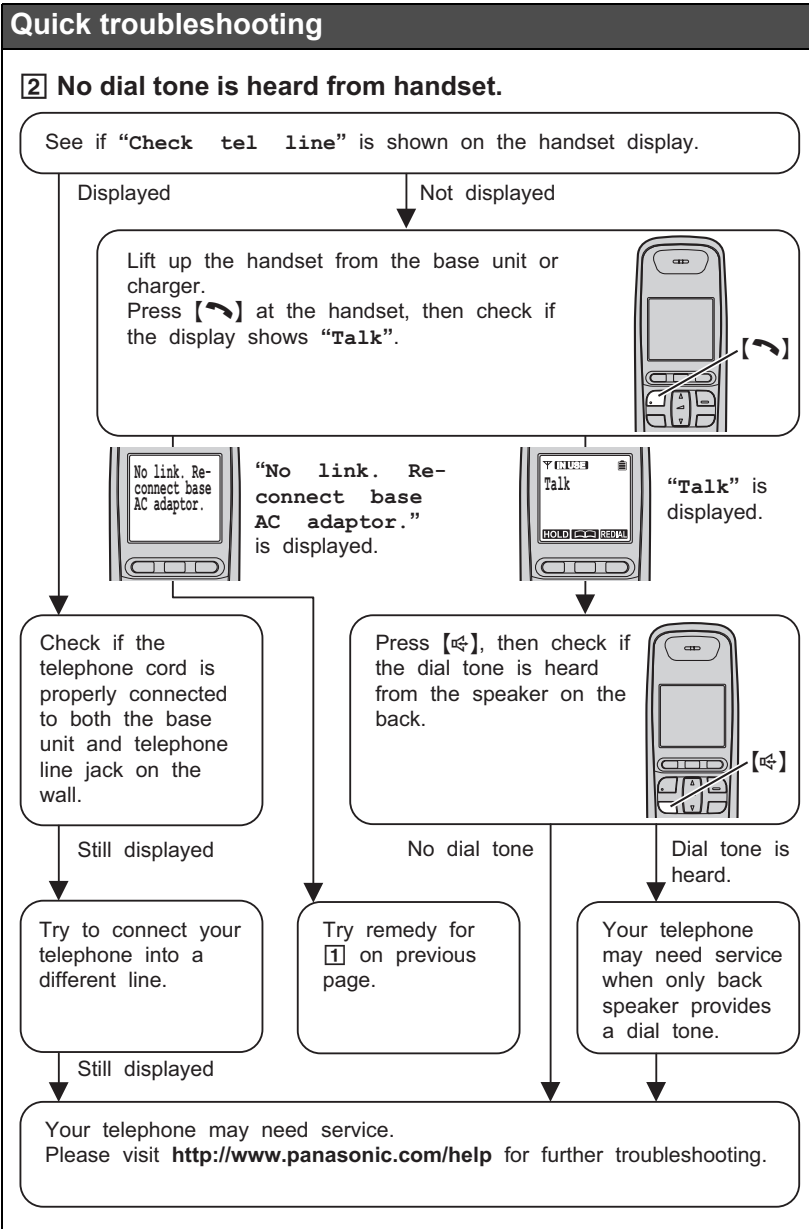


## Registering a handset to a base unit

The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit, re-register the handset.

### Handset

 **[MENU]** → **[#][1][3][0]**

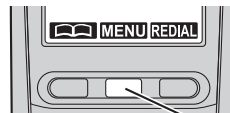


**[MENU]**



### Base unit

Press and hold **[LOCATOR]** for about 4 seconds until the registration tone sounds.

 - The next step must be completed within 90 seconds.

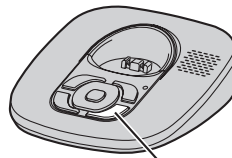

**[LOCATOR]**



### Handset

Press **[OK]**, then press **[OFF]** after a long beep sounds.



**[OK]**

For further registration information, visit  
<http://www.panasonic.com/RegisterYourHandset>

## **IMPORTANT!**

**If your product is not working properly ...**

**① Reconnect AC adaptor to the base unit.**



**② Check if telephone line cord is connected.**



**③ Use rechargeable Ni-MH batteries.**  
(Alkaline/Manganese/Ni-Cd batteries CANNOT be used.)



**④ Read FAQ in this Quick Guide and  
troubleshooting page in the Operating Instructions.**



Visit our web site: <http://www.panasonic.com/help>  
• Operating Instructions downloading, FAQ,  
and troubleshooting hints are available.



Contact us via the web at:  
<http://www.panasonic.com/contactinfo>



Call us at: **1-800-211-PANA (1-800-211-7262)**  
• Monday- Friday 9:00am - 9:00pm (EST)  
Saturday/Sunday 10:00am - 7:00pm (EST)

To order replacement batteries,  
please call: 1-800-332-5368  
Or visit: <http://www.panasonic.com/batterystore>