

## Quick Start Guide

Ensure your home wireless network is on and the microwave oven within wireless range.

If you've purchased this microwave oven from Amazon [and](#) already have your wireless network credentials registered to your Amazon account, please follow **Method 1**.

All others, please follow **Method 2**.

### Method 1: Zero-touch setup

1. Plug microwave oven into a grounded power outlet. ↓
2. Microwave should automatically be in setup mode. Setup mode will show a blinking  icon.   
If the  is not lit, press the **[Popcorn]** button for 3 seconds to reactivate the wireless set up mode.
3. When the  stops blinking and stays on steadily, the setup is complete. Your microwave oven is connected.
4. Once connected, press the round **[Start]** button within 10 seconds to finish setting up weight and sound options.

### Method 2: 2D code setup:

1. Install the latest version of Alexa app onto your smart device and login with your Amazon account.
2. Plug the microwave oven into a grounded power outlet. ↓
3. Microwave should automatically be in setup mode. Setup mode will show a blinking  icon.   
If the  is not lit, press the **[Popcorn]** button for 3 seconds to reactivate the wireless set up mode.
4. Launch the alexa app on your smart device and a dialog box should automatically pop up (with the microwave oven information), then follow the on-screen instructions to set up your microwave oven to your wireless network.  
You will be prompted to scan a 2D code. Open the microwave oven door to scan the 2D code to connect your smart device with the microwave oven. 
5. When the  stops blinking and stays on steadily, the setup is complete. Your microwave is connected.
6. Once connected, press the round **[Start]** button within 10 seconds to finish setting up weight and sound options.

### Disconnect from Alexa:

If you no longer want the microwave oven connected to Alexa, press and hold the **[Turbo Defrost]** and **[Quick 30]** buttons together for 3 seconds.

Repeat above steps if you wish to reconnect again.

For complete instructions and troubleshooting, please refer to the operation manual.

**Panasonic**

## Let's try with Alexa

Alexa can understand over 100 commands. For a complete list of Alexa-capable commands, please refer to the enclosed Operating Instructions.

### Cook for a Specific Time

Alexa, 1 minute on the microwave.  
Alexa, cook in the microwave for 2 minutes.  
Alexa, cook at medium for 3 minutes.  
Alexa, reheat for 30 seconds.

### Stop, Pause, Resume

Alexa, stop the microwave.  
Alexa, pause the microwave.  
Alexa, restart the microwave.

### Defrost a Specific food item

Alexa, defrost for 10 minutes.  
Alexa, defrost half pounds of ground beef.  
Alexa, defrost bread.  
Alexa's response: "How many do you want to defrost?"  
You: Two.

### Reheat a Specific food item

Alexa, reheat 1 cup of coffee.  
Alexa, reheat leftovers.  
Alexa, reheat lasagna.

### Cook a Specific food item

Alexa, cook frozen pizza\*.  
Alexa, cook potatoes\*.  
Alexa, cook frozen mixed vegetables\*.

### Keep warm

Alexa, warm food for 15 minutes.

### Add cooking time

Alexa, add 30 seconds to microwave.  
Alexa, add 15 seconds to microwave.

### Soften/Melt food

Alexa, melt 8 ounces of chocolate in the microwave  
Alexa, soften butter in the microwave.  
Alexa's response: "What's the weight of butter?"  
You: 4 ounces.

### Make Popcorn

Alexa, make popcorn in the microwave.  
Alexa's response: "What's the weight of popcorn?"  
You: 1.8 ounces

\*You may say either "microwave" or "cook".

For complete instructions and troubleshooting, please refer to the operation manual.

**Panasonic**

2240\_110521