

**Panasonic**<sup>®</sup>

TC-55CX850U

TC-65CX850U

*e***HELP**

## Read first

### eHELP

- How to use 10

### Features

- 4K resolution 11
- Home Screen 12
- Info Frame 13
- Touch Pad Controller 14
- Internet (Network services) 15
- Home network “DLNA” 16
- Easy Mirroring 17

## Using Home Screen

### Home Screen

- Information 18
- How to use 20
- Pin to HOME 21
- Option menu 22

### Live TV

- How to use 23
- Option menu 24

### Apps

- How to use 25
- Option menu 26

### Devices

- How to use 27
- Option menu 28

## Watching TV

### Cable / Satellite / Fiber Optic box

- Initial setting 29

### Antenna / Cable service without a box

- Initial setting 30

• Select channels	31
• Favorite channels	32
• Closed Caption	33
• SAP	34
• Other	35
<b>4K compatible equipment</b>	
• Connecting and viewing	36
• About 4K format	37
• Input signal (AV)	38
<b>Blu-ray, DVD, Game Console, etc.</b>	
• Connecting and viewing	39
• Example of AV connections	40
• HDMI connection notice	42
• HDMI connection caution	43
• Input signal	44
<b>For best picture</b>	
• Picture mode	45
• Auto brightness (ECO)	47
• Aspect setting	48
• Screen mode	49
• Screen mode for 4K format	50
• Zoom adjustments	51
• Lock settings	52
• Copy adjustments	53
<b>For best audio</b>	
• Sound mode	54
• DIGITAL AUDIO OUT terminal	55
<b>Viewing 3D images</b>	
• Notice	56
• Viewing 3D	57
• Change 3D format	58
• Adjust 3D images	59

## Network services

### Connect to network

- Network connections 60
- Network connection types 61

### Network settings

- Setting the menu 63
- Network connection/Network status 64
- my Home Cloud settings 65
- VIERA network name 66
- TV remote App settings 67
- Network link 68
- File sharing settings 69
- Mirroring settings 71
- Control4 settings 72
- Do Not Track setting 73
- Software update 74
- New software notice 75

### How to use

- Operate 76

## Home network “DLNA”

### Get started

- Information 77

### Photos

- Viewing Photos 78
- Photo view 79
- Options menu 80
- Using slideshow 81
- Slideshow settings 82

### Videos

- Viewing Videos 83
- Video view 84
- Options menu 85

<b>Music</b>	
• Playing Music	86
• Music view	87
• Options menu	88

## Media player

### Get started

• Information	89
• Media warning messages	90
• SD card handling cautions	91
• File sharing	92
• Notice	93

### Photos

• Viewing Photos	94
• Photo View	95
• Sort the photos	96
• Options menu	97
• Thumbnails size	98
• Using slideshow	99
• Slideshow settings	100
• Soundtrack settings	101

### Videos

• Viewing Videos	102
• Video view	103
• Options menu	104

### Music

• Playing Music	105
• Music view	106
• Options menu	107

## Convenience features

### Eco navigation

• Eco navigation	108
------------------	-----

Timer	
• Setting the menu	109
Parental control	
• Setting the menu	110
• Password setting	111
• Parental control ratings	112
Closed Caption	
• Setting the menu	114
• Closed Caption notices	115
VIERA Link™ “HDAVI Control™”	
• Basic feature	116
• Connecting note	117
• VIERA Link connections	119
• VIERA Link settings	121
• VIERA Link settings feature	122
• VIERA Link	124
• VIERA Link menu	125
Info Frame	
• Information	127
• How to use	128
• Setting the menu	129
Using Voice guidance	
• Voice guidance	130
Using Voice control	
• Information	131
• How to use	132
• Notice	133
Using Touch Pad Controller	
• Features	135
• Pairing	136
• Identifying controls	137
• Setting the menu	139

Using Bluetooth devices	
• Settings	140
Control by Smartphone, etc.	
• Smartphone remote	141
• Turn on the TV via IP	142
• Mirroring	143
Using USB Keyboard	
• Keyboard	144
<b>All settings</b>	
How to use	
• Setting the menu	145
Picture	
• Basic settings	146
• Pro settings	150
• Advanced picture	154
• Screen settings	157
• 3D settings	159
• Other settings	160
Sound	
• Basic settings	161
• Advanced settings	163
• Voice guidance settings	166
Network	
• Network settings	167
Timer	
• Sleep (Off timer)	171
• Timer (On/Off timer)	172
• Clock settings	173
• Auto turn off settings	174
Setup	
• Eco navigation	175

• Voice control settings	176
• USB device setup	177
• VIERA Touch Pad settings	178
• Bluetooth settings	179
• Parental control	180
• ANTENNA/Cable setup	182
• Language settings	184
• Display customization	185
• Closed Caption	186
• VIERA Link settings	188
• System settings	189
• Other settings	190
• Useful settings	191

## Support / FAQ

### Help menu

• Using Help menu	192
-------------------	-----

### FAQ

• Picture - Viewing	193
• Picture - Snowy / none	194
• Picture - Distortion	195
• Picture - Continue	196
• Sound - None	197
• Sound - Unusual	198
• Networking	199
• Software update	200
• 3D - Viewing	201
• 3D - Format	202
• Voice guidance	203
• Voice control	204
• Touch Pad Controller	205
• Eco navigation	206
• Other	207
• Menu - Gray-out or missing items	208



• Reset to factory defaults	209
-----------------------------	-----

## Information

• Data information	210
--------------------	-----

## Care and Cleaning

• Display panel	212
-----------------	-----

• Cabinet	213
-----------	-----

• Pedestal / Power cord	214
-------------------------	-----

# Read first

## eHELP

### How to use

---

Before using eHELP, check the followings.

#### ■ Meaning of signs



Press the Remote control button



Letters in box : Remote control button



Letters in Cyan : Menus on screen display



References in this eHELP

# Features

## 4K resolution

---

You can watch content in 4K format that has twice the horizontal and vertical resolution of the 1080p signal.


 → **Watching TV > 4K compatible equipment**

## Home Screen

---

“Home Screen” is a gateway to the TV programs, applications and connected devices.

It provides you an easy way to access all the features.

 → **Using Home Screen > Home Screen > Information**

## Info Frame

---

This feature is available only when the item other than **U.S.A.** is selected from **Country** in First time setup.

Info Frame is a convenient feature to provide you relevant information of the watching program, recommendations, etc. It is displayed on the edge of screen when you need it.

 → **Convenience features > Info Frame > Information**

## Touch Pad Controller

---

Touch Pad Controller is designed for the convenient operations on the application, Internet content, etc. You can operate the TV intuitively with this controller.

 → **Convenience features > Using Touch Pad Controller > Features**

## Internet (Network services)

---

You can access some specific websites supported by Panasonic, and enjoy Internet content/Network services such as videos, games, communication tools, etc. from [Apps](#).

- To connect to the Internet

 → **Network services > Connect to network**

- To configure the Network settings

 → **Network services > Network settings**

- To use Internet (Network services)

 → **Network services > How to use**

## Home network “DLNA”

---

You can share the content (Photo, Video, Music, etc.) stored in DLNA Certified media server with your home network system.

 → **Home network “DLNA”**



## Easy Mirroring

---

You can watch display images of other devices (smartphone, etc.) on the TV screen using a mirroring function. You can also start the mirroring function from the other devices without operating the TV.

 → **Convenience features > Control by Smartphone, etc. > Mirroring**

# Using Home Screen


## Home Screen

### Information

---

“Home Screen” is a gateway to the TV programs, applications and connected devices.

Home Screen is displayed by pressing **HOME** and it provides you an easy way to access all the features as shown below (example).

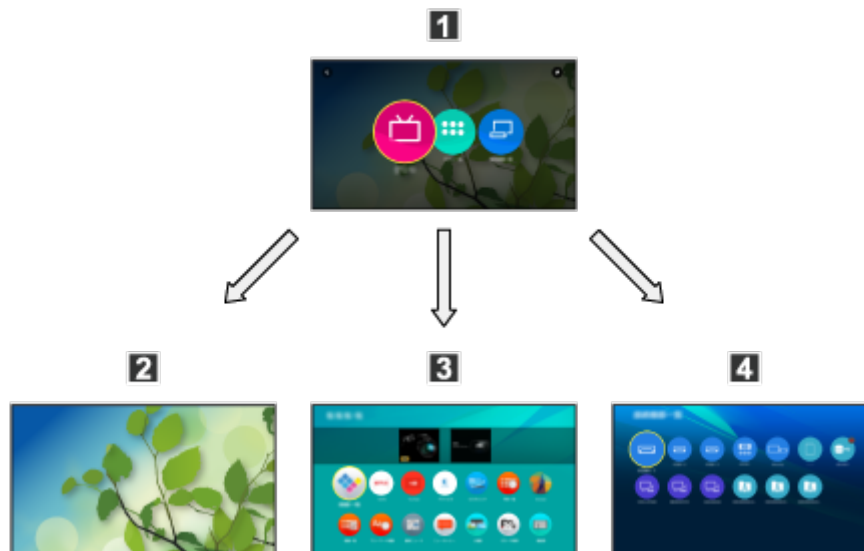

**1** Home Screen

**2** Live TV

- Gateway to TV programs

 → **Using Home Screen > Live TV**

**3** Apps

- Gateway to various applications (Internet content, etc.)

 → **Using Home Screen > Apps**

**4** Devices

- Gateway to connected devices (HDMI equipment, USB device, network device, etc.)

 → **Using Home Screen > Devices**

- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you may not be able to use Home Screen. You can update the software later manually.



**Network services > Network settings > Software update**


## How to use

---

From Home Screen, you can access all the features such as TV programs, applications and connected devices.

1. Display Home Screen with **HOME**.

(Example)

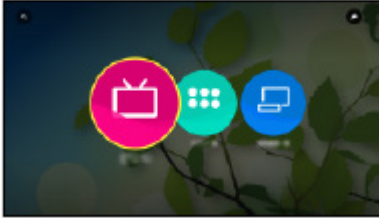


2. Select **Live TV / Apps / Devices** and press **OK** to access.

- To watch full-screen TV, select **Live TV**.

(Example)



- Also refer to  on the top right of Home Screen for the operations.

### ■ Search

You can search the content from various features.


1. Display Home Screen with **HOME**.
2. Select **Q** on the top left of Home Screen and press **OK** to access.
3. Follow the on-screen instructions.

## Pin to HOME

---

You can add a shortcut for frequently used feature on Home Screen.


1. Display Home Screen with **HOME**.
2. Select **Live TV / Apps / Devices** and press **OK** to access.
3. Select a feature (TV program / application / device).
4. Display the option menu with **OPTION**.
5. Select **Pin to HOME** and press **OK** to set.
  - You can also add a shortcut pressing **★** (Pin to HOME) of Touch Pad Controller.
  - To remove a shortcut from Home Screen, set **Unpin from HOME**.

 → **Using Home Screen > Home Screen > Option menu**


## Option menu

---

You can customize Home Screen.

1. Display the option menu with **OPTION**.
2. Select one of the following items and press  to access.

**Unpin from HOME / Move**

3. Set the item and press  to store.
- 

### **Unpin from HOME**

Remove a shortcut from Home Screen.

---

### **Move**

Arranges the position of the icons.

# Live TV


## How to use

---

**Live TV** is a gateway to the TV programs.

1. Display Home Screen with **HOME**.
2. Select **Live TV**.

(Example)

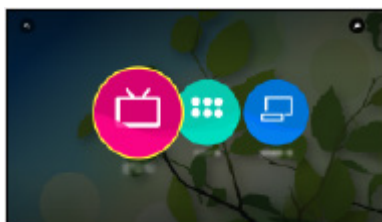

3. Press **OK** to access.


(Example)



- For details of watching TV

 → **Watching TV**

- To add a shortcut icon

 → **Using Home Screen > Home Screen > Pin to HOME**

## Option menu

---

1. Display the option menu with **OPTION**.
2. Select one of the following items and press **OK** to access.

**Pin to HOME / Unpin from HOME / Accessibility / AV Options**

3. Set the item and press **OK** to store.
- 

### **Pin to HOME, Unpin from HOME**

Adds / removes a shortcut for a frequently used feature on Home Screen.

 → **Using Home Screen > Home Screen > Pin to HOME**

- The label (channel position, channel name, etc.) of shortcut is not updated by broadcasters automatically. Remove and add the shortcut again to update the label.
- 

### **Accessibility**

Guidance settings for visually impaired users

 → **Convenience features > Using Voice guidance > Voice guidance**

---

### **AV Options**

Easy optional setting for viewing, sound, etc.

 → **Watching TV > Antenna / Cable service without a box > Other**

- Menu items and selectable options vary depending on the TV mode.



# Apps

## How to use

---

Various applications (Internet content, etc.) can be accessed easily from **Apps**.

1. Display Home Screen with **HOME**.
2. Select **Apps** and press **OK** to access.

(Example)



- To exit **Apps**

**RETURN/EXIT**

- To add a shortcut icon



 → **Using Home Screen > Home Screen > Pin to HOME**

3. Select an application and press **OK** to access.
4. Follow the on-screen instructions.

- A broadband network environment is required to be able to use this function fully.
- Design and specifications are subject to change without notice.

## Option menu

---

1. Display the option menu with **OPTION**.
  2. Select one of the following items and press  to access.  
**Pin to HOME / Unpin from HOME / Move / Lock / Unlock / Uninstall / Show Info.**
  3. Set the item and press  to store.
- 

### **Pin to HOME, Unpin from HOME**

Adds / removes a shortcut for a frequently used feature on Home Screen.

 → **Using Home Screen > Home Screen > Pin to HOME**

---

### **Move**

Arranges the position of the applications.

---

### **Lock, Unlock**

Locks / unlocks the specific applications to restrict access to them (if available).

- Password is required to access to locked application.

 → **Convenience features > Parental control > Password setting**

---

### **Uninstall**

Deletes an application from **Apps** (if available).

---

### **Show Info.**

Displays the information about the selected application.

# Devices


## How to use

---

Connected devices (HDMI equipment, USB device, network device, etc.) can be accessed easily from **Devices**.

1. Display Home Screen with **HOME**.
2. Select **Devices** and press **OK** to access.

(Example)

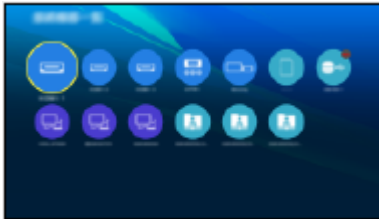

- To exit **Devices**

**RETURN/EXIT**

- To add a shortcut icon

 → **Using Home Screen > Home Screen > Pin to HOME**

3. Select a device and press **OK** to access.

- For external equipment

 → **Watching TV > Blu-ray, DVD, Game Console, etc.**

- For devices for Media Player

 → **Media player**

- For network equipment for DLNA

 → **Home network "DLNA"**



- For mirroring function

 → **Convenience features > Control by Smartphone, etc. > Mirroring**

- Design and specifications are subject to change without notice.

## Option menu

---

1. Display the option menu with **OPTION**.
  2. Select one of the following items and press  to access.  
**Pin to HOME / Unpin from HOME / Accessibility / Show Info.**
  3. Set the item and press  to store.
- 

### **Pin to HOME, Unpin from HOME**

Adds / removes a shortcut for a frequently used feature on Home Screen.

 → **Using Home Screen > Home Screen > Pin to HOME**

---

### **Accessibility**

Guidance settings for visually impaired users

 → **Convenience features > Using Voice guidance > Voice guidance**

---

### **Show Info.**

Displays the information about the selected device.

# Watching TV

## Cable / Satellite / Fiber Optic box

### Initial setting

---

#### 1. Connecting

Select the wiring method connecting your box to the TV, **AV IN** or **Antenna/Cable in**.

Note:

- HDMI will provide the best HD picture

#### 2. Change INPUT



Press the **INPUT** button to select the proper connection. Wait for 2 seconds.

- The menu choices vary depending on which input is selected.

#### 3. Power on your Cable, Satellite or Fiber Optic box

Use the box's remote control to change channels.

- If the box is connected to the TV using a COAX cable (Antenna/Cable in), then set the TV channel to CH3 or CH4. Note that the picture will not be in HD.

- CC/SAP is not available when watching TV with a Cable or Satellite box connected via HDMI.
- If you have a High Definition box, ensure that it is outputting 720p or 1080i signal.  
Tip: press the TV's **INFO** button to verify.
- Check your box's "aspect" or "format" settings. It should be set to 16:9, Widescreen or **Full**.
- If the audio volume is too low, check the box's audio settings.
- Contact your Cable or Satellite provider for instructions of any box settings.

# Antenna / Cable service without a box

## Initial setting

---

### 1. Connect coax

Connect a COAX wire from either an Antenna or Basic Cable service to the TV's "ANTENNA/CABLE IN" screw terminal.



**1** TV (ANTENNA/CABLE IN)

**2** Antenna

### 2. Scan the channel

 **MENU** → **Menu** > **Setup** > **ANTENNA/Cable setup** > **ANTENNA/Cable signal, Auto program**


- 1) Select either **Cable** or **Antenna** programming source in **ANTENNA/Cable signal**.
- 2) Select **Auto program** and then the appropriate scan mode:  
(**All channels** / **Analog only** / **Digital only**)
- 3) Start scanning.

- The tuner setup menu (auto scan, etc.) is only available when INPUT is set to TV.
- If no channels are found by the end of the scan, then check the following:
  - Antenna's position - or availability of Cable service.
  - Cable, Satellite or Fiber Optic services with a box are typically connected to the TV's A/V inputs, preferably HDMI, for best HD picture. In such case, the channel scanning is not needed.

## Select channels

---



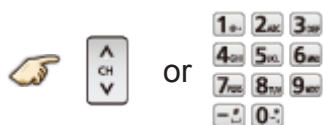

### ■ Select desired channel



- CH buttons are also available on the TV.

### ■ Select desired digital channel

To directly enter a digital channel number use  button to enter the dash.

(e.g. CH15-1 →    )

## Favorite channels

Channel numbers registered in Favorite are displayed on the favorite tune screen. Select the desired broadcast station with the cursor or use the number buttons.

- Favorite channels cannot be set when using Cable or Satellite box

### ■ Set the Favorite channel

 **OPTION** ⇒ **AV Options** > **Set favorite**


Select the list number using  $\Delta$  /  $\nabla$  and **OK** or **0-9** / **9** / **-** directly to save the displayed channel.

### ■ Delete a Favorite channel

 **OPTION** ⇒ **AV Options** > **Set favorite**

Select the list number using  $\Delta$  /  $\nabla$  and **OK** to delete.

- To change the page in **Set favorite**


 **FAVORITE** or  $\triangleleft$  /  $\triangleright$  repeatedly

### ■ Display a Favorite channel

 **FAVORITE** ⇒ **Favorite channels**

Select the list number using  $\Delta$  /  $\nabla$  and **OK** or **0-9** / **9** / **-** directly.

- To change the page in **Favorite channels**

 **FAVORITE** or  $\triangleleft$  /  $\triangleright$  repeatedly



# Closed Caption

---

## ■ Viewing with Closed Caption



Switches the Closed Caption mode.

**(Off / On / On mute)**

- CC is not available when watching TV with a Cable or Satellite box connected via HDMI.
- Contact your Cable or Satellite operator for instructions on enabling CC with their box.
- The TV's CC button does not operate the Satellite or Cable box's CC function.
- For viewing the CC of digital broadcasting, set the aspect to Full (If viewing with JUST, ZOOM or 4:3, characters might be cut off).
- If the CC is set to On on both the receiver and TV when the signal is 480i (except for the HDMI connection), the CC may overlap on the TV.
- If a digital program is being output in analog format, the CC data will also be output in analog format.
- If the recorder or output monitor is connected to the TV, the CC needs to be set up on the recorder or output monitor.

# SAP

---

## ■ Listen with SAP (Secondary Audio Programming)

- SAP is not available when watching TV with a Cable or Satellite box connected via HDMI.
- Contact your Cable or Satellite operator for instructions on enabling SAP with their box.
- The TV's **SAP** button does not operate the Satellite or Cable box's **SAP** function.

Select the Audio mode for watching TV.



Digital mode:

Select available audio service when receiving a digital channel.


Audio track is automatically selected as **Preferred audio type** and **Preferred SAP language** settings.

(**Menu** > **Sound** > **Preferred audio type**)

(**Menu** > **Setup** > **Language** > **Preferred SAP language**)

- If you change the audio settings with the **SAP** button, **Preferred SAP language** and **Preferred audio type** settings will not change.

(Example)

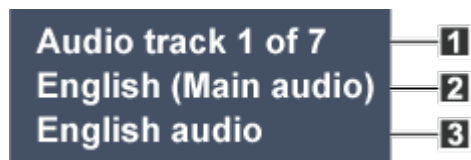

**1** Track number / Number of tracks

**2** Current audio track information

**3** Audio service information

Analog mode:

Select the desired Audio mode.

(**Stereo** / **SAP** / **Mono**)

# Other

---

## 1. Information banner

Displays TV status information. Also, when watching programs via the Antenna/Cable input, INFO will include the channel banner.



Channel / Station identifier / Program title / Closed Caption / SAP / Rating level / Signal resolution / Picture mode / Aspect ratio / Sleep timer remaining time / Clock

## 2. Options menu

This menu consists of shortcuts to convenient functions.

(Options menu is also available in [Menu](#).)



### Channel surf mode:

Specifies favorites or type of channels to view when pressing the channel up/down button.

### Set favorite:

Sets favorite channel.

### Edit CH caption:

Edits the channel identifier.

### Signal meter:

Checks the antenna's signal strength.



### Voice guidance settings:

Guidance settings for visually impaired users.

- Options menu is only available when the TV is using the Antenna/Cable input, not when using Cable or Satellite box.

# 4K compatible equipment

## Connecting and viewing


You can watch content in the 4K format that has twice the horizontal and vertical resolution of the 1080p signal.

External equipment and cables shown are not supplied with this TV.

### 1. Connect device

To watch 4K content, connect the 4K compatible equipment to the HDMI input with a 4K compatible HDMI cable respectively.

#### Connections for 4K contents

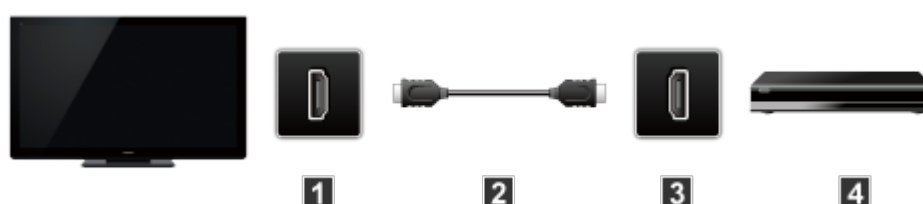

- 1 HDMI IN
- 2 HDMI cable (4K compatible cable)
- 3 HDMI OUT
- 4 4K compatible equipment

### 2. Select input and display

- 1) Display **Input select** menu (with the connected equipment turned On)



- 2) Select **HDMI** input using  $\Delta$  /  $\nabla$  and press **OK**.

- The menu choices vary depending on which input is selected.

For HDMI:

**HDCP setting (Auto/2.2/1.4)**

**MENU** → **Menu** > **Setup** > **HDCP setting**

- If the image is not displayed properly due to connected equipment, please select in order of **Auto** > **2.2** > **1.4**.

## About 4K format

---

4K format refers to approximately 4,000 pixels of horizontal resolution which has several different digital formats.

- This TV supports 4K UHD and DCI 4K (4,096 x 2,160).

### ■ 4K format of HDMI

- 4K UHD  
3,840 x 2,160 (60p, 30p, 24p)
  - Aspect is fixed to **FULL**.
- DCI 4K  
4,096 x 2,160 (60p, 30p, 24p)
  - Actual resolution is 3,840 x 2,160p.
  - Aspect is fixed to **V Full**.

- The above signals are reformatted for optimal viewing on your display.
- 4K 3D format is not supported.
- Broadcast of 4K format is not supported.
- Aspect is fixed to **FULL** when watching the content of 4K format except DCI 4K.  
(Also aspect is fixed to **FULL** when PC signal (2,560 x 1,440) is received.)

- For more information about Aspect

 → **Watching TV > For best picture > Screen mode for 4K format**

## Input signal (AV)

---

- Signals other than below may not be displayed properly.
- The signals are reformatted for optimal viewing on your display.

### ■ Component/HDMI

Input signal	Component	HDMI
480/60i	○	○
480/60p	○	○
720/60p	○	○
1,080/60i	○	○
1,080/60p	○	○
1,080/24p		○
2,160/60p		○
2,160/30p		○
2,160/24p		○

○ : Applicable input signal

# Blu-ray, DVD, Game Console, etc.

## Connecting and viewing

### 1. Connect device

Verify that the device is connected to the TV properly and connect to desired terminal. Note which terminal the device is connected to (HDMI 1, HDMI 2, Component or Video)

Component and Composite (Video) in terminals are shared.

Please be careful not to confuse the connection when you use Component or Video.

- For Example of AV connections

See next section, **Example of AV connections.**

### 2. Select Input

- 1) Display **Input select** menu (with the connected equipment turned ON)




- 2) Select the input used in step 1

Select correct input source, using  $\Delta$  /  $\nabla$  and press **OK**

When you connect to Component or Video input, you need to select **Video** or **Component**.

- Press **INPUT** and select **AV: Video** ↔ **Component**.
- Press  $\triangleleft$  /  $\triangleright$  to choose Video or Component.

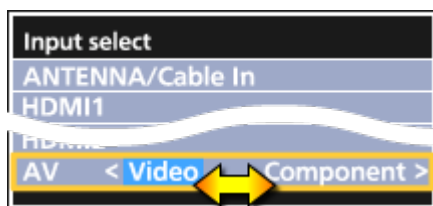

- To edit and customize the TV's input label

 → **All settings > Setup > Display customization**

- 3) Operate using your device's remote control

- The menu choices vary depending on which input is selected.

## Example of AV connections

External equipment and cables shown are not supplied with this TV.

### A. Connecting to the HDMI input (Best for HD viewing)


Recommended to use this connection, if the connected equipment has HDMI terminal.



- 1** HDMI IN
- 2** HDMI cable
- 3** HDMI OUT
- 4** AV Equipment (e.g. Blu-ray Disc player)

### For devices with DVI output

Recommended to use this connection, if the connected equipment has DVI terminal only.

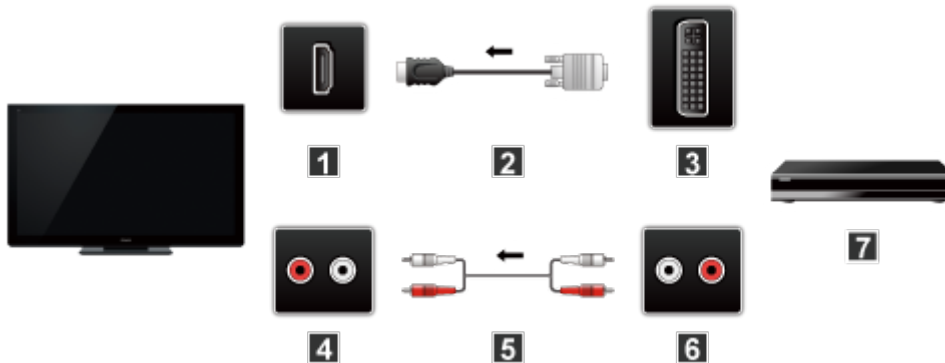


- 1** HDMI IN
- 2** HDMI-DVI Conversion cable
- 3** DVI OUT
- 4** AUDIO IN
- 5** Audio cable
- 6** AUDIO OUT
- 7** AV Equipment (e.g. Blu-ray Disc player)




## B. Connecting to the COMPONENT input

Recommended to use this connection, if the connected equipment has the Component terminal only.

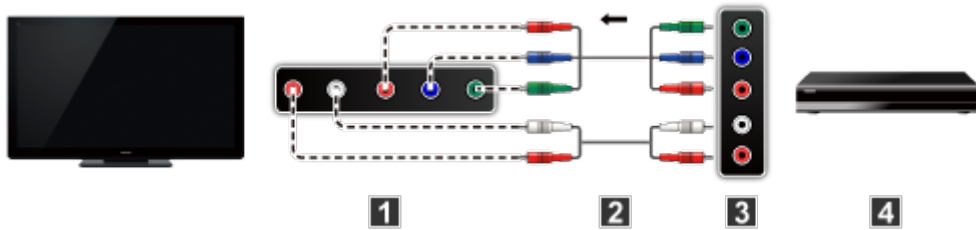

- 1** COMPONENT IN
- 2** Component cable
- 3** COMPONENT OUT
- 4** AV Equipment (e.g. Blu-ray Disc player)

## C. Connecting to the VIDEO input (For SD (Standard Definition) only)

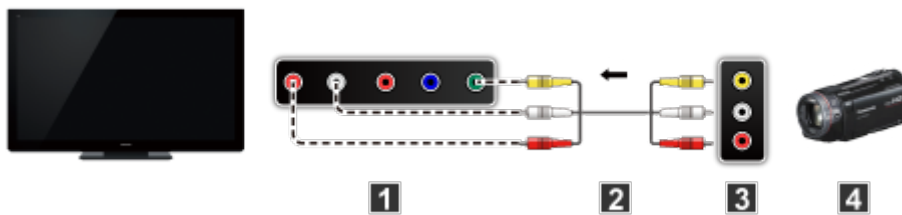

- 1** COMPOSITE IN
- 2** VIDEO cable
- 3** COMPOSITE OUT
- 4** AV Equipment (e.g. Camcorder)

## HDMI connection notice

---

HDMI (High-Definition Multimedia Interface) allows you to enjoy high-definition digital images and high-quality sound by connecting the TV unit and HD devices.

HDMI-compatible equipment\*<sup>1</sup> with an HDMI or DVI output terminal, such as a Cable or Satellite box or a DVD player, can be connected to the HDMI connector using an HDMI compliant (fully wired) cable.

- HDMI is the world's first complete digital consumer AV interface complying with a non-compression standard.
- If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adapter cable\*<sup>2</sup>.
- When the DVI to HDMI adapter cable is used, connect the audio cable to the audio input terminal.
- Audio settings can be made on the **HDMI in** menu screen. Applicable audio signal sampling frequencies (L.PCM): 48 kHz, 44.1 kHz, 32 kHz

 → **All settings > Sound > Advanced settings**

\*<sup>1</sup> : The HDMI logo is displayed on an HDMI-compliant device.

\*<sup>2</sup> : Inquire at your local digital equipment retailer shop.

## HDMI connection caution

---

### Caution

- If the connected device has an aspect adjustment function, set the aspect ratio to “16:9”.
- The HDMI connectors are “type A”.
- The HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- Devices with no digital output terminal may be connected to the input terminal of either “COMPONENT IN”, or “VIDEO IN” to receive analog signals.
- The HDMI input terminal can be used only with the following video signals: 480i, 480p, 720p, 1080i and 1080p. Ensure that the device being connected to the TV can produce one of these video signals.

## Input signal

---

- Signals other than those listed below may not be displayed properly.
- The signals are reformatted for optimal viewing on your display.

### ■ Component/HDMI

Input signal	Component	HDMI
480/60i	○	○
480/60p	○	○
720/60p	○	○
1,080/60i	○	○
1,080/60p	○	○
1,080/24p		○

○ : Applicable input signal

- |  |
|--|
| <ul style="list-style-type: none"><li>• For more information about viewing 4K content, refer to <b>Watching TV &gt; 4K compatible equipment.</b></li></ul> |
|--|

# For best picture

## Picture mode

---

### 1. Change picture mode to suit your settings and preferences.

- 1) Select **Picture mode**

 **MENU** → **Menu** > **Picture** > **Picture mode**

Select desired menu using  $\Delta$  /  $\nabla$  from menu bar and press 

- 2) Adjust using  $\Delta$  /  $\nabla$

Note:

- HDMI will provide the best HD picture

### 2. Picture mode type

#### **Vivid**

Provides enhanced picture contrast and sharpness for viewing in a well-lit room.

#### **Standard**

Recommended for normal viewing conditions with subdued room lighting.

#### **Home theater**

For watching movies in a darkened room. It provides a soft, film-like picture.

#### **THX Cinema/THX Bright Room**

Reproduces the original image quality precisely in a darkened room/bright room.

- THX modes are available during 2D mode.
- THX modes are used to mirror the picture settings used by professional filmmakers, faithfully reproducing the image quality of THX Certified movies. THX Certified movies have the THX logo on the disc. THX modes are not available for photo content.
- THX and the THX Logo are trademarks of THX Ltd., which may be registered in some jurisdictions. All rights reserved.

## Cinema

Reproduces the original image quality precisely without any revision.

Allows you to set the professional picture settings in **Pro settings** and **Copy adjustments**.

- Use the mode below to adjust the picture mode in more detail.

## Custom

Customizes each item according to your preference.

Allows you to set the professional picture settings in **Pro settings** and **Copy adjustments**.

## Professional 1/2

Allows you to set the professional picture settings in **Pro settings**, **Lock settings** and **Copy adjustments**.

- If the certified professional dealer sets these modes, **Professional 1** and **Professional 2** may be displayed as **ISF Day** and **ISF Night**.
- Adjust the Picture mode in more detail.

 → **All settings > Picture > Pro settings**

## Auto brightness (ECO)

---

Contrast Automatic Tracking System (C.A.T.S.) adjusts the screen brightness and contrast according to the room's ambient light conditions. This ECO feature automatically dims the brightness of the screen when the room lighting is lowered.

C.A.T.S. features a built-in delay when the lighting conditions change. The adjustment happens gradually.

If you prefer a consistent brightness, disable C.A.T.S. by:

- **Menu** > **Picture** > scroll down to **C.A.T.S.** and turn it off.

Or

- **Menu** > **Picture** > **Picture mode** then select viewing mode such as **Custom**.

## Aspect setting

Use this function when the picture has black bars (sides or top/bottom) or to zoom the picture.

Use **FORMAT** button to change the aspect ratio.

 **FORMAT** (to cycle through the aspect modes)

480i, 480p, 1080p, Full/JUST/4:3/ZOOM

1080i, 720p:

4K format: Full/V Full

- Use when the picture does not fill the whole screen or portions of the picture are trimmed.
- Some content, such as film-based movies, are available in extra-wide format. Top and bottom bars are unavoidable.
- Connected devices, such as Cable/Satellite box, DVD/Blu-ray players and game consoles have their own aspect (format) settings. Adjust the device's aspect settings.
- Aspect is fixed to **FULL** in the following conditions:
  - 4K content except DCI 4K
  - **1080p pixel by 4pixels** is set to **On**.
  - **Game mode** is set to **On**.
  - Pure direct menu is set to **On**.

- For screen format settings

 → **All settings > Picture > Screen settings**



 
## Screen mode

---

Adjust the screen mode when the picture has black bars (sides or top/bottom)


- Mainly for Standard Definition (480i, 480p)

### Full



Enlarges the image horizontally to the screen's edges.


### JUST

 

Justifies the image by stretching it to the four corners on the screen.


(Recommended for normal TV broadcast)

### 4:3

 

Displays the image as original size.

### ZOOM

 


Enlarges the image to the entire screen.

(Recommended for Letterboxed content)

## Screen mode for 4K format


---

### **FULL**

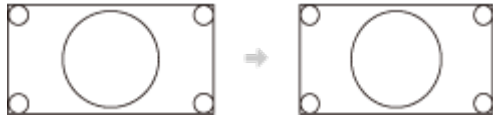

Reduces the images to fit to entire screen.

### **V Full** (only for DCI 4K format)

 

Reduces the images to fit to the top and bottoms of the screen without changing the aspect ratio.

The side edges of the image are cut off.

## Zoom adjustments

If there is a problem with the image position on the screen, vertical image position and size can be adjusted in “ZOOM”

### 1. Select **Zoom adjustments** in the **Picture** menu.

 **MENU** → **Menu** > **Picture** > **Screen settings** > **Zoom adjustments**

### 2. Adjust the **V-position** or **V-size**.

V-position:

Vertical position adjustment

Adjust using  $\Delta$  /  $\nabla$  to desired position.



V-size:

Vertical size adjustment

Adjust using  $\triangleleft$  /  $\triangleright$  to desired size.



- Press  to reset

# Lock settings

---

Locks the picture menu for **Professional 1/Professional 2** and each input.

Settings are basic picture settings and Pro settings.

## 1. Select **Lock settings**

 **MENU** → **Menu** > **Picture** > **Lock settings**

Select desired menu using  $\Delta$  /  $\nabla$  and press 

## 2. Enter the 4-digit PIN number


- Enter the PIN number twice at first setting.
- Make a note of the PIN number in case you forget it.

## 3. Select **Adjustment Lock** and set to **On**

Select the menu using  $\Delta$  /  $\nabla$  and press 

Then, select **On** using  $\Delta$  /  $\nabla$  and press  to set

## ■ To change the PIN number

1. Select **Change password** using  $\Delta$  /  $\nabla$  and press 
2. Enter a new PIN number twice with numeric buttons

# Copy adjustments


---

You can copy the selected **Cinema** or **Custom** settings and apply them to all or another input.


Settings are basic picture settings and Pro settings.

## 1. Select **Copy adjustments**

 **MENU** → **Menu** > **Picture** > **Copy adjustments**


Select the desired menu using  $\Delta$  /  $\nabla$  and press 

## 2. Select **Destination input** and set (Default: All)

Select the menu using  $\Delta$  /  $\nabla$  and press 

Then, select the destination using  $\Delta$  /  $\nabla$  and press  to set.

## 3. Select **Copy start to copy**

Select the menu using  $\Delta$  /  $\nabla$  and press 

## 4. Select **Yes** to set

Select the item using  $\triangleleft$  /  $\triangleright$  and press  to set

# For best audio

## Sound mode

---

Selects your favorite sound mode.

- The selected mode affects all input signals.

 **MENU** → **Menu** > **Sound** > **Sound mode**

### **Standard:**

Provides the suitable sound quality for all types of scenes.

### **Music:**

Improves sound quality for watching music videos, etc.

### **Ambience:**

Improves spatial effects and provides clear sounds.

### **User:**

Adjusts the sounds manually by using the equalizer to suit your favorite sound quality.

- For the **User** mode, **Equalizer** will appear on the Sound Menu instead of **Bass** and **Treble**. Select **Equalizer** and adjust the frequency.
- Gray-out when using Home Theater.
- Adjusts the Sound mode in more detail.

 → **All settings** > **Sound**

## DIGITAL AUDIO OUT terminal

---

You can enjoy your Home Theater by connecting a Dolby Digital (5.1 channel) decoder and “Multi Channel” amplifier to the DIGITAL AUDIO OUT terminals.

- Depending on your DVD player and DVD-Audio software the copyright protection function may operate and disable optical output.
- When an ATSC channel is selected, the output from the DIGITAL AUDIO OUT jack will be Dolby Digital. When an NTSC channel is selected, the output will be PCM.
- When playing the movie on Movie player, when the sound has been recorded in Dolby Digital, then the output from the DIGITAL AUDIO OUT terminal will be Dolby Digital. When the sound is recorded in other formats, the output will be PCM.

# Viewing 3D images

## Notice

---

The following 3D content can be enjoyed on this TV:

- A 3D Blu-ray disc, played on 3D capable Blu-ray player/recorder that is connected via HDMI cable
  - For more details on the external equipment's operation, please refer to the operating manual for the equipment.
- 3D TV broadcast (program)
- 3D Photo and 3D Movie taken by LUMIX/Camcorder.
- 3D game played on 3D capable video game console, connected via HDMI cable.
- 2D → 3D

### About 2D → 3D

- This function converts standard 2D images and displays them in 3D. For this reason, the 3D images appear slightly different from the originals. Please bear this in mind when using this function.
- Using this function for profit-making purposes, or publically showing images converted from 2D to 3D in places, such as coffee shops, hotels, etc., may infringe on the rights of the copyright holder protected under the Copyright Act.



## Viewing 3D

---

Use Panasonic 3D Eyewear supporting Bluetooth wireless technology for active shutter 3D.

### 1. Turn the 3D Eyewear on and put it on

Make sure that registration is finished completely.

(Displays messages and information on the screen.)

### 2. View

When the TV receives a 3D signal, it also tries to detect the 3D mode (format). 3D images are automatically displayed according to the signal. If the 3D images are not displayed correctly or the images cause discomfort, the images can be adjusted by [3D format select](#) or [3D settings](#).

### 3. Turn off the 3D Eyewear

The 3D Eyewear indicator lamp turns off, and the power turns off.

- It may take several seconds to display 3D image properly after you switch to 3D mode.
- 4K 3D format is not supported.

## Change 3D format

---

1. Select **3D settings**.
2. Select **3D format** and press **OK** to display **3D format select**.

 **MENU** → **Menu** > **Picture** > **3D settings** > **3D format**

3. Select **3D format**.

Select desired 3D format using  $\triangle$  /  $\nabla$  and press **OK**.

(**Original/Side by Side - 3D\***/**Top and Bottom - 3D\***/**2D→3D**)

- 3D format is not available depending on input 3D signal.
- \*: These formats are not displayed when the TV receives a non supported signal by “Side by Side” or “Top and Bottom”.

## Adjust 3D images

---

### 1. Select **3D settings**

 **MENU** → **Menu** > **Picture** > **3D settings**

### 2. Select the item and set

Select desired menu using  $\triangle$  /  $\nabla$  and adjust the settings with  $\triangle$  /  $\nabla$

- The perceived three dimensional effects of the 3D Eyewear differ from person-to-person.
- If a signal received from an external device is different from the 3D setting of the TV, such as 2D signal when the TV is set to 3D mode, the images may not be displayed correctly.

- For 3D settings

 → **All settings** > **Picture** > **3D settings**

# Network services

## Connect to network

### Network connections

---

#### 1. Contact your broadband Internet service provider

To obtain broadband Internet service:

- Required speed (effective): at least 1.5 Mbps for SD and 6 Mbps for HD picture quality, respectively.
- Dial-up Internet Access cannot be used.

#### 2. Select wired or wireless connection

If a wired network connection is available near the TV, then using this LAN (Ethernet) connection is recommended.

- Wired LAN connection

Recommended for viewing high quality video at high bit-rates and to avoid interference with 2.4 GHz devices.

- Wireless LAN connection

Use when your network router is not close enough to the TV or when a wired connection is not feasible.

#### 3. Connecting to the network

There are some connection type.

See next section, **Network connection types**.

# Network connection types

## A. Wireless connection



- 1** TV (Built-in Wireless LAN)
- 2** Home network (Modem/Wireless router)
- 3** Computer/DLNA Certified media server

- To use and operate only DLNA features, a broadband network service is not needed.

You can simply connect the TV directly to the equipment with a LAN crossover cable.

## B. Wired connection (Using Router)



- 1** TV (Ethernet port)
- 2** LAN (Ethernet) cable
- 3** Home network (Modem/Router)
- 4** Computer/DLNA Certified media server

- To use and operate only DLNA features, a broadband network service is not needed.

You can simply connect the TV directly to the equipment with a LAN crossover cable.

### C. Wired connection (Directly connected)

If you are not using the network for connecting anything else but the TV, you can just connect the TV directly to the Cable/DSL Ethernet modem with LAN (Ethernet) cable.



- 1** TV (Ethernet port)
- 2** LAN (Ethernet) cable
- 3** Modem

# Network settings

## Setting the menu

---

This menu is used for connecting to a broadband service.

### 1. Display the **Menu** and select **Network**

 **MENU** → **Menu** > **Network**

Select **Network** using  $\triangle$  /  $\nabla$  from menu bar and press 

### 2. Select the options and set

(**Network connection/Network status/my Home Cloud settings/VIERA network name/TV Remote App settings/Network link/File sharing settings/Mirroring settings/Control4 settings/Do Not Track setting/Software update/New software notice**)

## Network connection/Network status

---

1. Select **Network connection** using  $\triangle$  /  $\nabla$  and press **OK**

2. Select **Quick setup** to launch **Network connection setup wizard**.

Follow the directions on the screen to complete the network connection.

- Manual settings are also available.

Select **Custom** and select your connection type.

Displays setting menu according to selected connection type.

Set the desired menu and complete the network connection.

3. **Displays Network status**

Select **Try again** and press **OK** to start connection test.

Success

→ Completion message is displayed.

Error

→ Select **Status details/Help** and press **OK** to display solution of the connection error.

Follow the directions on the screen to complete the network settings.

- You can also display **Network status** from **Network** menu.

(**Network** > **Network status**)

4. **Exit the screen**

Select **Done** and press **OK** to exit from this screen.



## my Home Cloud settings

---

Sets an account to enjoy the cloud services.

1. Select **my Home Cloud settings** using  $\Delta$  /  $\nabla$  and press  $\text{OK}$ .
2. Select desired menu.  
(**Set up new account/Edit account/Remove account/Notices**)
3. Follow directions on the screen.

- To use this function fully, you need a broadband network environment. Ensure the network connections and network settings are completed.

## VIERA network name

---

Set your favorite name for this TV.

1. Select **VIERA network name** using  $\triangle$  /  $\nabla$  and press **OK**
2. Enter favorite name with screen keyboard

## TV remote App settings

---

1. Select **TV Remote App settings** using  $\Delta$  /  $\nabla$  and press **OK**
2. Select the item and set

### ■ TV remote (App)

Enables to control the TV from the network equipment (smartphone, etc.).

- Set to **On** to enable the settings below.
  1. Select **TV Remote** using  $\Delta$  /  $\nabla$  and press **OK**
  2. Switch **On** or **Off** with  $\Delta$  /  $\nabla$

### ■ Wake on LAN / Wireless LAN

This function allows you to turn on the TV when you use **Remote control via IP**.

1. Select Wake on LAN / Wireless LAN using  $\Delta$  /  $\nabla$  and press **OK**
2. Switch **Off** or **On** with  $\Delta$  /  $\nabla$

### ■ Device to upload contents

Selects device to upload content from the network equipment (smartphone, etc.).

1. Select **Device to upload contents** using  $\Delta$  /  $\nabla$  and press **OK**
2. Select device and press **OK**

## Network link

---

Setting for DLNA server.

### ■ DLNA server

Enables to use this TV as DMS (Digital Media Server) for network devices (DLNA Certified VIERA).

- Set to **On** to enable the settings below.
  1. Select **DLNA server** using  $\Delta$  /  $\nabla$  and press **OK**
  2. Switch **On** or **Off** with  $\Delta$  /  $\nabla$

### ■ Registration type

Selects the limitation of access to this TV for each device on the home network.

1. Select **Registration type** using  $\Delta$  /  $\nabla$  and press **OK**
2. Switch **Auto** or **Manual** with  $\Delta$  /  $\nabla$

#### **Auto:**

All the available device on the home network are accessible. (maximum 16 equipment)

#### **Manual:**

Sets the access limitation for each device in the Remote device List.

### ■ Remote device list

Lists the available device on the home network.

1. Select **Remote device list** using  $\Delta$  /  $\nabla$  and press **OK**
2. Select the desired device with  $\Delta$  /  $\nabla$  and set access limitation.

## File sharing settings

---

### ■ File sharing server

You can use your computer to exchange files, such as photos, videos, and music between the computer and devices connected to this TV.

Then, you can enjoy playing them with Media player.

- PC connection by a network is required to use this function.

#### 1. Select **File sharing settings**

#### 2. Set **File sharing server** to On

Switch to **On** using  $\triangle$  /  $\nabla$

#### 3. Configure your PC for File sharing

- The name set in VIERA network name is used for this PC setting.
- To use File sharing with your computer, see <http://panasonic.net/viera/support> (English only)

#### 4. Playing the contents with Media player

- Performance is not guaranteed on all PCs. Tested for compatibility on PCs with Windows 7 / Windows 8 / Windows 8.1 (as of December, 2014). Additional information for the devices may be found on the following website. (English only)  
<http://panasonic.net/viera/support>
- This function is not available when the TV is in standby mode or turned off.
- Do not turn the TV off, pull out the power plug or remove the device during operation (reading, etc.). Doing so may cause device or file corruption.

### ■ Network device list

You can select and play movies, photos and music files on Network Devices with Media player.

#### 1. Select **File sharing settings**

#### 2. Select **Network device list**

Display connected network devices.

#### 3. Select desired network device and press .

#### **4. Registration screen is displayed.**

Enter the necessary information to register.

- For registered network device, enter User ID and Password.

#### **5. Press to register**

- Performance is not guaranteed on all servers. Tested for compatibility on PCs with Windows 7 / Windows 8 / Windows 8.1 (as of December, 2014). Additional information for the devices may be found on the following website. (English only)

<http://panasonic.net/viera/support>

- Up to 48 devices can be registered.

## Mirroring settings

---

1. Select **Mirroring settings** using  $\Delta$  /  $\nabla$  and press **OK**.
2. Select the item and set.

### ■ Easy Mirroring

Enables starting the mirroring function from the other devices (smartphone, etc.) without operating the TV.

1. Select **Easy Mirroring** using  $\Delta$  /  $\nabla$  and press **OK**.
2. Switch **On** or **Off** with  $\Delta$  /  $\nabla$ .
  - Not available when the TV is set to **TV as Access Point**.

### ■ Delete all pairings

Delete the pairing information for all paired devices.

Select **Delete all pairings** using  $\Delta$  /  $\nabla$  and press **OK**.

## Control4 settings

---

1. Select **Control4 settings** using  $\Delta$  /  $\nabla$  and press **OK**.
2. Select the item and set.  
(**Control4 discovery/Send identify**)

### ■ Control4 discovery

Switch to Control4 mode.

- Set to **On** to enable **Send identify** menu.
1. Select **Control4 discovery** using  $\Delta$  /  $\nabla$  and press **OK**.
  2. Set to **On** to switch to Control4 mode.

### ■ Send identify

Send Identify message to Control4 controller.

1. Select **Send identify** using  $\Delta$  /  $\nabla$  and press **OK**.
2. Sending message is displayed for a few second.

- |   |
|---|
| <ul style="list-style-type: none"><li>• Please consult with local Control4 dealer for settings and operation.</li></ul> |
|---|



## Do Not Track setting

---

Sets to notify websites about tracking your browsing activities.

1. Select **Do Not Track setting** using  $\Delta$  /  $\nabla$  and press  $\text{OK}$ .
2. Select the item and set.

(**Tracking mode/About Do Not Track**)

### ■ Tracking mode

Select tracking status.

1. Select **Tracking mode** using  $\Delta$  /  $\nabla$  and press  $\text{OK}$ .
2. Select the item and press  $\text{OK}$ .

#### **Mode 1:**

Notifies websites that you want to be tracked.

#### **Mode 2:**

Notifies websites that you do not want to be tracked.

#### **Mode 3:**

Sends no configuration information about tracking.

### ■ About Do Not Track


Displays the information about tracking.

Select **About Do Not Track** using  $\Delta$  /  $\nabla$  and press  $\text{OK}$ .

- A broadband network environment is required to be able to display the detailed information.

## Software update

---

1. Select **Software update** using  $\triangle / \nabla$  and press 
2. Press **OK** to start the Software update screen

   $\rightarrow$  **Software update**

3. Follow directions on the screen
  - Make sure to set this TV's **Clock** before the update starts.

## New software notice

---

Select On/Off to display new software update information when TV is turned on.

1. Select **New software notice** using  $\triangle / \nabla$
2. Switch On or Off with  $\triangle / \nabla$

# How to use

## Operate

---

Now, you can access some specific websites supported by Panasonic, and enjoy Internet content / Network services such as videos, games, communication tools, etc. from **Apps**.

### 1. Display **Apps**.

 **APPS** → **Apps**



### 2. Select the desired content and press .

- USB keyboard is available. Set **Keyboard type** in **Setup** menu.

 **MENU** → **Menu** > **Setup** > **System** > **Keyboard type**

- You need a broadband environment to use this service.
- Please confirm Network connections and Network settings before using this function.
- Depending on the usage conditions, it may take a while to download all the data.
- Internet services available for this TV are subject to change without notice.
- Not all content is available depending on the country and area.

# Home network “DLNA”

## Get started

### Information

---

You can share the content (Photo, Video, Music, etc.) stored in DLNA Certified media server with your home network system.

- Please confirm **Network connection** and Network settings before using this function.

 → **Network services > Connect to network**

This TV is a DLNA Certified™ product.

DLNA (Digital Living Network Alliance) is a standard that makes DLNA Certified digital electronics easier and more convenient to use on a home network. To learn more, visit [www.dlna.org](http://www.dlna.org). It allows you to share photos, videos and music stored in the DLNA Certified media server (for example, PC with Windows 7/Windows 8 installed, etc.) connected to your home network, and enjoy the contents on the TV screen.

#### ■ Media server

Store photos, videos or music into the DLNA Certified media server, and then you can enjoy them on the TV.

#### **To use a PC as a media server**

Prepare the PC with Windows 7/Windows 8 or ensure the server software is installed on the PC. “Windows 7/Windows 8” is the server software that has been tested for compatibility with this TV (as of December, 2014). Any other server software have not been tested with this TV, therefore compatibility and performance cannot be assured.

- Windows 7/Windows 8

The setup for homegroup settings of Windows 7/Windows 8 is required. For details, refer to the help functions of Windows 7/Windows 8.

- For data information

 → **Support / FAQ > Information > Data information**

# Photos

## Viewing Photos


---

1. Display **Devices** from Home Screen.

 **HOME** → Home Screen > **Devices**

2. Display DLNA player by selecting the server.

Select desired server using  $\triangle$  /  $\nabla$  /  $\triangleleft$  /  $\triangleright$  and press .

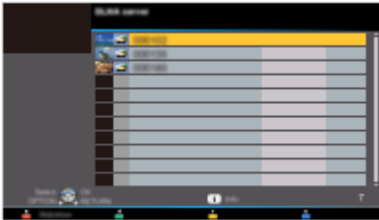

3. **Select photo** (Thumbnails and contents are displayed)

Select desired content using  $\triangle$  /  $\nabla$  from file list and press .

4. **View**

Follow the Navigation and guide to operate.

- Displayed Navigation and guide will be different depending on data type.

# Photo view

---

## ■ Thumbnail view



Display [Slideshow settings](#)



Information panel (File name, Date, Size, etc.)

- Information differs depending on selected data.

## ■ Playback screen



Display/hide Guide and Banner

Photo status:

Displays current photo status (Slideshow/Single view)

2D/3D status:

Displays current 2D/3D status

Navigation Guide:

Displays available functions.

- In DMR mode, Slideshow is not available.
- In DMR mode, OK/Next/Prev. are not available.

## Options menu

---


In Photo view, some optional menus are available by pressing the **OPTION** button.

### 1. Display **Options menu**

(Options menu is also available in **Menu**.)

 **OPTION** → **Options menu**

### 2. Select the item

Select the desired menu using  $\triangle$  /  $\nabla$  and press 

(**Slideshow settings**)

- Available menus are displayed on **Options menu** depending on data condition and situation.



# Using slideshow

---

## 1. Display **Slideshow settings**

  → **Slideshow settings**

## 2. Adjust items

Select the item by  $\Delta$  /  $\nabla$  and adjust the settings using  $\Delta$  /  $\nabla$

- Picture quality may deteriorate depending on the slideshow settings.
- Picture setting may not work depending on the slideshow settings.

## 3. Start Slideshow

After adjusting each setting, select **Start slideshow** with  $\Delta$  /  $\nabla$  and press



 **RETURN** → Stop in mid-cycle

## Slideshow settings

---

### Display interval

(Long/Normal/Short)

Sets the time each image is displayed in the Slideshow mode.

---

### Repeat playback

(On/Off)

Turn the Slideshow Repeat (cycle) function on or off.

---

### Soundtrack settings

(Off/Music 1/Music 2/Music 3/Music 4/Music 5)

Select the music.

# Videos

## Viewing Videos

---

1. Display **Devices** from Home Screen.

 **HOME** → Home Screen > **Devices**

2. Display DLNA player by selecting the server.

Select desired server using  $\triangle$  /  $\nabla$  /  $\triangleleft$  /  $\triangleright$  and press .

3. **Select video** (Thumbnails and contents are displayed)

Select desired content using  $\triangle$  /  $\nabla$  from file list and press .

4. **Play**

Follow the Navigation and guide to operate.


- Displayed Navigation and guide will be different depending on data type.

- 4K video contents may not be played correctly.

## Video view

---

### ■ Thumbnail view

-  **INFO** → Information panel (File name, Date, Size, etc.)
- Information differs depending on selected data.

### ■ Playback screen

-  **INFO** → Display/hide Guide and Banner

Movie banner:

Displays current Video status

(Drive type, Date and time or File name and Elapsed time.)

2D/3D status:

Displays current 2D/3D status

Navigation Guide:

Displays available functions.

- In DMR mode, Next skip/Prev. skip are not available.

Forward/Reverse:

Five levels of speed from 1 to 5 are available.

Slow playback is also available.

- Press and hold  for 5 seconds to turn to slow playback mode.

- |  |
|--|
| <ul style="list-style-type: none"><li>• In DMR mode, Resume playback is not available</li><li>• Subtitles are not supported in MKV format.</li></ul> |
|--|

# Options menu


In Video view, some optional menus are available by pressing the **OPTION** button.

## 1. Display **Options menu**

(Options menu is also available in **Menu**.)

 **OPTION** → **Options menu**

## 2. Select the item

Select the desired menu using  $\triangle$  /  $\nabla$  and press 

(**Video options**)

### ● Multi audio, Dual Mono

Selects for selectable sound tracks (if available).

- It may take several seconds to change the sound.
- This function is available during playback.

### ● Subtitle settings

Sets the subtitle setting.

- This function is available during playback.

#### **Subtitle:**

Display / hide subtitles (if available).

#### **Subtitle Text:**

Selects the font type to display subtitles correctly (if available).

#### **Subtitle text size:**

Selects the font size of subtitles.

#### **Subtitle text color:**

Selects the color of subtitles.

#### **Subtitle text position:**

Adjusts the position of subtitles on the screen.

#### **Subtitle text delay:**

Adjusts the delay time for the subtitles.

### ● Repeat playback

Set play repeat function (**Off/On**)

- Available menus are displayed on **Options menu** depending on the data condition and situation.

# Music

## Playing Music

---

1. Display **Devices** from Home Screen.

 **HOME** → Home Screen > **Devices**

2. Display DLNA player by selecting the server.

Select desired server using  $\Delta$  /  $\nabla$  /  $\triangleleft$  /  $\triangleright$  and press .

3. **Select music** (Thumbnails and contents are displayed)

Select desired content using  $\Delta$  /  $\nabla$  from file list and press .

4. **Play**

Follow the Navigation and guide to operate.

- Displayed Navigation and guide will be different depending on the data type.

# Music view

---

## ■ Thumbnail view



**INFO**



Information panel (File name, Date, Size, etc.)

- Information differs depending on selected data.

## ■ Playback screen



**INFO**



Display/hide Guide and Banner

Music Guide:

Displays current Music status

(Artist name/Album name/Song name, Elapsed time)

Navigation Guide:

Displays available functions.

Forward/Reverse:

Five levels of speed from 1 to 5 are available.

- In DMR mode, Next skip/Prev. skip/User BGM settings are not available.

# Options menu

---


In Music view, some optional menus are available by pressing the **OPTION** button.

## 1. Display **Options menu**

(Options menu is also available in **Menu**.)

 **OPTION** → **Options menu**

## 2. Select the item

Select the desired menu using  $\triangle$  /  $\nabla$  and press 

(**Music options**)

### ● Repeat playback

Set play repeat function (**Off/Repeat folder/One song**)

- Available menus are displayed on **Options menu** depending on the data condition and situation.



# Media player

## Get started


### Information

---

You can view still and motion images and play music saved on a USB flash memory and SD card.

#### ■ SD card

- When you use an SD card, gently insert with label surface facing front.
- When you remove the SD card, press in lightly then release.

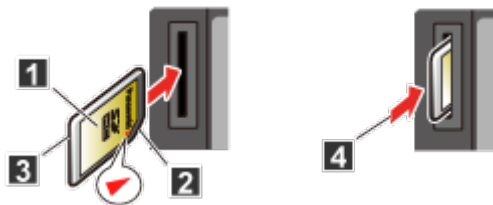

**1** Label surface

**2** Cutout

**3** Push until a click is heard

**4** Press in lightly on SD Card, then release.

- Compliant card type (maximum capacity):
  - SDXC Card (64 GB), SDHC Card (32 GB), microSDHC Card (32 GB), SD Card (2 GB), miniSD Card (2 GB), microSD Card (2 GB)  
(requiring microSDHC Card/miniSD Card/microSD Card/adapter)
- If a microSDHC Card, miniSD Card or microSD Card is used, insert / remove it together with the adapter.

#### ■ USB flash memory

- When you use a USB device, insert straight in and pull straight out.
- Media player only supports USB Mass storage class devices.
- Remove USB device safely with **USB device setup**.  
(**Setup** > **USB device setup**)

## Media warning messages

Message	Meaning
No media. Please insert an SD memory card or USB storage device.	<ul style="list-style-type: none"><li>• The device is not inserted.</li></ul>
No media. Device removed.	<ul style="list-style-type: none"><li>• The device is removed.</li></ul>
No photos/No movies/No music files to play/No playable media	<ul style="list-style-type: none"><li>• The device has no data or this type of data is not supported.</li></ul>
Cannot read file	<ul style="list-style-type: none"><li>• The file is broken or unreadable. The TV does not support the format.</li></ul>

## SD card handling cautions

---

- Use an SD Card meets SD standards. Otherwise, it may cause the TV to malfunction.
- Do not remove the card while the unit is accessing data (this can damage card or unit).
- Do not touch the terminals on the back of the card.
- Do not subject the card to high pressure or impact.
- Insert the card in the correct direction (otherwise, card or unit may be damaged).
- Electrical interference, static electricity or erroneous operation may damage the data or card.
- Back up the recorded data at regular intervals in the case of deteriorated or damaged data or erratic operation of the unit. (Panasonic is not liable for any deterioration or damage of recorded data.)
- For the suitable SD Memory Cards, please confirm the latest information on the following website.

<http://panasonic.net/viera/support> (This site is in English only)



**1** 2.1 mm

**2** 32 mm

**3** 24 mm

## File sharing

---

### ■ File sharing with server

You can use your computer to exchange files, such as photos, videos, and music between the computer and devices connected to this TV.

Then, you can enjoy playing them with Media player.

- PC connection by a network is required to use this function.

### ■ Viewing from Network device

You can select and play movies, photos and music files on Network Devices as SD card or USB Devices connected to the TV with Media player.

- For more information about settings, refer to the page below.

 → **Network services > Network settings > File sharing settings**

## Notice

---

- The picture may not appear correctly on this TV depending on the recording equipment used.
- When there are many files and folders, operation may take time to complete or some files may not be displayed or playable.
- Depending on how you create the files and the structure of folders, the files and folders may not be displayed.
- Partly degraded files might be displayed at a reduced resolution.
- The folder and file names may be different depending on the digital camera used.
- The function cannot display still images that are not DCF formatted (i.e. TIFF, BMP).
- Images imported from a PC must be compatible with EXIF 2.0, 2.1 and 2.2.

# Photos

## Viewing Photos

---

1. **Insert Media / Prepare Network devices or PC to share the files.**
2. **Display [Devices](#).**

 **MEDIA PLAYER** → [Devices](#)

- You can also access from Home Screen.
  - Display [Devices](#) from Home Screen.

 **HOME** → Home Screen > [Devices](#)

3. **Display Media player by selecting the device.**

Select the device using  $\triangle$  /  $\nabla$  /  $\triangleleft$  /  $\triangleright$  and press .

- When a confirmation screen about the network device is displayed, enter User ID / Password to access.

4. **Select the Photos in [Media select](#).**

Select the media using  $\triangleleft$  /  $\triangleright$  and press .

5. **Select the photo in thumbnail view.**

Select the data using  $\triangle$  /  $\nabla$  /  $\triangleleft$  /  $\triangleright$  and press .

- How data is displayed depends on data storage conditions.

6. **View.**

Follow the Navigation and guide to operate.

- Displayed Navigation and guide may differ depending on data type.

- For File sharing/How to register the network devices, refer to the page below.

 → **Network services > Network settings > File sharing settings**

# Photo View

---

## ■ Thumbnail view



Display **Slideshow settings**



Display **Sort**



Display **Media select**



Information panel (File name, Date, Size, etc.)



- Information differs depending on selected data.
- Displays function guide for each color button on the bottom of the screen.

## ■ Playback screen



Display/Hide Guide and Banner

Photo status:

Displays current photo status (Slideshow/Single view)

2D/3D status:

Displays current 2D/3D status

Navigation Guide:

Displays available functions.


# Sort the photos

---

## 1. Display Sort select menu

  → Sort select menu (**Folders/Sort by date/Sort by month**)

## 2. Select the sort type

Select the type using  $\triangle$  /  $\nabla$  and press 

## 3. Displayed each screen

Folders:

Ascending order of numeric/alphabetical

Sort by month:

Ascending order of the month

Sort by date:

Ascending order of the day



## Options menu

---


In Photo view, some optional menus are available by pressing the **OPTION** button.

### 1. Display **Options menu**

(Options menu is also available in **Menu**.)

 **OPTION** → **Options menu**

### 2. Select the item

Select the desired menu using  $\Delta$  /  $\nabla$  and press 

(**Slideshow settings/Thumbnails size**)

- Available menus are displayed on **Options menu** depending on the data condition and situation.

## Thumbnails size

---

To change the number of photos on a thumbnail screen at a time.

# Using slideshow

---

## 1. Display **Slideshow settings**

  → **Slideshow settings**

## 2. Adjust items

Select the item by  $\Delta$  /  $\nabla$  and adjust the settings using  $\Delta$  /  $\nabla$

- Picture quality may deteriorate depending on the slideshow settings.
- Picture setting may not work depending on the slideshow settings.

## 3. Start Slideshow

After adjusting each setting, select **Start slideshow** with  $\Delta$  /  $\nabla$  and press



 **RETURN** → Stop in mid-cycle

## Slideshow settings

---

### Photo size

(Normal/ZOOM)

Removes the black borders that are added according to the size of the photo being displayed.

---

### Display interval

(Long/Normal/Short)

**Display interval** sets the time each image is displayed in the Slideshow mode.

---

### Repeat playback

(On/Off)

Turn the Slideshow Repeat (cycle) function on or off.

---

### Soundtrack settings

(Off/Music 1/Music 2/Music 3/Music 4/Music 5/User selected/Auto)

Select the music.

**User selected:**

Plays the soundtrack registered in the **Soundtrack settings** menu.

**Auto:**

Plays the songs on the SD card or USB flash memory.

## Soundtrack settings

---

You can register the favorite songs as soundtracks.

1. Select **Soundtrack settings** in **Slideshow settings** using  $\Delta / \nabla$
2. Select **User selected** using  $\Delta / \nabla$
3. Displays **Soundtrack** popup menu, then select the desired song with  $\Delta / \nabla$  and press **OK** to register

**This song:**

Registers current music.

**All songs in folder:**

Registers the music in a folder.

- Picture settings may not work depending on the slideshow settings.

# Videos

## Viewing Videos

---

1. **Insert Media / Prepare Network devices or PC to share the files**
2. **Display [Devices](#).**

 **MEDIA PLAYER** → [Devices](#)

- You can also access from Home Screen.
  - Display [Devices](#) from Home Screen.

 **HOME** → Home Screen > [Devices](#)

3. **Display Media player by selecting the device.**

Select the device using  $\triangle$  /  $\nabla$  /  $\triangleleft$  /  $\triangleright$  and press .

- When a confirmation screen about the network device is displayed, enter User ID / Password to access.

4. **Select the Videos in [Media select](#).**

Select the media using  $\triangleleft$  /  $\triangleright$  and press .

5. **Select the video in thumbnail view.**

Select the data using  $\triangle$  /  $\nabla$  /  $\triangleleft$  /  $\triangleright$  and press .

- How data is displayed depends on data storage conditions.

6. **Play.**

Follow the Navigation and guide to operate.

- Displayed Navigation and guide will be different depending on data type.

- 4K video contents may not be played correctly and some functions may not be available.

- For File sharing/How to register the network devices refer to the page below.

 → **Network services > Network settings > File sharing settings**

## Video view

---

### ■ Thumbnail view




Play the video



Display **Media select**



Information panel (File name, Date, Size, etc.)

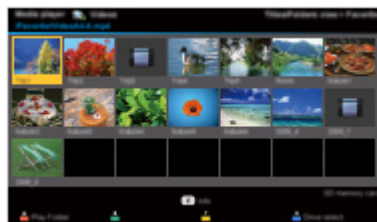

- Information differs depending on selected data.
- Displays function guide for each color button on the bottom of the screen.

### ■ Playback screen



Display/Hide Guide and Banner

Movie banner:

Displays current Video status

(Drive type, Date and time or File name and Elapsed time.)

2D/3D status:

Displays current 2D/3D status

Navigation Guide:

Displays available functions.

Forward/Reverse:

Five levels of speed from 1 to 5 are available.

- Subtitles are not supported in MKV format.

# Options menu


In Video view, some optional menus are available by pressing the **OPTION** button.

## 1. Display **Options menu**

(Options menu is also available in **Menu**.)

 **OPTION** → **Options menu**

## 2. Select the item

Select the desired menu using  $\triangle$  /  $\nabla$  and press 

(**Video options**)

### ● Multi audio, Dual Mono

Selects for selectable sound tracks (if available).

- It may take several seconds to change the sound.
- This function is available during playback.

### ● Subtitle settings

Sets the subtitle setting.

- This function is available during playback.

#### **Subtitle:**

Display / hide subtitles (if available).

#### **Subtitle Text:**

Selects the font type to display subtitles correctly (if available).

#### **Subtitle text size:**

Selects the font size of subtitles.

#### **Subtitle text color:**

Selects the color of subtitles.

#### **Subtitle text position:**

Adjusts the position of subtitles on the screen.

#### **Subtitle text delay:**

Adjusts the delay time for the subtitles.

### ● Repeat playback

Set play repeat function (**Off/On**)

- Available menus are displayed on **Options menu** depending on data condition and situation.



# Music

## Playing Music

---

1. **Insert Media / Prepare Network devices or PC to share the files**
2. **Display [Devices](#).**

 **MEDIA PLAYER** → [Devices](#)

- You can also access from Home Screen.
  - Display [Devices](#) from Home Screen.

 **HOME** → Home Screen > [Devices](#)

3. **Display Media player by selecting the device.**

Select the device using  $\triangle$  /  $\nabla$  /  $\triangleleft$  /  $\triangleright$  and press .

- When a confirmation screen about the network device is displayed, enter User ID / Password to access.

4. **Select the Music in [Media select](#).**

Select the media using  $\triangleleft$  /  $\triangleright$  and press .

5. **Select the music in thumbnail view.**

Select the data using  $\triangle$  /  $\nabla$  /  $\triangleleft$  /  $\triangleright$  and press .

- How data is displayed depends on data storage conditions.

6. **Play.**

Follow the Navigation and guide to operate.

- Displayed Navigation and guide will be different depending on data type.





- For File sharing/How to register the network devices refer to the page below.

 → **Network services > Network settings > File sharing settings**

# Music view

---

## ■ Thumbnail view

-   → Play folder
-  → Display **Media select**
-  → Information panel (File name, Date, Size, etc.)



- Information differs depending on selected data.
- Displays function guide for each color button on the bottom of the screen.

## ■ Playback screen

-   → Display/Hide Guide

Music Guide:

Displays current Music status

(Artist name/Album name/Song name, Elapsed time)

Navigation Guide:

Displays available functions.

Forward/Reverse:

Five levels of speed from 1 to 5 are available.

# Options menu

---


In Music view, some optional menus are available by pressing the **OPTION** button.

## 1. Display **Options menu**

(Options menu is also available in **Menu**.)

 **OPTION** → **Options menu**

## 2. Select the item

Select the desired menu using  $\triangle$  /  $\nabla$  and press 

(**Music options**)

### ● Repeat playback

Set play repeat function (**Off/Repeat folder/One song**)

- Available menus are displayed on **Options menu** depending on data condition and situation.

# Convenience features

## Eco navigation

### Eco navigation

---

This setting allows you to set the TV to the most suitable energy-saving mode automatically.

**1. Select [Eco navigation](#)**

 **MENU** → [Menu](#) > [Setup](#) > [Eco navigation](#)

**2. Press [Set to ECO](#)**

Optimizes the TV's various modes to save energy.

Note:

- The TV's brightness will adjust and adapt as the room lighting changes.

# Timer

## Setting the menu

---

The TV can automatically turn On/Off at a designated date and time.

### 1. Display the menu

 **MENU** → **Menu**

### 2. Select **Timer**

Select desired menu using  $\triangle$  /  $\nabla$  from menu bar and press 

### 3. Select the item and adjust

Select desired item using  $\triangle$  /  $\nabla$  and adjust with  $\triangle$  /  $\nabla$

- Set On/Off timer.

 → **All settings > Timer > Timer (On/Off timer)**

- Set Sleep timer.

 → **All settings > Timer > Sleep (Off timer)**

# Parental control

## Setting the menu

---

Locks specified channels or shows to prevent children from watching inappropriate content.

You will be asked to enter your password each time you display the Lock menu.

Set **Custom** in **Mode** to specify **Channel**, **Game** and **Program** settings.

### 1. Display the menu

 **MENU** → **Menu**

### 2. Select **Setup** from menu bar

Select desired menu using  $\Delta$  /  $\nabla$  from menu bar and press 

### 3. Select **Parental control**

Select the menu using  $\Delta$  /  $\nabla$  and press 

### 4. Select the item and adjust

Select desired item using  $\Delta$  /  $\nabla$  and adjust with  $\Delta$  /  $\nabla$

- The Off rating is independent of other ratings.
- When placing a lock on a specific-age-based-rating level, the Off rating and any other more restrictive ratings will also be blocked.
- The channels will be blocked regardless of the program rating.

- For Parental control settings

 → **All settings > Setup > Parental control**

## Password setting

---

You need to enter the password when you access locked channels or inputs.



**(Input your 4-digit password)**

- If it is your first time entering the password, enter the password twice in order to register it.
- Make a note of your password. Do not forget it. (If you have forgotten your password, consult your local dealer.)
- When you select a locked channel, a message will be displayed that allows you to view the channel after you input your password.

## Parental control ratings

---

“V-chip” technology enables you to lock channels or shows according to standard ratings set by the entertainment industry.

### ■ U.S. MOVIE RATINGS (MPAA)

<b>NR</b>	Not Rated.
<b>G</b>	All children and General Audience.
<b>PG</b>	Parental Guidance suggested.
<b>PG-13</b>	Parental Guidance for children under 13.
<b>R</b>	Restricted Viewing, parental guidance is suggested for children under 17.
<b>NC-17/X</b>	No one 17 or under allowed.

### ■ U.S. TV PROGRAMS RATINGS (U. S. TV) - Age-Based Ratings

<b>TV-NR</b>	Not Rated.
<b>TV-Y</b>	All children.
<b>TV-Y7</b>	Directed to children age 7 and older.
<b>TV-G</b>	General Audience.
<b>TV-PG</b>	Parental Guidance suggested.
<b>TV-14</b>	Parents strongly cautioned, parental guidance is suggested for children under 14.
<b>TV-MA</b>	Mature Audience only.

### ■ CANADIAN ENGLISH RATINGS (C. E. L. R.)

<b>E</b>	Exempt programming.
<b>C</b>	All children.
<b>C8+</b>	Children 8 years and older.
<b>G</b>	General programming.
<b>PG</b>	Parental Guidance.
<b>14+</b>	Viewers 14 and older.
<b>18+</b>	Adult programming.



## ■ CANADIAN FRENCH RATINGS (C. F. L. R.)

<b>E</b>	Exempt programming.
<b>G</b>	General programming.
<b>8 ans+</b>	Not recommended for young children.
<b>13 ans+</b>	Not recommended for ages under 13.
<b>16 ans+</b>	Not recommended for ages under 16.
<b>18 ans+</b>	Programming restricted to adults.

## ■ Contents-Based Ratings

<b>FV</b>	Fantasy Violence.
<b>D</b>	Suggestive Dialogue.
<b>L</b>	Strong Language.
<b>S</b>	Sexual situations.
<b>V</b>	Violence.

### **Caution**

The V-Chip system used in this set is capable of blocking “NR” programs (non rated, not applicable and none) as per FCC Rules Section 15.120(e)(2). If the option of blocking “NR” programs is chosen “unexpected and possibly confusing results may occur, and you may not receive emergency bulletins or any of the following types of programming:”

- Emergency Bulletins (Such as EAS messages, weather warnings and others)
- Locally originated programming
- News
- Political
- Public Service Announcements
- Religious
- Sports
- Weather

# Closed Caption

## Setting the menu

---


The television includes a built-in decoder that is capable of providing a text display of the audio. The program being viewed must be transmitting the Closed Caption (CC) information.

- The settings are “Analog” or “Digital” depending on the broadcaster.


### 1. Display the menu

 **MENU** → **Menu**

### 2. Select **Setup** from menu bar

Select desired menu using  $\Delta$  /  $\nabla$  from menu bar and press 

### 3. Select **Closed Caption** in **Display customization**

Select the menu using  $\Delta$  /  $\nabla$  and press 

### 4. Select the item and adjust

Select desired item using  $\Delta$  /  $\nabla$  and adjust with  $\Delta$  /  $\nabla$

- Some functions will be disabled depending on the type of input signal.  
**Reset to defaults** will be grayed out if no changes are made.

- For Closed Caption settings

 → **All settings > Setup > Closed Caption**

- For Smart TV Internet content CC settings (U.S. only)

“IPTV-CC settings” App is available on the **Apps**.

- Some Internet services have their own separate CC settings.

## Closed Caption notices

---

- For viewing the CC of digital broadcasting, set the aspect to Full (If viewing with JUST, ZOOM or 4:3, characters might be cut off).
- The CC can be displayed on the TV only when the receiver (such as a Cable box or satellite receiver) has the CC set to ON within the device itself. Check with your Cable or Satellite provider for instructions. The TV's CC button does not operate the Satellite or Cable box's CC function.
- If the CC is set to On on both the receiver and TV when the signal is 480i (except for the HDMI connection), the CC may overlap on the TV.
- If a digital program is being output in analog format, the CC data will also be output in analog format.
- If the recorder or output monitor is connected to the TV, the CC needs to be set up on the recorder or output monitor.

# VIERA Link™ “HDAVI Control™”

## Basic feature

Simultaneously control all Panasonic “HDAVI Control” equipped components using one button on the TV remote. Enjoy additional HDMI Inter-Operability with compatible Panasonic products. This TV supports “HDAVI Control 5” function. Connections to equipment (Blu-ray Disc player, DVD recorder, HD Camcorder, Home Theater System, Amplifier, etc.) with HDMI cables enables VIERA Link controls.

### ■ Available HDAVI Control functions

Version	Operations
HDAVI Control or later	<ul style="list-style-type: none"><li>• Automatic Input Switching</li><li>• Power on link</li><li>• Power off link</li><li>• Speaker control</li></ul>
HDAVI Control 2 or later	<ul style="list-style-type: none"><li>• VIERA Link control only with the TV’s remote control</li><li>• Unselected device auto off (for available equipment only)</li></ul>
HDAVI Control 3 or later	<ul style="list-style-type: none"><li>• Automatic lip-sync function</li></ul>
HDAVI Control 4 or later	<ul style="list-style-type: none"><li>• Energy saving mode (with Quick Start mode)</li></ul>
HDAVI Control 5	<ul style="list-style-type: none"><li>• Audio Return Channel</li></ul> <p>Audio Return Channel (ARC) is a function that enables digital sound signals to be sent via an HDMI cable back from the TV to a connected audio device.</p>

## Connecting note

---

### ■ When adding new equipment...

**When adding new equipment, reconnecting equipment or changing the setup after the connection, turn the equipment on and then switch the TV on. Set the input mode to correct HDMI terminal, and make sure that the image is displayed correctly.**

VIERA Link “HDAVI Control”, is based on the control functions provided by HDMI and industry standard known as HDMI CEC (Consumer Electronics Control), with unique function that we have developed and added. As such, its operation with other manufacturers’ equipment that supports HDMI CEC cannot be guaranteed. Please refer to the individual manuals for other manufacturers’ equipment supporting the VIERA Link function.

### ■ HDMI cable

This function needs an HDMI compliant (fully wired) cable. Non-HDMI-compliant cables cannot be utilized.

- For more details on the external equipment’s connections, please refer to the operating manual for the equipment.

HDMI connections to some Panasonic equipment allow you to interface automatically.

- This function may not work normally depending on the equipment condition.
- The equipment can be operated by other remote controls with this function on, even if the TV is in Standby mode.
- Image or sound may not be available for the first few seconds when playback starts.
- Image or sound may not be available for the first few seconds when input mode is switched.
- Volume function will be displayed when adjusting the volume of the equipment.
- If you connect equipment that has “HDAVI Control 2” or later function to the TV with an HDMI cable, the sound from the DIGITAL AUDIO OUT terminal can be output as multi-channel surround.
- “HDAVI Control 5” is the newest standard for the HDAVI Control compatible equipment.

This standard is compatible with the conventional HDAVI equipment.


If the connection (or setting) of equipment compatible with HDAVI control is changed, switch the power of this unit Off and On again while the power of all equipment is On (so that the unit can correctly recognize the connected equipment) and check that the connected equipment playback operates.

# VIERA Link connections

## ■ Connecting Blu-ray Disc player/DVD Recorder

Connect the HDMI terminal of this TV to the DVD recorder with VIERA Link function using a fully wired HDMI cable.

- You can use any HDMI terminal on this TV.

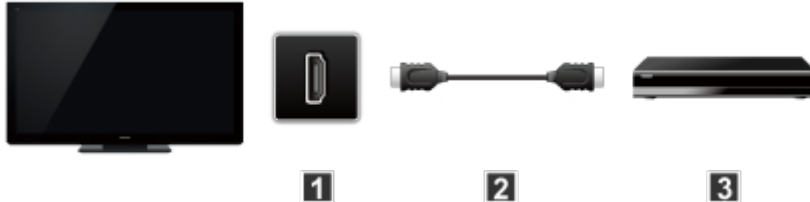

- 1** TV (HDMI)
- 2** HDMI cable
- 3** DVD recorder with VIERA Link function

## ■ Connecting Home theater system/AV amp


HDMI and Audio connection.

Connect the HDMI terminal and DIGITAL AUDIO OUT to Home Theater System/AV amp with VIERA Link function using each fully wired HDMI cable and Optical audio cable.

- HDMI 2 is recommended.
- No optical cable is necessary when connecting a Home Theater supporting “HDAVI control 5” with an HDMI cable.

Audio will be supported via ARC (Audio Return Channel)

- One AV amp and one Blu-ray Disc player/DVD recorder can be operated with this unit by connecting with an HDMI cable.

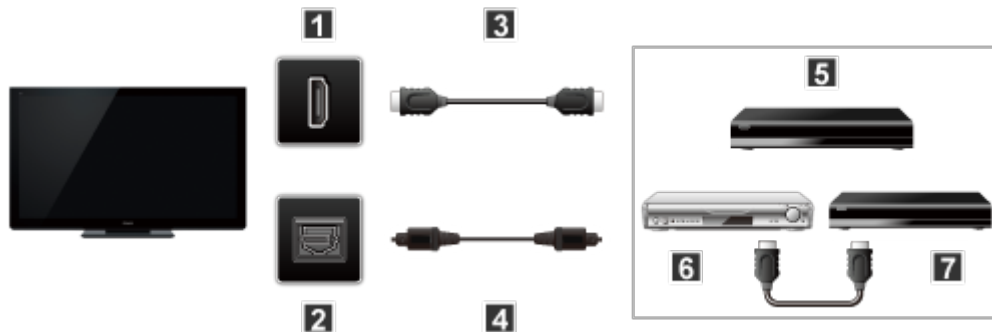

- 1** TV (HDMI)
- 2** TV (DIGITAL AUDIO OUT)
- 3** HDMI cable
- 4** Optical cable

- 5 Home theater system with VIERA Link function
- 6 AV amp with VIERA Link function
- 7 DVD recorder with VIERA Link function

### ■ Connecting an HD Camcorder/Digital camera

Press **INPUT** and select an available HDMI terminal, then connect the HD camcorder/Digital camera with VIERA Link function to this input with fully wired HDMI/mini HDMI cable.



- 1 TV (HDMI)
- 2 HDMI / mini HDMI cable
- 3 HD Camcorder with VIERA Link function
- 4 LUMIX with VIERA Link function

- Individual HDMI equipment may require additional menu settings specific to each model. Please refer to their respective manuals.
- When audio from other equipment connected to this unit via the HDMI is output using “DIGITAL AUDIO OUT” of this unit, the system switches to 2CH audio.  
(When connecting to an AV amp via HDMI, you can enjoy higher sound quality.)
- Some devices use Mini-HDMI terminal. HDMI (type A) to Mini-HDMI (type C) cable or adapter should be used.



## VIERA Link settings

---

To use all VIERA Link functions: After everything is connected, set **VIERA Link** to **On** in VIERA Link settings menu.

Some features are disabled depending on the “HDAVI Control” version of the equipment.

### 1. Display the menu

 **MENU** → **Menu** > **Setup**

### 2. Select **VIERA Link settings**

Select **VIERA Link settings** with  $\Delta$  /  $\nabla$  and press **OK**.

### 3. Select **VIERA Link** and set to **On**

Select **VIERA Link** and press **OK** then select **On** with  $\Delta$  /  $\nabla$

### 4. Select and set other **VIERA Link settings**

(**Power on link/Power off link/Energy saving mode/Unselected device auto off**)

## VIERA Link settings feature

---

### ■ Automatic Input Switching

When using a Blu-ray Disc player, DVD player/recorder or Home theater system, the TV will automatically change to the appropriate input, when playback begins on one of those devices.

- For a Home Theater System the speakers automatically switch to the theater system.

### ■ Power on link

**Yes:** The TV is turned on automatically and switches to the appropriate HDMI input whenever VIERA Link compatible equipment is initially turned on and the Play mode is selected.

### ■ Power off link

When **Yes** is selected and the TV is turned off, all connected VIERA Link compatible equipment is also automatically turned off.

- A Panasonic DVD Recorder will not turn off if it is still in Rec mode.
- The TV remains on even if the VIERA Link compatible equipment is turned off.

### ■ Energy saving mode

**Quick start:** When TV is turned off, all connected VIERA Link compatible equipment is moved to ECO Standby mode\* automatically under these conditions.

- **Power off link: (Yes).** The connected equipment has “HDAVI Control 4 or later (with Quick Start mode)”

\*: Minimum power consumption of Standby condition for the equipment.

### ■ Unselected device auto off

**On:** The connected VIERA Link compatible equipment will be turned off automatically when not in use under these conditions.

- The connected equipment has “HDAVI Control 2 or later” (for available equipment only)

[Example of timing for operation]

- When the input is switched from HDMI.

■ Automatic lip-sync function

Minimizes time delay between the picture and audio when you connect to a Panasonic theater system or Amplifier.

## VIERA Link

---

Some features are disabled depending on the “HDAVI Control” version of the equipment.

### 1. Display the **VIERA Link** menu

 **APPS** → **Apps**

### 2. Select the item and set (**VIERA Link control/Speaker output/Back to TV**)

Select the desired menu using  $\triangle$  /  $\nabla$  and set with  $\triangle$  /  $\nabla$

- Items in the VIERA Link menu may be grayed out if no compatible equipment is connected (must be HDAVI Control 2 or later) or if the equipment has not initiated a connection with the TV. In that case, switch the equipment's power Off and On while the TV is On.

## VIERA Link menu

---

### ■ Speaker control

You can select the Home theater or TV speakers for audio output. Control the theater speakers with the TV remote control. This function is available only when a Panasonic Amplifier or Player theater is connected.

1. Select **Speaker output** using  $\Delta$  /  $\nabla$
2. Select **Home theater** or **TV** with  $\Delta$  /  $\nabla$

#### **Home theater:**

Adjustment for the equipment

**VOL(+/-)** and **MUTE** buttons are available

- The sound of the TV is muted.
- When the equipment is turned off, the TV speakers take over.
- Selecting **Home theater** turns the equipment on automatically if it is in Standby mode.

#### **TV:**

The TV speakers are on.

### ■ VIERA Link control only with the TV's remote control

1. Select **VIERA Link control** using  $\Delta$  /  $\nabla$
2. Select the desired equipment with  $\Delta$  /  $\nabla$

(You can select available items only.)

#### **(Recorder/Home theater/Player/Camcorder/LUMIX/Other)**

- If there is more than one equipment item, a number after the name indicates the number of items. (e.g. Recorder1/Recorder 2/Recorder 3...)
  - The number of equipment items that can be connected is three for recorders, and a total of three for Home Theater/Player/Camcorder/LUMIX/Others.
3. Operate the equipment with the TV remote control, pointing it at the TV

- There is a limit to the number of HDMI connectors.
- To operate the equipment, read the manual for the equipment.
- For available TV remote control buttons, whether or not an operation is available depends on the connected equipment.

## ■ Back to TV

Returns the input selection of the device selected with the VIERA Link Control to the TV input.

1. Select **Back to TV** using  $\Delta$  /  $\nabla$  and press 

# Info Frame

## Information

---

This feature is available only when the item other than **U.S.A.** is selected from **Country** in First time setup.

Info Frame is a convenient feature to provide you relevant information of the watching program, recommendations, etc. It is displayed on the edge of screen when you need it.

(Example)



- A broadband network environment is required to be able to use this function fully.

- |   |
|---|
| <ul style="list-style-type: none"><li>• Design and specifications are subject to change without notice.</li></ul> |
|---|


## How to use

You can check useful information using Info Frame while watching TV.

1. Press and hold **HOME**.

- Info Frame is displayed on the edge of screen.

(Example)

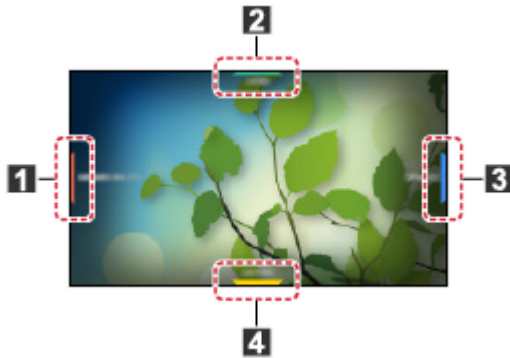

**1** Current program information, etc.





**2** Relevant information (weather forecast, etc.)

**3** Notification message

**4** Recommended content (TV program, Internet content, etc.)

- You can also display Info Frame pressing and holding **HOME** on Touch Pad Controller.
- To exit Info Frame


### **RETURN**

2. Select one side of Info Frame with  $\triangle / \nabla / \triangleleft / \triangleright$  or     (colored buttons) while Info Frame is displayed.

- You can also select by sliding your finger on Touch Pad Controller.

3. Follow the on-screen instructions.

- Info Frame is displayed for several seconds each time the TV is turned on.

 **Convenience features > Info Frame > Setting the menu**



## Setting the menu

---

You can set items for Info Frame.

1. Select **Display customization** from **Setup**.

 **MENU** → **Menu > Setup > Display customization**

2. Select **Info Frame at power on** and press **OK**.

3. Set the item and press **OK**.

- For the settings

 → **All settings > Setup > Display customization**

# Using Voice guidance

## Voice guidance


---

This function provides a useful audio readout of basic features.


### 1. Set Voice guidance to On

 **MENU** → **Menu** > **Sound** > **Voice guidance settings** > **Voice guidance**

Select the menu using  $\Delta$  /  $\nabla$  and press 

Then, switch to **On** using  $\Delta$  /  $\nabla$  and press 

### 2. Set other items

Select the desired menu using  $\Delta$  /  $\nabla$  and press 

Then, change or adjust the item using  $\Delta$  /  $\nabla$  and press 

(**Voice guidance/Speed/Volume/Language/User level/Web Browser**)

- Voice guidance function may not correspond exactly.

- For Voice guidance settings

 → **All settings** > **Sound** > **Voice guidance settings**

# Using Voice control

## Information

---

Voice control function allows you to operate the TV (e.g. selecting a channel), search the content from various features, etc. with your speech.

- You need a broadband network environment to use this function fully.
- To use this function with Touch Pad Controller, ensure the pairing is completed.
- To use the built-in microphone, set **Direct Voice Control** to **On**.

You can set the voice control settings.

### 1. Select voice control settings

 **MENU** → **Menu** > **Setup** > **Voice control settings**

### 2. Select item and set

Select desired item using  $\triangle$  /  $\nabla$  and adjust the settings with  $\triangle$  /  $\nabla$

(**Language/Speech detection level/Direct Voice Control/Terms of service/Instructions for Voice Control**)

- To use Voice control function, you need a broadband network environment, because this function accesses the speech recognition server with the Internet connection. Even if you have the Internet environment, this function may not be available depending on the proxy settings.

Please connect the Internet without proxy settings. (Proxy settings are not required for normal household use. For details of Internet environment, consult your Internet Service Provider (ISP) or telecommunications company.)

 → **All settings** > **Setup** > **Voice control settings**


## How to use

---

### 1. Press of Touch Pad Controller to display the operation guide.


- You can also display it with saying “Hello television” to the TV (built-in microphone).
- When a confirmation screen is displayed, read carefully and start Voice control function.


(Example)

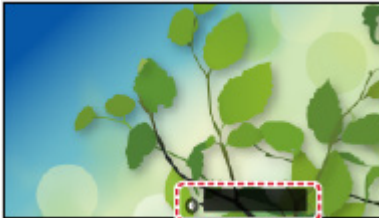

### 2. Say a key word (e.g. my Home Screen) to the microphone while the operation guide is displayed.

(Example)

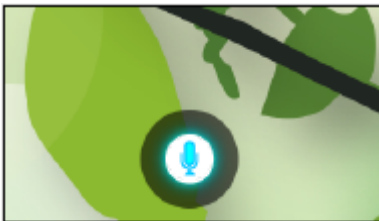

- The operation guide turns to blue during processing.
- The operation guide automatically disappears after a certain period of time. Press  again to start the Voice control function.
  - You can also start the Voice control function again with saying “Hello television” to the TV.

   Voice command list

- You can also display it with saying “Help” to the TV (built-in microphone).

   Exit Voice control function

- You can also exit the function with saying “Thanks television” to the TV (built-in microphone).

### ■ To turn on the TV using Direct Voice Control function

You can turn on the TV with saying “Television power on” to the TV (built-in microphone).

- Set **Direct Voice Control** to **On** to use this function.

  **All settings > Setup > Voice control settings**

# Notice

---

## ■ Voice control

- When you start Voice control function, sound level of the TV becomes low.
- Voice control function may not work properly under the following circumstances.
  - Incorrect or unclear pronunciation.
  - Volume level of your voice is too loud or too low.
  - Noisy surroundings.
- Phrases other than voice command may not be recognized.
- It is recommended that you speak within about 6 inches (15 cm) of the integrated microphone when using Voice control function.
- It is recommended to speak within approx. 9.8 ft (3 m) from the front of TV when using the built-in microphone.
- Design and specifications are subject to change without notice.

## ■ Human activity sensor

- Available ranges for the human activity sensor

Distance:

Within approx. 16.4 ft (5 m)

Horizontal:

Within approx. 35°

Vertical (upward):

Within approx. 15°

Vertical (downward):

Within approx. 7.5°

- Human activity sensor detects the gap between the room temperature and human body temperature. The available ranges may be different depending on the surrounding temperature, clothes, etc. Human activity sensor may mistakenly detect the heat source such as direct sunlight, animals (dog, cat, etc.), warm air from air conditioner, heater, electric pot, etc.
- Sideways or lengthways movement can be detected easily, but back and forth movement or a slight movement may not be detected strictly.
- Human activity sensor may not work properly when there is a reflecting object (mirror, etc.) in the available ranges or any objects between the human activity sensor and person.

# Using Touch Pad Controller

## Features


---

Touch Pad Controller is designed for the convenient operations on the application, Internet content, etc. You can operate the TV intuitively with this controller.

- Touch Pad Controller must be paired with the TV prior to operation.  
(Pairing to this TV with Bluetooth wireless technology.)
- The Touch Pad Controller must be pointed toward the TV to turn on the power.  
(Only the Power-on switch works at first.)
- The TV can be paired with one Touch Pad Controller only.
- Touch Pad Controller can be used exclusively for controlling this TV.
- About voice control:  
It is recommended to speak within about 6 inches (15 cm) from microphone of Touch Pad Controller when using Voice control function.
- Transmission Range:  
Use the Touch Pad Controller within the range of 10.5 ft (3.2 m) from front surface of the TV.
  - The range may be shortened if there are any obstacles or can be affected by the surrounding environment or building structure.

## Pairing


---

- 1 Insert the batteries in the Touch Pad Controller.
  - 2 Hold the Touch Pad Controller within 1.6 ft. (50 cm) of the TV.
  - 3 Operate touch pad or press any button other than Power button to start pairing.
  - 4 Please complete the pairing by checking the status in the pairing guide on the screen.
- You can also pair the Touch Pad Controller with main remote control.  
 → **Convenience features > Using Touch Pad Controller > Setting the menu**



## Identifying controls

---

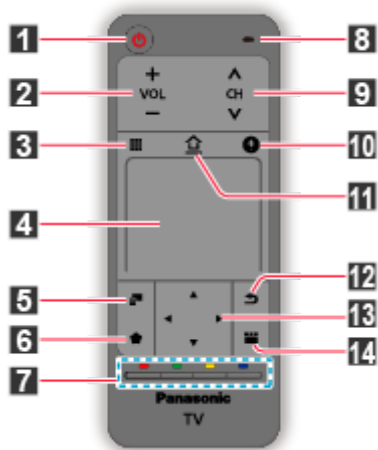

**1** Standby On / Off switch


**2** Volume Up / Down

**3** On-screen remote control

- Press to display the remote control GUI (Graphical User Interface).
- Press again to move the position of GUI. Swipe to select the button.
- Press **12** to exit the on-screen remote control.

**4** Touch pad

- For operations, refer to [Operational Guide](#) in the Setup menu.


 → **Convenience features > Using Touch Pad Controller > Setting the menu**

**5** Option Menu

- Easy optional setting for viewing, sound, etc.

**6** Pin to HOME

- Adds a shortcut for a frequently used feature (TV program / application / device) on Home Screen.

 → **Using Home Screen > Home Screen > Pin to HOME**

**7** Colored buttons (red-green-yellow-blue)

- Used for the selection, navigation and operation of various functions.

**8** Microphone

**9** Channel Up / Down

**10** Voice Control button

- For details of Voice control function

 → **Convenience features > Using Voice control**

**11** HOME

- Displays Home Screen.

**12** Return

- Returns to the previous menu / page.

**13** Cursor buttons

**14** APPS

- Displays **Apps**.


## Setting the menu

---

1. Select **VIERA Touch Pad settings** from **Setup**.


 **MENU** → **Menu** > **Setup** > **VIERA Touch Pad settings**

2. Select item and set.

Select desired item using  $\triangle$  /  $\nabla$  and press  and adjust with  $\triangle$  /  $\nabla$ .

(**Pairing/Cursor sensitivity/Operational Guide**)

- For Touch Pad settings

 → **All settings** > **Setup** > **VIERA Touch Pad settings**

# Using Bluetooth devices

## Settings

---

This setting enables you to use Bluetooth keyboard/mouse \*1.

- Up to 5 devices can be used simultaneously (except the Touch Pad Controller and the 3D Eyewear).

\*1: HID (Human Interface Device Profile) compliant keyboards and mouse are available.

### 1. Display the **Menu** and select **Bluetooth settings**

 **MENU** → **Menu** > **Setup** > **Bluetooth settings**

Select **Bluetooth settings** using  $\triangle$  /  $\nabla$  from menu bar and press 

### 2. Select the options and set

(**Bluetooth devices**)

#### ■ Bluetooth devices

Search and register Bluetooth keyboard/Mouse.

1. Select **Bluetooth devices** using  $\triangle$  /  $\nabla$  and press 

Follow the directions on screen to complete the register.

- For more details about Bluetooth settings

 → **All settings** > **Setup** > **Bluetooth settings**

# Control by Smartphone, etc.

## Smartphone remote

---

You can use your smartphone as the TV's remote control.

**1. Select **Network****

 **MENU** → **Menu** > **Network**

**2. Select **TV Remote** in **TV Remote App settings****

Select desired menu using  $\Delta$  /  $\nabla$

**3. Set the item**

Switch to **On** using  $\Delta$  /  $\nabla$

- This function is subject to change without notice.  
For more details please visit the site below:  
<http://panasonic.net/viera/support> (English only)

## Turn on the TV via IP

---

This function enables you to turn on the TV with control command by the PC etc.

- When you need to turn on the TV using this system, set Wake on LAN / Wireless LAN to **On**.

 **MENU** → **Menu** > **Network** > **TV Remote App settings** > **Wake on LAN / Wireless LAN**

# Mirroring

You can watch display images of other devices (smartphone, etc.) on the TV screen using a mirroring function.



**1** Smartphone, etc.

**2** TV

1. Display **Devices** from Home Screen.

 **HOME** → Home Screen > **Devices**

2. Select **Mirroring** and press **OK**.

3. Follow the on-screen instructions.

- Pairing information of the device (smartphone, etc.) is registered once you use this function.

## ■ Easy Mirroring

You can also start the mirroring function from the other devices (smartphone, etc.) when **Easy Mirroring** is set to **On**.

 → **All settings** > **Network** > **Network settings**

- You cannot use Easy mirroring function while the TV is set to **TV as Access Point**.

- This function may be available with the other devices (smartphone, etc.) supporting the mirroring function. For details, refer to the operating instructions of the device.

# Using USB Keyboard

## Keyboard

---

Keyboards requiring the drivers are not supported.

### ■ To select the language type for the keyboard

 **MENU** → **Menu** > **Setup** > **System** > **Keyboard type**

### ■ Key map

Some of the keys of USB keyboards may correspond to the operation of the remote control.

Keyboard	Remote Control
↑ / ↓ / ← / →	△ / ▽ / ◀ / ▶
Enter	OK
Back Space	RETURN
ESC	EXIT
0 - 9	Numeric buttons
F1	HOME
F2	APPS
F3	MENU
F4	INPUT
F5 / F6	Channel down/Channel up
F7 / F8	Volume down/Volume up
F9 / F10 / F11 / F12	Colored buttons



# All settings

## How to use

### Setting the menu

---

Various menus allow you to set the picture, sound, and other functions.

- Some menus are grayed out depending on the input signal or condition.  
(e.g. **Zoom adjustments** will be grayed out if the aspect is not set to **ZOOM**.)

#### 1. Display the menu

 **MENU** → **Menu**

#### 2. Select the menu from menu bar

Select desired menu using  $\Delta$  /  $\nabla$  from menu bar and press 

#### 3. Select the item and adjust

Select desired item using  $\Delta$  /  $\nabla$

- You can also access to desired menu using  $\triangleleft$  /  $\triangleright$ 
  - Adjust the item: Using  $\triangleleft$  /  $\triangleright$
  - Set/change the item: Using  $\Delta$  /  $\nabla$

- Displays the functions that can be adjusted.
- Some functions will be disabled depending on the type of input signal.
- Some settings in Picture menu may also affect the menu screen when watching the 4K contents.
- 4K 3D format is not supported.

# Picture

## Basic settings

---

Adjust the image or picture quality.

 **MENU** → **Menu** > **Picture**

### Picture mode

**(Vivid/Standard/Home theater/THX Cinema/THX Bright Room/Cinema/Custom/Professional 1/Professional 2)**

Select from preset picture modes for optimal viewing. Mode is saved separately for each input.

- THX modes are available during 2D mode.
- 

### Back light

Adjusts backlight's luminance (light intensity).

- Gray-out if Professional mode (isfccc) Lock is on.
- 

### Contrast, Brightness, Color, Tint, Sharpness

Adjusts the color, brightness, etc. for each picture mode to suit your preference.

- Display range
    - Contrast/Color/Sharpness: 0 - 100
    - Brightness/Tint: -50 - +50
  - Gray-out conditions:
    - Professional mode (isfccc) Lock is on.
    - **1080p pixel by 4pixels** is set to **On**. (only for Sharpness)
- 

### Color temp.

Selects color temperature preference, from “cool” (bluish) to “warm” (reddish) or normal.

- Gray-out if Professional mode (isfccc) Lock is on.
-

## **Vivid color**

**(On/Off)**

Enhances green and blue color reproduction, especially outdoor scenes.

- Gray-out if Professional mode (isfccc) Lock is on.
- 

## **Color remaster/Rec.2020 color remaster**

**(Max/Min/Off)**

Reproduces vivid images with the appropriate process for the panel color gamut and input signal. If you use **Color gamut** function in **Pro settings**, select **Off** for this menu.

- For HDMI input or video contents of Media Player.
  - Gray-out if **Picture mode** is set to **THX**.
  - **Rec.2020 color remaster** is only available when Rec. 2020 signal is received.
- 

## **Photo enhancement**

**(Max/Min/Off)**

Enhances brightness and color depth of photos, by expanding the color pallet and gamut.

Set to **Off**, if you are going to adjust **Color gamut** in **Pro settings**.

- For HDMI input or photo contents of Media Player.
  - Gray-out if **Picture mode** is set to **THX**.
- 

## **Adaptive backlight control**

Adjusts backlight level to make dark areas of the picture appear more natural. If the picture appears unnatural, try setting it **Off**.

- Gray-out if Professional mode (isfccc) Lock is on.
- 

## **C.A.T.S.**

**(On/Off)**

Contrast Automatic Tracking System (C.A.T.S.) adjusts the screen brightness and contrast according to the room's ambient light conditions.

This ECO feature automatically dims the brightness of the screen when the room lighting is lowered. C.A.T.S. features a built-in delay when the lighting conditions change. The adjustment happens gradually.

If you prefer a consistent brightness, disable C.A.T.S. by:

**Menu** > **Picture** > scroll down to **C.A.T.S.** and turn it off.

Or

**Menu** > **Picture** > **Picture mode** then select viewing mode such as **Custom**.

---

### **Video NR**

**(Auto/High/Mid/Low/Off)**

Reduces noise, commonly called snow. Leave it off when receiving a strong signal.

- Gray-out conditions:
    - **Game mode** is set to **On**.
    - Pure direct menu is set to **On**.
- 

### **MPEG remaster**

**(Auto/Strong/Medium/Weak/Off)**

Reduces signal noise generated by input devices playing MPEG compressed videos, and provide clear contours.

- Gray-out conditions:
    - **Game mode** is set to **On**.
    - Pure direct menu is set to **On**.
- 

### **Resolution remaster**

**(Auto/Strong/Medium/Weak/Off)**

Enhances the picture resolution to make the image more clear.

- Gray-out if Professional mode (isfccc) Lock is on.
- 

### **Dynamic range remaster**

**(On/Off)**

Reproduces bright areas of the image to be closer to the original luminance and contrast, and improves the picture impact.

- This menu is available only for full screen mode.
  - Gray-out conditions:
    - **Adaptive backlight control** is **Off**.
    - **Contrast A.I.** in **Pro settings** is **Off**.
    - 3D mode
-

## **Motion picture setting**

**(Strong/Mid/Weak/Off)**

Improves motion picture quality by reducing motion blur.

- Gray-out conditions:
  - Game mode
  - Photo content
  - Pure direct menu is set to **On**.

## Pro settings

---

Adjusts the picture mode in more detail.

Set **Picture mode** to **Custom/Cinema/Professional 1/Professional 2** first.

 **MENU** → **Menu** > **Picture** > **Pro settings**

### **Contrast A.I.**

(**Custom/Auto/Off**)

Automatically controls contrast according to the images. **Auto** is Panasonic setting.

---

### **Contrast A.I. setting**

Adjusts the detail of contrast control setting. If **Contrast A.I.** is set to **Custom**, this menu is enabled.

### **AGC**

(**0-15**)

Automatic Gamma Control. Increases automatically the brightness of a dark signal.

### **Black extension**

(**0-15**)

Adjusts the gradations in dark shades of the image.

### **Cool white effect**

(**0-15**)

Adjusts the white temperature point toward cool.

### **Reset to defaults**

Reset **Contrast A.I. setting** to factory defaults settings.

---

### **Color gamut**

(**Native/Rec. 709/SMPTE-C/EBU**)

Each color space is a matrix composed of red, green & blue colors. Select your preference.

---

**W/B detail adjustment****W/B high R, G, B (+/-50)**

Adjusts the white balance for light red/green/blue areas.

**W/B low R, G, B (+/-50)**

Adjusts the white balance for dark red/green/blue areas.

**More detail adjustment**

Adjusts more detailed White Balance items.

**Input signal level**

Adjusts the IRE picture level in relation to the gain of the red, green & blue colors.

**Red, Green, Blue gain**

Adjusts the red/green/blue gain value of each Input signal level.

**Reset to defaults**

Resets all **More detail adjustment** to factory defaults settings.

**Reset to defaults**

Resets **W/B detail adjustment** to factory defaults settings.

---

**Color detail adjustment****Red, Green, Blue hue (+/-50)**

Adjusts the red/green/blue hue between light, pastel and vivid.

**Red, Green, Blue saturation (+/-50)**

Adjusts the difference of the red/green/blue color against its own brightness.

**Red, Green, Blue luminance (+/-50)**

Adjusts the luminance of red/green/blue areas.

### **More detail adjustment**

Adjusts more detailed Color management items.

#### **Yellow, Cyan, Magenta hue (+/-50)**

Adjusts the yellow/cyan/magenta hue between light, pastel and vivid.

#### **Yellow, Cyan, Magenta saturation (+/-50)**

Adjusts the difference of the yellow/cyan/magenta color against its own brightness.

#### **Yellow, Cyan, Magenta luminance (+/-50)**

Adjusts the luminance of red/green/blue/yellow/cyan/magenta areas.

#### **Reset to defaults**

Resets all **More detail adjustment** to factory defaults settings.

### **Reset to defaults**

Resets **Color detail adjustment** to factory defaults settings.

---

### **Gamma detail adjustment**

#### **Gamma**

Gamma correction. Adjusts the intermediate brightness of the image.

### **More detail adjustment**

Adjusts more detailed Gamma items.

#### **Input signal level**

Adjusts the IRE picture level in relation to the gain of the red, green & blue colors.

#### **Gain**

Adjusts the gain value of each Input signal level.

#### **Reset to defaults**

Resets all **More detail adjustment** to factory defaults settings.



**Reset to defaults**

Resets **Gamma detail adjustment** to factory defaults settings.

---

**Reset to defaults**

Resets all **Pro settings** adjustments to factory default settings.

# Advanced picture

---

 **MENU** → **Menu** > **Picture** > **Advanced picture**

## Game mode

(On/Off)

Optimizes the TV image for fast response signal when playing video games.

- Not available in TV mode.
- 

## 3:2 pulldown

(On/Off/Auto)

Reduces judder in film-based content by transforming 24 fps to 30 fps (non-HDMI).

- Available for interlaced content (480i or 1080i) via analog source.
  - Gray-out if **Game mode** is set to **On**.
- 

## 1080p pure direct

(On/Off)

Enables the support of a 4:4:4 digital video format signal. Use only with a 4:4:4 capable source.

Note:

- This function is available only for HDMI 1080p input.
  - Not in use when no signal is received, input signal is YCbCr 4:2:2, or during 3D mode.
  - Gray-out if **1080p pixel by 4pixels** is set to **On**.
- 

## 4K pure direct

(On/Off)

Enables the support of a 4K 4:4:4 digital video format signal. Use only with a 4K 4:4:4 capable source.

- Gray-out if signal is not 4K 4:4:4.
-

## **1080p pixel by 4pixels**

**(On/Off)**

Displays like pixel by pixel on FHD resolution display for 1080p signal.

- Not all image may be displayed as dot by dot precisely.
  - Gray-out in 3D mode.
- 

## **HDMI content type**

**(Off/Auto/Photos/Graphics)**

Based on an HDMI content type, picture is adjusted for optimum playback automatically. **Photos/Graphics** can be selected manually. **Cinema/Game** can be selected manually in the **Picture mode/Game mode** menu.

### **Auto:**

Switches content type automatically depending on the HDMI signal information.

### **Photos:**

Best setting for JPEG viewing.

### **Graphics:**

Best setting for On-Screen display of connected equipment.

## **Auto detail setting**

Selectable the effect on each content type in **Auto** mode.

---

## **HDMI/DVI RGB range**

**(Auto/Standard (16-235)/Nonstandard)**

Prevents the blown out highlights and blocked up shadows when a wide-range signal is received. Selects between standard RGB range (16-235 bits) or non compliance (0-255 bits).

### **Auto:**

Switches the RGB range (Standard (16-235)/Nonstandard) depending on the HDMI signal information.

---

## **Black level**

**(Light/Dark)**

Select **Dark** when details are washed out in dark areas of picture from external source.

- Available when input is set to external source.
-

### **3D Y/C filter**

**(On/Off)**

Minimizes rough edges (dot crawl) in the picture from a composite source.

# Screen settings

---

 **MENU** → **Menu** > **Picture** > **Screen settings**

## Screen format

SD signal/HD signal:

Full / JUST / 4:3 / ZOOM

4K format:

Full / V Full

Changes the format (aspect ratio). Lets you choose the aspect depending on the format of received signal.

- Gray-out in 3D mode.
- 

## Overscan

(On/Off)

Selects the screen area displaying the image for FULL aspect.

**On:**

Enlarges the image to hide the edge of the image.

**Off:**

Displays the image in the original size.

Set to **On** if noise is generated on the edge of the screen.

- Gray-out if input signal is 4K.
- 

## H size

Adjusts the horizontal display range to reduce noise of both side edges of an image.

- Gray-out in 3D mode.
- 

## Zoom adjustments

Adjusts vertical position and size when FORMAT setting is set to **JUST** or **ZOOM**.

**JUST:**

V-size max is 3

**ZOOM:**

V-size max is 15

- Gray-out if input signal is 4K, or during 3D mode.
-

## **Screen display**

### **(On/Off)**

Turns the screen off when you select.

- The sound is active even if the screen turns off.
- Press any buttons to turn the screen on.
- This feature is effective in reducing power consumption when listening to the sounds without watching the TV screen.

## 3D settings

---

 **MENU** → **Menu** > **Picture** > **3D settings**

### 3D format

Selects the 3D format.

---

### 2D→3D depth

(High/Mid/Low)

Adjusts the simulated 3D depth perception effect of the 2D incoming signal.

---

### 3D adjustment

(On/Off)

Adjusts the left eye versus right eye depth effect of the image. Set to **On** to adjust **Effect** (-3 to +3).

- Gray-out in 2D mode
- 

### Left/Right swap

(Normal/Swapped)

Flips the phase of the image to give the correct perception of depth.

- Gray-out in 2D mode
- 

### Safety precautions

Displays safety notice about 3D viewing.

Please read securely.

## Other settings

---

### **Lock settings**

Locks the picture menu for **Professional 1/Professional 2** and each input.

Settings are basic picture settings and Pro settings.

---

### **Copy adjustments**

You can copy the selected **Cinema** or **Custom** settings and apply them to all or other inputs.

Settings are basic picture settings and Pro settings.

### **Reset to defaults**

Resets all picture adjustments to factory default settings except for the advanced settings.



# Sound

## Basic settings

---

Adjusts audio quality.

 **MENU** → **Menu** > **Sound**

### Sound mode

(**Standard/Music/Ambience/User**)

Selects your favorite sound mode.

- The selected mode affects all input signals.

#### **Standard:**

Provides the suitable sound quality for all types of scenes.

#### **Music:**

Improves sound quality for watching music videos, etc.

#### **Ambience:**

Improves spatial effects and provides clear sounds.

#### **User:**

Adjusts the sounds manually by using the equalizer to suit your favorite sound quality.

- For the **User** mode, **Equalizer** will appear on the Sound Menu instead of **Bass** and **Treble**. Select **Equalizer** and adjust the frequency.
- Gray-out when using the Home Theater.

---

### **Bass**

Increases or decreases the bass response.

- Gray-out if **Sound mode** is set to **User**.
- Gray-out when using Home Theater.

---

### **Treble**


Increases or decreases the treble response.

- Gray-out if **Sound mode** is set to **User**.
  - Gray-out when using Home Theater.
-

## Equalizer

(150Hz/250Hz/500Hz/1kHz/2kHz/4kHz/8kHz/12kHz/Reset to defaults)

Adjusts the frequency level to suit your favorite sound quality.

- This function is available when **Sound mode** is set to **User**.
  - Select the frequency and change the frequency level by using the cursor button.
  - To enhance the bass sound, raise the level of the lower frequency. To enhance the treble sound, raise the level of the higher frequency.
  - To reset the levels of each frequency to the default settings, select **Reset to defaults** by using the cursor button, and then press the  button.
  - Gray-out when using Home Theater.
- 

## Balance

Emphasizes the left/right speaker volume.

- Gray-out when using Home Theater.

## Advanced settings

---

 **MENU** → **Menu** > **Sound**

### Surround

(Diffuse surround/Virtual surround/Off)

Enhances audio L/R response when listening to stereo.

Ideal for music and action movies.

- Gray-out when using Home Theater.
- 

### Bass boost

(On/Off)

Enhances bass sound and provides powerful sound.

- Gray-out when using Home Theater.
- 

### TV speakers

(On/Off)

Enables the TV's built-in speakers.

Switch to **Off** when using external speakers.

---

### Speaker output

(TV/Home theater)

Select the Home theater or TV speakers for audio output.

#### TV:

The TV speakers are on.

#### Home theater:

Selecting **Home theater** turns the equipment on automatically if it is in Standby mode.

- The sound of TV speakers is mute. When the equipment is turned off, TV speakers will be activated.
  - You can use **VOL(+/-)** and **MUTE**.
  - This function is available when the theater speakers supporting VIERA Link function is connected to this TV.
-

## **A.I. sound**

### **(On/Off)**

Equalizes overall volume levels across all channels and external inputs.

- Gray-out when using Home Theater.
- 

## **Volume leveler**

### **(+/-6)**

Minimizes volume disparity after switching to external inputs.

- Gray-out when using Home Theater.
- 

## **Distance to wall**

### **(Over 1ft (30cm)/Up to 1ft (30cm))**

Setting for wall mounted TV.

#### **Over 1ft (30cm):**

TV is on a stand. Keeps current setup.

#### **Up to 1ft (30cm):**

TV is mounted. Reduces low frequency level to prevent resonance.

- Gray-out when using Home Theater.
- 

## **Preferred audio type**

### **(Main Audio/Hearing Impaired/Visually Impaired)**

Allows setting of the accessible audio format when its broadcast and the language setting matches.

---

## **Digital audio out selection**

### **(Auto/PCM)**

Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI 2 (ARC function) terminals.

#### **Auto:**

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bit stream. MPEG is output as PCM.

#### **PCM:**

Digital output signal is fixed to PCM.

- For video content of Media Player / Network services.

- ARC (Audio Return Channel):

A function of digital audio output using HDMI cable.

---

### **HDMI input (HDMIx \* in)**

#### **(Digital/Analog)**

The default setting is **Digital** for the HDMI connection. (Digital input signal)

Select audio input terminal when a DVI cable is connected along with an analog audio input signal.

\* : indicates the number of terminals

---

### **Reset to defaults**

Resets all Audio adjustments to factory default settings.

- Gray-out when using Home Theater.

# Voice guidance settings

---

Settings for using voice guidance.

 **MENU** → **Menu** > **Sound** > **Voice guidance settings**

## Voice guidance

(On/Off)

**On:**

Enables voice guidance of the basic features (Channel banner and input source).

---

## Speed

(Fast/Normal/Slow)

Adjusts the readout speed of the voice guidance.

---

## Volume

(High/Mid/Low)

Selects the volume for voice guidance.

---

## Language

(English/Español/Français/中文)

Selects the language for voice guidance.

---

## User level

(Beginner/Expert)

Selects the level of complexity for voice guidance.

---

## Web Browser

(On/Off)

Enables voice guidance on web page.

# Network

## Network settings

---

 **MENU** → [Menu](#) > [Network](#)

### **Network connection**

Connects the TV to the home network. Searches for wireless network or establishes wired connection.

Follow the directions on the screen to complete the network settings.

---

### **Network status**

Tests the connection between the TV to the local router and the Internet.

Displays Current settings and status screen. (Network type/Wireless settings/MAC address/IP Address, etc.)

- Displayed items differ depending on the type of network connection.
- 

### **my Home Cloud settings**

Sets for an account to enjoy the cloud services.

#### **Set up new account**

Sets up an account for this TV.

#### **Edit account**

Displays and edits the account status.

#### **Remove account**

Deletes an account from this TV.

#### **Notices**

Displays the terms of service.

---

### **VIERA network name**

Set your favorite name for this TV.

---

## TV Remote App settings

Sets a network-based remote control.

### TV Remote

(On/Off)

Enables to control the TV from the network equipment (smartphone, etc.).

- Set to **On** to enable the settings below.

### Wake on LAN / Wireless LAN

(On/Off)

Turns on the TV via Ethernet using a wake-up message sent from a device within the home network.

### Device to upload contents

Selects device to upload contents from the network equipment (smartphone, etc.).

---

## Network link

Settings for DLNA Server.

### DLNA server

(On/Off)

Enables to use this TV as DMS for network devices (DLNA Certified VIERA)

- Set to **On** to enable the settings below.

### Registration type

(Auto/Manual)

Selects the limitation of access to this TV for each device on the home network.

#### Auto:

All the available device on the home network are accessible.  
(maximum 16 equipment)

#### Manual:

Sets the access limitation for each device in the Remote device List.

### Remote device list

Lists the available device on the home network.

---



## File sharing settings

### File sharing server

(On/Off)

Set to **On** to enable File sharing function.

### Network device list

You can select and play movies, photos and music files on Network Devices as SD card or USB Devices connected to the TV with Media player.

---

## Mirroring settings

You can set the items for mirroring function.

### Easy Mirroring

(On/Off)

Enables starting the mirroring function from the other devices (smartphone, etc.) without operating the TV.

- To deactivate wireless, set **Easy Mirroring** to **Off** and confirm the network connection type is set to **Wired**.

 → **Network services > Network settings > Network connection/ Network status**

- Not available when the TV is set to **TV as Access Point**.

### Delete all pairings

Delete the pairing information for all paired devices.

---

## Control4 settings

Settings for Control4.

### Control4 discovery

(On/Off)

Switch to Control4 mode.

- Set to **On** to enable **Send identify** menu.

### Send identify

Send Identify message to Control4 controller.

- Please consult with local Control4 dealer for settings and operation.
-

## **Do Not Track setting**

Sets to notify websites about tracking your browsing activities.

### **Tracking mode**

**(Mode 1/Mode 2/Mode 3)**

Select tracking status.

#### **Mode 1:**

Notifies websites that you want to be tracked.

#### **Mode 2:**

Notifies websites that you do not want to be tracked.

#### **Mode 3:**

Sends no configuration information about tracking.

### **About Do Not Track**

Displays the information about tracking.

---

## **Software update**

Check if software (firmware) update for the TV is available.

Press OK to start the Software update screen. Follow directions on the screen.

- Set **Clock** first.
- 

## **New software notice**

**(On/Off)**

Selects whether or not to display a notification message when a software (firmware) update is available for download. Follow the directions on the screen to download.

# Timer

## Sleep (Off timer)

---

 **MENU** → [Menu](#) > [Timer](#) > [Sleep](#)

### **Sleep (minutes)**

**(Off/15 minutes/30 minutes/60 minutes/90 minutes)**

Selects how long the TV stays on before it automatically turns off.

## Timer (On/Off timer)

---

 **MENU** → [Menu](#) > [Timer](#) > [Timer](#)

### **Timer set**

**(On/Off)**

Enables or disables the Timer.

---

### **Inputs**

Sets which input will be selected when the TV turns on.

---

### **Channel**

Sets the channel to display when the TV turns on.

---

### **Day**

Sets the day when the TV turns on.

---

### **On time**

Sets the time that the TV will turn on at. The TV will turn off after 90 minutes or as specified.

---

### **Off time**

Sets the time that the TV will turn off at within 24 hours.

# Clock settings

---

 **MENU** ➔ [Menu](#) > [Timer](#) > [Clock](#)

## **Mode**

**(Auto/Manual)**

Sets the date and time manually or automatically via an Internet connection.

---

## **Date, Time**

**(Year/Month/Day/Hour/Minute)**

Sets current date or time.

---

## **Time zone**

**(EST/CST/MST/PST/AKST/HST/NST/AST)**

Selects your time zone, to enable correct automatic date and time settings.

---

## **DST**

**(On/Off)**

Selects if Daylight Saving Time is currently observed.

## Auto turn off settings

---

 **MENU** → **Menu** > **Timer**

### **No activity for 4 hours**

#### **(Power TV off/Stay on)**

To conserve energy, the TV automatically turns off when no operation of remote and side panel key continues for more than 4 hours.

Not in use when “On/Off Timer” is set. “No activity for 4 hours was activated” will be displayed for about 10 seconds when the TV is turned on for the first time after the power was turned off by “No activity for 4 hours” feature. The on-screen display will flash 3, 2 and 1 to indicate the last three (3) remaining minutes prior to the shut-off.

- Changing the default configuration may increase Annual Power Consumption.

---

### **No signal for 10 minutes**

#### **(Power TV off/Stay on)**

To conserve energy, the TV automatically turns off when NO SIGNAL and NO OPERATION continue for more than 10 minutes.

Not in use when “On/Off Timer” is set. “No signal for 10 minutes was activated” will be displayed for about 10 seconds when the TV is turned on for the first time after the power was turned off by “No signal for 10 minutes” feature. The on-screen display will flash 3, 2 and 1 to indicate the last three (3) remaining minutes prior to the shut-off.

# Setup

## Eco navigation

---

 **MENU** → [Menu](#) > [Setup](#) > [Eco navigation](#)

### **Set to ECO**

Sets the TV to the most suitable energy-saving mode automatically.

Optimizes the TV's various modes to save energy.

Note:

- The TV's brightness will adjust and adapt as the room lighting changes.

## Voice control settings

---

Settings for using Voice control function.

 **MENU** → [Menu](#) > [Setup](#) > [Voice control settings](#)

### Language

([English](#)/[Español](#)/[Français](#)/中文)

Selects the language for voice control.

---

### Speech detection level

([High](#)/[Standard](#)/[Low](#))

Sets sensitivity level for voice control.

---

### Direct Voice Control

([On](#)/[Off](#))

Enables the Voice control function with the built-in microphone.

---

### Terms of service

Displays the terms of service of voice control.

---

### Instructions for Voice Control

Displays details of the Voice control function in eHELP.



## USB device setup

---

 **MENU** ➔ **Menu** > **Setup** > **USB device setup**

Remove USB device safely to prevent the damage of the data or device.

## VIERA Touch Pad settings

---

Repeats the initial step-by-step touch pad remote setup.

 **MENU** → **Menu** > **Setup** > **VIERA Touch Pad settings**

### **Pairing**

Follow the instructions on screen to complete the pairing.

### **Cursor sensitivity**

**(Strong/Medium/Weak)**

Settings for the cursor sensitivity of the Touch Pad Controller.

### **Operational Guide**

Displays operation of the Touch Pad Controller.

## Bluetooth settings

---

Search and register Bluetooth Keyboard/Mouse.

 **MENU** → **Menu** > **Setup** > **Bluetooth settings**

### **Bluetooth devices**

Search and pair Bluetooth devices in range. Display the status of previously registered devices.

# Parental control

---

 **MENU** → **Menu** > **Setup** > **Parental control**

## Change password

Creates a new password. Input the new 4-digit password twice.

(**Convenience features** > **Parental control** > **Password setting**)

---

## Show adult app

(**On/Off**)

Set to **Off** to lock specific applications to restrict access to them (if available).

- For Internet content
- 

## Mode

(**Off/All/Custom**)

Locks (**All**) or Unlocks (**Off**) all channels, programs or inputs. For **Custom**, locks specified inputs of **Channel**, **Game** and **Program**.

Set **Custom** in **Mode** to specify **Channel**, **Game** and **Program** settings.

---

## Channel

These channels will be blocked regardless of the program ratings.

### Mode

(**Off/All/Custom**)

Locks (**All**) or Unlocks (**Off**) all channels. For **Custom**, locks specified channels. Set **Channel 1** - **Channel 7**.

### Channel 1-7

Designates channel number to be blocked at any time, regardless of its broadcast content.

---

## Game

(**On/Off**)

Restricts access to channel 3, channel 4 and all the TV's inputs.

---

## **Program**

Prohibits viewing of TV content based on the rating provided by the broadcasters.

### **Mode**

**(On/Off)**

Sets program lock status. "V-chip" technology enables restricted shows to lock according to TV ratings.

### **On:**

Sets each rating level (MPAA, U.S.TV, C.E.L.R., C.F.L.R.).

### **MPAA**

Selects U.S. movie ratings to lock.

### **U.S.TV**

U.S. TV program ratings.

### **C.E.L.R.**

Canadian English ratings.

### **C.F.L.R.**

Canadian French ratings.

### **DRRT**

This television is designed to support the "Downloadable U.S. Region Rating System" when available. (Currently available only in U.S.)

# ANTENNA/Cable setup

---

 **MENU** → **Menu** > **Setup** > **ANTENNA/Cable setup**

## ANTENNA/Cable signal

**(Cable/Antenna)**

Selects signal source connected directly to the ANTENNA/Cable In terminal.

Note:

- When using a Cable or Satellite box, it is recommended to connect the box to an AV IN terminal and skip this setting.
- 

## Channel surf mode

**(All/Favorite/Digital only/Analog only)**

Sets the mode to select the channel with the Channel up/down button.


Favorite:

Only channels registered as FAVORITE.

---

## Auto program

**(All channels/Digital only/Analog only)**

- Select scan type and press  to start scanning automatically.  
After the scanning is completed, select **Apply**.
  - All previously saved channels are erased.
- 

## Manual program

Changes the channel setting or channel display.

**Edit:**

Edits these items.

Caption:

Changes the station identifier. (maximum 7 characters available)


Favorite:

Registers channels to the Favorite List from **Set favorite**.

Add:

Adds (Yes) or skips (No) channels

**Apply:**

After the editing is completed, press  to save the settings.

**Cancel:**

Cancels the changes.

---

**Signal meter**

Check the signal strength if interference is found or freezing occurs on a digital image.

- If the signal is weak, check the antenna.
- If you cannot figure out the problem, consult your local dealer.
- Not available if **Cable** is selected in **ANTENNA/Cable signal**.
- Available only for digital antenna channels.

# Language settings

---

 **MENU** → **Menu** > **Setup** > **Language**

## **Menus language**

**(English/Español/Français/中文)**

Selects the screen menu language.

---

## **Preferred SAP language**

**(English/Spanish/French)**

Selects the preferred language for hearing or visually impaired, if offered during digital broadcast

Note:

- Preferred language takes precedence over the preferred audio type.  
(Available only in the U.S.)



# Display customization

---

 **MENU** → [Menu](#) > [Setup](#) > [Display customization](#)

## Smart Banner

(On/Off)

Sets the banner display status.

---

## Input labels

Selects the terminal and label of the external equipment. Devices connected to external input terminals can be labeled for easier identification during the input selection.

- When the INPUT is labeled as **Not used**, then it will not appear in the Input select menu.
  - Select **Customize** to enter your own labels for the input (ex. "Computer").
- 

## Xumo Guide at power on

(On/Off)

Enables to display Xumo guide.

- Available only when **U.S.A.** is selected from **Country** in First time setup.
- 

## Info Frame at power on

(On/Off)

Enables Info Frame function.

- Available only when the item other than **U.S.A.** is selected from **Country** in First time setup.
- 

## Notification

(On/Off)

Enables to display Notification.

# Closed Caption

---

 **MENU** → [Menu](#) > [Setup](#) > [Display customization](#) > [Closed Caption](#)

## Mode

### (CC on mute/On/Off)

On:

Displays Closed Captions.

CC on mute:

Displays Closed Captions when the audio is muted. (When not using, select **Off**.)

---

## Analog

### (CC1-4/T1-4)

Choose the Closed Caption service of Analog broadcasting.

CC1-4:

Information related to pictures (Appears at the bottom of the screen)

T1-4:

Textual information (Appears over the entire screen)

---

## Digital

### (Primary/Second./Service 3/Service 4/Service 5/Service 6)

The Digital Closed Caption menu lets you configure the way you choose to view the digital captioning.

---

## Digital setting

Sets display settings in digital programs.

### Size

Selects the text size.

### Font

Selects the text font.

### Style

Selects the text style (Raised, Depressed, etc.).

### Foreground

Selects the color of text.

**Foreground opacity**

Selects the opacity of text.

**Background**

Selects the color of text box.

**Background opacity**

Selects the opacity of text box.

**Outline**

Selects the outline color of text (Identifies the settings options on the screen).

---

**Reset to defaults**

Resets all Closed Caption settings to factory default settings.

# VIERA Link settings

---

 **MENU** → **Menu** > **Setup** > **VIERA Link settings**

## VIERA Link

(On/Off)

To use all VIERA Link functions, set to **On** after everything is connected.

---

## Power on link

(Yes/No)

**Yes:** The TV is turned on automatically and switches to the appropriate HDMI input whenever VIERA Link compatible equipment is initially turned on and the Play mode is selected.

---

## Power off link

(Yes/No)

When **Yes** is selected and the TV is turned off, all connected VIERA Link compatible equipment is also automatically turned off. The TV remains on even if the VIERA Link compatible equipment is turned off.

---

## Energy saving mode

(Save/Quick start)

**Quick start:** When TV is turned off, all connected VIERA Link compatible equipment is moved to ECO Standby mode\* automatically under these conditions.

- **Power off link: (Yes).** The connected equipment has “HDAVI Control 4 or later (with Quick Start mode)”

\*: Minimum power consumption of Standby condition for the equipment.

---

## Unselected device auto off

(On/Off)

**On:** The connected VIERA Link compatible equipment will be turned off automatically when not in use under these conditions. The connected equipment has “HDAVI Control 2 or later” (for available equipment only)

# System settings

---

 **MENU** → **Menu** > **Setup** > **System**

## **Keyboard type**

**(U.S./Canadian French/Canadian multilingual std./Spanish(Latin America)/Spanish (Spain))**

Selects the country/region of the keyboard connected to this TV.

---

## **Factory defaults**

Clears all TV settings and memory to factory defaults.

---

## **License**

Displays the software license information.

## Other settings

---

 **MENU** → [Menu](#) > [Setup](#) > [Other settings](#)

### **Power save**

**(Saving/Standard)**

Reduces screen brightness to lower power consumption. Eye-friendly for viewing in a dark room.

## Useful settings

---

 **MENU** → **Menu** > **Setup**

### **HDCP setting**

**(Auto/2.2/1.4)**

If the image is not displayed properly due to connected equipment, please select in order of **Auto** > **2.2** > **1.4**.

---

### **HDMI auto setting**

**(Mode 1/Mode 2)**

If the image is not displayed properly due to connected equipment, please select in order from **Mode 1**.

# Support / FAQ

## Help menu

### Using Help menu

---

The TV's built-in self-help resources.

#### 1. Display the menu

 **MENU** → **Menu**

#### 2. Select **Help** from menu bar

Select desired menu using  $\Delta$  /  $\nabla$  from menu bar and press 

#### 3. Select the Help menu

Select desired menu using  $\Delta$  /  $\nabla$  and press 

([About Firefox OS](#)/[eHELP](#)/[TV Self-test](#)/[Version](#)/[Device information](#))

##### **About Firefox OS:**

Displays the information about Firefox OS.

##### **eHELP:**

This screen

##### **TV Self-test:**

Verifies proper function of the TV for picture and sound.

- Follow the instructions on the screen to complete the self test.

##### **Version:**

Displays TV's software (firmware) version.

##### **Device information:**

Displays the device information of this TV.



# FAQ

## Picture - Viewing

---

### ■ Frequently Asked Questions

For updated information, please visit Panasonic web site.

#### **How do I view the picture from devices such as: Cable/Satellite box, game console, Blu-ray or DVD player?**

- Press the **INPUT** button on the remote to select the correct input source.

 **INPUT** → **Input select**

- Check that the device is turned on and functioning correctly.

#### **Why doesn't the picture look like it is in High Definition?**

- Press the **INFO** button on the remote to confirm the type of signal being received. HD signal should be 720p, 1080i or 1080p.

 **INFO** → Information banner

- Select a High Definition channel from your HD source (Cable, Satellite or fiber optic service). HD channels sometimes broadcast non-HD content.
- Ensure that your HD source (HD box, Blu-ray player, etc.) is connected to the TV with an HDMI or Component cable and set to output an HD video signal.

## Picture - Snowy / none

---

### Why is there no picture or just a blue, black or snowy screen being displayed?

- Press **MENU** and select **Help**. Then select **TV Self-test**. If the test picture displays correctly, then the problem is with the external device (ex. Cable box, DVD player, etc.) or its connection to the TV.

 **MENU** → **Menu** > **Help** > **TV Self-test**

- Check if the power cord is plugged in and the TV is turned on (front red LED light should be on; not blinking)
- Press the **INPUT** button on the remote to select the correct input source.

 **INPUT** → **Input select**

- Ensure all connections are correct and secure. Especially check for Component and VIDEO connection since these terminals are shared.
- When using an external video source, such as a Cable/Satellite box or DVD player, check that the device is on and functioning correctly.
- Press **MENU** on the TV's remote control. If the menu is displayed, then the TV is working; recheck above steps.

### Why is the picture snowy when **ANTENNA/Cable setup** is selected?

- When using a cable service (without a box), check that all connections are secure.
- When using a cable or satellite box, change the connection (wiring) to Composite, Component or HDMI.
- If you're using an antenna, then check that connections are secure. Change the position or direction of the antenna and check the **Signal meter**.

 **MENU** → **Menu** > **Setup** > **ANTENNA/Cable setup** > **Signal meter**

## Picture - Distortion

---

### The picture is distorted after selecting the “AV” input. What should I do?

- Ensure that the device is connected correctly to the TV's Video/Component green connector.
- If using VIDEO or COMPONENT:  
Press **INPUT**, scroll to AV, press ◀ / ▶ to select Video or Component.



### Why do black bars appear on the top and bottom and/or sides of the screen?

- Change the format (aspect ratio) of the picture by pressing the **FORMAT** button on the remote control.
- Check the aspect settings on your external video source, such as Cable/Satellite box, DVD/Blu-ray Disc player, etc.

#### Note:

- Some content, such as film-based movies, are available in extra-wide format. Top and bottom bars are unavoidable.

### Why is the picture chaotic and/or torn and/or with a buzz in the speakers?

- Check if electrical products such as kitchen appliances, fluorescent lights or light dimmers are nearby. They may interfere with the TV's picture.
- Try viewing a picture from another device, such as a DVD player or a game console, to narrow down the source of the problem.

## Picture - Continue

---

### Why is there a black box on the screen?

- Check the settings of Closed Caption (CC).

### Why do some small spots on the screen remain bright or dark?

- The panel is made up of a few million pixels and is produced with advanced technology through an intricate process. Sometimes, a few pixels may be bright or dark.
- These pixels do not indicate a defective panel and will have no impact on the performance of the TV.

### Why is the picture brightness changing?

- Turn the C.A.T.S. feature off.

 **MENU** → **Menu** > **Picture** > **C.A.T.S.**

### Why does the screen turn off?

- Check if the TV is in energy saving mode.

 → **Convenience features** > **Eco navigation** > **Eco navigation**

## Sound - None

---

### Why is there no sound coming from the TV?

- Make sure the volume is up and mute is off.
- Check that the correct **SAP** (Secondary Audio Program) is selected by pressing the **SAP** button on the remote control.
- If the TV is connected to a Panasonic Home Theater via HDMI cable, then check VIERA Link controls.
- If the TV is connected to a Home Theater via optical cable, then: Check the connection, the audio system is on, the correct input is selected.
- Check **HDMI in** analog/digital audio settings.

 **MENU** → **Menu** > **Sound** > **HDMI input**

## Sound - Unusual

---

### **Why is the sound unusual, distorted, low volume or in another language?**

- Check that the correct **SAP** (Secondary Audio Program) is selected by pressing the **SAP** button on the remote control.
- Check that all connections of external equipment connected to the TV are secure.
- When using Cable or Satellite box, check the device's audio settings.  
(Example: try changing the box's Audio Range to "narrow")

### **Why is there a clicking, ticking or buzzing sound coming from the TV unit?**

- When TV power is turned on or shut off there are electrical components that make a click sound. This is normal operation.
- Changes in the temperature and humidity of the room may cause thermal expansion and contraction that can produce sounds. This is not a sign of faulty operation or a malfunction.

# Networking

---

## How do I get Internet services to work on my TV?

1. You need a broadband (High-Speed) Internet service with a speed of no less than 1.5 Mbps.
2. Connect the TV to the Internet through your router by an Ethernet cable or a Panasonic Wireless LAN (built-in).
3. Start **Network connection** wizard, then follow the directions on the screen to connect. If the connections still fails, then check with your Internet service provider or router/modem manufacturer if there are firewall, content filter or proxy settings that may block the TV from accessing the Internet.

## Can I download new apps (content/services) onto my TV?

- Yes. Display **Apps** by pressing the **APPS** button, then select **Market** icon. **Market** allows you to find and install the applications to **Apps**.

# Software update

---

## How do I check for the latest software (firmware) version for my TV?

- In the main menu, select **Network**. Select **Software update**. The current version and latest version software will be displayed. If software update is grayed out, the TV is not connected to the Internet. If a newer version is available, update your TV. Follow the on screen instructions, do not power off the TV until the update is complete. Be patient; firmware update may take a while.

 **MENU** → **Menu** > **Network** > **Software update**

## How do I get the software update information and download periodically?

- In the main menu, select **Network**. Highlight **New software notice**. Make sure that setting is **On**.

When the TV is turned On, update message is displayed if available. Follow the directions on the screen to download.

 **MENU** → **Menu** > **Network** > **New software notice**



## 3D - Viewing

---

### Why doesn't my 3D video source look 3D?

1. Begin playing the 3D video source.
2. Ensure that the Panasonic 3D Eyewear (glasses) are on.
3. In the main menu, select **Picture**. Highlight **3D settings** and press **OK**.
4. Select **3D format** and press **OK**.

In the **3D format select** menu, select 3D format.

 **MENU** → **Menu** > **Picture** > **3D settings** > **3D format**

- 3D Blu-ray discs must be played with a 3D capable Blu-ray player.
- Check with your Cable or Satellite provider to make sure their supplied box is 3D capable.
- 3D signal must be connected to the TV via an HDMI cable.
- Use Panasonic 3D Eyewear supporting Bluetooth wireless technology.

### Can I use 3D glasses similar to the kind given at a 3D movie theater to watch 3D content on my 3D TV?

- No. Movie theater's 3D glasses are passive generally. They use a simple filter "lens".

Panasonic active shutter 3D Eyewear are actively synchronizing the left/right eye viewing with the display, providing a superior 3D viewing experience.

## 3D - Format

---

**When selecting some 3D Video content, why are there two pictures next to each other?**

- There are a few different 3D formats and the current settings may not match the incoming 3D signals.

The format should change automatically, but depending on the source/ connection it may not signal the TV properly. To manually select other 3D formats:

1. In the main menu, select **Picture**. Highlight **3D settings** and press **OK**.
2. Select **3D format** and press **OK**.
3. In the **3D format select** menu, choose another 3D format such as **Side by side** or **Top and bottom**.

 **MENU** → **Menu** > **Picture** > **3D settings** > **3D format**

**Why does the left and right Sides of the image seem reversed?**

- The 3D format has two different “phases”. Try the other phase:

1. In the main menu, select **Picture**. Highlight **3D settings** and press **OK**.
2. In the **3D settings** menu, select **Left/Right swap**.

 **MENU** → **Menu** > **Picture** > **3D settings**

## Voice guidance

---

### How does the voice guidance feature work?

- This function provides you with useful voice guidance for basic features.
- For more information about settings or operation of voice guidance, please refer to the page below.

 → **Convenience features > Using Voice guidance**

## Voice control

---

### Will the TV learn my accent?

- Set or adjust the **Voice control settings** first.
- This function is not available for all dialects or regions. Performance will differ depending on your pronunciation, volume and your surrounding area.
- Voice control function may not work properly depending on the pronunciation, noise and network environment.
- For more information about Voice Control, please refer to the page below.

 → **Convenience features > Using Voice control**

## Touch Pad Controller

---

### Are there sensitivity adjustments for the Touch Pad Controller?

- Yes, there are. Press **MENU**, select **Setup**, and then select **VIERA Touch Pad settings**. Select **Cursor sensitivity** and adjust.

 **MENU** → **Menu** > **Setup** > **VIERA Touch Pad settings**

## Eco navigation

---

### **Why does my picture look dim and/or sometimes changes brightness levels?**

- This TV is equipped with a money saving feature called Eco Navigation. The TV automatically dims the brightness to save energy. It also puts the picture in “Standard” mode and enables the C.A.T.S. feature so it will adjust the picture brightness automatically depending on the rooms ambient lighting conditions. This mode will also turn the TV power off if no signal is detected for 10 minutes.
- For more information about Eco navigation, please refer to the page below.

 → **Convenience features > Eco navigation > Eco navigation**

## Other

---

### What is the easiest and best way to connect a High-Definition Cable or Satellite box to the TV?


- Use an HDMI cable. It carries both digital video and audio signal in HD. The HDMI cable is the only cable needed to connect an HD device to the TV.

### Why does the **CC** button not display Closed Caption?

- Check if the setting is turned **On** or **CC on mute**.
- When viewing TV via an HDMI connected device, such as a Cable or Satellite box, CC must be enabled on the device.
- Closed Caption is available only for supported TV programming and supported contents via Video (Composite) input.

### Why does the screen and back cover of the TV get warm?

- The main unit radiates heat and some of the parts may become hot. This is normal operation and does not affect the performance of the set.
- Ensure good ventilation.
- Do not block the ventilation holes of the TV and do not place the TV on top of other equipment.

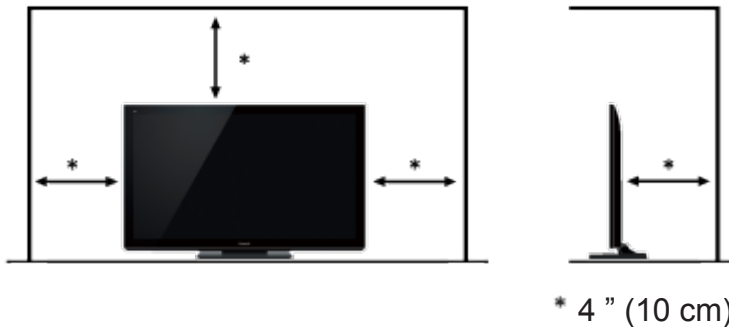



### Where is the power source and power consumption?

- For information about the power source and power consumption, refer to the nameplate on the rear enclosure.

## Menu - Gray-out or missing items

---

Why the **Antenna/Cable** option or available inputs are not listed in the **Input select** menu?

- When you label an input as **Not used**, then it will be hidden from the **Input select** menu. To make the input visible again:
  1. Display the **Menu** and select **Setup**.
  2. Select **Input labels** from **Display customization** and press .
  3. Select desired input and press  to change the label.

 **MENU** ⇒ **Menu** > **Setup** > **Display customization** > **Input labels**

**Some menu items are grayed-out and unable to be selected. Why?**

- Depending on certain modes or the selected input, some options are not available.



## Reset to factory defaults

---

### How do I reset my TV to all factory defaults and settings?

- In the main menu, select **Setup** and then select **System**. Highlight **Factory defaults** and press **OK**.

Enter your password (if locked).

Confirmation message will be displayed.

Follow the directions on screen to reset the TV to its original factory defaults.

 **MENU** → **Menu** > **Setup** > **System** > **Factory defaults**

# Information

## Data information

---

### ■ Supported Data format for Media player (SD card/USB flash memory)/DLNA

Media	Compatible format
Photo	<ul style="list-style-type: none"><li>• JPEG files (DCF and EXIF standards) Sub-sampling - 4:4:4, 4:2:2 and 4:2:0 Image resolution - 8 x 8 to 30,719 x 17,279 pixels</li></ul>

Videos	<ul style="list-style-type: none"><li>• AVCHD files AVCHD Standard Ver.2.0 (AVCHD 3D, AVCHD Progressive) Modified data with a PC may not be displayed correctly.</li><li>• MP4 files Video codec: H.264/H.265 (HEVC)*/MPEG1/MPEG2 Audio codec: AAC/Dolby Digital/Dolby Digital Plus/HE-AAC/MPEG Audio/MP3</li><li>• MKV files Video codec: H.264/H.265 (HEVC)/MPEG1/MPEG2 Audio codec: AAC/Dolby Digital/Dolby Digital Plus/HE-AAC/MPEG Audio/MP3/Vorbis</li><li>• FLV files Video codec: H.264 Audio codec: AAC/MP3</li><li>• 3GPP files Video codec: H.264 Audio codec: AAC/HE-AAC</li><li>• PS files Video codec: H.264*/MPEG1/MPEG2 Audio codec: AAC*/Dolby Digital/Dolby Digital Plus*/HE-AAC*/LPCM/MPEG Audio/MP3*</li></ul>
--------	--

	<ul style="list-style-type: none"> <li>• TS files</li> </ul> <p>Video codec: H.264/H.265 (HEVC)*/MPEG1/MPEG2</p> <p>Audio codec: AAC/Dolby Digital/Dolby Digital Plus/HE-AAC/MPEG Audio/MP3*</p> <ul style="list-style-type: none"> <li>• WebM files</li> </ul> <p>Video codec: VP9</p> <p>Audio codec: Vorbis</p>
--	--

Music	<ul style="list-style-type: none"> <li>• MP3 files (MP3)</li> <li>• M4A files (AAC/Apple Lossless) <ul style="list-style-type: none"> <li>– Copy-protected files cannot be played back.</li> </ul> </li> <li>• FLAC files (FLAC)</li> <li>• WAV files (LPCM)</li> </ul>
-------	---

\*: for Media player only

## ■ Supported Subtitles formats

### ● **MicroDVD, SubRip, TMLayer (.srt, .sub, .txt)**

- The video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
- If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: “.srt” “.sub” “.txt”.

<ul style="list-style-type: none"> <li>• Some files may not be played back even if they fulfill these conditions.</li> <li>• Some subtitles or chapter functions may not be available.</li> <li>• Do not use multi-byte characters or other special codes for file names.</li> <li>• Connected devices may become unusable with this TV if the file or folder names are changed.</li> </ul>
---

# Care and Cleaning

## Display panel

---

**First, unplug the Power cord plug from the wall outlet.**

### ■ Display panel

The front of the display panel has been specially treated. Wipe the panel surface gently using only a cleaning cloth or a soft, lint-free cloth.

- If the surface is particularly dirty, after cleaning up the dust, soak a soft, lint-free cloth in diluted mild liquid dish soap (1 part mild liquid dish soap diluted by 100 times the amount of water) and then wring the cloth to remove excess liquid. Use this cloth to wipe the surface of the display panel, then wipe it evenly with a dry cloth of the same type until the surface is dry.
- Do not scratch or hit the surface of the panel with fingernails or other hard objects. Furthermore, avoid contact with volatile substances such as insect sprays, solvents, and thinner, otherwise, the quality of the surface may be adversely affected.

# Cabinet

---

**First, unplug the Power cord plug from the wall outlet.**

## ■ Cabinet

If the cabinet becomes dirty, wipe it with a soft, dry cloth.

- If the cabinet is particularly dirty, soak the cloth in a weak mild liquid dish soap and then wring the cloth dry. Use this cloth to wipe the cabinet and then wipe it dry with a dry cloth.
- Do not allow any mild liquid dish soap to come into direct contact with the surface of the TV. If water droplets get inside the unit, operating problems may result.
- Avoid contact with volatile substances such as insect sprays, solvents, and thinner, otherwise, the quality of the cabinet surface may be adversely affected or the coating may peel off.
- Do not let articles made from rubber or PVC be in contact with the TV for long periods of time.

## Pedestal / Power cord

---

**First, unplug the Power cord plug from the wall outlet.**

### ■ Pedestal

#### Cleaning

- Wipe the surfaces with a soft, dry cloth. If the unit is particularly dirty, clean it using a cloth soaked with water to which a small amount of mild liquid dish soap has been added and then wipe with a dry cloth. Do not use products such as solvents, thinner, or household wax for cleaning, as they can damage the surface coating. (If using a chemically-treated cloth, follow the instructions supplied with the cloth.)
- Do not attach sticky tape or labels, as they can make the surface of the pedestal dirty. Do not allow long-term contact with rubber, vinyl products, or the like. (Doing so will cause deterioration.)

### ■ Power cord

- Wipe the plug with a dry cloth at regular intervals. (Moisture and dust can lead to fire or electrical shock.)

