

Basic Owner's Manual

4K Video Camera


Model No.

HC-VX3

High Definition Video Camera

Model No.

HC-V900

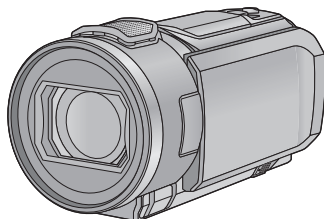

Please read these instructions carefully before using this product, and save this manual for future use.

More detailed operating instructions are available in "Owner's Manual (PDF format)". To read it, download it from the website.

<https://panasonic.jp/support/video/oi/VX3/index.html>

- Click the desired language.



Register online at <http://shop.panasonic.com/support/register> (U.S. customers only)

If you have any questions, visit :

U.S.A. : <http://shop.panasonic.com/support>

Canada : www.panasonic.ca/english/support

DVQX2553ZA

F0924MZ0

Dear Customer,

Thank you for choosing Panasonic!

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, we're sure it will bring you and your family years of enjoyment. Please take time to fill in the information on the right.

The serial number is on the tag located on the back of your camera. Be sure to **retain this manual** as your convenient camera information source.

Date of Purchase _____

Dealer Purchased From _____

Dealer Address _____

Dealer Phone No. _____

Model No. _____

Serial No. _____

U.S.A./CANADA CONSUMERS: ATTENTION:



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

[For U.S.A.]

To dispose of your product, please recycle in accordance with local environmental regulations. For further recycling please visit <https://shop.panasonic.com/recycle>

Safety Precautions

WARNING:

To reduce the risk of fire, electric shock or product damage,

- Do not expose this unit to rain, moisture, dripping or splashing.
- Do not place objects filled with liquids, such as vases, on this unit.
- Use the recommended accessories.
- Do not remove covers.
- Do not repair this unit by yourself. Refer servicing to qualified service personnel.

CAUTION!

To reduce the risk of fire, electric shock or product damage,

- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.
- Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.
- Do not place sources of naked flames, such as lighted candles, on this unit.

This unit is intended for use in moderate climates.

Certification and Compliance

See Camera for the certification and compliance mark specific to that device.

- 1 Touch .
- 2 Touch [SETUP].
- 3 Touch [Approved Regulations].

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

Contains FCC ID: VPYLBVX532

FCC Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

- Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.
- To assure continued compliance, follow the attached installation instructions and use only shielded interface cables with ferrite core when connecting to computer or peripheral devices.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Supplier's Declaration of Conformity

Trade Name:	Panasonic
Model No.:	HC-VX3/HC-V900
Responsible Party:	Panasonic Corporation of North America Two Riverfront Plaza, Newark, NJ 07102-5490
Support Contact:	http://shop.panasonic.com/support

THE FOLLOWING APPLIES ONLY IN CANADA.

CAN ICES-003(B)/NMB-003(B)

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines as this equipment has very low levels of RF energy.

THE FOLLOWING APPLIES ONLY IN CANADA.

Contains IC: 772C-LBVX604

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. HC-VX3/ HC-V900 has been tested and found to comply with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules.

IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the applicable safety instructions listed below. Keep these operating instructions handy for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



AC adaptor

This AC adaptor operates on AC between 110 V and 240 V.

But

- In the U.S.A. and Canada, the AC adaptor must be connected to a 120 V AC power supply only.
- When connecting to an AC supply outside of the U.S.A. or Canada, use a plug adaptor to suit the AC outlet configuration.

The power plug is the disconnecting device. Install this unit so that the power plug can be unplugged from the socket outlet immediately.

■ Concerning the battery

Battery pack (Lithium ion battery pack)

- Use the specified unit to recharge the battery pack.
- Do not use the battery pack with equipment other than the specified unit.
- Do not get dirt, sand, liquids, or other foreign matter on the terminals.
- Do not touch the plug terminals (+ and -) with metal objects.
- Do not disassemble, remodel, heat or throw into fire.
- If any electrolyte should come into contact with your hands or clothes, wash it off thoroughly with water.

If any electrolyte should come into contact with your eyes, never rub the eyes. Rinse eyes thoroughly with water, and then consult a doctor.



Warning

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C (140 °F) or incinerate.

CAUTION



- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.

■ Concerning the button cell or coin battery

 WARNING	
<ul style="list-style-type: none">• INGESTION HAZARD: This product contains a button cell or coin battery.• DEATH or serious injury can occur if ingested.• A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.• KEEP new and used batteries OUT OF REACH of CHILDREN• Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

- This product contains non-replaceable batteries.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: ML614
- Nominal voltage: 3 V
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

■ Product Identification Marking

Product	Location
 4K Video Camera	Battery holder
 High Definition Video Camera	Battery holder

■ Cautions for use

- The power consumption of this unit may increase if [ECONOMY (BATT)]/[ECONOMY (AC)]/[ECONOMY (Wi-Fi)] is set to [OFF].

The unit and the SD card become warm during use. This is not a malfunction.

Keep this unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect this unit, disturbing the pictures and/or sound.
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor. Then reinsert the battery or reconnect AC adaptor and turn this unit on.

Do not use this unit near radio transmitters or high-voltage lines.

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.

About connecting to a PC

- Do not use any other USB cables except the supplied one.

About connecting to a TV

- Do not use any other HDMI micro cables except the supplied one.

About using a headphone

- Excessive sound pressure from earphones and headphones can cause hearing loss.

Do not extend the cords and the cables.

Do not spray insecticides or volatile chemicals onto the unit.

- If the unit is sprayed with such chemicals, its body may be marred and the surface finish may peel off.

Do not leave rubber or plastic products in contact with the unit for a long time.

Cleaning

- Before cleaning, detach the battery or pull the AC adaptor from the AC outlet, and then wipe the unit with a soft, dry cloth.
- If the unit is very dirty, dip a cloth in water and squeeze firmly, and then wipe the unit with the damp cloth. Next, dry the unit with a dry cloth.
- Use of benzine, paint thinner, alcohol, or dishwashing liquid may alter the camera body or peel the surface finish. Do not use these solvents.
- When using a chemical dust cloth, follow the instructions that came with the cloth.

When you are not going to use the unit for an extended time

- When storing the unit in a cupboard or cabinet, it is recommended that you place a desiccant (silica gel) in with it.

Be sure to detach the battery after use.

- If the battery is left attached, a minute amount of current continues to flow even if the unit is off. Keeping the unit in this state may result in over discharge of the battery. This may result in you not being able to use the battery even after it is charged.
- The battery should be stored in a cool place free from humidity, with as constant temperature as possible. (Recommended temperature: 15 °C to 25 °C (59 °F to 77 °F), Recommended humidity: 40%RH to 60%RH)
- To store the battery for a long period of time, we recommend you charge it once every year and store it again after you have completely used up the charged capacity.

 
If the operating time is very short even after the battery has been recharged, the battery has worn out. Please purchase a new battery.

About the SD card

- When the card access lamp is lit, do not:
 - Remove the SD card
 - Turn the unit off
 - Insert and remove the USB cable
 - Expose the unit to vibrations or shock

About the accessory shoe cover

- Close accessory shoe cover **A** when not using the accessory shoe.
- For details about accessory shoe cover, refer to the Owner's Manual (PDF format).



■ About the recording format for recording motion pictures

- Motion pictures recorded with other devices are not supported by this unit.

For the **VX3**, you can select from AVCHD, 4K MP4, MP4 or 24p recording formats to record motion pictures.

For the **V900**, you can select from AVCHD, MP4 or 24p recording formats to record motion pictures.

- Motion pictures recorded with AVCHD and motion pictures recorded with 4K MP4/MP4/24p are not compatible with each other.

AVCHD:

It is suitable for viewing on a high-definition TV or for saving to disc.

- It is compatible with the AVCHD Progressive (1080/60p).
- Images recorded in 1080/60p can be saved using the following methods:
 - Copying to a disc using the HD Writer AE 5.4.
 - Copying to a Panasonic Blu-ray disc recorder that supports AVCHD Progressive.

4K MP4:

This is a recording format suitable for editing images.



- This format can record 4K motion pictures (3840×2160/30p), which deliver a resolution four times higher than that of full high-definition motion pictures.

MP4:

This is a recording format suitable for playing back or editing on a PC.

24p:

This allows you to record images similar to those shot on a roll of cinema film.

 - Recording with the following picture qualities is possible:
 - For the  4K motion pictures (3840×2160/24p) or high-definition picture quality (1920×1080/24p)
 - For the  High-definition picture quality (1920×1080/24p)

■ Indemnity about recorded content

Panasonic does not accept any responsibility for damages directly or indirectly due to any type of problems that result in loss of recording or edited content, and does not guarantee any content if recording or editing does not work properly. Likewise, the above also applies in a case where any type of repair is made to the unit.

■ About Condensation (When the lens or LCD Monitor is fogged up)

Condensation occurs when there is a change in temperature or humidity, such as when the unit is taken from outside or a cold room to a warm room. Please be careful, as it may cause the lens or LCD monitor to become soiled, moldy, or damaged.

When taking the unit to a place which has a different temperature, if the unit is accustomed to the room temperature of the destination for about one hour, condensation can be prevented. (When the difference in temperature is severe, place the unit in a plastic bag or the like, remove air from the bag, and seal the bag.)

When condensation has occurred, remove the battery and/or the AC adapter and leave the unit like that for about one hour. When the unit becomes accustomed to the surrounding temperature, fogginess will disappear naturally.

■ Cards that you can use with this unit






SD Memory Card, SDHC Memory Card and SDXC Memory Card

- 4 GB or more Memory Cards that do not have the SDHC logo or 48 GB or more Memory Cards that do not have the SDXC logo are not based on SD Memory Card Specifications.
- Refer to page 20 for more details on SD cards.

■ Caution regarding the lens

Do not aim the lens at the sun or strong light. Doing so may cause the unit to malfunction.

■ For the purposes of this owner's manual

- SD Memory Card, SDHC Memory Card and SDXC Memory Card are referred to as the "SD card".
- The smartphone and tablet are indicated as "smartphone".
- Function that can be used for Motion Picture Recording Mode: 
- Function that can be used for Still Picture Recording Mode: 
- Function that can be used for the Playback Mode: 
- Function that can be used for the Playback Mode (motion pictures only): 
- Function that can be used for the Playback Mode (still pictures only): 
- Scene(s) recorded in the recording format [AVCHD]: "AVCHD scene(s)"

- Scene(s) recorded in the recording format [4K MP4] and scene(s) recorded in 4K Photo mode: "4K MP4 scene(s)"
- Scene(s) recorded in the recording format [MP4], scene(s) saved in MP4 (1920×1080/30p), MP4 (1280×720/30p) or MP4 (640×360/30p): "MP4 scene(s)"
- Scene(s) recorded in the recording format [24p]: "24p scene(s)"
- Scene(s) containing only the Main Camera's image that was recorded separately from a simultaneously recorded normal scene when [Backup for Twin Camera] was set to [ON]: "Scene(s) recorded as Backup for Twin Camera"
- Pages for reference are indicated by an arrow, for example: → 00
- Model numbers are abbreviated as follows in this owner's manual:

Model number	Abbreviation used in this owner's manual	
HC-VX3	VX3	[VX3]
HC-V900	V900	[V900]

This owner's manual is designed for use with models **VX3** and **V900**. Pictures may be slightly different from the original.

- The illustrations used in this owner's manual show model **V900**, however, parts of the explanation refer to different models.
- Images and illustrations used in this document are for explaining the functions.
- Depending on the model, some functions are not available.
- Features may vary, so please read carefully.
- Not all models may be available depending on the region of purchase.




■ Installing HD Writer AE 5.4

Check the website below to download/install the software.

- The software is available for download until the end of November 2029.
https://panasonic.jp/support/global/cs/soft/download/f_ae54.html

■ Downloading the Owner's Manual (PDF format)

You can check the URL and QR code of the website where you can download the Owner's Manual (PDF format) in [ONLINE MANUAL] in the Setup menu.

- Touch ◀ (left side)/ ▶ (right side) of  on the Touch Menu to display  . (→ 26)
- 1 Touch  .
 - 2 Touch [SETUP].
 - 3 Touch [ONLINE MANUAL].
 - 4 Touch the access method you want to check.

[URL display]:

Displays the URL of the website on the LCD monitor of this unit.

[USB connect]:

Displays the website on a PC connected to this unit with the USB cable. Click [OIBOOK], which will be displayed on the PC.

[QR code]:

Displays the QR code of the website on the LCD monitor of this unit.

- You will need Adobe Reader to browse or print the Owner's Manual (PDF format).
You can download and install a version of Adobe Reader that you can use with your OS from the following website. (As of September 2024)
<http://www.adobe.com/products/acrobat/readstep2.html>

Contents

Accessories	14
Optional accessories.....	15

Preparation

Power supply	16
Inserting/removing the battery.....	16
Charging the battery	17
Charging and recording time.....	19
Recording to a card	20
Cards that you can use with this unit	20
Inserting/removing an SD card.....	21
Turning the unit on/off	22
Selecting a mode	23
Switching this unit between Recording Mode and Playback Mode	23
Switching this unit between Motion Picture Recording Mode and Still Picture Recording Mode.....	24
LCD monitor	25
How to use the touch screen	25
About the Touch Menu.....	26
Setting date and time	26
Setting your home region for the first time	27

Basic

Changing the Recording Mode	27
Recording motion pictures	29
Recording still pictures	29
Motion picture/Still picture playback ...	30
Watching Video/Pictures on your TV ...	31
Using the menu screen	32
Language selection	32
Formatting	32

Wi-Fi

What you can do with the Wi-Fi® function	33
---	-----------

Others

Troubleshooting	34
Specifications	36
About copyright	41
Limited Warranty (ONLY FOR U.S.A.)	43
Warranty (For Canadian Customers)	45
Useful Information (Only For Latin American Countries) ...	46

Accessories

Check the accessories before using this unit.

Keep the accessories out of reach of children to prevent swallowing.

Product numbers correct as of September 2024. These may be subject to change.


Battery pack

VW-VBT190



AC adaptor

 VSK0815F



USB cable

K1HY24YY0030



HDMI micro cable

K1HY19YY0038



Lens hood

1ZE1VX3KZ

- For details on how to attach the lens hood, refer to the Owner's Manual (PDF format).



(For U.S.A. only)





If accessories are lost, customers can visit us at

<http://shop.panasonic.com/support>

for further information about obtaining replacement parts.

Optional accessories

Some optional accessories may not be available in some countries.

Accessory No.	Figure	Description
VW-VBT190 ^{*1}		Rechargeable Lithium Ion Battery Pack
VW-VBT380 ^{*1}		Rechargeable Lithium Ion Battery Pack
DMW-AC11 ^{*2}		AC adaptor
VW-VMS10PP		Stereo microphone

*1 Please refer to page 19, concerning the battery charging time and available recording time.

*2 Includes power cord and USB cable.

(For U.S.A. only)

To order optional accessories please visit <http://shop.panasonic.com>

or your local Photo Specialty Dealer.

NOTE:

Accessories and/or model numbers may vary by country. Please consult your local dealer.
Product numbers correct as of September 2024. These may be subject to change.

Power supply

■ About batteries that you can use with this unit

The battery that can be used with this unit is VW-VBT190/VW-VBT380.


- The unit has a function for distinguishing batteries which can be used safely. The dedicated battery (VW-VBT190/VW-VBT380) supports this function. The only batteries suitable for use with this unit are genuine Panasonic products and batteries manufactured by other companies and certified by Panasonic. Panasonic cannot in any way guarantee the quality, performance or safety of batteries which have been manufactured by other companies and are not genuine Panasonic products.

It has been found that counterfeit battery packs which look very similar to the genuine product are made available to purchase in some markets. Some of these battery packs are not adequately protected with internal protection to meet the requirements of appropriate safety standards. There is a possibility that these battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack. To ensure that safe products are used we would recommend that a genuine Panasonic battery pack is used.


Inserting/removing the battery

- Press the power button to turn off the unit. (→ 22)

Install the battery by inserting it in the direction shown in the figure.

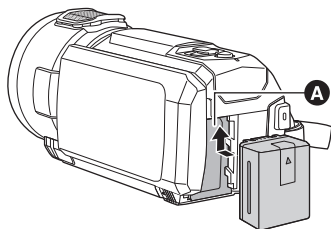

A Battery holder

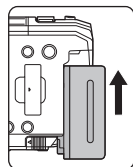


While holding the battery against the battery holder, push the battery upwards until you hear it click into place.

Removing the battery

Be sure to hold down the power button until the status indicator goes off. Then remove the battery while supporting the unit to prevent it from dropping.

Move the battery release lever in the direction indicated by the arrow and remove the battery when unlocked.

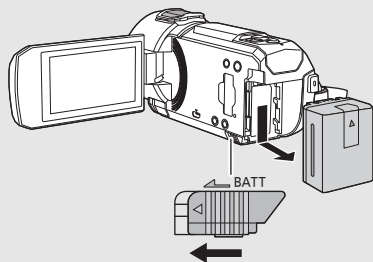

Charging the battery


When this unit is purchased, the battery is not charged. Charge the battery fully before using this unit for the first time.

The AC adaptor is in the standby condition when the mains plug is connected. The primary circuit is always "live" as long as the mains plug is connected to an electrical outlet.

Important:

- Do not use the AC adaptor/USB cable with any other equipment as it is designed only for this unit.
- The battery will not be charged if the unit is turned on.
- It is recommended to charge the battery in a temperature between 10 °C and 30 °C (50 °F and 86 °F).

(The battery temperature should also be the same.)

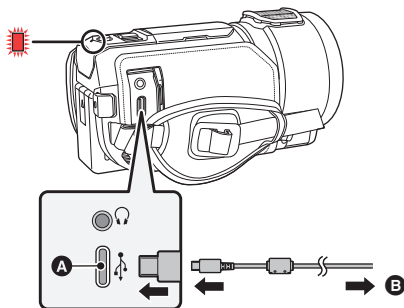

- A** USB terminal
- B** To the AC adaptor

1 Connect the USB cable to the AC adaptor and to the USB terminal of this unit.

- Insert the plugs as far as they will go.

2 Insert the AC adaptor into an AC outlet.

- The status indicator will flash red at an interval of approximately 2 seconds (approximately 1 second on, approximately 1 second off), indicating that charging has begun. It will turn off when the charging is completed. (→ 22)

■ Connecting to the AC outlet

It is possible to use this unit with power supplied from the AC outlet by turning on the unit with the AC adaptor connected.

Even when you use the AC adaptor for recording images, keep the battery connected.

This allows you to continue the recording even if a power failure occurs or the AC adaptor is unplugged from the AC outlet by accident.

■ To charge by connecting to other device

It is possible to charge by connecting to other device with the USB cable (supplied).

- We recommend using a Panasonic AC adaptor (the supplied one or optional DMW-AC11) to supply power and charge.
- A commercially available AC adaptor and USB cable can be used to supply power and charge this unit.
 - *Recommended specifications for the commercially available AC adaptor
 - Supports 5 V/3 A (15 W) DC output
 - USB Type-C terminal
 - *For supplying power and charging, use either the supplied USB cable or a USB cable with an output rating of 15 W or greater.
- You can also use an AC adaptor with 5 V/1.5 A or better for charging.
However, charging time may be longer than with the recommended AC adaptor.
- Operation is not guaranteed with all commercially available devices.
- We recommend using Panasonic batteries (→ 16).
- If you use other batteries, we cannot guarantee the quality of this product.
- Do not heat or expose to flame.
- Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
- Do not expose to low air pressure at high altitudes.
- Do not expose to extremely low air pressure, as this may result in explosions or leakage of flammable liquids and gases.

Charging and recording time

■ Charging/Recording time

- Temperature: 25 °C (77 °F)/humidity: 60%RH
- When using the LCD monitor
- **Charging times are measured under the following conditions:**
 - Using this unit and an AC adaptor (supplied or optional: DMW-AC11)
 - Charged after battery is fully depleted
- Charging time and recordable time vary depending on the usage conditions such as high/low temperature.


Battery model number [Voltage/Capacity (minimum)]	Charging time	Recording format	Recording mode	Maximum continuous recordable time	Actual recordable time
Supplied battery/ VW-VBT190 (optional) [3.6 V/1940 mAh]	2 h 20 min	[4K MP4]*	[2160]	1 h 30 min	45 min
		[MP4]	[1080/50M]	1 h 45 min	55 min
			[1080/28M]		
			[720]	2 h 5 min	1 h 5 min
		[AVCHD]	[1080/60p]	1 h 45 min	55 min
			[PH], [HA], [HG], [HE]		
			[24p]		
		[24p]	[2160/24p]*	1 h 40 min	50 min
[1080/24p]	1 h 50 min		55 min		
VW-VBT380 (optional) [3.6 V/3880 mAh]	3 h 45 min	[4K MP4]*	[2160]	3 h 10 min	1 h 40 min
		[MP4]	[1080/50M]	3 h 40 min	1 h 55 min
			[1080/28M]	3 h 45 min	
			[720]	4 h 30 min	2 h 20 min
			[AVCHD]	[1080/60p]	3 h 40 min
		[PH], [HA]		3 h 45 min	
		[HG]		3 h 50 min	2 h
		[HE]			
		[24p]	[2160/24p]*	3 h 35 min	1 h 50 min
			[1080/24p]	4 h	2 h 5 min



* For the VX3

- "h" is an abbreviation for hour, "min" for minute and "s" for second.
- These times are approximations.
- The actual recordable time refers to the recordable time when repeatedly starting/stopping recording, turning the unit on/off, moving the zoom lever etc.

Battery capacity indication

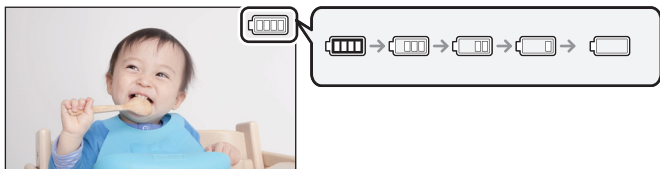The battery capacity indication is displayed on the LCD monitor.



- If there is less than 3 minutes remaining, then  will become red. If the battery discharges, then  will flash. Recharge the battery or replace it with a fully charged battery.

Preparation

Recording to a card

The unit can record still pictures or motion pictures to an SD card.

Cards that you can use with this unit

SD memory card/SDHC memory card/SDXC memory card (Maximum 512 GB)

- Please check the latest information on the support website below.
https://panasonic.jp/support/global/cs/e_cam/index.html
(This website is in English only.)
- We do not guarantee the operation of SD cards other than the ones above.
- Operation is not guaranteed for all SD cards.
- Keep the memory card out of reach of children to prevent swallowing.

About the Speed Class ratings for recording motion pictures

Depending on [REC MODE] and [REC FORMAT], the required card differs.

Use a card that meets the following ratings of the SD Speed Class. Use of a non-compatible card may cause recording to stop suddenly.

- SD Speed Class is the speed standards regarding continuous writing. To check the class, see the labelled side, etc. of the card.

Recording formats	Recording modes	Speed Class ratings	Label examples
4K MP4*	[2160]	Class 10	CLASS 10
24p	[2160/24p]*, [1080/24p]		
MP4	[1080/50M]	Class 4 or more	CLASS 4
	[1080/28M], [720]		
AVCHD	All		

* For the 

- In the following situations, you need an SD card conforming to Class 10 of the SD Speed Class Rating to record motion pictures.

Use of a non-compatible card may cause recording to stop suddenly.

- FULL HD Slow Motion Video Mode
- When [Backup for Twin Camera] is set to [ON]

(For the VX3)


- 4K Photo Mode
- Slow & Quick Video Mode

Inserting/removing an SD card

Before using SD cards to be used on this unit, format with this unit. (→ 32) When the SD card is formatted, all of the recorded data is deleted. Once the data is deleted, it cannot be restored.

Caution:

Check that the access lamp has gone off.

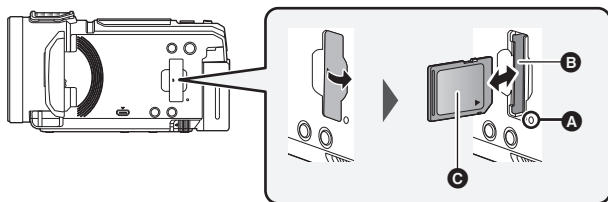

Access lamp [ACCESS] **A**

- When this unit is accessing the SD card, the access lamp lights up.

1 Open the SD card cover and insert (remove) the SD card into (from) the card slot **B**.

- Face the label side **C** in the direction shown in the illustration and press it straight in as far as it will go.
- Press the center of the SD card and then pull it straight out.

2 Securely close the SD card cover.


- Securely close it until it clicks.

Turning the unit on/off

You can turn the unit on and off using the power button or by opening and closing the LCD monitor.

Turning the unit on and off with the power button

Open the LCD monitor and press the power button to turn on the unit.

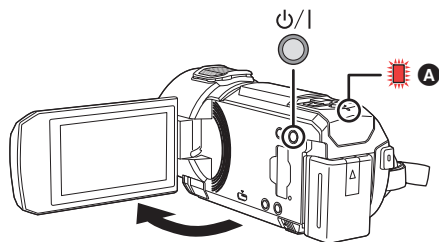

To turn off the unit

Hold down the power button until the status indicator goes off.

A The status indicator lights on.

The unit is turned on when the LCD monitor is opened, and unit is turned off when it is closed.

■ Overheat detection

When the internal temperature of the unit rises during use, a message will be displayed. When this happens, the unit will turn off automatically a few minutes later.

- Wait until the temperature has dropped before resuming use.


Selecting a mode

You can switch this unit between Recording Mode (Motion Picture Recording Mode/Still Picture Recording Mode) and Playback Mode by pressing the recording/playback button.

If you touch the recording mode switching icon in Recording Mode, this unit can be switched between Motion Picture Recording Mode and Still Picture Recording Mode.

Motion Picture Recording Mode (→ 29)	Recording motion pictures.
Still Picture Recording Mode (→ 29)	Recording still pictures.
Playback Mode (→ 30)	Motion picture/Still picture playback.

Switching this unit between Recording Mode and Playback Mode

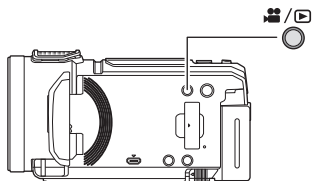

Recording/playback button

Press the button to switch this unit between Recording Mode and Playback Mode.



- When you turn on this unit, it starts up in Recording Mode.

Switching this unit between Motion Picture Recording Mode and Still Picture Recording Mode

Touch the recording mode switching icon displayed on the LCD monitor (touch screen) to switch this unit between Motion Picture Recording Mode and Still Picture Recording Mode.

1 Press the recording/playback button to switch this unit to Recording Mode.

- The recording mode switching icon **A** is displayed on the screen.

	Motion Picture Recording Mode
	Still Picture Recording Mode

(Motion Picture Recording Mode)



2 Touch the recording mode switching icon.

- Refer to page 25 for touch screen operation.

To display the recording mode switching icon

Display of the recording mode switching icon will disappear when no touch operation is performed for a specific period of time. To display it again, touch the screen.

- The recording mode switching icon is disabled when the Wireless Multi-Camera function is enabled.
- If the recording start/stop button is pressed in Still Picture Recording Mode or Playback Mode, this unit will be switched to Motion Picture Recording Mode. During motion picture/still picture playback or in other conditions, even if the recording start/stop button is pressed, the recording mode may not be switched.
- When you switch between Motion Picture Recording Mode and Still Picture Recording Mode, settings used in the original recording mode may not be maintained. (→ 27)

LCD monitor


How to use the touch screen

You can operate by directly touching the LCD monitor (touch screen) with your finger.

■ Touch


Touch and release the touch screen to select icon or picture.

- Touch the center of the icon.
- Touching the touch screen will not operate while you are touching another part of the touch screen.

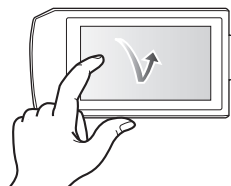

■ Slide while touching

Move your finger while pressing on the touch screen.

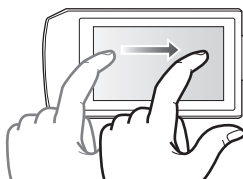


■ About the operation icons




Touch when changing a page or performing settings.




Touch to return to the previous screen.

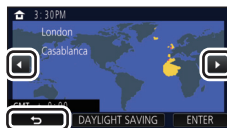

About the Touch Menu

Touch ◀ (left side)/▶ (right side) of  on the Touch Menu to switch the operation icons.


- It is also possible to switch the operation icons by sliding the Touch Menu right or left while touching it.

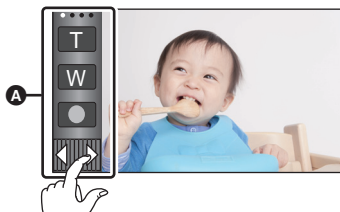

A Touch Menu

■ To display the Touch Menu



Display of the Touch Menu will disappear when no touch operation is performed for a specific period of time during recording of motion picture/still picture. To display it again, touch .

Preparation

Setting date and time

The clock is not set at the time of purchase. Make sure to set the clock.

- When you turn on this unit, the message “Set home region and date/time.” may be displayed. Select [YES], and follow the steps below to make these settings:
 - Step 2 of “Setting your home region for the first time”
 - Steps 2–3 of “Setting date and time”

1 Select the menu. (→ 32)

MENU : [SETUP] → [CLOCK SET]

2 Touch the date or time to be set, then set the desired value using / .

A Displaying the World Time setting:

 [HOME]/  [DESTINATION]

- The year can be set between 2000 and 2039.

3 Touch [ENTER].

- Touch [EXIT] to complete the setting.



Setting your home region for the first time

You can set your home region in [SET WORLD TIME].

1 Select the menu. (→ 32)

[MENU] : [SETUP] → [SET WORLD TIME]

- A message will be displayed. Touch [ENTER].

2 Touch ◀/▶ to select your home region and touch [ENTER].

- When the clock is not set, the current time is displayed as "--:--".



- A** The current time
- B** The time difference from GMT (Greenwich Mean Time)

- For information on how to change your home region or set the region of your travel destination, refer to the Owner's Manual (PDF format).




Changing the Recording Mode

1 Touch the Recording Mode button icon.








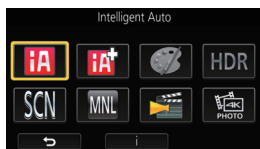



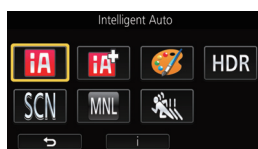

2 Touch the desired Recording Mode button icon.

VX3




V900



Mode		Effect
 *1  *2	Intelligent Auto	You can switch the mode to the Intelligent Auto Mode, which optimizes settings to the recording environment you are in.
 *1  *2	Intelligent Auto Plus	You can add manually-adjusted brightness and color balance settings to the Intelligent Auto Mode, and record.
 *1	Creative Control	You can record motion pictures with added effects.
HDR *1	HDR Movie	You can minimize the loss of gradations in bright areas and dark areas when, for example, the contrast between the background and the subject is large.
SCN	Scene Mode	This option allows this unit to automatically adjust the shutter speed and aperture, etc. according to the scene you want to record.
	Manual	You can set the shutter speed, focus, White Balance, and brightness (iris/gain).
 *1, 3	Cinema Like Effect	You can record images with cinematic effects.
 *1, 4	FULL HD Slow Motion Video	You can record slow motion pictures.
 *1, 3	4K Photo	You can record motion pictures optimized for capturing still pictures from 4K motion pictures.
 *2	Stop Motion Animation Assist	You can set a recorded still picture as the background, and record the next picture while looking at that recorded picture as the background.

*1 In Motion Picture Recording Mode only

*2 In Still Picture Recording Mode only


*3 For the 

*4 For the 



Recording motion pictures

- 1 Open the LCD monitor to switch to Motion Picture Recording Mode. (→ 24)
- 2 Press the recording start/stop button to start recording.

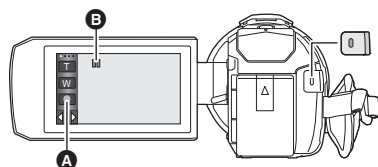

- A Recording button icon
- B When you begin recording, changes to .

- 3 Press the recording start/stop button again to pause recording.
 - Recording can also be started/stopped by touching the recording button icon.




Recording still pictures

- 1 Open the LCD monitor to switch to Still Picture Recording Mode. (→ 24)
- 2 Press the button halfway. (For Auto Focus only)



- 3 Press the button fully.

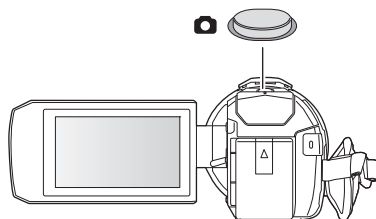

Motion picture/Still picture playback



(Screens are examples from when motion pictures are recorded)

- 1 Set this unit to Playback Mode. (→ 23)
- 2 Touch the motion picture/still picture tab **A**.



[MP4]: 4K MP4^{*} and MP4 scenes are displayed as thumbnails.

[AVCHD]: AVCHD scenes and scenes recorded with the Backup for Twin Camera function are displayed as thumbnails.

[24p]: 2160/24p^{*} and 1080/24p scenes are displayed as thumbnails.

[📷]: Still pictures are displayed as thumbnails.

* For the

- If there are recorded scenes/still pictures, the letters and icons on the motion picture/still picture tabs are displayed in green.
- The following icons are displayed on thumbnails when [MP4] is touched:

- MP4 [2160/30p] scene: (For the)
- MP4 [1080/60p] scene: (Blue) (Recording mode [1080/50M])
 (Recording mode [1080/28M])
- MP4 [1080/30p] scene:
- MP4 [720/30p] scene:
- MP4 [360/30p] scene:

- The following icons are displayed on thumbnails when [AVCHD] is touched:

- AVCHD [1080/60p] scene:
- AVCHD [PH] scene:
- AVCHD [HA] scene:
- AVCHD [HG] scene:
- AVCHD [HE] scene:
- Scenes recorded with the Backup for Twin Camera function:

- The following icons are displayed on thumbnails when [24p] is touched:

- MP4 [2160/24p] scene: (For the)
- MP4 [1080/24p] scene:

3 Touch the scene or the still picture to be played back.

- To display the next (previous) page:
 - Slide the thumbnail display upward (downward) while touching it.
 - Switch the Touch Menu, and then touch ▲ (up) / ▼ (down) on the thumbnail scroll lever.



4 Select the playback operation by touching the operation icon.

- Operation icons and screen display will disappear when no touch operation is performed for a specific period of time. To display them again, touch the screen.
- Touch ►/⏸ to start/pause playback of motion pictures.



 
Operation icon

Watching Video/Pictures on your TV



Connect this unit to a TV using an HDMI micro cable (supplied).

- Ⓐ HDMI micro connector [HDMI]
- Be sure to connect to the HDMI terminal. (Insert the connector with the arrow side facing up.)




Using the menu screen

- Touch ◀ (left side)/ ▶ (right side) of  on the Touch Menu to display . (→ 26)


1 Touch .



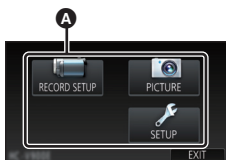

2 Touch the top menu .

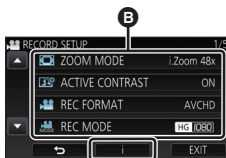

3 Touch the submenu .




- Next (previous) page is displayed by touching  / .

4 Touch the desired item to enter the setting.

5 Touch [EXIT] to exit the menu setting.


■ About guide display

After touching , touching the submenus and items will cause function descriptions and settings confirmation messages to appear.

- After the messages have been displayed, the guide display is canceled.


Language selection

You can select the language on the screen display and the menu screen.

 : [SETUP] → [LANGUAGE] →
desired language

Formatting

Please be aware that if a medium is formatted, then all the data recorded on the medium will be erased and cannot be restored. Back up important data on a PC, DVD disc etc.

 : [SETUP] → [FORMAT MEDIA]

- Do not format an SD card using any other equipment such as a PC. The card may not be used on this unit.

What you can do with the Wi-Fi[®] function

This unit offers the following Wi-Fi functions when used in combination with another Wi-Fi compatible device.

[TWIN CAMERA]	You can display the image transmitted from a Wireless Sub Camera connected via Wi-Fi on this unit's Sub Window and record it simultaneously with the Main Camera's image.
[Multi Camera]	Connecting multiple smartphones to this unit via Wi-Fi allows you to simultaneously display two Sub Windows and record images in them. Up to three smartphones can be connected simultaneously.
[Link to Cell]	Using a smartphone, you can perform record/playback operations from a remote location.
[DLNA Play]	Connecting this unit to a DLNA (DMR) -compatible TV via Wi-Fi, you can play back scenes and still pictures on the TV.
[Copy]	By setting up a Wi-Fi communication between this unit and a PC, you can copy scenes and still pictures recorded with this unit to the PC.
[History]	Each use of a Wi-Fi function is stored in the Wi-Fi connection history. Connecting from the history allows you to easily set up a connection using the previous connection settings. <ul style="list-style-type: none"> Records of Wi-Fi connections made with the Wireless Multi-Camera function are not saved.

Before using any of these Wi-Fi functions, check the settings of your device and get it ready for use.

- Please refer to "Owner's Manual (PDF format)" for detailed instructions for using the Wi-Fi function and how to connect via Wi-Fi.

■ This unit is WPS-compatible

WPS (Wi-Fi Protected Setup[™]) is a function that allows you to easily set up a connection with a wireless LAN device and make security-related settings.

Troubleshooting

■ It is not a malfunction in following cases

<p>A clicking sound is heard when the unit is shaken.</p>	<ul style="list-style-type: none"> ● This is the sound of the lens moving and is not a defect. This sound will no longer be heard when the unit is turned on and set this unit to the Motion Picture Recording Mode or Still Picture Recording Mode.
<p>Object seems to be warped.</p>	<ul style="list-style-type: none"> ● Object seems to be warped slightly when the object moves across the image very fast, but this is because the unit is using MOS for the image sensor. This is not a malfunction.
<p>The lens or LCD monitor fog up.</p>	<ul style="list-style-type: none"> ● This is due to condensation. It is not a malfunction. Please refer to page 10.

Power	
Problem	Check points
<p>This unit cannot be turned on.</p> <p>This unit does not stay on long enough.</p> <p>Battery runs down quickly.</p>	<ul style="list-style-type: none"> ● Charge the battery again to ensure it is sufficiently charged. (→ 17) ● In cold places, the battery using time becomes shorter. ● The battery has a limited life. If the operating time is still too short even after the battery is fully charged, the battery has worn out and needs to be replaced.
<p>This unit cannot be operated though it is turned on.</p> <p>This unit does not operate normally.</p>	<ul style="list-style-type: none"> ● Remove the battery or AC adaptor, wait about 1 minute and then reconnect the battery or AC adaptor. Then about 1 minute later, turn on the unit again. (Conducting the above operation while the media is being accessed may damage the data on the media.) ● If normal operation is still not restored, detach the power connected, and consult the dealer who you purchased this unit from.
<p>“ERROR OCCURRED. PLEASE TURN UNIT OFF, THEN TURN ON AGAIN.” is displayed.</p>	<ul style="list-style-type: none"> ● The unit has automatically detected an error. Restart the unit by turning the unit off and on. ● The unit will be turned off in about 1 minute if the unit is not turned off and on. ● Repair is needed if it is repeatedly displayed even if it is restarted. Detach the power connected, and consult the dealer who you purchased this unit from. Do not attempt to repair the unit by yourself.

Recording	
Problem	Check points
<p>Color or brightness of the image changes, or you may see horizontal bars in the image.</p> <p>The LCD monitor flickers indoors.</p>	<ul style="list-style-type: none"> ● Color or brightness of the image may change, or you may see horizontal bars in the image when the object is recorded under fluorescent light, mercury light or sodium light, etc., but this is not a malfunction. ● In Motion Picture Recording Mode, record in Intelligent Auto Mode/Intelligent Auto Plus Mode or set the shutter speed as follows: <ul style="list-style-type: none"> – When [REC FORMAT] is set to [24p]: Set to 1/50 seconds in areas where the power supply frequency is 50 Hz, or 1/60 seconds in areas where the frequency is 60 Hz. – When [REC FORMAT] is set to a setting other than [24p]: Set to 1/100 seconds in areas where the power supply frequency is 50 Hz, or 1/60 seconds in areas where the frequency is 60 Hz. ● In Still Picture Recording Mode, this will not affect the recorded image. ● In the following cases, setting the shutter speed to 1/120 seconds reduces the intensity of the problem: <ul style="list-style-type: none"> – In FULL HD Slow Motion Mode – (For the VX3) Slow & Quick Video Mode

Playback	
Problem	Check points
<p>Scenes/still pictures cannot be played back.</p>	<ul style="list-style-type: none"> ● Any scenes/still pictures where the thumbnails are displayed as ! cannot be played back.

Please refer to "Owner's Manual (PDF format)" for details.

Specifications

4K Video Camera/High Definition Video Camera

Information for your safety

Power source:

5.0 V --- (When using AC adaptor)

3.6 V --- (When using battery)

Power consumption:

VX3 Recording; 5.4 W
Charging; 7.7 W

V900 Recording; 4.5 W
Charging; 7.7 W

*1 When [REC FORMAT] is set to [4K MP4] or [24p]

*2 When [REC FORMAT] is set to [AVCHD] or [MP4]

*3 When [REC FORMAT] is set to [24p]

*4 When [REC FORMAT] is set to [4K MP4], or when [REC FORMAT] is set to [24p] with [REC MODE] set to [2160/24p]

	HC-VX3	HC-V900
Motion picture recording format	[4K MP4], [MP4], [24p]: MPEG-4 AVC file format compliant (.MP4) [AVCHD]: AVCHD format version 2.0 compliant (AVCHD Progressive)	[MP4], [24p]: MPEG-4 AVC file format compliant (.MP4) [AVCHD]: AVCHD format version 2.0 compliant (AVCHD Progressive)
Motion picture compression	MPEG-4 AVC/H.264	
Audio compression	[4K MP4], [MP4], [24p]: AAC/2 ch [AVCHD]: Dolby Audio™/5.1 ch (built-in microphone), 2 ch (built-in microphone/ external microphone)	[MP4], [24p]: AAC/2 ch [AVCHD]: Dolby Audio™/5.1 ch (built-in microphone), 2 ch (built-in microphone/ external microphone)

	HC-VX3	HC-V900
Recording mode and transfer rate	<p>[4K MP4] [2160]: Maximum 72 Mbps (VBR)</p> <p>[MP4] [1080/50M]: Maximum 50 Mbps (VBR) [1080/28M]: Maximum 28 Mbps (VBR) [720]: Average 9 Mbps (VBR)</p> <p>[AVCHD] [1080/60p]: Maximum 28 Mbps (VBR) [PH]: Maximum 24 Mbps (VBR) [HA]: Average 17 Mbps (VBR) [HG]: Average 13 Mbps (VBR) [HE]: Average 5 Mbps (VBR)</p> <p>[24p] [2160/24p]: Maximum 72 Mbps (VBR) [1080/24p]: Maximum 50 Mbps (VBR)</p> <ul style="list-style-type: none"> Refer to the Owner's Manual (PDF format) for the picture size and recordable time of a motion picture. 	<p>[MP4] [1080/50M]: Maximum 50 Mbps (VBR) [1080/28M]: Maximum 28 Mbps (VBR) [720]: Average 9 Mbps (VBR)</p> <p>[AVCHD] [1080/60p]: Maximum 28 Mbps (VBR) [PH]: Maximum 24 Mbps (VBR) [HA]: Average 17 Mbps (VBR) [HG]: Average 13 Mbps (VBR) [HE]: Average 5 Mbps (VBR)</p> <p>[24p] [1080/24p]: Maximum 50 Mbps (VBR)</p>
Still picture recording format	<p>JPEG (Design rule for Camera File system, based on Exif 2.2 standard)</p> <ul style="list-style-type: none"> Refer to the Owner's Manual (PDF format) for picture size of a still picture and number of recordable pictures. 	
Recording media	<p>SD Memory Card SDHC Memory Card SDXC Memory Card</p> <ul style="list-style-type: none"> Refer to page 20 for details on SD cards usable in this unit. 	
Image sensor	<p>1/2.5" 1MOS image sensor Total: 8570 K Effective pixels: Motion picture; 8290 K (16:9)*¹, 6170 K (16:9)*² Still picture; 8290 K (16:9), 6220 K (4:3)</p>	<p>1/2.5" 1MOS image sensor Total: 8570 K Effective pixels: Motion picture; 6170 K (16:9) Still picture; 8290 K (16:9), 6220 K (4:3)</p>

	HC-VX3	HC-V900
Lens	Auto Iris, 24× optical zoom, F1.8 to F4.0 Focal length: 4.12 mm to 98.9 mm (Full range AF) 35 mm equivalent: Motion picture; 25 mm to 600 mm (16:9) ^{*1} , 28.9 mm to 693.7 mm (16:9) ^{*2} Still picture; 25 mm to 600 mm (16:9), 30.6 mm to 734.4 mm (4:3) Minimum focus distance: Normal; Approx. 10 cm (3.9") (Wide)/Approx. 1.2 m (3.9 feet) (Tele) Intelligent Auto Macro; Approx. 5 cm (2.0") (Wide)	Auto Iris, 24× optical zoom, F1.8 to F4.0 Focal length: 4.12 mm to 98.9 mm (Full range AF) 35 mm equivalent: Motion picture; 25 mm to 600 mm (16:9) ^{*3} , 28.9 mm to 693.7 mm (16:9) ^{*2} Still picture; 25 mm to 600 mm (16:9), 30.6 mm to 734.4 mm (4:3) Minimum focus distance: Normal; Approx. 10 cm (3.9") (Wide)/Approx. 1.2 m (3.9 feet) (Tele) Intelligent Auto Macro; Approx. 5 cm (2.0") (Wide)
Filter diameter	62 mm	
Zoom	24× optical zoom, 32× ^{*4} /48× ^{*2} i.Zoom, 70×/1500× digital zoom	24× optical zoom, 48× i.Zoom, 70×/1500× digital zoom
Image stabilizer function	Optical (Hybrid Optical Image Stabilizer, Optical Image Stabilizer Lock function)	
Creative Control	[Miniature Effect]/[Silent movie]/[8mm movie]/[Time Lapse Rec]	
HDR movie	Low/High	
Monitor	Capacitive touch screen 3.0" LCD monitor, Approx. 1840 K dots Image display area (16:9): Approx. 1550 K dots	
Microphone	5.1 channel surround microphone/Zoom microphone/Focus microphone/ Stereo microphone	
Minimum required illumination	Approx. 1.5 lx (1/30 with Low Light Mode in the Scene Mode) Approx. 0.5 lx with the Night Mode ([COLOR]) function	
HDMI micro connector video output level	HDMI™ 2160p/1080p/1080i/480p	HDMI™ 1080p/1080i/480p
Headphone output	3.5 mm diameter stereo mini jack, output level: 85 mV (load impedance 32 Ω)	
HDMI micro connector audio output level	[4K MP4], [MP4], [24p]: Linear PCM [AVCHD]: Dolby Audio/Linear PCM	[MP4], [24p]: Linear PCM [AVCHD]: Dolby Audio/Linear PCM
MIC input	3.5 mm diameter stereo mini jack, plug-in power compatible, Input level: -60 dBV (microphone sensitivity -40 dB equivalent: 0 dB = 1 V/Pa 1 kHz), Input impedance: 3900 Ω	
LINE input	3.5 mm diameter stereo mini jack, Input level: -10 dBV	—

	HC-VX3	HC-V900
REMOTE terminal	2.5 mm diameter super mini jack × 1 Remote control terminal of serial communication	
USB	USB Type-C terminal, Hi-Speed USB (USB 2.0) Card reader function (Read only, No copyright protection support) Supports USB power supply and USB charging (when main unit is turned off)	
Dimensions	68 mm (W)×77 mm (H)×141 mm (D) [2.677 " (W)×3.031 " (H)×5.551 " (D)] (including projecting parts)	
Mass (Weight)	Approx. 433 g (Approx. 0.955 lbs.) [without lens hood, battery (supplied) and an SD card (optional)]	
Mass (Weight) in operation	With lens hood, battery (supplied) and an SD card (optional): Approx. 484 g (Approx. 1.067 lbs.)	
Operating temperature	0 °C to 40 °C (32 °F to 104 °F)	
Operating humidity	10%RH to 80%RH	
Battery operation time	See page 19	
Wireless transmitter	Compliance standard: IEEE802.11b/g/n Frequency range used: Central frequency 2412 MHz to 2462 MHz [1 to 11ch] Encryption method: Wi-Fi compliant WPA™/WPA2™/WEP Access method: Infrastructure mode	

AC adaptor

Information for your safety

Power source:

110 V to 240 V ~, 50/60 Hz

AC input:

0.25 A

DC output:

5.0 V ---, 1.8 A

For more information about the energy efficiency of the product, please visit our website, www.panasonic.com, and enter the model number in the search box.

Dimensions:





 
66.4 mm (W)×58.5 mm (H)×31 mm (D)

[2.62 " (W)×2.30 " (H)×1.22 " (D)]

Mass (Weight):

Approx. 60 g (Approx. 0.132 lbs.)

The symbols on this product (including the accessories) represent the following:

	AC
	DC
	Class II equipment (The construction of the product is double-insulated.)
	ON
	Standby

About copyright

■ Carefully observe copyright laws

Whatever you have recorded and created can be used for your personal entertainment only. Under copyright laws, other materials cannot be used without obtaining permission from the holders of the copyrights.

■ Licenses



- SDXC Logo is a trademark of SD-3C, LLC.
- “AVCHD”, “AVCHD Progressive” and the “AVCHD Progressive” logo are trademarks of Panasonic Holdings Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.
- The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- “Wi-Fi®” is a registered trademark of Wi-Fi Alliance®.
- “Wi-Fi Protected Setup™”, “WPA™”, and “WPA2™” are trademarks of Wi-Fi Alliance®.
- DLNA, the DLNA Logo and DLNA CERTIFIED are trademarks, service marks, or certification marks of the Digital Living Network Alliance.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned.

This product is licensed under the AVC Patent Portfolio License for the personal use of a consumer or other uses in which it does not receive remuneration to (i) encode video in compliance with the AVC Standard (“AVC Video”) and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C.

See <http://www.mpegla.com>

This product incorporates the following software:

- (1) the software developed independently by or for Panasonic,
- (2) the software owned by third party and licensed to Panasonic,
- (3) the software licensed under the GNU General Public License, Version 2.0 (GPL V2.0),
- (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL V2.1), and/or
- (5) open source software other than the software licensed under the GPL V2.0 and/or LGPL V2.1.

The software categorized as (3) - (5) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Refer to the detailed terms and conditions thereof, which can be displayed by following the procedure described in [SOFTWARE INFO] under "Using the Setup Menu" in the Owner's Manual (PDF format).

At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL V2.0 or LGPL V2.1, as well as the respective copyright notice thereof.

Contact Information: oss-cd-request@gg.jp.panasonic.com

The source code and the copyright notice are also available for free in our website below.
<https://docs.connect.panasonic.com/oss/>

Limited Warranty (ONLY FOR U.S.A.)

Panasonic Products Limited Warranty

Limited Warranty Coverage (For USA Only)

If your product does not work properly because of a defect in materials or workmanship, Panasonic Corporation of North America (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

Product or Part Name	Parts	Labor
High Definition and 4K Video Camera	1 Year	90 Days
All included Accessories (Except Non-Rechargeable Batteries)	90 Days	Not Applicable
Only Non-Rechargeable Batteries	10 Days	Not Applicable

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. This Limited Warranty excludes both parts and labor for non-rechargeable batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States. This warranty is extended only to the original purchaser of a new product which was not sold "as is".

Mail-In Service--Online Repair Request

Online Repair Request

To submit a new repair request and for quick repair status visit our Web Site at <http://shop.panasonic.com/support>.

When shipping the unit, carefully pack, include all supplied accessories listed in the Owner's Manual, and send it prepaid, adequately insured and packed well in a carton box. When shipping Lithium Ion batteries please visit our Web Site at <http://shop.panasonic.com/support> as Panasonic is committed to providing the most up to date information. Include a letter detailing the complaint, a return address and provide a daytime phone number where you can be reached. A valid registered receipt is required under the Limited Warranty.

IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD, THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, or rental use of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.

(As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but for illustration only.)

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to:

Panasonic Corporation of North America
Consumer Affairs Department
Two Riverfront Plaza
Newark NJ 07102-5490

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

Product registration is not mandatory. Failure to complete the form does not affect the consumer's warranty rights.

Shop Accessories!

for all your Panasonic gear

Go to

<http://shop.panasonic.com/support>

Get everything you need to get the most out of
your Panasonic products

Accessories & Parts for your Camera, Phone, A/V
products, TV, Computers & Networking, Personal
Care, Home Appliances, Headphones, Batteries,
Backup Chargers & more...

Customer Services Directory

For Product Information, Operating Assistance,
Parts, Owner's Manuals, Dealer and Service info
go to <http://shop.panasonic.com/support>

For the hearing or speech impaired TTY: 1- 877-833-8855

As of August 2023

Warranty (For Canadian Customers)

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

PANASONIC PRODUCT – LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship under normal use and for a period as stated below from the date of original purchase agrees to, at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by Panasonic Canada Inc.

Camcorder Products - One (1) year, parts and labour

This warranty is given only to the original purchaser, or the person for whom it was purchased as a gift, of a Panasonic brand product mentioned above sold by an authorized Panasonic dealer in Canada and purchased and used in Canada, which product was not sold "as is", and which product was delivered to you in new condition in the original packaging.

IN ORDER TO BE ELIGIBLE TO RECEIVE WARRANTY SERVICE HEREUNDER, A PURCHASE RECEIPT OR OTHER PROOF OF DATE OF ORIGINAL PURCHASE, SHOWING AMOUNT PAID AND PLACE OF PURCHASE IS REQUIRED

LIMITATIONS AND EXCLUSIONS

This warranty **ONLY COVERS** failures due to defects in materials or workmanship, and **DOES NOT COVER** normal wear and tear or cosmetic damage. The warranty **ALSO DOES NOT COVER** damages which occurred in shipment, or failures which are caused by products not supplied by Panasonic Canada Inc., or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, improper batteries, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, or rental use of the product, or service by anyone other than an Authorized Servicer, or damage that is attributable to acts of God.

Dry cell batteries are also excluded from coverage under this warranty. Rechargeable batteries are warranted for ninety (90) days from date of original purchase.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY.

(As examples, this warranty excludes damages for lost time, travel to and from the Authorized Servicer, loss of or damage to media or images, data or other memory or recorded content. This list of items is not exhaustive, but for illustration only.)

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable. This warranty gives you specific legal rights and you may have other rights which vary depending on your province or territory.

WARRANTY SERVICE

For product operation, repairs and information assistance, please visit our Support page:

www.panasonic.ca/english/support

IF YOU SHIP THE PRODUCT TO A SERVICENTRE

Carefully pack and send prepaid, adequately insured and preferably in the original carton.
Include details of the defect claimed, and proof of date of original purchase.

Useful Information (Only For Latin American Countries)

Customer Service

Customer Service Directory

Obtain products information and operative assistant; localize the closer distributor or Service Center; buy spare parts and accessories by our Web Site to Latin America or calling our Contact Center:

COUNTRY	WEB SITE	CONTACT CENTER
Panama	www.panasonic.com/pa/soporte/	800-7262
Colombia	www.panasonic.com/co/soporte/	01-8000-947262
Ecuador	www.panasonic.com/pa/soporte/	1-800-726276
Costa Rica	www.panasonic.com/pa/soporte/	800-7262737
El Salvador	www.panasonic.com/pa/soporte/	800-7262
Guatemala	www.panasonic.com/pa/soporte/	1-801-811-7262
Uruguay	www.panasonic.com/pa/soporte/	0-800-7262
Paraguay	www.panasonic.com/pa/soporte/	Web Site
Chile	www.panasonic.com/cl/soporte/	800-390-602 022-797-5000
Peru	www.panasonic.com/pe/soporte/	0800-00726
Venezuela	www.panasonic.com/pa/soporte/	Web Site
Mexico	www.panasonic.com/mx/soporte/	800-847-7262 55-5000-1200
Argentina		0800-333-7262 0810-321-7262
Dominican Rep.	www.panasonic.com/pa/soporte/	809-200-8000

For Caribbean countries that speak English please enter this web site in order to find information of our products and operative assistant:
www.panasonic.com/caribbean

Panasonic Entertainment & Communication Co., Ltd.
Web site: <http://www.panasonic.com>

Panasonic Corporation of North America
Two Riverfront Plaza, Newark, NJ 07102-5490
<http://shop.panasonic.com>

Panasonic Canada Inc.
5770 Ambler Drive, Mississauga, Ontario, L4W 2T3
www.panasonic.com

© Panasonic Entertainment & Communication Co., Ltd. 2024
Printed in China

DVQX2553ZA