



## Setting up your HomeCHEF 4-in-1 with the **Panasonic Kitchen+** app

For everyday cooking success with your HomeChef 4-in-1, follow these simple steps to get started!

1. Ensure your home wireless network is on and that the microwave oven is within range.
2. Plug the microwave oven into a grounded power outlet.
3. Once plugged in, the microwave oven should automatically be in setup mode with a blinking wireless connection icon [📶].
  - If the 📶 is not flashing, press the **Stop/Reset** button for 2 seconds—the display will show “1. SETUP CONNECT”, then
  - Press the **Start/Select** dial button to reactive the wireless setup mode.
4. Scan the QR code on the right to install the latest version of Panasonic Kitchen + app onto your device.
5. Create an account with our smart kitchen partner, Fresco, verify this account, and sign into the app.
6. Navigate to ‘Appliances’, select Panasonic HomeChef 4-in-1 Multi-Oven by clicking the [+ ] icon.
7. Select your home wireless network. If you have multiple wireless band options, **please use 2.4 GHz**. Do not select 5 GHz or other bands.
8. When the 📶 blinks quickly, the oven is in pairing state. When the 📶 stops blinking and stays on steadily, your microwave is connected and ready to start cooking!

Scan me to get started



CONNECTS WITH  
**fresco**

Panasonic  
Two Riverfront Plaza  
Newark, NJ 07102

Actual product may vary slightly from photographs.

\*By scanning the QR code, you acknowledge that you understand that Personally Identifiable Information (“PII”) like Advertising Identifier, IP Address, Country Code and Geolocation Information may be shared with Fresco, a Panasonic business partner, and mobile technology software provider Branch. Fresco Privacy policies: <https://frescocooks.com/privacy-policy#privacy>

F0049CW90AP  
24-0224\_NN-CV880S