


# Panasonic®

## Owner's Manual High Definition Video Camera

Model No. **HDC-SD80P/PC**  
**HDC-TM80P/PC**  
**HDC-HS80P/PC**

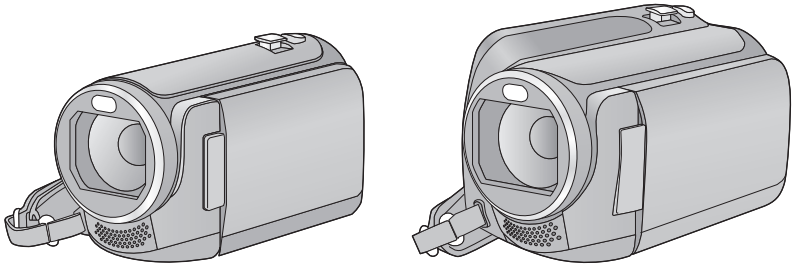

Before connecting, operating or adjusting this product, please read the instructions completely.

**AVCHD™**

**DOLBY**  
DIGITAL  
STEREO CREATOR

**SD™**  
**XC**

**HDMI** **VIERA Link™**

For USA and Puerto Rico assistance, please call: 1-800-211-PANA(7262) or,  
contact us via the web at: <http://www.panasonic.com/contactinfo>

For Canadian assistance, please call: 1-800-561-5505 or visit us at [www.panasonic.ca](http://www.panasonic.ca)

VQT3M62

## Things You Should Know

### Thank you for choosing Panasonic!

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, we're sure it will bring you and your family years of enjoyment. Please take time to fill in the information on the right.

The serial number is on the tag located on the underside of your camera. Be sure to **retain this manual** as your convenient camera information source.

Date of Purchase \_\_\_\_\_

Dealer Purchased From \_\_\_\_\_

Dealer Address \_\_\_\_\_

Dealer Phone No. \_\_\_\_\_

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## Safety Precautions

### WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,

- DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.
- USE ONLY THE RECOMMENDED ACCESSORIES.
- DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

### CAUTION!

DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.

**THE FOLLOWING APPLIES ONLY IN THE U.S.A.**

**FCC Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** To assure continued compliance, follow the attached installation instructions and use only shielded interface cables with ferrite core when connecting to computer or peripheral devices.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**Declaration of Conformity**

Trade Name: Panasonic  
Model No.: HDC-SD80P/HDC-TM80P/HDC-HS80P  
Responsible party: Panasonic Corporation of North America  
One Panasonic Way, Secaucus, NJ 07094  
Support Contact: Panasonic Consumer Electronics Company  
1-800-211-PANA (7262)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



**THE FOLLOWING APPLIES ONLY IN CANADA.**

This Class B digital apparatus complies with Canadian ICES-003.

## AC adaptor

This AC adaptor operates on AC between 110 V and 240 V.

But

- In the U.S.A. and Canada, the AC adaptor must be connected to a 120 V AC power supply only.
- When connecting to an AC supply outside of the U.S.A. or Canada, use a plug adaptor to suit the AC outlet configuration.
- When connecting to a supply of greater than AC 125 V, ensure the cord you use is suited to the voltage of the AC supply and the rated current of the AC adaptor.
- Contact an electrical parts distributor for assistance in selecting a suitable AC plug adaptor or AC cord set.

The unit should be installed near an accessible AC power outlet, with the power cord connected directly to it.

To completely disconnect power from the unit, unplug the power cord from the AC power outlet.

### ■ Concerning the battery

#### Battery pack (Lithium ion battery pack)

- Use the specified unit to recharge the battery pack.
- Do not use the battery pack with equipment other than the specified unit.
- Do not get dirt, sand, liquids, or other foreign matter on the terminals.
- Do not touch the plug terminals (+ and -) with metal objects.
- Do not disassemble, remodel, heat or throw into fire.

If any electrolyte should come into contact with your hands or clothes, wash it off thoroughly with water.

If any electrolyte should come into contact with your eyes, never rub the eyes. Rinse eyes thoroughly with water, and then consult a doctor.

## Warning

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C (140 °F) or incinerate.

## CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

### ■ Product Identification Marking

Product	Location
High Definition Video Camera	Battery holder
AC adaptor	Bottom

**U.S.A./CANADA CONSUMERS: ATTENTION:**



A lithium ion/polymer battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

**<For USA-California only>**

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material – special handling may apply.

See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

# IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the applicable safety instructions listed below. Keep these operating instructions handy for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



# Precautions

## USE & LOCATION

### WARNING

- **TO AVOID SHOCK HAZARD ...** Your camera and power supply should not be exposed to rain or moisture. Do not connect the power supply or operate your camera if it gets wet. Your camera has been designed for outdoor use, however it is not designed to sustain direct exposure to water, rain, sleet, snow, sand, dust, or a direct splashing from a pool or even a cup of coffee. This action could permanently damage the internal parts of your camera. Do not attempt to disassemble this unit. There are no user serviceable parts inside. Unplug your camera from the power supply before cleaning.
- **AS WITH ANY SMALL OBJECT, SD CARDS CAN BE SWALLOWED BY YOUNG CHILDREN. DO NOT ALLOW CHILDREN TO HANDLE THE SD CARD.**

### CAUTION

- **DO NOT AIM YOUR CAMERA AT THE SUN OR OTHER BRIGHT OBJECTS**
- **DO NOT EXPOSE YOUR CAMERA TO EXTENDED HIGH TEMPERATURE ...**  
Such as, in direct sunlight, inside a closed car, next to a heater, etc... This action could permanently damage the internal parts of your camera.
- **AVOID SUDDEN CHANGES IN TEMPERATURE ...** If the unit is suddenly moved from a cold place to a warm place, moisture may form on the SD card and inside the unit.
- **DO NOT LEAVE YOUR CAMERA OR THE POWER SUPPLY TURNED ON WHEN NOT IN USE.**

- **STORAGE OF YOUR CAMERA ...** Store and handle your camera in a manner that will not subject it to unnecessary movement (avoid shaking and striking). Your camera contains a sensitive pick-up device which could be damaged by improper handling or storage.

## CARE

- **TO CLEAN YOUR CAMERA ...** Do not use strong or abrasive detergents when cleaning your camera body.
- **TO PROTECT THE LENS ...** Do not touch the surface of the lens with your hand. Use a commercial camera lens solution and lens paper when cleaning the lens. Improper cleaning can scratch the lens coating.
- **TO PROTECT THE FINISH OF YOUR CAMERA ...** Before handling your camera, make sure your hands and face are free from any chemical products, such as suntan lotion, as it may damage the finish.

-If you see this symbol-

### Information on Disposal in other Countries outside the European Union



This symbol is only valid in the European Union.  
If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

## ■ About the recording format for recording motion pictures

You can select from either AVCHD or iFrame recording formats to record motion pictures using this unit. (→ 61)

### AVCHD:

You can record high definition quality images with this format. It is suitable for viewing on a large format TV or for saving to disc.

### iFrame:

This is a recording format suitable for viewing and editing with a Mac (iMovie'11). When using the iMovie'11, you can import motion pictures in iFrame format quicker than with AVCHD. You can also make the file size of the imported motion picture smaller than when importing AVCHD.

- It is not compatible with motion picture recorded in AVCHD format.

## ■ Indemnity about recorded content

Panasonic does not accept any responsibility for damages directly or indirectly due to any type of problems that result in loss of recording or edited content, and does not guarantee any content if recording or editing does not work properly. Likewise, the above also applies in a case where any type of repair is made to the unit (including any other non-built-in memory/HDD related component).

## ■ Handling of built-in memory [HDC-TM80]

This unit is equipped with the built-in memory. When using this component, pay attention to the following points.

### Back up data periodically.

The built-in memory is temporary storage. In order to avoid erasing data due to static electricity, electromagnetic waves, breakage, and failures, back up the data to a PC or DVD disc. (→ 100, 110)

- Access lamp [ACCESS] (→ 18)  
illuminates while the SD card or built-in memory is being accessed (initialization,

recording, playback, deleting etc.). Do not perform the following operations when the lamp illuminates. It may damage the built-in memory or cause a malfunction in the unit.

- Turn the unit off (remove the battery)
  - Insert and remove the USB cable
  - Expose the unit to vibrations or shock
- About disposing of or giving away this unit. (→ 135)

## ■ Handling of HDD [HDC-HS80]

This unit is equipped with the built-in HDD. While the HDD is capable of storing a large amount of data, there are a few things to look out for. When using this component, pay attention to the following points.

### Do not expose the HDD to vibrations and shocks.

Due to the environment and handling conditions, the HDD may be subject to partial damages or may not be able to read, record, and play back data. Do not expose the unit to vibrations or shock, and do not turn off the unit during recording or playback.

**If the unit is used in a place with loud sounds, such as a club or similar venue, the recording may stop due to sound vibrations. Recording data on an SD card is recommended in these places.**

### Back up data periodically.

The HDD is temporary storage. In order to avoid erasing data due to static electricity, electromagnetic waves, breakage, and failures, back up the data to a PC or DVD disc. (→ 100, 110)

### If the HDD experiences any abnormality, back up data immediately.

Failure in the HDD may produce continuous noise or choppy sound during recording or playing back. Continuous use will cause further deterioration, and may eventually disable the HDD. If these phenomena are observed, copy the data on the HDD to a PC, a DVD disc etc. immediately and contact consumer support. (→ 152, 153)

Once the HDD is out of order, data cannot be restored.



## Operation may stop in hot or cold environments.

The unit is disabled in order to protect the HDD.


## Do not use the unit in low atmospheric pressures.

The HDD may fail if it is used at altitudes of 3000 m (9800 feet) or higher above sea level.

## Transportation

When the unit is transported, turn off the unit and be careful not to shake, drop, or cause impact to the unit.

## Falling detection

[  ] is indicated on the screen when it detects a falling state (a weightless state). If the falling state is detected repeatedly, the unit may stop the recording or playback operation in order to protect the HDD.



- HDD access lamp [ACCESS HDD] (→ 19) illuminates while the HDD is being accessed (initialization, recording, playback, deleting etc.). Do not perform the following operations when the lamp illuminates. It may damage the HDD or cause a malfunction in the unit.
  - Turn the unit off (remove the battery)
  - Insert and remove the USB cable
  - Expose the unit to vibrations or shock
- About disposing of or giving away this unit. (→ 135)

## ■ Cards that you can use with this unit

### SD Memory Card, SDHC Memory Card and SDXC Memory Card

- 4 GB or more Memory Cards that do not have the SDHC logo or 48 GB or more Memory Cards that do not have the SDXC logo are not based on SD Memory Card Specifications.
- Refer to page 24 for more details on SD cards.

## ■ For the purposes of this owner's manual

- SD Memory Card, SDHC Memory Card and SDXC Memory Card are referred to as the "SD card".
- Functions that can be used for Motion Picture Recording Mode:   
Functions that can be used for Still Picture Recording Mode: 
- Functions that can be used for Motion Picture Playback Mode: **VIDEO**  
Functions that can be used for Still Picture Playback Mode: **PHOTO**
- Pages for reference are indicated by an arrow, for example: → 00

This owner's manual is designed for use with models **HDC-SD80**, **HDC-TM80** and **HDC-HS80**. Pictures may be slightly different from the original.

- The illustrations used in this owner's manual show model **HDC-SD80**, however, parts of the explanation refer to different models.
- Depending on the model, some functions are not available.
- Features may vary, so please read carefully.
- Not all models may be available depending on the region of purchase.

# Contents

Accessories.....	12
Quick Guide.....	13

---

## Preparation

---

Parts identification and handling.....	17
Power supply.....	20
Inserting/removing the battery.....	20
Charging the battery.....	21
Charging and recording time.....	22
Recording to a card.....	24
Cards that you can use with this unit.....	24
Inserting/removing an SD card.....	25
Turning the unit on/off.....	26
Turning the unit on and off with the power button.....	26
Turning the unit on and off with the LCD monitor.....	26
Selecting a mode.....	27
How to use the touch screen.....	27
About the Touch Menu.....	28
Setting date and time.....	29

---

## Basic

---

Before recording.....	30
Selecting a media to record	
[HDC-TM80/HDC-HS80].....	31
Recording motion pictures.....	32
Recording still pictures.....	34
Recording still pictures in Motion Picture Recording Mode.....	35
Intelligent Auto Mode.....	36
Motion picture/Still picture playback....	38
Using the menu screen.....	41
Using the Setup Menu.....	42

---

## Advanced (Recording)

---

Zoom in/out function.....	49
Extra Optical Zoom.....	49
Image Stabilizer Function.....	50
Recording with the Touch function.....	51
Touch function icons.....	51
Recording functions of operation icons.....	54
Operation icons.....	54
Recording functions of menus.....	60
Manual recording.....	72
White balance.....	73
Manual shutter speed/ iris adjustment.....	74
Manual focus adjustment.....	75

---

## Advanced (Playback)

---

Playback Operations.....	76
Motion picture playback using operation icon.....	76
Creating still picture from motion picture.....	77
Highlight & Time frame index.....	78
Repeat playback.....	78
Resuming the previous playback.....	79
Zooming in on a still picture during playback (Playback zoom).....	79
Various playback functions.....	80
Playing back motion pictures/ still pictures by date.....	80
Highlight Playback.....	81
Changing the playback settings and playing back the slide show.....	83
Deleting scenes/still pictures.....	85
Dividing a scene (AVCHD).....	86
Dividing a scene to partially delete (iFrame).....	87
Deleting personal information.....	88
Protecting scenes/still pictures.....	88
DPOF setting.....	89
Relay scene combining	
[HDC-TM80].....	90

<b>Watching Video/Pictures on your TV ....</b>	<b>92</b>
Connecting with a HDMI mini cable .....	95
Connecting with the AV multi cable .....	95
<b>Playback using VIERA Link™ .....</b>	<b>96</b>

## Copy/Dubbing

<b>Copying between SD card and Built-in Memory/HDD</b>	
<b>[HDC-TM80/HDC-HS80] .....</b>	<b>98</b>
<b>Connecting a DVD burner to copy to/ play back a disc .....</b>	<b>100</b>
Preparing for copying/ playing back .....	100
Copying to discs .....	102
Playing back the copied disc .....	104
Managing the copied disc .....	105
<b>Dubbing with a Blu-ray disc recorder, video, etc. ....</b>	<b>106</b>

## With a PC

<b>What you can do with a PC .....</b>	<b>110</b>
End User License Agreement .....	112
<b>Operating environment .....</b>	<b>113</b>
<b>Installation .....</b>	<b>116</b>
<b>Connecting to a PC .....</b>	<b>118</b>
About the PC display .....	120
<b>Starting HD Writer AE 3.0 .....</b>	<b>121</b>
Reading the operating instructions of the software applications .....	121
<b>If using Mac .....</b>	<b>122</b>

## Others

<b>Indications .....</b>	<b>123</b>
<b>Messages .....</b>	<b>126</b>
About recovery .....	127
<b>Troubleshooting .....</b>	<b>128</b>
<b>Cautions for use .....</b>	<b>134</b>
<b>About copyright .....</b>	<b>140</b>
<b>Recording modes/approximate recordable time .....</b>	<b>141</b>
<b>Approximate number of recordable pictures .....</b>	<b>142</b>
<b>Specifications .....</b>	<b>143</b>
<b>Optional accessories .....</b>	<b>148</b>
Accessory Order Form (For USA and Puerto Rico Customers) .....	150
<b>Limited Warranty (ONLY FOR U.S.A. AND PUERTO RICO) .....</b>	<b>151</b>
<b>Warranty (For Canadian Customers) .....</b>	<b>153</b>
<b>Index .....</b>	<b>154</b>
<b>Spanish Quick Use Guide/ Guía española para el uso rápido .....</b>	<b>156</b>

# Accessories

Check the accessories before using this unit.

Keep the accessories out of reach of children to prevent swallowing.

Product numbers correct as of Dec. 2010. These may be subject to change.

## Battery pack

VW-VBK180



## AC adaptor

VSK0711



## AC cable

K2CA2CA00025



## AV multi cable

K1HY12YY0008



## USB cable

K1HA05AD0007



## Stylus pen

VGQ0C14



- This is used for operations that are hard to operate with your fingers or performing detailed operations with the touch screen operation. (→ 27, 48)

## CD-ROM


Software



# Quick Guide


## ■ Inserting the battery

Install the battery by inserting it in the direction shown in the figure.

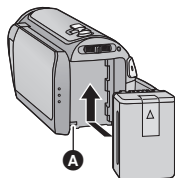


- **A** Insert the battery until it clicks and locks.

## ■ Charging the battery

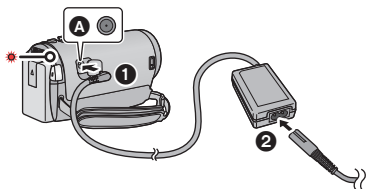

- **A** DC input terminal
- **1** Connect the AC adaptor to the DC input terminal.
- **2** Connect the AC cable to the AC adaptor, then the AC outlet.
- The status indicator will flash red at an interval of 2 seconds, indicating that charging has begun. It will turn off when the charging is completed.

## ■ Inserting/removing an SD card

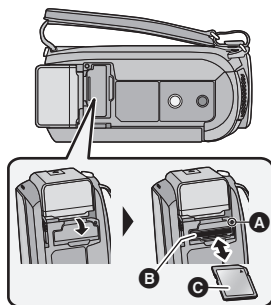

### Access lamp [ACCESS] **A**


- When this unit is accessing the SD card or built-in memory, the access lamp lights up.

- Check that the access lamp has gone off.
- 1) Open the SD card cover and insert (remove) the SD card into (from) the card slot **B**.
    - Face the label side **C** in the direction shown in the illustration and press it straight in as far as it will go.
    - Press the center of the SD card and then pull it straight out.
  - 2) Securely close the SD card cover.
    - Securely close it until it clicks.

## ■ Turning the unit on/off

### Turning the unit on and off with the power button

Open the LCD monitor and press the power button to turn on the unit.

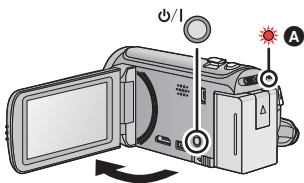


- A** The status indicator lights on.
- To turn off the unit, hold down the power button until the status indicator goes off.

### Turning the unit on and off with the LCD monitor


Opening the LCD monitor turns on the unit. Closing the LCD monitor turns off the unit.

#### To turn on the unit

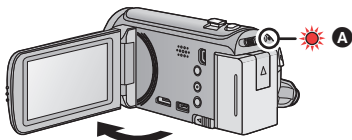

- A** The status indicator lights on.


#### To turn off the unit

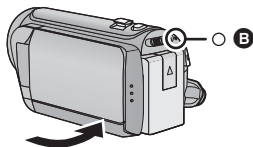




- B** The status indicator goes off.

## ■ Selecting a mode

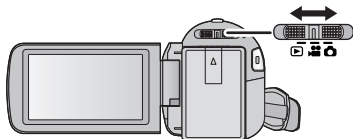Operate the mode switch to change the mode to ,  or .




	<b>Motion Picture Recording Mode (→ 32)</b>
	<b>Still Picture Recording Mode (→ 34)</b>
	<b>Playback Mode (→ 38, 76)</b>

## ■ How to use the touch screen

You can operate by directly touching the LCD monitor (touch screen) with your finger. It is easier to use the stylus pen (supplied) for detailed operation or if it is hard to operate with your fingers.


### Touch

Touch and release the touch screen to select icon or picture.

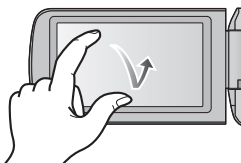




### Slide while touching

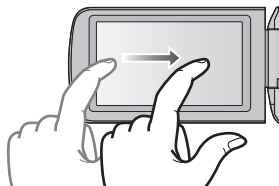Move your finger while pressing on the touch screen.



## Touch Menu

Touch  to display the Touch Menu.  
Touch ◀ (left side)/▶ (right side) of  on the Touch Menu to switch the operation icons.

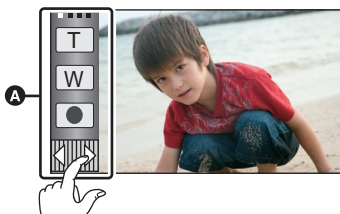



**A** Touch Menu

## Language selection

- 1) Touch [MENU], then touch [SETUP] → [LANGUAGE].
- 2) Touch desired language.


## Selecting a media to record [HDC-TM80/HDC-HS80]


- 1) Change the mode to  or .
- 2) Select the menu.



**MENU** : [MEDIA SELECT]

- 3) Touch the media to record motion pictures or still pictures.
  - Touch [VIDEO/SD CARD] or [PICTURE/SD CARD] to record to the SD card.  
**HDC-TM80**  
Touch [VIDEO/Built-inMemory] or [PICTURE/Built-inMemory] to record to the built-in memory.
  - **HDC-HS80**  
Touch [VIDEO/HDD] or [PICTURE/HDD] to record to the HDD.
- The media is selected separately to motion pictures or still pictures is highlighted in yellow.
- 4) Touch [ENTER].



## Recording motion pictures

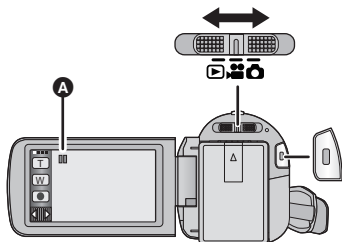
- 1) Change the mode to .
- 2) Open the LCD monitor.
- 3) Press the recording start/stop button to start recording.




**A** When you begin recording,  changes to .

## Recording still pictures

- 1) Change the mode to .
- 2) Open the LCD monitor.
- 3) Press the  button fully to take the picture.

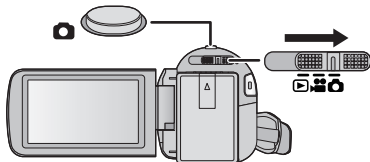

## ■ Motion picture/Still picture playback

- 1) Change the mode to .
- 2) Touch the play mode select icon **A**.




- 3) **HDC-SD80**  
Select the [VIDEO/PICTURE] you wish to play back.

**HDC-TM80** / **HDC-HS80**

Select the [MEDIA] and [VIDEO/PICTURE] you wish to play back.

- Touch [ENTER].
- 4) Touch the scene or the still picture to be played back.

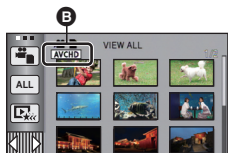

- B** **AVCHD** is displayed when [AVCHD] is touched or **iFrame** is displayed when [iFrame] is touched in step 3.

- To display the next (previous) page:
  - Slide the thumbnail display upward (downward) while touching it.
  - Switch the Touch Menu, and then touch ▲ (up) / ▼ (down) on the thumbnail scroll lever.



- 5) Select the playback operation by touching the operation icon.



- C** Operation icon

- Operation icons and screen display will disappear when no function is performed for a specific period of time. To display them again, touch the screen.

### (Motion picture playback)


- ▶/||: Playback/Pause
- ◀◀: Rewind playback
- ▶▶: Fast forward playback
- : Stops the playback and shows the thumbnails.

### (Still picture playback)


- ▶/||: Slide show (playback of the still pictures in numerical order) start/pause.
- ◀||: Plays back the previous picture.
- ||▶: Plays back the next picture.
- : Stops the playback and shows the thumbnails.



# Parts identification and handling

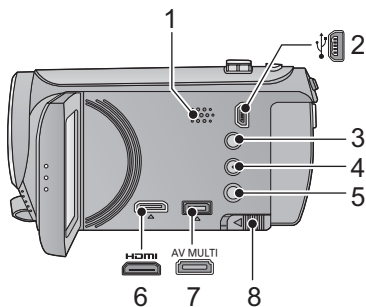


- 1 **Speaker**
- 2 **USB terminal** [ ] (→ 101, 106, 118)
- 3 **Intelligent auto/Manual button** [iA/MANUAL] (→ 36, 72)
- 4 **Optical image stabilizer button** [O.I.S.] (→ 50)
- 5 **Power button** [ ] (→ 26)
- 6 **HDMI mini connector** [HDMI] (→ 92, 96)
- 7 **AV multi connector** (→ 92, 109)
  - Use the AV multi cable (only the supplied cable).
- 8 **Battery release lever** [BATT] (→ 20)

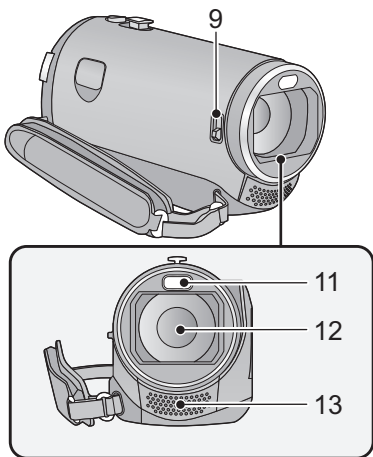

## 9 Lens cover closing switch

The lens cover will open automatically when set to Motion Picture Recording Mode or Still Picture Recording Mode. (→ 27) When not using the unit, close the lens cover to protect the lens.

- Lens cover does not close automatically.
- Slide the Lens cover closing switch to close the cover.

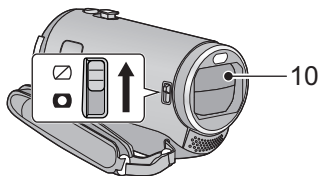



## 10 Lens cover

### 11 LED light


- It can be used as a Video light or Photo light. (→ 57, 71)

### 12 Lens

### 13 Internal stereo microphones

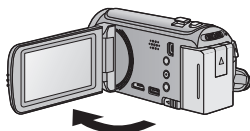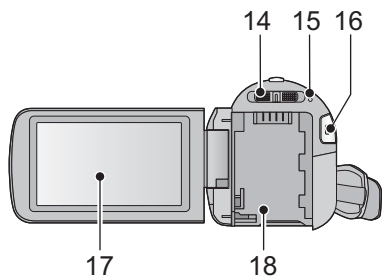


- It can open up to 90°.

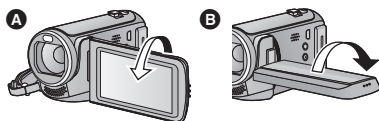

- It can rotate up to 180° **A** towards the lens or 90° **B** towards the opposite direction.

Due to limitations in LCD production technology, there may be some tiny bright or dark spots on the LCD monitor screen. However, this is not a malfunction and does not affect the recorded picture.

### 18 Battery holder (→ 20)

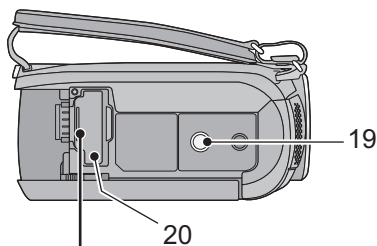


### 19 Tripod receptacle


- If you attach a tripod which has 5.5 mm (0.22 ") screw or larger, it may damage this unit.

### 20 SD card cover (→ 25)

### 21 Access lamp [ACCESS] (→ 25)

### 22 Card slot (→ 25)

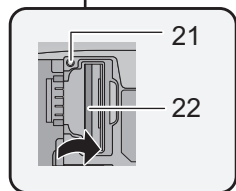


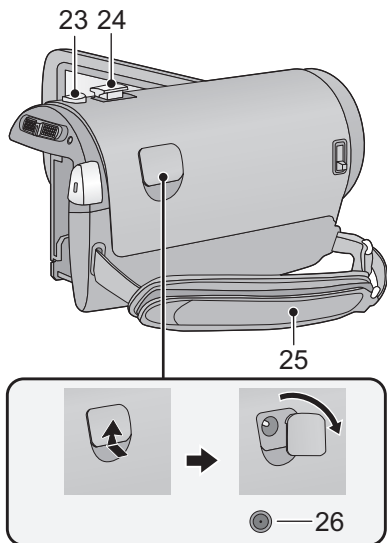

- 23** Photoshot button [ ] (→ 34)  
**24** Zoom lever [W/T] (In Motion Picture Recording Mode or Still Picture Recording Mode) (→ 49)  
 Thumbnail display switch [ / ]/  
 Volume lever [-VOL+] (In Playback Mode) (→ 39)

**25** Grip belt


Adjust the length of the grip belt so that it fits your hand.

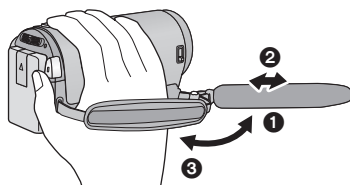

- ❶ Flip the belt.
- ❷ Adjust the length.
- ❸ Replace the belt.

**26** DC input terminal [DC IN] (→ 21)

- Do not use any other AC adaptors except the supplied one.

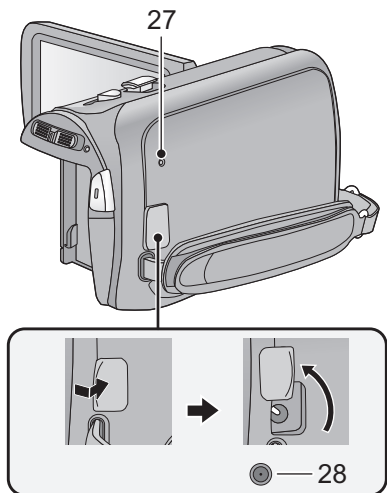

**27** HDD access lamp [ACCESS HDD]

**28** DC input terminal [DC IN] (→ 21)

- Do not use any other AC adaptors except the supplied one.

## Power supply

### ■ About batteries that you can use with this unit

The battery that can be used with this unit is VW-VBK180/VW-VBK360.


- The unit has a function for distinguishing batteries which can be used safely. The dedicated battery (VW-VBK180/VW-VBK360) supports this function. The only batteries suitable for use with this unit are genuine Panasonic products and batteries manufactured by other companies and certified by Panasonic. (Batteries which do not support this function cannot be used). Panasonic cannot in any way guarantee the quality, performance or safety of batteries which have been manufactured by other companies and are not genuine Panasonic products.

It has been found that counterfeit battery packs which look very similar to the genuine product are made available to purchase in some markets. Some of these battery packs are not adequately protected with internal protection to meet the requirements of appropriate safety standards. There is a possibility that these battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack. To ensure that safe products are used we would recommend that a genuine Panasonic battery pack is used.

## Inserting/removing the battery

- Press the power button to turn off the unit. (→ 26)

Install the battery by inserting it in the direction shown in the figure.

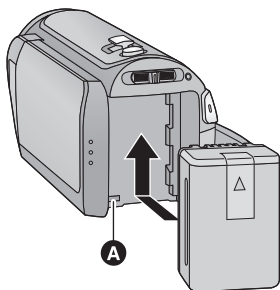


- A** Insert the battery until it clicks and locks.

### Removing the battery

Be sure to hold down the power button until the status indicator goes off. Then remove the battery while supporting the unit to prevent it from dropping.

**Move the battery release lever in the direction indicated by the arrow and remove the battery when unlocked.**

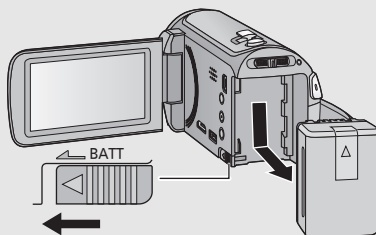


# Charging the battery

When this unit is purchased, the battery is not charged. Charge the battery fully before using this unit for the first time.

## Important:

- Use the supplied AC adaptor. Do not use the AC adaptor of another device.
- Do not use the AC cable with any other equipment as it is designed only for this unit. Also, do not use the AC cable from other equipment with this unit.
- The battery can also be charged using a battery charger (VW-BC10PP; optional).
- The battery will not be charged if the unit is turned on.
- It is recommended to charge the battery in a temperature between 10 °C to 30 °C (50 °F to 86 °F). (The battery temperature should also be the same.)

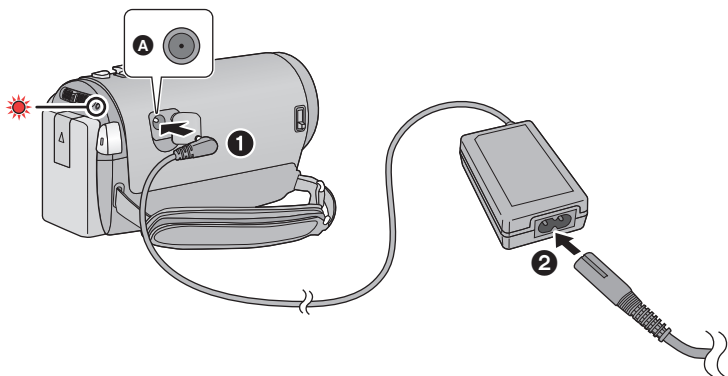

- **A** DC input terminal
- Insert the plugs as far as they will go.

## 1 Connect the AC adaptor to the DC input terminal.

## 2 Connect the AC cable to the AC adaptor, then the AC outlet.

- The status indicator will flash red at an interval of 2 seconds, indicating that charging has begun. It will turn off when the charging is completed.

## ■ Connecting to the AC outlet

If you turn on the unit while connecting the AC adaptor, you can use the unit with power supplied from the outlet.

- If the status indicator flashes at a particularly fast or slow rate, refer to page 137.
- We recommend using Panasonic batteries (→ 12, 22, 23, 148).
- If you use other batteries, we cannot guarantee the quality of this product.
- Do not heat or expose to flame.
- Do not leave the battery(ies) in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

## Charging and recording time

### ■ Charging/Recording time

- Temperature: 25 °C (77 °F)/humidity: 60%RH (When using AC adaptor)

HDC-SD80				
Battery model number [Voltage/Capacity (minimum)]	Charging time	Recording mode	Maximum continuous recordable time	Actual recordable time
Supplied battery/ VW-VBK180 (optional) [3.6 V/1790 mAh]	2 h 25 min	[HA], [HG]	1 h 50 min	55 min
		[HX], [HE]	1 h 55 min	
		[iFrame]	2 h	1 h
VW-VBK360 (optional) [3.6 V/3580 mAh]	4 h 20 min	[HA], [HG], [HX], [HE]	3 h 45 min	1 h 55 min
		[iFrame]	3 h 55 min	2 h

HDC-TM80				
Battery model number [Voltage/Capacity (minimum)]	Charging time	Recording mode	Maximum continuous recordable time	Actual recordable time
Supplied battery/ VW-VBK180 (optional) [3.6 V/1790 mAh]	2 h 25 min	[HA], [HG]	1 h 50 min	55 min
		[HX], [HE]	1 h 55 min	
		[iFrame]	2 h	1 h
VW-VBK360 (optional) [3.6 V/3580 mAh]	4 h 20 min	[HA], [HG], [HX], [HE]	3 h 45 min	1 h 55 min
		[iFrame]	3 h 55 min	2 h

## HDC-HS80

Battery model number [Voltage/Capacity (minimum)]	Charging time	Recording destination	Recording mode	Maximum continuous recordable time	Actual recordable time
Supplied battery/ VW-VBK180 (optional) [3.6 V/1790 mAh]	2 h 25 min	HDD	[HA], [HG], [HX], [HE]	1 h 35 min	50 min
			[iFrame]	1 h 45 min	
		SD	[HA], [HG], [HX], [HE]	1 h 40 min	50 min
			[iFrame]	1 h 45 min	55 min
VW-VBK360 (optional) [3.6 V/3580 mAh]	4 h 20 min	HDD	[HA], [HG], [HX], [HE]	3 h 15 min	1 h 40 min
			[iFrame]	3 h 25 min	1 h 45 min
		SD	[HA], [HG], [HX], [HE]	3 h 25 min	1 h 45 min
			[iFrame]	3 h 35 min	1 h 50 min

- These times are approximations.
- **The indicated charging time is for when the battery has been discharged completely. Charging time and recordable time vary depending on the usage conditions such as high/low temperature.**

- The actual recordable time refers to the recordable time when repeatedly starting/stopping recording, turning the unit on/off, moving the zoom lever etc.
- The batteries heat up after use or charging. This is not a malfunction.

### Battery capacity indication

- The display changes as the battery capacity reduces.



If there is less than 3 minutes remaining, then will become red. If the battery discharges, then will flash.

- Screen display will disappear when no function is performed. However, it will be constantly displayed when the remaining battery time becomes less than 30 minutes.
- The remaining battery capacity is displayed when using the Panasonic battery that you can use for this unit. The actual time can vary depending on your actual use.
- When using the AC adaptor or batteries made by other companies, the remaining battery capacity will not be shown.

## Recording to a card

The unit can record still pictures or motion pictures to an SD card, built-in memory or HDD. To record to an SD card, read the following.

This unit (an SDXC compatible device) is compatible with SD Memory Cards, SDHC Memory Cards and SDXC Memory Cards. When using an SDHC memory card/SDXC memory card with other equipment, check the equipment is compatible with these memory cards.

### Cards that you can use with this unit

Use SD cards conforming to Class 4 or higher of the SD Speed Class Rating\* for motion picture recording.

Card type	Capacity	Motion picture recording	Still picture recording
SD Memory Card	8 MB/16 MB/32 MB	Cannot be used.	Cannot be guaranteed in operation.
	64 MB/128 MB/256 MB	Cannot be guaranteed in operation.	
	512 MB/1 GB/2 GB	Can be used.	Can be used.
SDHC Memory Card	4 GB/6 GB/8 GB/12 GB/16 GB/24 GB/32 GB		
SDXC Memory Card	48 GB/64 GB		

\* SD Speed Class Rating is the speed standard regarding continuous writing. Check via the label on the card, etc.

e.g.:




- Please confirm the latest information about SD Memory Cards/SDHC Memory Cards/SDXC Memory Cards that can be used for motion picture recording on the following website.

[http://panasonic.jp/support/global/cs/e\\_cam](http://panasonic.jp/support/global/cs/e_cam)

(This website is in English only.)

- 4 GB or more Memory Cards that do not have the SDHC logo or 48 GB or more Memory Cards that do not have the SDXC logo are not based on SD Memory Card Specifications.
- When the write-protect switch **A** on SD card is locked, no recording, deletion or editing will be possible on the card.
- Keep the Memory Card out of reach of children to prevent swallowing.

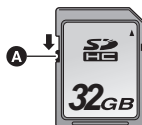




# Inserting/removing an SD card

When using an SD card not from Panasonic, or one previously used on other equipment, for the first time on this unit, format the SD card. (→ 46, 47) When the SD card is formatted, all of the recorded data is deleted. Once the data is deleted, it cannot be restored.

## Caution:

Check that the access lamp has gone off.

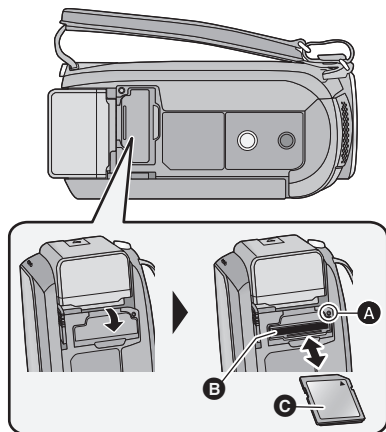

## Access lamp [ACCESS] **A**

- When this unit is accessing the SD card or built-in memory, the access lamp lights up.

### 1 Open the SD card cover and insert (remove) the SD card into (from) the card slot **B**.

- Face the label side **A** in the direction shown in the illustration and press it straight in as far as it will go.
- Press the center of the SD card and then pull it straight out.

### 2 Securely close the SD card cover.

- Securely close it until it clicks.

- Do not touch the terminals on the back of the SD card.
- Do not apply strong shocks, bend, or drop the SD card.
- Electrical noise, static electricity or the failure of this unit or the SD card may damage or erase the data stored on the SD card.
- When the card access lamp is lit, do not:
  - Remove the SD card
  - Turn the unit off
  - Insert and remove the USB cable
  - Expose the unit to vibrations or shockPerforming the above while the lamp is on may result in damage to data/SD card or this unit.
- Do not expose the terminals of the SD card to water, dirt or dust.
- Do not place SD cards in the following areas:
  - In direct sunlight
  - In very dusty or humid areas
  - Near a heater
  - Locations susceptible to significant difference in temperature (condensation can occur.)
  - Where static electricity or electromagnetic waves occur
- To protect SD cards, return them to their cases when you are not using them.
- About disposing of or giving away the SD card. (→ 138)


## Turning the unit on/off

You can turn the unit on and off using the power button or by opening and closing the LCD monitor.

**A clicking sound is heard when the unit is shaken.**


- This is the sound of the lens moving and is not a defect.

This sound will no longer be heard when the unit is turned on and change the mode to



### Turning the unit on and off with the power button

Open the LCD monitor and press the power button to turn on the unit.

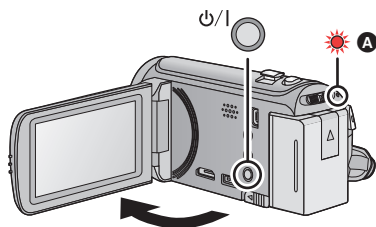

#### To turn off the unit

Hold down the power button until the status indicator goes off.


- A** The status indicator lights on.

### Turning the unit on and off with the LCD monitor

Unit is turned on when the LCD monitor is opened, and unit is turned off when it is closed.


**During normal use, opening and closing of the LCD monitor can be conveniently used to turn the unit on/off.**

#### ■ To turn on the unit

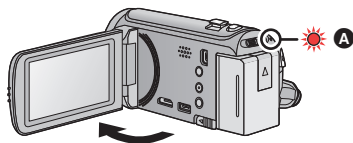

- A** The status indicator lights on.

#### ■ To turn off the unit

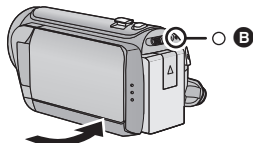


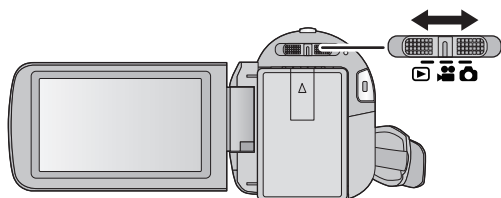
- B** The status indicator goes off.




- The unit will not turn off while recording motion pictures even if the LCD monitor is closed.
- In the following cases, opening the LCD monitor does not turn on the unit. Press the power button to turn on the unit.
  - When the unit is originally purchased
  - When you have turned off the unit using the power button

## Selecting a mode

Change the mode to recording or playback.

**Operate the mode switch to change the mode to  ,  or  .**



	<b>Motion Picture Recording Mode (→ 32)</b>
	<b>Still Picture Recording Mode (→ 34)</b>
	<b>Playback Mode (→ 38, 76)</b>

## How to use the touch screen


You can operate by directly touching the LCD monitor (touch screen) with your finger.

It is easier to use the stylus pen (supplied) for detailed operation or if it is hard to operate with your fingers.

### ■ Touch


Touch and release the touch screen to select icon or picture.

- Touch the center of the icon.
- Touching the touch screen will not operate while you are touching another part of the touch screen.

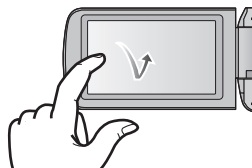


### ■ Slide while touching

Move your finger while pressing on the touch screen.

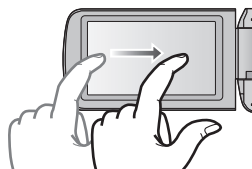

## ■ About the operation icons




These icons are used to switch the menu and thumbnail display page, for item selection and setting etc.



Touch to return to the previous screen such as when setting menus.




## About the Touch Menu

Touch ◀ (left side)/▶ (right side) of  on the Touch Menu to switch the operation icons.


**Touch ◀ (left side)/▶ (right side) of  on the Touch Menu.**

- It is also possible to switch the operation icons by sliding the Touch Menu right or left while touching it.

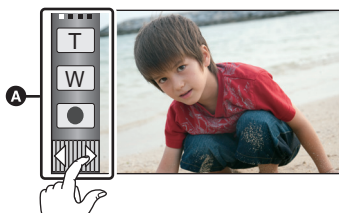


A Touch Menu

Recording Mode

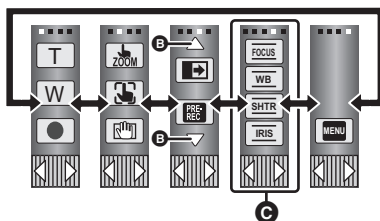


Playback Mode

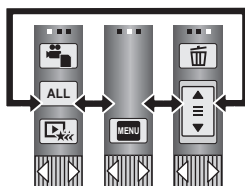

- B Touch these icons to switch pages upward or downward.
- C Displayed only during the Manual Mode.

## ■ To display the Touch Menu



The Touch Menu will disappear when no function is performed for a specific period of time during Recording mode. To display it again, touch .

- Do not touch on the LCD monitor with hard pointed tips, such as ball point pens.
- Perform the touch screen calibration when the touch is not recognized or wrong location is recognized. (→ 48)

Preparation



## Setting date and time

When the unit is turned on for the first time, a message asking you to set the date and time will appear.

Select [YES] and perform steps 2 to 3 below to set the date and time.

### 1 Select the menu. (→ 41)

MENU : [SETUP] → [CLOCK SET]

### 2 Touch the date or time to be set, then set the desired value using ▲/▼.

#### A Displaying the World time setting (→ 42):

🏠 [HOME] / ✈️ [DESTINATION]

- The year can be set between 2000 and 2039.
- The 12-hour system is used to display the time.




### 3 Touch [ENTER].

- A message prompting for World time setting may be displayed. Perform the World time setting by touching the screen. (→ 42)
- Touch [EXIT] to complete the setting.

- The date and time function is driven by a built-in lithium battery.
- When this unit is purchased, the clock is set. If the time display becomes [- -], the built-in lithium battery needs to be charged. To recharge the built-in lithium battery, connect the AC adaptor or attach the battery to this unit. Leave the unit as it is for approx. 24 hours and the battery will maintain the date and time for approx. 4 months. (The battery is still being recharged even if the unit is off.)

# Before recording

## ■ Basic camera positioning

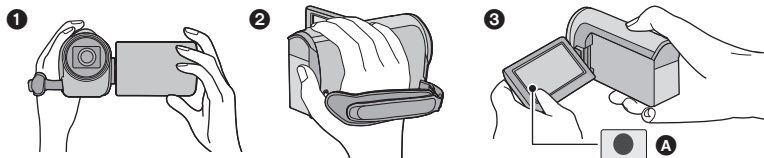


- ❶ Hold the unit with both hands.
- ❷ Put your hand through the grip belt.
- ❸ It is convenient to use the Recording button icon **A** when holding the unit at waist level.
  - When recording, make sure your footing is stable and there is no danger of colliding with another person or object.
  - When you are outdoors, record pictures with the sunlight behind you. If the subject is backlit, it will become dark in the recording.
  - Keep your arms near your body and separate your legs for better balance.
  - Do not cover the microphones with your hand etc.


## ■ Basic motion picture recording

- The unit should normally be held steady when recording.
- If you move the unit when recording, do so slowly, maintaining a constant speed.
- The zoom operation is useful for recording subjects you cannot get close to, but overuse of zoom in and zoom out can make the resulting motion picture less enjoyable to watch.

## ■ Recording Yourself

### Rotate the LCD monitor towards the lens side.

- The image is horizontally flipped as if you see a mirror image. (However the image recorded is the same as a normal recording.)
- Only some indications will appear on the screen. When  appears, return the direction of the LCD monitor to normal position and check the warning/alarm indication. (→ 126)

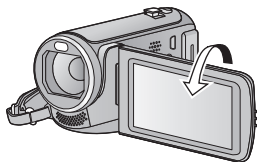

# Selecting a media to record

[HDC-TM80/HDC-HS80]

The card, built-in memory and HDD media can be selected separately to record motion pictures or still pictures.


**1** Change the mode to  or .

**2** Select the menu. (→ 41)

MENU : [MEDIA SELECT]


**3** Touch the media to record motion pictures or still pictures.

HDC-TM80

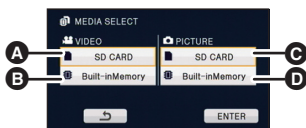

- A [VIDEO/SD CARD]
- B [VIDEO/Built-inMemory]
- C [PICTURE/SD CARD]
- D [PICTURE/Built-inMemory]

HDC-HS80

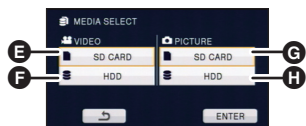


- E [VIDEO/SD CARD]
- F [VIDEO/HDD]
- G [PICTURE/SD CARD]
- H [PICTURE/HDD]


- The media is selected separately to motion pictures or still pictures is highlighted in yellow.



**4** Touch [ENTER].



# Recording motion pictures

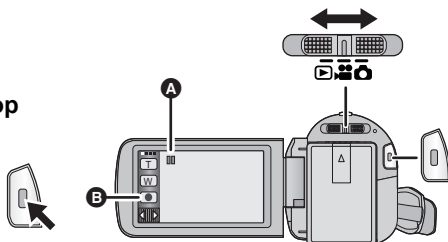- 1 Change the mode to .
- 2 Open the LCD monitor.
- 3 Press the recording start/stop button to start recording.



- A When you begin recording,  changes to .
- B Recording button icon
- Recording can also be started/stopped by touching the Recording button icon. This icon functions in the same manner as the recording start/stop button.

- 4 Press the recording start/stop button again to pause recording.

## ■ Screen indications in the Motion Picture Recording Mode



- A **Recording mode**
  - B **Recording time elapsed**  
Each time the unit is put into recording pause, the counter display will be reset to 0h00m00s.  
(“h” is an abbreviation for hour, “m” for minute and “s” for second.)
  - C **Approximate remaining recordable time**  
(When the remaining time is less than 1 minute, R 0h00m flashes red.)
- Screen display will disappear when no function is performed for a specific period of time. To display it again, touch the screen.  
(It is not displayed when the AF/AE tracking is set.)
  - It will be constantly displayed when the remaining recordable time becomes less than 30 minutes.



- There are 2 recording formats that can be used with this unit: AVCHD that records high-definition motion pictures, and iFrame that records motion pictures suitable for playback and editing on Mac (iMovie'11). To change the recording format, change the Recording Mode. (→ 61)
- Still pictures can be recorded while recording the motion picture. (→ 35)
- The images recorded between pressing the recording start/stop button to start recording and pressing it again to pause recording become one scene.  
When you record with the [REC MODE] set to [iFrame], the scenes longer than approximately 20 minutes will be automatically divided. (Recording will continue.)
- (Maximum recordable scenes of a single SD card, built-in memory or HDD)

Recording formats	[HA]/[HG]/[HX]/[HE]	[iFrame]
Recordable scenes	Approx. 3900	Approx. 89100
Different dates (→ 80)	Approx. 200	Approx. 900

- Maximum number of recordable scenes and maximum number of different dates will be less than above when there are both iFrame scenes and still pictures recorded on an SD card, built-in memory or HDD.
- While recording is in progress, the recording will not stop even if the LCD monitor is closed.
- Please refer to page 141 about approximate recordable time.

## About the compatibility of the recorded motion pictures

### When motion picture is recorded in AVCHD format

- Only motion pictures recorded with the recording format set to AVCHD are supported by AVCHD compatible equipment. Images cannot be played with equipment that does not support AVCHD (ordinary DVD recorders). Confirm that your equipment supports AVCHD by referring to the operating instructions.
- It is not always possible to play back motion pictures recorded with the recording format set to AVCHD on AVCHD compatible equipment. In such a case, play back on this unit instead.


### When motion picture is recorded in iFrame format

- You can play back on a Mac (iMovie'11).
- It is not compatible with motion picture recorded in AVCHD format.



# Recording still pictures


- 1 Change the mode to .
- 2 Open the LCD monitor.
- 3 Press the button halfway.  
(For Auto focus only)

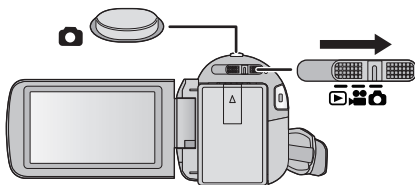

- 4 Press the button fully.





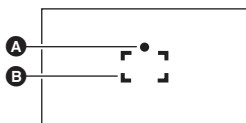





## Focus indication:



- A** Focus indication
  - (The white lamp flashes.):  
Focusing
  - (The green lamp lights up.):  
When in focus
  - No mark:  
When focusing is unsuccessful.
- B** Focus area (area inside brackets)

- If you set the Optical image stabilizer function (→ 50) to 1 ([MODE1]), then the Image Stabilizer function will be more effective. ([MEGA] (MEGA Optical Image Stabilizer) will be displayed when the button is pressed halfway.)
- In dark environments, the Photo light will flash. (→ 57)
- Focus indication will change to registered focus icon when [FACE RECOG.] is set to [ON]. (→ 64)
- Using a Photo light or tripod is recommended when recording still pictures in dark places because the shutter speed becomes slow.
- The screen will become darker when the button is pressed halfway if the shutter speed is 1/30 or slower.
- You can also take a picture just by touching the subject to focus. (Touch Shutter: → 53)
- To print a picture, save the picture to the SD card (→ 98) and print using a PC or a printer.

## ■ About the screen indications in Still Picture Recording

-  : Still picture operation indicator (→ 123)
- R3000: Remaining number of still pictures  
(Flashes in red when [0] appears.)
-  : Quality of still pictures (→ 70)
-  : Size of still pictures (→ 69)
-  : MEGA optical image stabilizer (→ 34)
-  : Optical image stabilizer (→ 50)
- AF\* : AF assist lamp (→ 71)
-  : Photo light (→ 57)
-  : Photo light level (→ 57)
-  : Red-eye reduction (→ 58)



- Screen display will disappear when no function is performed for a specific period of time. To display it again, touch the screen. (It is not displayed when the AF/AE tracking or the Touch Shutter is set.)
- It will be constantly displayed when the remaining number of still pictures that can be recorded becomes 200 or less.

## ■ About the focus indication

- The focus indication indicates the status of the Auto focus.
- The focus indication does not appear in Manual Focus Mode.
- The focus indication does not appear or has difficulty focusing in the following cases.
  - When close subjects and far subjects are included in the same scene
  - When the scene is dark
  - When there is a bright part in the scene
  - When the scene is filled with only horizontal lines


## ■ About the focusing area

When there is a contrasting object ahead or behind the subject in the focus area, the subject may not be focused. If so, move the contrasting object out of the focus area.

- Focus area is not displayed in the following conditions.
  - When the Intelligent Auto Mode (Portrait) is used
  - When AF/AE tracking is used
  - When the Extra Optical Zoom is used
  - When it is necessary to turn on the AF assist lamp (→ 71)

## Recording still pictures in Motion Picture Recording Mode

You can record still pictures even in Motion Picture Recording Mode.

◇ Change the mode to .

Press the  button fully (press to the bottom) to take the picture.

- It is possible to record still pictures while recording motion pictures.  
(Simultaneous recording)
- Remaining number of recordable pictures is displayed while still pictures are being recorded.



- Photo light, Red-eye reduction, Self-timer (→ 58) do not work.
- While recording motion pictures or during the PRE-REC operation, image quality is different from ordinary still pictures so that motion picture recording takes preference over still picture recording.
- If simultaneous recording is used while recording a motion picture, the recordable time remaining will shorten. If the unit is turned off or the mode switch operated, the recordable time remaining may lengthen.

# Intelligent Auto Mode










The following modes (appropriate for the condition) are set just by pointing the unit to what you want to record.



## Intelligent auto/Manual button

Press this button to switch Intelligent Auto Mode/Manual Mode.

- Please refer to page 72 for details about Manual Mode.

Mode	Scene	Effect	
	<b>Portrait</b>	<b>When the object is a person</b>	Faces are detected and focused automatically, and the brightness is adjusted so it is recorded clearly.
	<b>Scenery</b>	<b>Recording outdoors</b>	The whole landscape will be recorded vividly without whiting out the background sky, which may be very bright.
 *1	<b>Spotlight</b>	<b>Under a spotlight</b>	Very bright object is recorded clearly.
 *1	<b>Low light</b>	<b>Dark room or twilight</b>	It can record very clearly even in a dark room or twilight.
 *2	<b>Night portrait</b>	<b>Recording night portrait</b>	A subject and the background are recorded with near real-life brightness.
 *2	<b>Night scenery</b>	<b>Recording night scenery</b>	You can record night scenery vividly by slowing the shutter speed.
 *2	<b>Macro</b>	<b>Recording zooming in on a flower etc.</b>	This allows recording at very close proximity to the object of recording.
 *1  *2	<b>Normal</b>	<b>Other situations</b>	Contrast is adjusted automatically for clear images.

\*1 In Motion Picture Recording Mode only

\*2 In Still Picture Recording Mode only

- Depending on the recording conditions, the unit may not enter the desired mode.
- In the Portrait, Spotlight, or Low light mode, the face will be surrounded by a white frame when detected. In the Portrait mode, a subject that is bigger and close to center of the screen will be surrounded by an orange frame. (→ 65)
- Using a tripod is recommended in Night Portrait and Night Scenery Mode.

- Faces cannot be detected depending on the recording conditions, such as when faces are of certain sizes or at certain tilts or when digital zoom is used.
- [ZOOM MIC] is set to [OFF] in the Intelligent Auto Mode. (→ 67)

## ■ Intelligent Auto Mode

When switching to Intelligent Auto Mode, the Auto White Balance and Auto Focus operate and automatically adjust the color balance and focusing.

Depending on the brightness of the subject etc., the aperture and shutter speed are automatically adjusted for an optimum brightness.


- Color balance and focus may not be adjusted automatically depending on light sources or scenes. If so, manually adjust these settings. (→ 73, 75)

## Automatic white balance

The illustration shows the range over which Automatic white balance functions.

- 1) The effective range of Automatic white balance adjustment on this unit
- 2) Blue sky
- 3) Cloudy sky (rain)
- 4) Sunlight
- 5) White fluorescent lamp
- 6) Halogen light bulb
- 7) Incandescent light bulb
- 8) Sunrise or sunset
- 9) Candlelight

If the automatic white balance is not functioning normally, adjust the white balance manually. (→ 73)

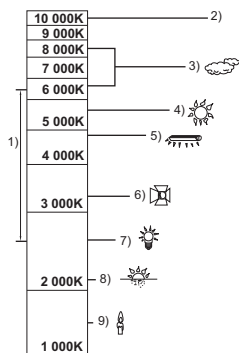


## Auto focus

The unit focuses automatically.


- Auto focus does not work correctly in the following situations. Record pictures in the Manual Focus Mode. (→ 75)
  - Recording distant and close-up objects at the same time
  - Recording a subject behind a dirty or dusty window
  - Recording a subject that is surrounded by objects with glossy surfaces or by highly reflective objects

# Motion picture/Still picture playback

VIDEO PHOTO

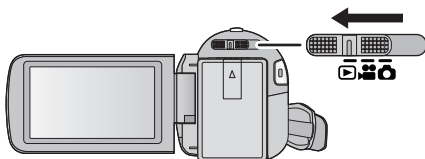


- 1 Change the mode to .
- 2 Touch the play mode select icon **A**. (→ 28)

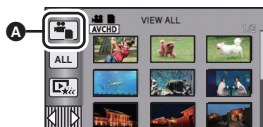

- 3 **HDC-SD80**  
Select the [VIDEO/PICTURE] you wish to play back.

- Touch [ENTER].

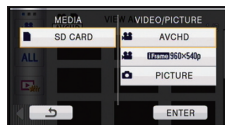


**HDC-TM80** / **HDC-HS80**

- 3 Select the [MEDIA] and [VIDEO/PICTURE] you wish to play back.

- Touch [ENTER].

**HDC-TM80**

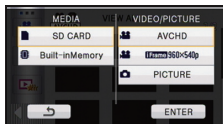


**HDC-HS80**



- 4 Touch the scene or the still picture to be played back.

- B** **AVCHD** is displayed when [AVCHD] is touched or **iFrame** is displayed when [iFrame] is touched in step 3.

- To display the next (previous) page:
  - Slide the thumbnail display upward (downward) while touching it.
  - Switch the Touch Menu, and then touch ▲ (up) / ▼ (down) of the thumbnail scroll lever.

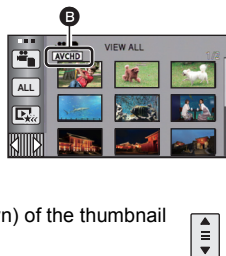

## 5 Select the playback operation by touching the operation icon.



### C Operation icon

- Operation icons and screen display will disappear when no function is performed for a specific period of time. To display them again, touch the screen.

Motion picture playback	Still picture playback
<p>▶/  : Playback/Pause</p> <p>◀◀: Rewind playback</p> <p>▶▶: Fast forward playback</p> <p>■: Stops the playback and shows the thumbnails.</p>	<p>▶/  : Slide show (playback of the still pictures in numerical order) start/pause.</p> <p>◀  : Plays back the previous picture.</p> <p>  ▶: Plays back the next picture.</p> <p>■: Stops the playback and shows the thumbnails.</p>


### ■ Change the thumbnail display

While the thumbnail is displayed, the thumbnail display changes in the following order if the zoom lever is operated to side or side.  
 20 scenes ↔ 9 scenes ↔ 1 scene ↔ Highlight & Time frame index\* (→ 78)

\* Highlight & Time frame index can only set in Motion Picture Playback Mode.

Even in Motion Picture Playback Mode, [FACE] and [HIGHLIGHT] cannot be used when [iFrame] is selected.

- 9 scenes display returns if the unit is turned off or the mode is changed.
- By displaying in 1 scene or pressing and holding the thumbnail in the 20 scenes or 9 scenes display, recording date and time are displayed when playing back motion pictures, and recording date and file number when playing back still pictures.



## ■ Speaker volume adjustment



Operate the volume lever to adjust the speaker volume during motion picture playback.

**Towards “+”:**

Increases the volume

**Towards “-”:**

Decreases the volume

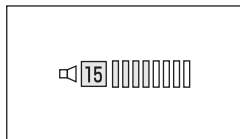

- Sound will be heard only during normal playback.
- If pause play is continued for approx. 5 minutes, the screen returns to the thumbnails.
- The elapsed time for playback indication will be reset to 0h00m00s for each scene.
- When playing back iFrame scenes, the image will pause momentarily and the screen may turn black when the scenes are switching.

### Motion picture compatibility

- This unit is based on AVCHD format/MPEG-4 AVC file format.
- Video signals for the AVCHD that can be played back with this unit are 1920×1080/60i, 1920×1080/24p and 1440×1080/60i.
- Video signals for the iFrame that can be played back with this unit are 960×540/30p.
- This unit may degrade or not play back motion pictures recorded or created on other products, and other products may degrade or not play back motion pictures recorded on this unit, even if the products support AVCHD or iFrame.
- Motion pictures recorded in AVCHD and iFrame are not compatible with each other.

### Still picture compatibility

- This unit is compliant with the unified standard DCF (Design rule for Camera File system) established by JEITA (Japan Electronics and Information Technology Industries Association).
- The file format of still pictures supported by this unit is JPEG. (Not all JPEG formatted files will be played back.)
- This unit may degrade or not play back still pictures recorded or created on other products and other products may degrade or not play back still pictures recorded on this unit.




# Using the menu screen

- Touch ◀ (left side)/▶ (right side) of  on the Touch Menu to display . (→ 28)


## 1 Touch [MENU].



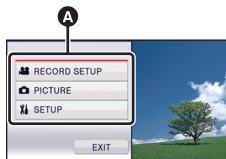

## 2 Touch the top menu **A**.

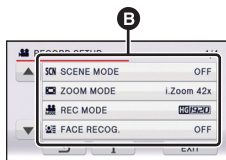


## 3 Touch the submenu **B**.




- Next (previous) page can be displayed by touching  / .

## 4 Touch the desired item to enter the setting.

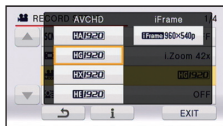

## 5 Touch [EXIT] to exit the menu setting.

### ■ About guide display

After touching , touching the submenus and items will cause function descriptions and settings confirmation messages to appear.

- After the messages have been displayed, the guide display is canceled.

# Using the Setup Menu

- The items displayed differ depending on the position or settings of the mode switch. Select the menu.

**MENU** : [SETUP] → desired setting

## [CLOCK SET]

Please refer to page 29.

## [SET WORLD TIME]

It is possible to display and record the time at the travel destination by selecting your home region and the travel destination.

### 1 Touch [SET WORLD TIME].

- If the clock is not set, adjust the clock to the current time. (→ 29)
- When the [HOME] (your home region) is not set, the message appears. Touch [ENTER] and proceed to Step 3.


### 2 (Only when setting your home region)

#### Touch [HOME].

- Touch [ENTER].

### 3 (Only when setting your home region)


#### Touch / to select your home region and touch [ENTER].

- Touch [SUMMER TIME SET] to set daylight saving time.  appears and the summer time setting is turned on; the time difference from GMT is set forward by one hour. Touch [SUMMER TIME SET] again to return to the normal time setting.

### 4 (Only when setting the region of your travel destination)

#### Touch [DESTINATION].

- Touch [ENTER].
- When the home region is set for the first time, the screen for selecting home/travel destination appears after setting the home region successively. If the home region has already been set once, execute the menu operation for Step 1.

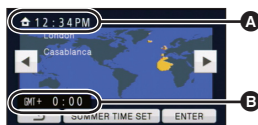

- A** The current time
- B** The time difference from GMT (Greenwich Mean Time)

- 5 (Only when setting the region of your travel destination)

Touch ◀/▶ to select your travel destination and touch [ENTER].

- Touch [SUMMER TIME SET] to set daylight saving time. ☀ appears and the summer time setting is turned on. The travel destination time and time difference from the home region time are set forward by one hour. Touch [SUMMER TIME SET] again to return to the normal time setting.
- Close the setting by touching [EXIT]. ✈ appears and the time of the travel destination is indicated.



- C The local time at the selected travel destination
- D The time difference between the travel destination and the home region

### To return the display to the home setting

Set the home region using Step 1 to 3, and close the setting by touching [EXIT].

- If you cannot find your travel destination in the area shown on the screen, set it by using the time difference from your home region.

[DATE/TIME] [OFF]/[D/T]/[DATE]

It is possible to change the date and time display mode.

[DATE FORMAT] [Y/M/D]/[M/D/Y]/[D/M/Y]

It is possible to change the date format.

[ZOOM/REC DISPLAY] [OFF]/[ON]

You can set the display method of the zoom button icons ( [T] / [W] ) and recording button icon ( [●] ).

[OFF]: If no operation is performed for approx. 5 seconds, the icon disappears.

[ON]: Always displayed.

[EXT. DISPLAY] [OFF]/[SIMPLE]/[DETAIL]



Please refer to page 94.

**[ECONOMY]****[OFF]/[5 MINUTES]**

When about 5 minutes have passed without any operation, this unit automatically turns off to save battery life.

- The Power Save function will not activate when:
  - connected to AC adaptor
  - using the USB cable for PC, DVD burner etc.
  - PRE-REC is used

**[QUICK POWER ON]****[OFF]/[ON]**

The unit is put into recording pause approx. 1 second when the unit is turned on with the mode set to  or  .

- Depending on the recording conditions, start time may be longer than 1 second.
- In the Quick power on mode, the zoom magnification becomes 1×.

**[QUICK START]****[OFF]/[ON]**

This unit is put into recording pause approx. 0.6 seconds after the LCD monitor is reopened.

- **When in Quick start standby mode about 80% of the power used in Recording pause mode is being consumed, so the recording time will be reduced.**


- **[HDC-SD80]**

Quick start will not work if there is no SD card inserted.


- **[HDC-TM80]/[HDC-HS80]**

Quick start will not work if the [SD CARD] is selected in the [MEDIA SELECT], even if there is no SD card inserted.

- **Change the mode to  or  .**


- 1 Set [QUICK START] to [ON].**
- 2 Close the LCD monitor while the mode is set to  or  .**


The status indicator  flashes green and the unit goes into Quick start standby mode.

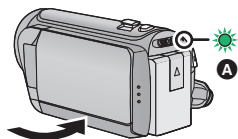

- 3 Open the LCD monitor.**

The status indicator  lights red and the unit is put into recording pause.

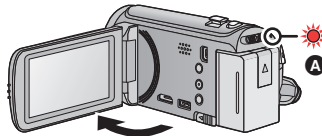

- Quick Start Standby Mode is canceled if
  - about 5 minutes have elapsed
  - mode is set to 
- Depending on the recording conditions and menu settings, time for Quick start may be longer than 0.6 seconds.
- It may take some time for Automatic white balance to adjust.
- In the Quick Start Mode, the zoom magnification becomes 1×.

- If [ECONOMY] (→ 44) is set to [5 MINUTES] and the unit automatically goes into Quick Start Standby Mode, close the LCD monitor and then open it again.
- Turn the unit off using the power button.

## [ALERT SOUND] [OFF]/ [ ] / [ ])

Touch screen operation, starting and stopping of recording and unit on/off can be confirmed with this sound.

[ ] (Volume low)/ [ ] (Volume high)

### 2 Beeps for 4 times

When an error occurs. Check the sentence displayed on the screen. (→ 126)

## [POWER LCD] [+2\*]/ [+1\*]/ [0\*]/ [-1\*]/ [A\*]

This makes it easier to view the LCD monitor in bright places including outdoors.

- These settings will not affect the images actually recorded.

[+2\*] (Makes even brighter)/ [+1\*] (Makes brighter)/ [0\*] (Normal)/ [-1\*] (Makes less bright)/ [A\*] (Automatic adjustment)

\* It is not displayed in the Manual Mode or in the Playback Mode.

- When the AC adaptor is in use, the LCD monitor is set to [+1\*] automatically.
- When the LCD monitor is bright, the recordable time with the battery will be shorter.

## [LCD SET]

It adjusts brightness and color density on the LCD monitor.

- These settings will not affect the images actually recorded.

### 1 Touch [LCD SET].

### 2 Touch the desired setting item.

#### [BRIGHTNESS]:

Brightness of the LCD monitor

#### [COLOR]:

Color level of the LCD monitor

### 3 Touch [ ] / [ ] to adjust settings.

### 4 Touch [ENTER].

- Touch [EXIT] to exit the menu screen.



## [AV MULTI] [COMPONENT]/[AV OUT]

Please refer to page 95.

## [COMPONENT OUT] [480i]/[1080i]

Please refer to page 95.

## [HDMI RESOLUTION] [AUTO]/[1080i]/[480p]

Please refer to page 95.

**[VIERA Link]****[OFF]/[ON]**

Please refer to page 96.

**[TV ASPECT]****[16:9]/[4:3]**

Please refer to page 94.

**[INITIAL SET]**

Set to [YES] for changing the menu settings back to the default condition.

- Settings for [MEDIA SELECT]<sup>\*</sup>, [CLOCK SET] and [LANGUAGE] will not be changed.

\* For users who have **HDC-SD80**, this menu is not displayed.

**[NUMBER RESET]**

Set the file number of the iFrame and still picture recorded next to 0001.

- Folder number is updated and file number will start from 0001. (→ 120)
- To reset the folder number, format the SD card, built-in memory or HDD, and then perform [NUMBER RESET].
- Please be aware that if a medium is formatted, then all the data recorded on the medium will be erased and cannot be restored. Back up important data on a PC, DVD disc etc. (→ 100, 110)

**HDC-SD80****[FORMAT CARD]**

Please be aware that if a medium is formatted, then all the data recorded on the medium will be erased and cannot be restored. Back up important data on a PC, DVD disc etc. (→ 100, 110)

- When formatting is complete, touch [EXIT] to exit the message screen.
  - Perform a physical formatting of the SD card when the SD card is to be disposed/transferred. (→ 138)
- 
- Do not turn this unit off or remove the SD card, while formatting. Do not expose the unit to vibrations or shock.

**Use this unit to format media.**

**Do not format an SD card using any other equipment such as a PC. The card may not be used on this unit.**

**[FORMAT MEDIA]**

Please be aware that if a medium is formatted, then all the data recorded on the medium will be erased and cannot be restored. Back up important data on a PC, DVD disc etc. (→ 100, 110)

1 Touch **[FORMAT MEDIA]**.

2 **HDC-TM80**

Touch **[SD CARD]** or **[Built-inMemory]**.

**HDC-HS80**

Touch **[SD CARD]** or **[HDD]**.

- When formatting is complete, touch [EXIT] to exit the message screen.
- Perform a physical formatting of the SD card when the SD card is to be disposed/transferred. (→ 138)
- Perform a physical formatting of the built-in memory/HDD when this unit is to be disposed/transferred. (→ 135)

- 
- Do not turn this unit off or remove the SD card, while formatting. Do not expose the unit to vibrations or shock.


**Use this unit to format media.**

**Formatting built-in memory or HDD is only available with this unit.**

**Do not format an SD card using any other equipment such as a PC. The card may not be used on this unit.**


**[CARD STATUS]**

The used space and remaining recordable time of the SD card can be checked.

- When the mode switch is set to , remaining recordable time for the selected recording mode is displayed.
  - Touch [EXIT] to close the indication.
- 
- The SD card requires some space to store information and manage system files, so the actual usable space is slightly less than the indicated value. The usable space is generally calculated as 1 GB=1,000,000,000 bytes. The capacities of this unit, PCs and software are expressed as 1 GB=1,024×1,024×1,024=1,073,741,824 bytes. Therefore, the indicated value of the capacity appears to be smaller.

**[MEDIA STATUS]**

The used space and remaining recordable time of the SD card, built-in memory and HDD can be checked.

- Touching [CHANGE MEDIA] switches the unit between the display for the SD card and the display for the built-in memory/HDD.
- When the mode switch is set to , remaining recordable time for the selected recording mode is displayed.
- Touch [EXIT] to close the indication.

- The SD card, built-in memory or built-in HDD requires some space to store information and manage system files, so the actual usable space is slightly less than the indicated value. The usable built-in memory/HDD space is generally calculated as 1 GB=1,000,000,000 bytes. The capacities of this unit, PCs and software are expressed as 1 GB=1,024×1,024×1,024=1,073,741,824 bytes. Therefore, the indicated value of the capacity appears to be smaller.

**[CALIBRATION]**

Perform the touch screen calibration if a different object to the one touched is selected.

**1 Touch [CALIBRATION].**



- Touch [ENTER].

**2 Touch the [+] that appears on the screen with the supplied stylus pen.**

- Touch [+] in sequence (up left → down left → down right → up right → center).

**3 Touch [ENTER].****[DEMO MODE]****[OFF]/[ON]**

This item is used to start the unit demonstration.


(Only when the mode is at the  or  position)

If [DEMO MODE] is switched to [ON] and you touch [EXIT] when there is no SD card inserted and while this unit is connected to the AC adaptor, the demonstration automatically starts.

If any operation takes place, the demonstration is canceled. However if no operations take place for approx. 10 minutes, the demonstration automatically starts again. To stop the demonstration, set [DEMO MODE] to [OFF] or insert an SD card.

**[O.I.S. DEMO]**

This item is used to start the Optical Image Stabilizer demo.

(Only when the mode is at the  position)

Touch [O.I.S. DEMO], the demonstration automatically starts.


When you touch [EXIT], the demonstration will be canceled.

**[LANGUAGE]**

You can select the language on the screen display and the menu screen.



# Zoom in/out function

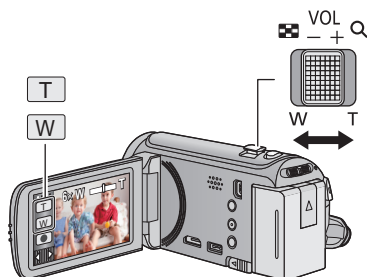

## Zoom lever/Zoom button icons

### T side:

Close-up recording (zoom in)

### W side:

Wide-angle recording (zoom out)

- Maximum zoom ratio for recording motion pictures can be set with [ZOOM MODE]. (→ 61)
- You can also perform zoom operation by simply touching the LCD monitor. (Touch Zoom: → 51)

## ■ About the zoom speed

The zoom speed will be faster in the order of zoom lever, zoom button icon, and then touch zoom.

- The zoom speed varies depending on the range over which the zoom lever is moved.
- The zoom operation using the zoom button icon or touch zoom will be performed at a constant speed respectively.

## Extra Optical Zoom



When in Still Picture Recording Mode, it is possible to take a picture with zoom up to a maximum of 60× without degrading the picture quality

- Extra Optical Zoom ratio varies depending on the setting of [PICTURE SIZE]. (→ 69)

## ■ Extra optical zoom mechanism

For example, when you set the picture size to [ 4:3 0.3M], the maximum [ 4:3 2.6M] area is cropped to the center [ 4:3 0.3M] area, allowing a picture with a higher zoom effect.

- If you take your finger off the zoom lever during zoom operation, the operation sound may be recorded. When returning the zoom lever to the original position, move it quietly.
- When the zoom magnification is at its maximum, the subjects are focused at about 1.6 m (5.3 feet) or more.
- When the zoom magnification is 1×, this unit can focus on a subject approx. 3 cm (1.2") away from the lens.


# Image Stabilizer Function

Use the image stabilizer to reduce the effects of shake during recording.

This unit is equipped with Hybrid Optical Image Stabilizer.

Hybrid Optical Image Stabilizer is a hybrid of optical and electrical image stabilizer.

- Please refer to page 53 for details about the Optical Image Stabilizer Lock.

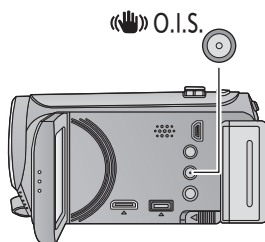

## Optical image stabilizer button

Press the button to turn optical image stabilizer on/off.

### (Motion Picture Recording Mode)

→ → (setting canceled)

- When [HYBRID O.I.S.] is [ON], is displayed.
- When [OFF], is displayed.
- When recording with a tripod in Motion Picture Recording Mode, we recommend that you set the image stabilizer off.

### (Still Picture Recording Mode)

<sub>1</sub> / <sub>2</sub> → (setting canceled)

- When [O.I.S.] is [MODE1], <sub>1</sub> is displayed. When [O.I.S.] is [MODE2], <sub>2</sub> is displayed.

## ■ Changing Image Stabilizer Mode

### (Motion Picture Recording Mode)

**MENU** : [RECORD SETUP] → [HYBRID O.I.S.] → [ON] or [OFF]

When set to [ON], you can further improve image stabilization for recording while walking, or holding the unit and recording a distant subject with zoom.

- This function's default setting is [ON].

### (Still Picture Recording Mode)

**MENU** : [RECORD SETUP] → [O.I.S.] → [MODE1] or [MODE2]

#### [MODE1]:

The function works all the time.

#### [MODE2]:

The function works when the button is pressed. We recommend using this mode when you are recording yourself or recording with a tripod in Still Picture Recording Mode.


# Recording with the Touch function

You can record using convenient functions just by the easy operation of touching the screen.

- 1** Touch ◀ (left side)/▶ (right side) of  on the Touch Menu to display Touch function icons. (→ 28)







- 2** (e.g. AF/AE tracking)  
Touch the Touch function icon.

- To cancel, touch the Touch function icon again. (Optical Image Stabilizer Lock is canceled by releasing the finger touching .)



## Touch function icons

	Touch Zoom
	AF/AE tracking
	Optical Image Stabilizer Lock* <sup>1</sup>
	Touch Shutter* <sup>2</sup>

\*<sup>1</sup> In Motion Picture Recording Mode only

\*<sup>2</sup> In Still Picture Recording Mode only.



- An icon is displayed in the **A** position when the Touch function icon is set.




## Touch Zoom



Zoom operation can be performed by touching the touch zoom bar.

- Touch zoom function is useful for making fine adjustments to the zoom magnification.

- Touch .
  - Touch zoom bar appears.
  - The touch zoom bar will disappear when no function is performed for a specific period of time. To display it again, touch the screen.
- Touch and hold the touch zoom bar.
  - It will zoom to the position you are touching.
  - It will zoom in when T side is touched, and zoom out when W side is touched.
  - It is also possible to perform zoom operation by touching and sliding the touch zoom bar toward the T side or the W side.



- B** Touch zoom bar
- C** Zoom magnification position

- Screen display will disappear when no function is performed for a specific period of time. To display it again, touch the screen while the touch zoom bar is displayed.
- Please refer to page 49 for details about the zoom speed.



It is possible to set the focus and exposure to the subject specified on the touch screen. The focus and exposure will keep following the subject automatically even if it moves.

### (Dynamic tracking)

#### 1 Touch .

- When [FACE RECOG.] (→ 62) is [ON] and a registered face is detected, the target is automatically locked.

#### 2 Touch the object and lock the target.


- When you touch the head of the object, the target frame on the head gets locked and tracking starts.
- Touch the object to be changed again when you want to change the target.
- When the Intelligent Auto Mode is selected, the setting becomes **fA** (Normal) and touched object is tracked. Selection becomes **fP** (Portrait) when target frame is locked on a face. (It may turn to **fA** (Normal) even if the target is locked on the face when a spotlight is shining or with a dark scene.)



**A** Target frame

#### 3 Start recording.

#### ■ About target frame


- When target lock fails, the target frame blinks in red and then disappears. Touch a characteristic part (color etc.) on the object to lock onto it again.
  - When the  button is pressed halfway in Still Picture Recording Mode, the focus is set to the object that is locked. The target frame turns green when it focuses, and the target cannot be changed.
- 
- This function cannot be used in Manual Mode. When Manual Mode is set in Still Picture Recording Mode, it can only be used with some settings in Scene Mode.
  - It may track different objects or may not lock the target depending on the recording conditions such as the following:
    - When the object is too large or too small
    - When color of the object is similar to the background
    - When the scene is dark
  - When the target is locked in Still Picture Recording Mode, the screen may become dark or AF assist lamp (→ 71) may be performed.
  - AF/AE tracking will be canceled in the following cases.
    - When the mode is changed
    - When the unit is turned off
    - When the Scene mode is set
    - Switch to Intelligent Auto Mode/Manual Mode
    - Switch to recording of yourself.




## Optical Image Stabilizer Lock




In Motion Picture Recording Mode, you can further improve optical image stabilization by touching and holding Optical Image Stabilizer Lock icon. With this function, you can further reduce the effects of the shake that tends to occur when using zoom.

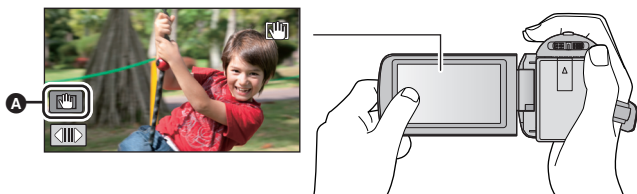

**A** Optical Image Stabilizer Lock icon

- 1 Press the Optical Image Stabilizer button to turn the image stabilizer on.
- 2 Touch and hold .

-  is displayed while you are touching the icon.
- Optical Image Stabilizer Lock is released when you remove your finger from the icon.

### ■ To set the display method of the Optical Image Stabilizer Lock icon

**MENU** : [RECORD SETUP] → [O.I.S. LOCK DISPLAY] → desired setting

- [OFF]:** If no operation is performed for approx. 5 seconds, the icon disappears.
- [ON]:** Always displayed.

- Stabilization may not be possible under strong shaking conditions.
- To record while moving the unit quickly, release Optical Image Stabilizer Lock.



## Touch Shutter



It is possible to focus and record a still picture of a subject that is touched.

- 1 Touch .
- 2 Touch the subject.

- Focus area is displayed at the touched position, and a still picture is recorded.



- Depending on the recording conditions or recognition of the touched position, it may not be possible to record the intended picture.
- This will not operate for recording yourself.

# Recording functions of operation icons

Select the operation icons to add different effects to the images to be recorded.

## 1 Touch ◀ (left side)/▶ (right side) of on the Touch Menu to display the operation icons. (→ 28)

- Touch ▲/▼ on Touch Menu to switch pages upward or downward.










## 2 (e.g. Backlight compensation)








### Touch an operation icon.

- Select the operation icon again to cancel the function. Refer to the respective pages for canceling the following functions.
  - Smile shot (→ 56)
  - Video light (→ 57)
  - Photo light (→ 57)
  - Self-timer (→ 58)
  - Guideline (→ 59)



## Operation icons


	Fade* <sup>1</sup>
	Intelligent contrast control* <sup>1, 2</sup>
	PRE-REC* <sup>1</sup>
	Smile shot* <sup>1</sup>
	Video light* <sup>1</sup>
	Photo light* <sup>3</sup>
	Red-Eye Reduction* <sup>2, 3</sup>

	Self-timer* <sup>3</sup>
	Intelligent exposure* <sup>2, 3</sup>
	Backlight compensation
	Soft skin mode* <sup>2</sup>
	Tele macro
	Guideline
	Color Night Rec* <sup>1, 2</sup>

\*<sup>1</sup> Not displayed in Still Picture Recording Mode.

\*<sup>2</sup> Not displayed in the Intelligent Auto Mode.

\*<sup>3</sup> Not displayed in Motion Picture Recording Mode.

- If you turn off the unit or change the mode to , PRE-REC, Backlight compensation, Color night rec, Self-timer and Tele macro functions are canceled.
- If you turn off the unit, the Fade function is canceled.
- It is possible to set from the menu. (Except for the PRE-REC)

## Fade




When you start recording, the image/audio gradually appears. (Fade in)

When you pause recording, the image/audio gradually disappears. (Fade out)

- The Fade setting is canceled when the recording stops.

■ To select the color for Fade in/out

 : [RECORD SETUP] → [FADE COLOR] → [WHITE] or [BLACK]

(Fade in)



(Fade out)



- The thumbnails of scenes recorded using fade in become black (or white).



## Intelligent contrast control



This brightens parts that are in shadow and difficult to see and suppresses white saturation in bright parts at the same time. Both bright and dark parts can be recorded clearly.

- If there are extremely dark or bright parts or the brightness is insufficient, the effect may not be clear.







## PRE-REC

This prevents you from missing a shot.



This allows recording of the pictures and sound to start approximately 3 seconds before the recording start/stop button is pressed.

-  appears on the screen.
- **Aim the unit at the subject beforehand.**
- There is no beep sound.
- PRE-REC is canceled in the following cases.
  - If you change the mode
    - 
  - If you remove the SD card
    -  / 
  - If you touch [MENU]
  - If you turn the unit off
  - If you start recording
  - After 3 hours have passed

- After setting PRE-REC, if recording starts in less than 3 seconds, or while the PRE-REC indication flashes within about 3 seconds after initiating the Quick start operation, motion pictures taken 3 seconds before pressing the recording start/stop button cannot be recorded.
- Images displayed on the thumbnail in Playback Mode will differ from the motion pictures displayed at the start of playback.



## Smile shot



**When a smiling face is detected during motion picture recording, the unit automatically records a still picture.**

The icon changes each time it is touched.

([ON]) → ([FACE RECOG.]) → [OFF]

: The unit records a still picture on detecting a smiling face.

: Still pictures are only recorded when the face of a person registered using Face Recognition (→ 62) is detected.

[OFF]: Cancel the setting.


- During Smile Shot recording, the face detected as a smiling face is surrounded by a green frame and / are red.
- Smile Shot recording will not work in the following cases. ( / will flash)
  - HDC-SD80  
When there is no SD card inserted
  - HDC-TM80 / HDC-HS80  
When it is set to [PICTURE/SD CARD] in [MEDIA SELECT], and there is no SD card inserted
  - When it is set to Manual Focus
  - When [FACE RECOG.] is set to [OFF], or no one is registered (In ([FACE RECOG.]) only)




- 
- Depending on the recording conditions (type of smile, camera shake, etc.), the face of the subject may not be detected correctly.
  - The number of recording pixels are 3M (2304×1296) or 2.1M (1920×1080). (→ 69)
  - When still pictures that have been recorded using the Smile Shot are displayed as thumbnails, the appears.
  - When the AF/AE tracking function is target locking a face of the subject, still pictures are only recorded if a smiling face is detected on the locked subject. When the Smile Shot function is set to ([FACE RECOG.]), it will record only if the face of a subject registered with [FACE RECOG.] is locked as a target.



## Video light

It is possible to record with illumination even in dark places with Motion Picture Recording Mode.


Each time the  icon is selected, the indication changes by one setting in the following order.

 ([ON]) →  ([AUTO]) →  ([OFF])


 : Always on.


 : Turns on/off automatically according to brightness of the surroundings.




 : Cancel the setting.


- When set to  ([AUTO]), the video light turns on in Low Light Mode in Intelligent Auto Mode.
- When the video light is in use, the recordable time when using the battery is shortened.
- The subject should be within 1.2 m (3.9 feet) of the unit.
- Using the Color Night Rec Function at the same time will make conditions even brighter.


## Photo light


The Photo light flashes and a still picture is recorded when the  button is pressed. Use this function to take a picture in dark places.



Each time the  icon is selected, the indication changes by one setting in the following order.

 ([ON]) →  ([AUTO]) →  ([OFF])

 : Always flashes.

 : Photo light will flash automatically by determining the ambient brightness.


 : Cancel the setting.


- The unit automatically determines if the Photo light is necessary even when it has been set to  by detecting the ambient brightness. (If it determines that the Photo light is necessary, the  indication lights up in red.)





### ■ To adjust the brightness of the Photo light

 : [PICTURE] → [PHOTO LIGHT LEVEL] → desired setting

 : Less bright

 : Normal

 : Much brighter

- If the [AF ASSIST LAMP] is set to [AUTO] (→ 71) and the Photo light is set to  ([AUTO]) or  ([OFF]), the Photo light will turn on when taking pictures at a dark place to make the focusing easier.
- If the  indication etc. flashes when the  button is pressed halfway, the Photo light is not activated.
- The subject should be within 1.2 m (3.9 feet) of the unit.
- When the Photo light flashes, the shutter speed is adjusted automatically by determining the ambient brightness.
- It may not flash when the LED light is very hot.

## Red-Eye Reduction


Reduces the phenomena where human eyes become red from Photo light.








---

- The Photo light is activated 2 times.
- The red-eye phenomenon tends to appear in certain recording conditions and more with some people than with others.
- When faces are detected in the Intelligent Auto Mode, the Red-Eye Reduction is set to on.

## Self-timer

**This is for recording still pictures using the timer.**



Each time the  icon is selected, the indication changes by one setting in the following order:

- 10 (Records after 10 seconds) → 2 (Records after 2 seconds) → setting canceled
- When you press the  button, 10 or 2 flashes for the set period before a still picture is recorded. After recording, the Self-timer is canceled.
  - In Auto Focus Mode, if the  button is pressed halfway and then fully, the lens focuses on the subject when the button is pressed halfway. If the  button is pressed fully all at once, the lens focuses on the subject just before recording.

**To stop the timer midway through**

Touch [CANCEL].

---

- Setting the Self-timer to 2 is a good way to prevent image shake when the  button is pressed while using a tripod etc.

## Intelligent exposure

This brightens dark areas so the image can be recorded clearly.

---

- If there are extremely dark parts or the brightness is insufficient, the effect may not be clear.

## Backlight compensation

This makes the image brighter to prevent darkening of a backlit subject.

---

## Soft skin mode

This makes skin colors appear softer for a more attractive appearance.

This is more effective if you record a person closely from the torso up.

---

- If the background or anything else in the scene has colors similar to the skin color, they will also be smoothed.
- If the brightness is insufficient, the effect may not be clear.
- If you record a person in the distance, the face may not be recorded clearly. In this case, cancel Soft Skin Mode or zoom in on the face (close-up) to record.



## Tele macro



**A more impressive image can be obtained by focusing on the object only in close-up and shading off the background.**

- The unit can focus on the subject at a distance of approx. 70 cm (28").
- When the Tele macro is set with the zoom magnification less than 37× in Motion Picture Recording Mode, it will automatically be set to 37×.
- When the Tele Macro is set in the still picture recording mode with the picture size set to [16:9 3M]/[16:9 2.1M], zoom factor is set automatically to 37× if the zoom factor is less than 37×. It will be set automatically to 34× when the picture size is set to [4:3 2.6M]/[4:3 0.3M]/[3:2 2.8M].

- Tele Macro function is canceled when the zoom magnification becomes lower than 37× in Motion Picture Recording Mode.
- Tele Macro function is canceled automatically when the zoom magnification becomes lower than the below in Still Picture Recording Mode:
  - Lower than 37× (when picture size is [16:9 3M]/[16:9 2.1M])
  - Lower than 34× (when picture size is [4:3 2.6M]/[4:3 0.3M]/[3:2 2.8M])



## Guideline



**You can check if the image is level while recording or playing back motion pictures and still pictures. The function can also be used to estimate the balance of the composition.**

It will switch every time the icon is touched.

→ → → Setting canceled

- The guidelines do not appear on the images actually recorded.

### ■ Displaying Guidelines at playback

- Change the mode to and touch the play mode select icon. Then set [VIDEO/PICTURE] to [AVCHD] or [iFrame]. (→ 38)

: [VIDEO SETUP] → [GUIDE LINES] → desired setting

- To cancel the Guideline function during playback, set to [OFF].
- It cannot be set while in Still Picture Playback Mode.



## Color Night Rec



**This function allows you to record color images in very low light situations. (Minimum required illumination: approx. 1 lx)**

- Recorded scene is seen as if frames were missed.
- If set in a bright place, the screen may become washed out for a while.
- Bright dots that are usually invisible may be seen, but this is not a malfunction.
- Using a tripod is recommended.
- In darker areas, Auto Focus may focus a bit slower. This is normal.












# Recording functions of menus


## [SCENE MODE]



When you record images in different situations, this mode automatically sets optimum shutter speeds and apertures.

**MENU** : [RECORD SETUP] → [SCENE MODE] → **desired setting**

<b>[OFF]:</b>	Cancel the setting
 <b>Sports:</b>	To make fast moving scenes less shaky with slow playback and pause of playback
 <b>Portrait:</b>	To make people stand out against the background
 <b>Spotlight:</b>	Improved quality when subject is brightly illuminated.
 <b>Snow:</b>	Improved image quality when shooting in snowy locations.
 <b>Beach:</b>	To make blue in the sea or sky vibrant
 <b>Sunset:</b>	To make red in the sunrise or sunset vibrant
 <b>Fireworks:</b>	To capture the fireworks in the night sky beautifully
 <b>Scenery:</b>	For spatial scenery
 <b>Night scenery:</b>	To capture the evening or night scenery beautifully.
 <b>Low light:</b>	For dark scenes, such as at dusk (In Motion Picture Recording Mode only)
 <b>Night portrait:</b>	To capture a person and the background brightly. (In Still Picture Recording Mode only)

- **(Sports/Portrait/Spotlight/Snow/Beach/Sunset/Scenery)**
  - The shutter speed is 1/8 or more in Still Picture Recording Mode.
- **(Sunset/Low light)**
  - The shutter speed is 1/30 or more in Motion Picture Recording Mode.
- **(Sunset/Fireworks/Scenery/Night scenery)**
  - Image may get blurry when a close object is recorded.
- **(Sports)**
  - During normal playback, the image movement may not look smooth.
  - Color and screen brightness may change under indoor lighting.
  - If the brightness is insufficient, the Sports Mode does not function. The  display flashes.
- **(Portrait)**
  - Color and screen brightness may change under indoor lighting.
- **(Fireworks)**
  - The shutter speed is 1/30.
  - Image may get washed out when recorded in bright surroundings.

- **(Night scenery/Night portrait)**
  - The shutter speed is 1/2 or more in Still Picture Recording Mode.
  - Using a tripod is recommended.
- **(Night portrait)**
  - The Photo light is set to [ON].

## [ZOOM MODE]



Set the maximum zoom ratio for the Motion Picture Recording Mode.

: [RECORD SETUP] → [ZOOM MODE] → desired setting

<b>[i.Zoom OFF]:</b>	Up to 37×
<b>[i.Zoom 42×]:</b>	This zoom function allows you to maintain high-definition picture quality. (Up to 42×)
<b>[D.Zoom 90×]:</b>	Digital zoom (Up to 90×)
<b>[D.Zoom 2000×]:</b>	Digital zoom (Up to 2000×)

- The larger the digital zoom magnification, the more the image quality is degraded.
- This function cannot be used in Still Picture Recording Mode.

## [REC MODE]



Switch the quality and recording format of the motion picture to record.

: [RECORD SETUP] → [REC MODE] → desired setting

<b>[HA]/[HG]/[HX]/[HE]*<sup>1</sup>:</b>	Set the recording mode to AVCHD.
<b>[iFrame]*<sup>2</sup>:</b>	Set the recording mode to iFrame.

\*<sup>1</sup> Recording will have higher quality in the order of [HA], [HG], [HX], and [HE].

\*<sup>2</sup> [iFrame] is a format suitable for Mac (iMovie'11). It is recommended for when using a Mac.

- **Recordable time using the battery (→ 22)**
- This function's default setting is [HG] mode.
- Please refer to page 141 about approximate recordable time.
- When the unit is moved a lot or moved quickly, or when a fast-moving subject is recorded (particularly when recording in [HE] mode), mosaic-type noise may appear at playback.

**[RELAY REC]**

It is possible to continuously record motion picture to an SD card when there is no space available in the built-in memory. (It allows you to record only to SD card from built-in memory.)

- Set **[MEDIA SELECT]** to **[Built-inMemory]**.
- Set **[REC MODE]** to **[HA]**, **[HG]**, **[HX]** or **[HE]**. (→ 61)
- Insert an SD card.

**MENU** : **[RECORD SETUP]** → **[RELAY REC]** → **[ON]**

- ⇨ is displayed on the screen. ⇨ will disappear when space in the built-in memory is gone and the recording to the SD card starts.
  - Relay recording can only be performed once.
  - **Combine the scenes that were relay-recorded using the [RELAY SCENE COMBINE] into the SD card. (→ 90, 98)**
  - Once you have performed **[RELAY SCENE COMBINE]**, you can use the Relay Recording function again. If the **[RELAY REC]** is set to **[ON]** without performing the **[RELAY SCENE COMBINE]**, a message is displayed. You will be able to perform Relay Recording by touching **[YES]**, but you will not be able to perform the **[RELAY SCENE COMBINE]** after that.
- 
- Still pictures are recorded to the SD card after Relay recording.
  - is displayed on the thumbnail display during the playback of a scene that was relay-recorded on the built-in memory.

**[FACE RECOG.]**

Face Recognition is a function for finding faces that resemble faces which have already been registered and automatically prioritizing focus and exposure for those faces. This function makes it possible to keep the face of your loved ones in focus even when they are at the back or on the end of a line in a group picture.

**MENU** : **[RECORD SETUP]** → **[FACE RECOG.]** → **desired setting**

<b>[OFF]:</b>	Cancel the setting
<b>[ON]:</b>	The Face Recognition function is available
<b>[SET]:</b>	Face Recognition registration/editing/cancellation

## ■ Registering a face for face recognition

**MENU** : [RECORD SETUP] → [FACE RECOG.] → [SET] → [SET]

- Up to a maximum of 6 people can be registered.

### 1 Align the person's face with the guide.


- Take a picture of the person's face from the front, ensuring that their hair does not hide the outline of their face, their eyes or their eyebrows.

### 2 Touch [REC] or press the button fully.


- Touch [ENTER].
- It may not be possible to register a face depending on the recording conditions. In this case, try recording the face again.

### 3 Entering the person's name.

- Touch the text entry icon in the center of the screen and enter the name.
- After entering the name, touch [Enter].

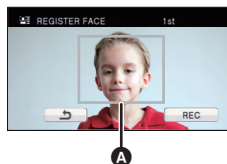

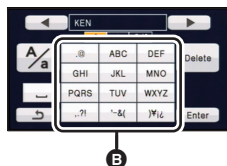


**A** Guide



**B** Text entry icon

## Entering text

Icon	Description of operation
[A] etc.	Enters a character.
	Moves cursor left.
	Moves cursor right.
[A/a]	Switches between [A]/[a] (alphabet) and [&/1] (symbols/numbers).
	Enter a space.
[Delete]	Deletes a character. Deletes the previous character if the cursor is in an empty space.
[Enter]	Ends text entry.

- A maximum of 9 characters can be entered.

### 4 Touch [ENTER] to end registration.


- Touch [EXIT].


## ■ Changing the information of a registered person

### 1 Select the menu.

**MENU** : [RECORD SETUP] → [FACE RECOG.] → [SET] → [EDIT]

### 2 Touch the desired item to enter the setting.

- Up to 3 face shots can be registered. To additionally register or to change/delete the registered face shots, touch  or the face shot.
- If you register several face shots of the same person (up to 3 face shots can be registered), each with a different facial expression or different background, it is more likely that face recognition will be successful.

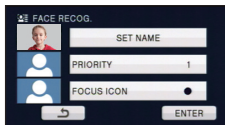


#### [SET NAME]:

Change the name.

#### [PRIORITY]:

Focus and exposure will be set in priority according to the registration order setting from the first person. Target will be locked according to the registration order setting from the first person when AF/AE tracking is active.

- To change the registration order, select the person you wish to change.

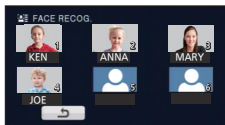

#### [FOCUS ICON]:

This changes the focus indication icon that appears during still picture recording. (Only displayed when Face Recognition is in use.)

- Touch the icon you wish to have displayed.


### 3 Touch [ENTER].



## ■ Canceling a registered person

### 1 Select the menu.

**MENU** : [RECORD SETUP] → [FACE RECOG.] → [SET] → [DELETE] or [DELETE ALL]

- Touching [DELETE ALL] cancels all the registered people.
- 2 (When [DELETE] is selected)  
**Touch the person to cancel.**
  - When touched, the person is selected and  is displayed. To cancel the selected person, touch again.
  - Touch [ENTER].

- Since face recognition searches for faces that resemble the registered faces, there is no guarantee of positive recognition.
- It may not be possible to correctly recognize a person who has been registered due to differences in facial expression and environment.
- Perform the registration again if recognition becomes unstable in cases such as when facial features change with age.



## [NAME DISPLAY]



When a registered person is detected by face recognition during recording, the name registered for that person is displayed.

**MENU** : [RECORD SETUP] → [NAME DISPLAY] → desired number

[OFF]/[1]/[2]/[3]

- Displayed name will disappear after a while.
- It is displayed according to the registration order setting from the first person.
- This function is not displayed during the recording of yourself or Playback Mode.

## [FACE FRAMING]



Detected faces appear with frames.

**MENU** : [RECORD SETUP] → [FACE FRAMING] → desired setting

**[OFF]:**

Cancel the setting.

**[PRIMARY]:**

Only the prioritized face framing is displayed.

**[ALL]:**


All face detection framings are displayed.



- Up to 15 frames are indicated. Larger faces and faces nearer to the center of the screen take preference over others. When [FACE RECOG.] is [ON] registered people are given priority.

### ■ Prioritized face framing

Prioritized face framing is displayed as orange frames. Focus and adjustment of brightness will be performed against the prioritized face framing.

- Prioritized face framing is only displayed with Portrait Mode in the Intelligent Auto Mode.
- The white frame is for face detection only.
- Focus will be set to prioritized face framing and the brightness adjusted when the unit is set to Portrait mode in Intelligent Auto Mode.
- Focus will be set to prioritized face framing when the  button is pressed halfway when recording still pictures. Prioritized face framing will turn to green when the focus is set.

## [AGS]



If the unit continues to be tilted upside down from the normal horizontal position while recording motion pictures, it is automatically put into recording pause.

**MENU** : [RECORD SETUP] → [AGS] → [ON]

- 
- The AGS function may activate and cause the unit to pause the recording if you are recording a subject right above or right below you.

## [AUTO SLOW SHTR]



You can record bright pictures even in dark places by slowing the shutter speed.

- **Switch to Manual Mode. (→ 72)**

**MENU** : [RECORD SETUP] → [AUTO SLOW SHTR] → [ON]

- The shutter speed is set to 1/30 or more depending on the surrounding brightness.
- This function cannot be used in Still Picture Recording Mode.
- When the shutter speed becomes 1/30, the screen may be seen as if frames are missed and afterimages may appear.

## [Digital Cinema Color]



Recording motion pictures with more vivid colors, using x.v.Color™ technology.

- **Switch to Manual Mode. (→ 72)**
- **Set [REC MODE] to [HA], [HG], [HX] or [HE]. (→ 61)**

**MENU** : [RECORD SETUP] → [Digital Cinema Color] → [ON]

- For more realistic colors, use an HDMI mini cable with a TV that supports the x.v.Color™.
- **When motion pictures recorded while this function is turned [ON] are played back with a TV not compatible with x.v.Color™, colors may not be reproduced properly.**
- To play back images recorded in Digital cinema color with vivid colors of wider color ranges, a device compatible with x.v.Color™ is required. When these images are played back with devices other than ones compatible with x.v.Color™, it is recommended to record the images after this function is turned [OFF].
- x.v.Color™ is a name for devices that are compatible with the xvYCC format, an international standard for expanded color in motion pictures, and that follow the rules for signal transmission.

## [SHOOTING GUIDE]



Message is displayed when this unit is moved rapidly.

**MENU** : [RECORD SETUP] → [SHOOTING GUIDE] → [ON]

When "CAMERA PANNING IS TOO FAST." appears, move the unit slowly while recording.

- **Set to [OFF] to turn off the message indication.**
- Message will not appear while pausing the recording. (Message will appear even if it is pausing the recording if [DEMO MODE] is set to [ON].)

## [WIND NOISE CANCELER]



This will reduce the wind noise coming into the built-in microphones while maintaining the realism.

- **Switch to Manual Mode.** (→ 72)

**MENU** : [RECORD SETUP] → [WIND NOISE CANCELER] → [ON]

- This function's default setting is [ON].
- When switching to Intelligent Auto Mode, [WIND NOISE CANCELER] is set to [ON], and the setting cannot be changed.
- You may not see the full effect depending on the recording conditions.

## [ZOOM MIC]



Directivity of the microphone is synchronized with the zoom operation. Sounds near the front of the unit are recorded more clearly if you zoom in (close-up) and surrounding sounds are recorded more realistically if you zoom out (wide angle).

- **Switch to Manual Mode.** (→ 72)

**MENU** : [RECORD SETUP] → [ZOOM MIC] → [ON]

## [MIC LEVEL]



When recording, the input level from the built-in microphones can be adjusted.

- **Switch to Manual Mode.** (→ 72)

### 1 Select the menu.

**MENU** : [RECORD SETUP] → [MIC LEVEL] → desired setting


**[AUTO]:** AGC is activated, and the recording level is adjusted automatically.

**[SET+AGC]/[SET]:** The desired recording level can be set.

### 2 (When [SET+AGC]/[SET] is selected)

**Touch** ◀/▶ **to adjust.**

- Touch **AGC** to activate/disactivate AGC.  
When AGC is activated, the icon is surrounded by yellow and the amount of sound distortion can be reduced. When AGC is deactivated, natural recording can be performed.
  - Adjust the microphone input level so that the last 2 bars of the gain value are not red. (Otherwise, the sound is distorted.) Select a lower setting for microphone input level.
- ### 3 Touch [ENTER] to set the microphone input level and then touch [EXIT].
- ◻◻◻◻◻◻◻◻ (Microphone input level meter) appears on the screen.

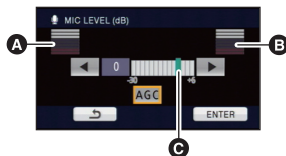

- A** Left
- B** Right
- C** Microphone input level

- When switching to Intelligent Auto Mode, the setting is fixed to [AUTO] and cannot be changed.
- When [ZOOM MIC] is [ON], the volume will be different depending on the zoom rate.
- The microphone input level meter shows the larger of the inputs from the 2 built-in microphones.
- You cannot record with the audio completely muted.

## [PICTURE ADJUST]



Adjust the quality of the image while recording.

Adjust by outputting to a TV while adjusting the quality of the image.

- **This setting is retained when you change between Motion Picture Recording Mode and Still Picture Recording Mode.**
- **Switch to Manual Mode. (→ 72)**

### 1 Select the menu.

: [RECORD SETUP] → [PICTURE ADJUST]

### 2 Touch the desired setting items.

[SHARPNESS]:	Sharpness of the edge
[COLOR]:	Depth of the color of the image
[EXPOSURE]:	Brightness of the image
[WB ADJUST]:	Picture color balance

### 3 Touch / to adjust settings.

### 4 Touch [ENTER].

- Touch [EXIT] to complete the settings.
- appears on the screen.

The higher the number of pixels, the higher the clarity of the picture when printing.

**MENU** : [PICTURE] → [PICTURE SIZE] → desired setting

### Picture size and Maximum zoom ratio

Aspect ratio will change depending on the picture size.

<b>4:3</b> :	Aspect ratio of 4:3 television
<b>3:2</b> :	Aspect ratio of conventional film camera or prints (such as L-size print)
<b>16:9</b> :	Aspect ratio of high-definition television, etc.

Picture size		Aspect ratio	Extra optical zoom (→ 49)
[ 4:3 ] 2.6M]	1856×1392	4:3	—*
[ 4:3 ] 0.3M]	640×480		60×
[ 3:2 ] 2.8M]	2064×1376	3:2	—*
[ 16:9 ] 3M]	2304×1296	16:9	37×
[ 16:9 ] 2.1M]	1920×1080		37×

\* Extra optical zoom cannot be used. The maximum zoom magnification is 34×

### Picture size in Motion Picture Recording Mode

- Change the mode to .



**MENU** : [PICTURE] → [PICTURE SIZE] → desired setting

Picture size		Aspect ratio
[ 3M ]	2304×1296	16:9
[ 2.1M ]	1920×1080	

- This function's default settings are [ 16:9 ] 3M] in Still Picture Recording Mode and [ 3M ] in Motion Picture Recording Mode.
- When you record still picture with [REC MODE] set to [iFrame], the picture size will be set to [ 2.1M ].
- The recording will become longer depending on the picture size.
- Please refer to page 142 for details about the number of recordable pictures.
- When the picture size is [ 4:3 ] 2.6M], [ 3:2 ] 2.8M] or [ 4:3 ] 0.3M] black bands may appear on the left and right of the screen.
- The edges of still pictures recorded on this unit with a 16:9 aspect ratio may be cut at printing. Check the printer or photo studio before printing.

Selecting the picture quality.

**[MENU]** : [PICTURE] → [QUALITY] → **desired setting**

-  : Still pictures with a high picture quality are recorded.
-  : Priority is given to the number of still pictures recorded. Still pictures are recorded in normal picture quality.

## [HI-SPEED BURST]





Recording is done continuously at the rate of 30 or 60 still pictures per second. Use this function to record an object with fast movement.

### 1 Select the menu.

**[MENU]** : [PICTURE] → [HI-SPEED BURST] → **desired setting**

- [OFF]:** Cancel the setting.
- [30 frames/sec]:** 90 still pictures are recorded continuously at the rate of 30 per second.  
The picture size is **2.1M** (1920×1080).
- [60 frames/sec]:** 180 still pictures are recorded continuously at the rate of 60 per second.  
The picture size is **0.9M** (1280×720).

### 2 Press the button.

-  flashes in red during recording.
- First press the  button halfway, then press it fully to set the focus and record. It will automatically focus if you press fully once, so it is convenient when recording objects moving back and forth.

### 3 Touch [Record] or [Delete].

[Record]: Pictures are stored.


[Delete]: All pictures are deleted.

### 4 (When [Record] is selected in step 3)

#### Touch [REC ALL] or [SELECT].



[REC ALL]: All pictures are stored.

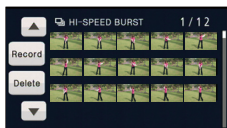[SELECT]: Pictures are stored by specifying range.



5 (When [SELECT] is selected in step 4)

**Touch the range of pictures that will be stored.**

- Previous (Next) page is displayed by touching  / .

\* Only select the picture for start point if only 1 picture is to be stored.

- A confirmation message is displayed when [Enter] is touched after selecting the start point and finish point. Touch [YES] to store the pictures.



- If you turn off the unit or change the mode, this function is canceled.
- The maximum number of times you can record on a media is 15.  
(In the case of SD cards it is the maximum number of recordable scenes per card.)
- Color balance and brightness on the screen may change with some light sources such as fluorescent lamps.
- Image quality is different from ordinary still picture recording.



## [AF ASSIST LAMP]



The Photo light is turned on to make it easier to focus when you are recording in dark places where it is hard to focus.

- **Switch to Manual Mode.** (→ 72)

**MENU** : [PICTURE] → [AF ASSIST LAMP] → [AUTO]

- Set the Photo light to  ([AUTO]) or  ([OFF]). (→ 57)

- When switching to Intelligent Auto Mode, the setting is fixed to [AUTO] and cannot be changed.
- It may not turn on when the LED light is very hot.


## [SHTR SOUND]




You can add a shutter sound when recording still pictures.

**MENU** : [PICTURE] → [SHTR SOUND] → desired setting

**[OFF]:** Cancel the setting.

 : Volume low

 : Volume high


- No shutter sound is emitted in Motion Picture Recording Mode.

# Manual recording





- The manual focus, white balance, shutter speed, brightness (Iris and Gain) settings are retained when you change between Motion Picture Recording Mode and Still Picture Recording Mode.

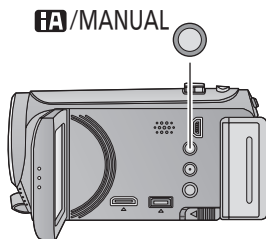Press the **iA/MANUAL** button to switch to Manual Mode.

- **MNL** appears on the screen.



## A Manual icons

-  Focus (→ 75)
-  White balance (→ 73)
-  Manual shutter speed (→ 74)
-  Iris adjustment (→ 74)



# White balance



Automatic white balance function may not reproduce natural colors depending on the scenes or lighting conditions. If so, you can adjust the white balance manually.

- Press the **iA/MANUAL** button to switch to **Manual Mode**. (→ 72)

**1** Touch **[WB]**.

**2** Touch / to select **White balance mode**.

- Select the optimal mode by confirming the color on the screen.
- Touch **[WB]** to select the mode.



Icon	Mode/Recording conditions
	<b>Auto white balance adjustment</b>
	<b>Sunny mode:</b> Outdoors under a clear sky
	<b>Cloudy mode:</b> Outdoors under cloudy sky
	<b>Indoor mode 1:</b> Incandescent light, video lights like in the studio, etc.
	<b>Indoor mode 2:</b> Color fluorescent lamps, sodium lamps in gymnasiums etc.
	<b>Manual adjustment mode:</b> <ul style="list-style-type: none"><li>• Mercury-vapor lamps, sodium lamps, some fluorescent lights</li><li>• Lights used for wedding receptions at hotels, stage spotlights in theaters</li><li>• Sunrise, sunset, etc.</li></ul>

- To return to auto setting, set to **AWB** or press the **iA/MANUAL** button again.

## ■ To set the white balance manually

**1** Select , fill the screen with a white subject.

**2** Touch and set the blinking .

- When the screen turns black instantly and the display stops flashing and then lights constantly, the setting is complete.
- If the display continues flashing, the white balance cannot be set. In this case, use other White balance modes.



- When the display flashes, the manual white balance previously adjusted is stored. Whenever recording conditions change, re-set the white balance.
- When setting both the white balance and the iris/gain, set the white balance first.
- **AWB** is not displayed on the screen when **AWB** is being set.

# Manual shutter speed/iris adjustment

---



## Shutter Speed:

Adjust it when recording fast-moving subjects.

## Iris:

Adjust it when the screen is too bright or too dark.

- Press the **iA/MANUAL** button to switch to Manual Mode. (→ 72)

**1** Touch **[SHTR]** or **[IRIS]**.

**2** Touch **[◀]/[▶]** to adjust settings.

- Touch **[SHTR]/[IRIS]** to end the adjustment.

### **[SHTR]** Shutter speed:

**1/60 to 1/8000**

- If **[AUTO SLOW SHTR]** is set to **[ON]**, the shutter speed will be set between 1/30 and 1/8000.
- The shutter speed closer to 1/8000 is faster.
- The shutter speed will be set between 1/2 and 1/2000 in Still Picture Recording Mode.

### **[IRIS]** Iris/Gain value:

**CLOSE** ↔ (**F16 to F2.0**) ↔ **OPEN** ↔ (**0dB to 18dB**)

- Value closer to **CLOSE** darkens the image.
- Value closer to **18dB** brightens the image.
- When the iris value is adjusted to brighter than **OPEN**, it changes to the gain value.
- To return to auto setting, press the **iA/MANUAL** button again.

- 
- When setting both the shutter speed and the iris/gain value, set the shutter speed and then set the iris/gain value.

## Manual shutter speed adjustment

- When the shutter speed is set lower than 1/15 in the Still Picture Recording Mode, using a tripod is recommended. Also, white balance cannot be set. The shutter speed will be set to 1/30 when the unit is turned on again or when the Quick start is performed.
- You may see a band of light around an object that is shining very bright, or highly reflective.
- During normal playback, image movement may not look smooth.
- If you record an extremely bright object or record under indoor lighting, color and screen brightness may change or a horizontal line may appear on the screen. In this case, record in the Intelligent Auto Mode or set the shutter speed to 1/60 in areas where the power supply frequency is 60 Hz, or 1/100 in areas of 50 Hz.

## Manual iris/gain adjustment

- If the gain value is increased, the noise on the screen increases.
- Depending on the zoom magnification, there are iris values that are not displayed.

# Manual focus adjustment



If auto focusing is difficult due to the conditions, then use Manual Focus.

- Press the **iA/MANUAL** button to switch to Manual Mode. (→ 72)

- 1** (When MF assist function is used)  
**Select the menu.**

**MENU** : [RECORD SETUP] → [MF ASSIST] → [ON]

- Touch to display the Manual icon.

- 2** Touch [FOCUS].

- 3** Touch [MF] to change to Manual Focus.

- MF appears on the screen.

- 4** Adjust the focus by touching  $\text{MF}^+ / \text{MF}^-$ .

$\text{MF}^+$  : To focus on a close subject

$\text{MF}^-$  : To focus on a faraway subject



- A** Part displayed in blue

The in-focus area is displayed in blue. The normal screen returns approximately 2 seconds after you finish bringing the subject into focus.

- Touch [FOCUS] to end the adjustment.
- When [MF ASSIST] is [OFF], the blue area is not displayed.
- To restore Auto Focus, touch [AF] in step 3 or press the **iA/MANUAL** button again.



- 
- The blue display does not appear on the images actually recorded.


# Playback Operations

## Motion picture playback using operation icon

VIDEO

For details on the basic playback operations, refer to page 38.

Playback operation	Playback display	Operating steps
<b>Fast forward/ rewind playback</b>	<b>During Playback</b>  	<p><b>Touch ►► during playback to fast forward.</b> (Touch ◀◀ to rewind.)</p> <ul style="list-style-type: none"> <li>The fast forward/rewind speed increases if you touch ►►/◀◀ again. (The display on the screen changes from ►► to ►►►.)</li> <li>Normal playback is restored when you touch ►  .</li> </ul>
<b>Skip playback (to the start of a scene)</b>		<p><b>During playback, touch the LCD monitor and slide quickly from right to left (from left to right) before releasing your finger.</b></p>
<b>Slow-motion playback</b>	<b>During Pause</b>  	<p><b>With the playback paused, continue touching   ►.</b> (◀   is for slow rewind playback) Playback is slow while touching.</p> <ul style="list-style-type: none"> <li>Normal playback is restored when you touch ►  .</li> <li>When slow-motion pictures are played back in reverse, they will be shown continuously at approximately 2/3<sup>rd</sup> the speed of normal playback (intervals of 0.5 seconds).</li> <li>Slow-motion playback for iFrame scenes will be in 1 second intervals.</li> </ul>
<b>Frame-by-frame playback</b> The motion picture is advanced one frame at a time.		<p><b>With the playback paused, touch   ►.</b> (Touch ◀   to advance the frames one at a time in the reverse direction.)</p> <ul style="list-style-type: none"> <li>Normal playback is restored when you touch ►  .</li> <li>When the frames are advanced one at a time in the reverse direction, they will be shown in intervals of 0.5 seconds.</li> <li>Frame-by-frame playback for iFrame scenes will be in 1 second intervals.</li> </ul>

Playback operation	Playback display	Operating steps
Direct playback	<p>During Playback</p> 	<p><b>Touch the Direct playback bar or slide it while touching.</b></p> <ul style="list-style-type: none"> <li>• The playback pauses temporarily and skips to the position touched or slid to while touching.</li> <li>• Playback will start by releasing your touching or sliding finger.</li> </ul>

## Creating still picture from motion picture

VIDEO

A single frame from the recorded motion picture can be saved as a still picture.  
 Picture size of the still picture to be recorded is **2.1M** (1920×1080).

### 1 Pause at the scene you want to save as a still picture during playback.

- It is convenient to use slow-motion playback and frame-by-frame playback.

### 2 Press the button fully.

- Date the motion picture was recorded will be registered as date of the still picture.
- Quality will be different from the normal still picture.



# Highlight & Time frame index

VIDEO

An image of one scene is displayed as a thumbnail at set search condition. Scene can be played back from any midway point of the scene you wish to see.

- Operate the zoom lever to  side and change over the thumbnail display to Highlight & Time frame index. (→ 39)

## 1 Touch .

- To display the next (previous) page:
  - Slide the thumbnail display upward (downward) while touching it.
  - Switch the Touch Menu, and then touch  (up) /  (down) on the thumbnail scroll lever.



## 2 Touch the desired search condition.

[3 SECONDS]/[6 SECONDS]/[12 SECONDS]/[MINUTES]/[FACE]\*/[HIGHLIGHT]\*

- \* It is not displayed on iFrame scenes.
- When select [FACE], it will select the portion for which face recognition was performed from the scenes judged to be clearly recorded. This will then be displayed as a thumbnail.
- A portion judged to be clearly recorded will be detected and displayed in thumbnail if you select [HIGHLIGHT].



## 3 (When [MINUTES] is selected)

Touch  /  to set the time.

- It can be set up to a maximum of 60 minutes.
- Touch [ENTER].



## 4 Touch the thumbnail to be played back.

- Next (previous) thumbnail can be displayed by touching  / .

# Repeat playback

VIDEO

Playback of the first scene starts after playback of the last scene finishes.

MENU : [VIDEO SETUP] → [REPEAT PLAY] → [ON]

The  indication appears on the full screen views.

- All the scenes are played back repeatedly. (When playing back motion pictures by date, all the scenes on the selected date are played back repeatedly.)

## Resuming the previous playback

VIDEO

If playback of a scene was stopped halfway, the playback can be resumed from where it was stopped.

**MENU** : [VIDEO SETUP] → [RESUME PLAY] → [ON]

If playback of a motion picture is stopped, **▶▶** appears on the thumbnail view of the stopped scene.

- The memorized resume position is cleared if you turn off the unit or change the mode. (The setting of [RESUME PLAY] does not change.)

## Zooming in on a still picture during playback (Playback zoom)

PHOTO

You can zoom in by touching a still picture during playback.

### 1 Touch and hold the part you wish to zoom in on during still picture playback.

- It will display enlarged in order of normal display ( $\times 1$ ) →  $\times 2$  →  $\times 4$ . Keep on touching the screen to enlarge  $\times 1$  →  $\times 2$ . Touch the screen to enlarge  $\times 2$  →  $\times 4$ .
- The still picture is zoomed in on, centering on the part you touched.

### 2 Move to the zoomed in position by touching **▲/▼/◀/▶** or slide while touching the screen.

- The location of the zoom displays for about 1 second when zooming in (zooming out) or moving the displayed location.
- The more picture is enlarged, the more its quality deteriorates.



- A** Displayed location of the zoom

### Zooming out from the zoomed still picture

Touch **🔍** to zoom out. ( $\times 4$  →  $\times 2$  →  $\times 1$ )

- Touch **1X** to return to normal playback ( $\times 1$ ).

- You can also perform zoom operations using the zoom lever.

# Various playback functions

## Playing back motion pictures/still pictures by date

VIDEO PHOTO

The scenes or the still pictures recorded on the same day can be played back in succession.

### 1 Touch the date select icon. (→ 28)





A Date select icon

### 2 Touch the playback date.

The scenes or the still pictures recorded on the date selected are displayed as thumbnails.

### 3 Touch the scene or the still picture to be played back.

- Playing back of all the scenes or the still pictures returns if the unit is turned off or the mode is changed.
- Even if AVCHD scenes are recorded on the same day, they are grouped separately when the number of scenes exceeds 99. -1, -2... are added after the date displayed on the date list.
- Even if iFrame scenes are recorded on the same day, they are grouped separately in the following cases.
  - When the number of scenes exceeds 99
  - When [NUMBER RESET] is performed
- Even if still pictures are recorded on the same day, they are grouped separately in the following cases.
  - When the number of still pictures exceeds 999
  - When pictures are recorded in Hi-Speed Burst Shooting mode (  is indicated after the date in the list by date).
  - When [NUMBER RESET] is performed
-  is displayed after the date in the list by date for the still pictures created from the motion picture. (→ 77)



# Highlight Playback

VIDEO

Part that was recognized as clearly recorded is extracted from a long recording, and it can be played back in a short time with effects and music added.

- **Highlight playback cannot be used for iFrame scenes.**

## 1 Touch . (→ 28)



## 2 (Only when you would like to change the settings) Touch [SET] to select the item to change.

[SCENE SETUP]:	Select the scene or date to be played back.
[PRIORITY SETUP]:	Select the target to give priority to playback. (→ 82)
[PLAYBACK TIME]:	Select the time to play back. (→ 82)
[EFFECT SETUP]:	Select the effect for playback. (→ 82)
[MUSIC SELECT]:	Select the music to be played on playback. (→ 83)

## 3 Touch [START].

- When the [SCENE SETUP] is not changed in step 2, it will play back with the last recorded date.

## 4 Select the playback operation. (→ 38, 76)

- When the playback is finished or stopped, the screen to select [REPLAY], [SELECT AGAIN] or [EXIT] is displayed. Touch the desired item.

- Playing back of all the scenes returns if the unit is turned off or the mode is changed.
- Slow-motion playback, frame-by-frame playback, and direct playback bar operation are not possible.
- Highlight playback cannot be used for recovered scenes. (→ 127)

### ■ Scene setting

#### 1 Touch [SELECT SCENES] or [SELECT DATE].

#### 2 (When [SELECT SCENES] is selected)

**Touch the scenes to be played back.**



- Up to 99 scenes can be selected in succession.
- When touched, the scene is selected and ✓ is displayed. Touch the scene again to cancel the operation.

(When [SELECT DATE] is selected)

**Touch the date to be played back.**

- A maximum of 7 days can be selected.
- When touched, the date is selected and surrounded by red. Touch the date again to cancel the operation.

#### 3 Touch [Enter]/[ENTER].

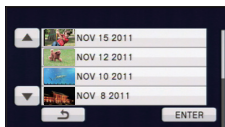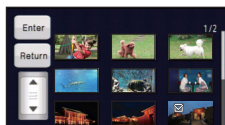

## ■ Priority setting


### 1 Touch [FACE] or [FACE RECOG.].

- If you touch [FACE], any detected face, including the face of person registered for Face Recognition, is given priority on playback.

### 2 (When [FACE RECOG.] is selected)

#### Touch a face to specify.


- You can specify up to 6 faces, which are to be played back in priority.
- When touched, the registered face is selected and surrounded by red. Touch the registered face again to cancel the operation.
- Touch [ENTER]. When a single face is specified, the name registered for that face is displayed. When multiple faces are specified, the number of faces is displayed.

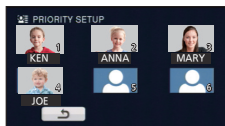

## ■ Playback time setting

### Touch the playback time.

- The playback time of [AUTO] is a maximum of approx. 5 minutes.
- Playback time may become shorter than the setting, or it may not even play back if the part recognized as clearly recorded is short.

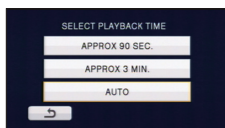


## ■ Effect setting

Effects such as fade, slow-motion, still (pause), or digest playback are inserted.

### 1 Touch the desired effect.

[POP]:	Recommended for party scenes.
[CLASSICAL]:	Recommended for slow moving scene.
[NATURAL]:	Recommended for scenery.
[DYNAMIC]:	Recommended for fast moving scene such as sports scenes.
[NONE]:	Effect is off.

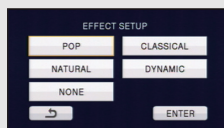


- When the effect setting is changed, music setting will be set the same as the effect setting. (To set the effect setting and music setting to different settings, change the music setting after setting the effect setting.)

### 2 Touch [ENTER].

## ■ Music setting

### 1 Touch your favorite music.

- When [EFFECT SETUP] is set to [NONE], you will be able to select [NO MUSIC]. When [NO MUSIC] is selected, the audio recorded at the time of shooting is played back.
- To adjust the volume of music during playback or audio testing, operate the volume lever. (→ 40)

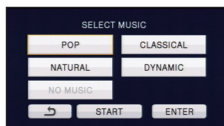

### 2 Touch [ENTER].

#### To test the music audio


##### Touch [START].

- Touch the other music option to change the music to be tested.
- When you touch [STOP], the music playback stops.

## Changing the playback settings and playing back the slide show

PHOTO


### 1 Touch . (→ 28)

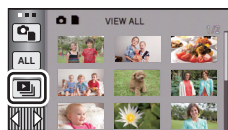

### 2 (Only when you would like to change the settings) Touch [SET] to select the item to change.

- [DATE SETUP]: Select the date to be played back.
- [EFFECT SETUP]: Select the effect for playback.
- [SLIDE INTERVAL]: Selects the interval between still pictures at playback.
- [MUSIC SELECT]: Select the music to be played on playback.


### 3 (When [DATE SETUP] is selected) Touch the playback date.

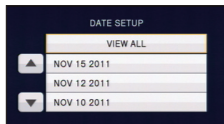

(When [EFFECT SETUP] is selected)

#### Touch the desired effect.

- When the effect setting is changed, music setting will be set the same as the effect setting. (To set the effect setting and music setting to different settings, change the music setting after setting the effect setting.)
- [SLIDE INTERVAL] cannot be set, when [EFFECT SETUP] is set.

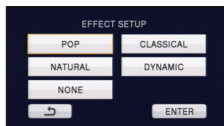

(When [SLIDE INTERVAL] is selected)

**Touch the interval of playback for the slide show.**

- [SHORT]:                      Approx. 1 second  
[NORMAL]:                    Approx. 5 seconds  
[LONG]:                        Approx. 15 seconds

(When [MUSIC SELECT] is selected)

**Touch the desired sound.**

- To adjust the volume of music during playback of the slide show or audio testing, operate the volume lever. (→ 40)
- Touch [ENTER].

(To test the music audio)


**Touch [START] and start the audio testing.**

- Touch the other music option to change the music to be tested.
- When you touch [STOP], the music playback stops.

#### **4 Touch [START].**

#### **5 Select the playback operation. (→ 38)**

- When the playback is finished or stopped, the screen to select [REPLAY], [SELECT AGAIN] or [EXIT] is displayed. Touch the desired item.

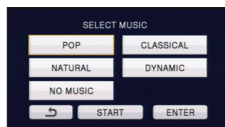


# Deleting scenes/still pictures

VIDEO PHOTO

Deleted scenes/still pictures cannot be restored, so perform appropriate confirmation of the contents before proceeding with deletion.

◇ Change the mode to  .

■ To delete the scene or still picture being played back

Touch  while scenes or still pictures to be deleted are being played back.




■ To delete scenes or still pictures from the thumbnail display

• Switch to the thumbnail display of the scenes or still pictures to delete. (→ 38)

**1** Touch  . (→ 28)

- When the thumbnail display is 1 scene display or Highlight & Time frame index, the scene or still picture being displayed is deleted.

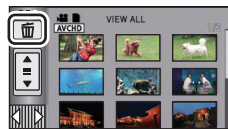


**2** Touch [ALL SCENES], [MULTI] or [SINGLE].

- All the scenes or still pictures displayed as thumbnails will be deleted by selecting [ALL SCENES].


(In case of playing back scenes or still pictures by date, all the scenes or still pictures on the selected date will be deleted.)

- Protected scenes/still pictures cannot be deleted.

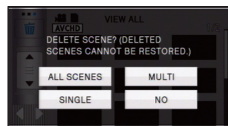

**3** (When [MULTI] is selected in step 2)

**Touch the scene/still picture to be deleted.**

- When touched, the scene/still picture is selected and the  indication appears on the thumbnail. Touch the scene/still picture again to cancel the operation.
- Up to 99 scenes can be selected to be deleted.

(When [SINGLE] is selected in step 2)

**Touch the scene/still picture to be deleted.**

- Touched scene or still picture is deleted.

**4** (When [MULTI] is selected in step 2)

**Touch [Delete].**

- To continuously delete other scenes/still pictures, repeat steps 3-4.


### When you stop deleting halfway

Touch [CANCEL] while deleting.

- The scenes or still pictures that have already been deleted when the deletion is canceled cannot be restored.

### To complete editing

Touch [Return].


- You can also delete scenes by touching [MENU], selecting [EDIT SCENE] → [DELETE] → [ALL SCENES], [MULTI] or [SINGLE].
- You can also delete still pictures by touching [MENU], selecting [PICT. SETUP] → [DELETE] → [ALL SCENES], [MULTI] or [SINGLE].
- During Highlight Playback or Disc Playback when connected to a DVD burner (optional), scenes/still pictures cannot be deleted.
- Scenes that cannot be played back (the thumbnails are displayed as ) cannot be deleted.
- In case of [ALL SCENES], the deletion may take time if there are many scenes or still pictures.
- If you delete scenes recorded on other products or still pictures conforming to DCF standard with this unit, all the data related to the scenes/still pictures may be deleted.
- When still pictures recorded on an SD card by other products are deleted, a still picture (other than JPEG) that cannot be played back on this unit may be erased.

## Dividing a scene (AVCHD)

VIDEO

It is possible to divide an AVCHD scene.

Any unwanted parts in the scene can be deleted after dividing.

- **Change the mode to  and touch the play mode select icon. Then set [VIDEO/PICTURE] to [AVCHD]. (→ 38)**

### 1 Select the menu.

**MENU** : [EDIT SCENE] → [DIVIDE] → [SET]

### 2 Touch the scene to be divided.

### 3 Touch to set the dividing point.

- Using slow-motion playback or frame-by-frame playback makes it easy to search for the point where you want to divide the scene. (→ 76)
- Touch [YES] to continue dividing the same scene. To continue dividing other scenes, touch [NO] and repeat steps 2-3.



### 4 Touch [Return] to complete dividing.

- Unwanted parts can be deleted. (→ 85)

### To delete all the divided points

**MENU** : [EDIT SCENE] → [DIVIDE] → [CANCEL ALL]

- The scenes that were deleted after division cannot be recovered.

- You cannot divide a scene if you are playing back a disc with a DVD burner (optional) connected, or if the number of scenes of a given date would exceed 99 scenes.
- It may not be possible to divide scenes with a short recording time.
- Data that has been recorded or edited on another device cannot be divided and the divided points cannot be deleted.
- If personal information in the divided scenes is deleted, the personal information is deleted when the divided scenes are canceled.


## Dividing a scene to partially delete (iFrame)

VIDEO


Divide the iFrame scene, and delete unnecessary parts.

This divides the recorded scenes in two and deletes the front half or back half.

**The scenes that were deleted after division cannot be recovered.**

- Change the mode to  and touch the play mode select icon. Then set [VIDEO/PICTURE] to [iFrame]. (→ 38)


### 1 Select the menu.

 : [EDIT SCENE] → [SPLIT&DELETE]

### 2 Touch the scene to be divided.

### 3 Touch to set the dividing point.

- Using slow-motion playback or frame-by-frame playback makes it easy to search for the point where you want to divide the scene. (→ 76)
- Set the dividing point so there will be 2 seconds or more for the part for deletion, and 3 seconds or more for the part to be kept.

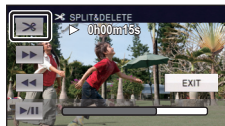

### 4 Touch the part for deletion.

### 5 Touch [YES] and confirm (play back) the part for deletion.

- When [NO] is touched, a confirmation message appears. Proceed to step 7.

### 6 Stop the playback.

- A confirmation message appears.

### 7 Touch [YES].

- To continue dividing and deleting other scenes, repeat steps 2-7.

#### To complete editing


Touch [Return].

- It may not be possible to divide scenes with a short recording time.
- The actual division may slightly slip off the previously designated dividing point.

## Deleting personal information

VIDEO






Deletes face recognition information from scenes in which faces were recognized.

- Change the mode to  and touch the play mode select icon. Then set [VIDEO/PICTURE] to [AVCHD]. (→ 38)
- Personal information is not recorded in the iFrame scenes.

### 1 Select the menu.

 : [VIDEO SETUP] → [DELETE PERSONAL INFO]

### 2 Touch the desired scenes with personal information to be deleted.

-  appears at scenes for which faces were recognized. Touch one of the scenes where  appears.
-  will change to  (red) when touched. Touch the  (red) again to cancel the operation.
- Up to 99 scenes can be selected in succession.

### 3 Touch [Delete].

- To continuously delete other personal information, repeat steps 2-3.
- Touch [Return] to complete the settings.

#### *When you stop deleting halfway*

Touch [CANCEL] while deleting personal information.

- The personal information that has already been deleted when the deletion is canceled cannot be restored.


- During Disc Playback when connected to a DVD burner (optional), scenes/still pictures cannot be deleted.

## Protecting scenes/still pictures


VIDEO PHOTO

Scenes/still pictures can be protected so that they are not deleted by mistake.


**(Even if you protect some scenes/still pictures, formatting the media will delete them.)**

- Change the mode to  .

### 1 Select the menu.

 : [VIDEO SETUP] or [PICT. SETUP] → [SCENE PROTECT]

### 2 Touch the scene/still picture to be protected.

- When touched, the scene/still picture is selected and the  indication appears on the thumbnail. Touch the scene/still picture again to cancel the operation.
- Touch [Return] to complete the settings.


- When the disc playback is selected while a DVD burner (optional) is connected, scenes/still pictures cannot be protected.



# DPOF setting

PHOTO


You can write the data selecting still pictures to be printed and the number of prints (DPOF data) onto the SD card. (Copy still pictures recorded to the built-in memory or HDD to the SD card before setting DPOF.)

- Change the mode to  and touch the play mode select icon. Then set [MEDIA] to [SD CARD] and set [VIDEO/PICTURE] to [PICTURE]. (→ 38)

## ■ What is DPOF?

DPOF (Digital Print Order Format) is a format which allows the user of a digital camera to define which captured images on the SD card are to be printed, together with information on the number of copies they wish to print. (Please note: Not all commercial printing services support this feature at this time.)

### 1 Select the menu.

 : [PICT. SETUP] → [DPOF SET] → [SET]

### 2 Touch the still picture to be set.

### 3 Touch / to set the number of prints.

- Up to 999 prints can be selected. (Prints for set number can be printed with a printer that supports DPOF.)
- To cancel the setting, set the number of prints to [0].



### 4 Touch [ENTER].

- To continuously set other still pictures, repeat steps 2-4.
- Touch [Return] to complete the settings.

### To cancel all DPOF settings

 : [PICT. SETUP] → [DPOF SET] → [CANCEL ALL]


- When the disc playback is selected while a DVD burner (optional) is connected, scenes/still pictures cannot be set DPOF.
- You cannot add the recording date to pictures to be printed with the DPOF settings.

# Relay scene combining [HDC-TM80]


VIDEO

You can combine the relayed scene (→ 62) in the built-in memory and the continued scene in the SD card to be one into the SD card.

## Relay-recorded scene

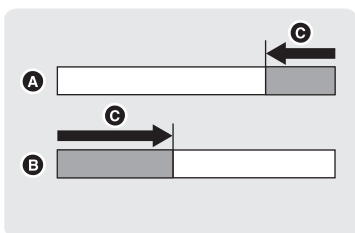

## Relay scene combining

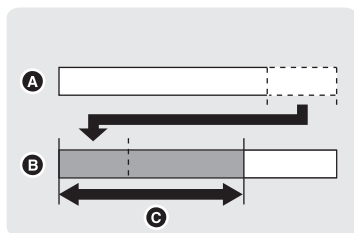

- A** Built-in memory
- B** SD card
- C** Range of Relay recording

- Change the mode to and touch the play mode select icon. Then set [VIDEO/PICTURE] to [AVCHD]. (→ 38)

**1** Insert the SD card that was used for Relay recording.

**2** Select the menu.

**MENU** : [EDIT SCENE] → [RELAY SCENE COMBINE]

**3** When the confirmation message appears, touch [YES].

- Scene in the built-in memory will be deleted. (Protected scenes in the built-in memory are not deleted.)

**4** Touch [EXIT] when the relay scene combining complete message is displayed.

- The thumbnail view of the SD card is indicated.
- Relay recording information will be deleted when the relay scenes are combined, and Relay recording will be possible again.
- When the relayed scenes in the built-in memory or SD card are deleted, combining of the relayed scenes will not be possible.

## To cancel relay information

**MENU** : [EDIT SCENE] → [RELAY INFO CANCEL]

- When the relay information is canceled, combining of the relayed scenes will not be possible anymore.

Combining of the relay scene cannot be performed if the available space on the SD card is less than the volume of the relayed scene in the built-in memory. It is recommended to combine the relay scene using a DVD burner or the HD Writer AE 3.0.


- When the disc playback is selected while a DVD burner (optional) is connected, you cannot combine relay scenes or cancel relay information.
- The personal information of the relayed scene in the built-in memory or SD card is deleted, the personal information of the combined relay scene is deleted.

# Watching Video/Pictures on your TV

VIDEO PHOTO


Confirm the terminals on your TV and use a cable compatible with the terminals. Image quality may vary with the connected terminals.

- A** High quality
- 1** HDMI terminal
- 2** Component terminal
- terminal
- 3** Video terminal



- Use the AV multi cable (supplied) or HDMI mini cable (optional) and check the output settings. (→ 95)
- HDMI is the interface for digital devices. If you connect this unit to a HDMI compatible high definition TV and then play back the recorded high definition images, you can enjoy them in high resolution with high quality sound.

## 1 Connect this unit to a TV.

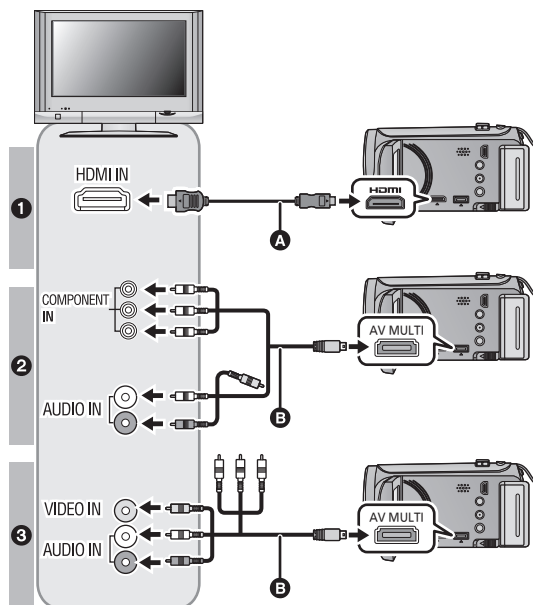

- A** HDMI mini cable (optional)
- Be sure to connect to the HDMI terminal.
- B** AV multi cable (supplied)

### Picture quality

- 1** High definition images when connecting to HDMI terminal
- 2** High definition images when connecting to component terminal compatible with 1080i Standard images when connecting to component terminal compatible with 480i
- 3** Standard images when connecting to video terminal

- Check that the plugs are inserted as far as they go.
- Always use a genuine Panasonic HDMI mini cable (RP-CDHM15, RP-CDHM30; optional).
- Do not use any other AV multi cables except the supplied one.
- When connecting to the component terminal of the TV, the yellow plug of the AV multi cable is not required.
- When connecting to the AV terminal of the TV, do not connect the component terminal plug of the AV multi cable. Image may not display when the component terminal plug is connected simultaneously.

## 2 Select the video input on the TV.

- Example:  
Select the [HDMI] channel with a HDMI mini cable.  
Select the [Component] or [Video 2] channel with an AV multi cable.  
(The name of the channel may differ depending on the connected TV.)
- Check the input setting (input switch) and the audio input setting on the TV. (For more information, please read the operating instructions for the TV.)

## 3 Change the mode to to play back.

Cables	Reference items
<b>A</b> HDMI mini cable (optional)	<ul style="list-style-type: none"> <li>• Connecting with a HDMI mini cable (→ 95)</li> <li>• Playback using VIERA Link™ (→ 96)</li> </ul>
<b>B</b> AV multi cable (supplied)	<ul style="list-style-type: none"> <li>• Connecting with the AV multi cable (→ 95)</li> </ul>



- When the AV multi cable is connected to this unit, the setup screen of the AV multi destination is displayed on the screen of this unit. Touch either [COMPONENT] or [AV OUT] in accordance with the terminal connecting to the TV. (→ 95)
- If the HDMI mini cable and AV multi cable are connected at the same time, output will be prioritized in order of the HDMI mini cable, AV multi cable.

■ **To watch images on a regular TV (4:3) or when both sides of the images do not appear on the screen**

Change the menu setting to display the images correctly. (Check the TV setting.)

**MENU** : [SETUP] → [TV ASPECT] → [4:3]

**Example of images with a [16:9] aspect ratio on a regular TV (4:3)**

[TV ASPECT] setting	
[16:9]	[4:3]
	

- If a wide-screen TV is connected, adjust the aspect setting on the TV. (Refer to the operating instructions of the TV for details.)

■ **To display the on-screen information on the TV**

When the menu setting is changed, the information displayed on the screen (operation icon and time code etc.) can be displayed/not displayed on the TV.

**MENU** : [SETUP] → [EXT. DISPLAY] → **desired setting**

[OFF]:

Not displayed

[SIMPLE]\*:

Information partially displayed

[DETAIL]:

All information displayed

- \* This setting is only available in Recording Mode.

**Refer to the following support site for information about Panasonic TVs with an SD card slot for playing back your pictures.**

<http://panasonic.net/>

- iFrame scenes cannot be played back on a TV.
- For details on how to play back, please read the operating instructions for the TV.

## Connecting with a HDMI mini cable

---

Select the desired method of HDMI output.

**MENU** : [SETUP] → [HDMI RESOLUTION] → [AUTO]/[1080i]/[480p]

- [AUTO] determines the output resolution automatically based on information from the connected TV.  
If the images are not output on the TV when the setting is [AUTO], switch to the method [1080i] or [480p] which enables the images to be displayed on your TV. (Please read the operating instructions for the TV.)

## Connecting with the AV multi cable

---

AV multi connector output setting can be changed.

**MENU** : [SETUP] → [AV MULTI] → **desired setting**

**[COMPONENT]:** When connecting to the component terminal

**[AV OUT]:** When connecting to the video terminal

### *Changing the component output setting*

**MENU** : [SETUP] → [COMPONENT OUT] → **desired setting**

**[480i]:** When connecting to the component terminal on the TV compatible with 480i. (Playback is in standard quality.)

**[1080i]:** When connecting to the component terminal on the TV compatible with 1080i. (Playback is in high definition quality.)

# Playback using VIERA Link™

VIDEO PHOTO

## What is the VIERA Link (HDAVI Control™)?

- VIERA Link™ is a new name for EZ Sync™.
- This function allows you to use your remote control for the Panasonic TV for easy operations when this unit has been connected to a VIERA Link compatible device using a HDMI mini cable (optional) for automatic linked operations. (Not all operations are possible.)
- VIERA Link is a unique Panasonic function built on a HDMI control function using the standard HDMI CEC (Consumer Electronics Control) specification. Linked operations with HDMI CEC compatible devices made by other companies are not guaranteed. When using devices made by other companies that are compatible with VIERA Link, refer to the operating instructions for the respective devices.
- This unit is compatible with VIERA Link Ver.5. VIERA Link Ver.5 is the newest Panasonic version and is also compatible with existing Panasonic VIERA Link devices. (As of Dec. 2010)


◇ Change the mode to  .

## 1 Select the menu.

 : [SETUP] → [VIERA Link] → [ON]

- If you are not using VIERA Link, set to [OFF].


## 2 Connect this unit to a Panasonic TV compatible with VIERA Link with a HDMI mini cable.

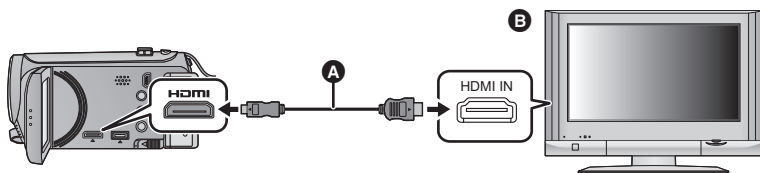

- A** HDMI mini cable (optional)
- B** Panasonic TV compatible with VIERA Link
- It is recommended to connect this unit to an HDMI terminal other than the HDMI1 if there are 2 or more HDMI input terminals on the TV.
- VIERA Link must be activated on the connected TV. (Read the operating instructions of the TV for how to set etc.)
- Always use a genuine Panasonic HDMI mini cable (RP-CDHM15, RP-CDHM30; optional).



### 3 Operate with the remote control for the TV.

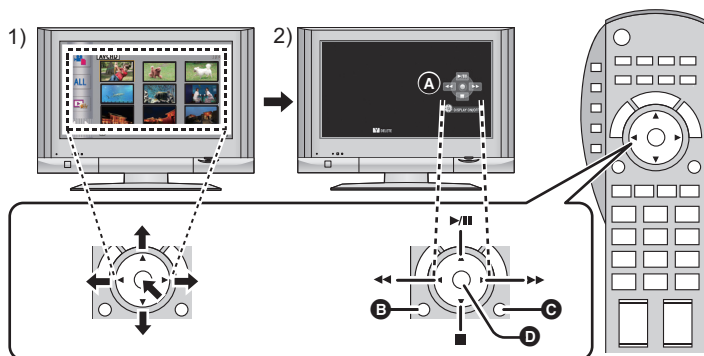

- 1) Press the button up, down, left or right to select a scene or still picture to be played back, and then press the button in the center to set it.
- 2) Activate the operation icons that are displayed on TV screen with the remote control for the TV.

**A** Operation icons

**B** Display operation icons

**C** Cancel operation icons

**D** Display/Cancel operation icons

- The following operations are available by pressing the color buttons on the remote control.
  - Green: Switching the number of scenes/still pictures in thumbnail display (9 thumbnails → 20 thumbnails → 9 thumbnails...)
  - Zoom in on still picture
  - Yellow: Deleting scenes/still pictures
  - Red: Zoom out from still picture

#### ■ Other linked operations

##### Turning the unit off:

If you use the remote control for the TV to turn off the power, this unit also turns off.

##### Automatic input switching:

If you connect with a HDMI mini cable and then turn on this unit, the input channel on the TV automatically switches to this unit's screen. If the TV's power is in standby status, it will turn on automatically (if [Set] has been selected for the TV's [Power on link] setting).

- Depending on the HDMI terminal on the TV, the input channel may not switch automatically. In this case, use the remote control for the TV to switch the input channel.

- 
- If you are unsure whether or not the TV and AV amplifier you are using are compatible with VIERA Link, read the operating instructions for the devices.
  - Available linked operations between this unit and a Panasonic TV is different depending on the types of Panasonic TVs even if they are compatible with VIERA Link. Refer to the operating instructions of the TV for the operations that support on the TV.
  - Operation is not possible with a cable that is not based on the HDMI standard.

# Copying between SD card and Built-in Memory/HDD [HDC-TM80/HDC-HS80]

VIDEO PHOTO

Motion pictures or still pictures recorded with this unit can be copied between an SD card inserted in this unit and a built-in memory/HDD.

## ■ Check the used space of the copy destination

It is possible to check the used space of the SD card, built-in memory or HDD by [MEDIA STATUS] (→ 48).

- By displaying in 1 scene or pressing and holding the thumbnail in the 20 scenes or 9 scenes display, recording date and time are displayed when playing back motion pictures, and recording date and file number when playing back still pictures.
- Depending on the media condition, some remaining capacity of the SD card, built-in memory or HDD may not be used.
- If the remaining capacity on a single SD card is not enough, you can copy to multiple SD cards following the instruction on the screen. In this case, the last scene copied to an SD card is automatically divided to fit the space on the SD card.
- If you divide the scenes (→ 86), and copy by scene selection, it is possible to copy matching the remaining capacity of the media, or only the necessary parts.

## Copying

- If there is not much remaining capacity in the SD card, a confirmation message asking to copy after deleting all data on the SD card is displayed. Be aware that deleted data cannot be restored.
- Refer to page 99 for approximate time for copying.

### 1 Change the mode to .

- Use a sufficiently charged battery or the AC adaptor.

### 2 Select the menu.

**MENU** : [COPY]

HDC-TM80



When copying from the built-in memory to the SD card



When copying from the SD card to the built-in memory

- When there are relay recorded scenes in the built-in memory, a message appears on the screen. Touch [YES] and copy after combining relay recorded scenes to the SD card. (→ 90)

HDC-HS80





When copying from the HDD to the SD card



When copying from the SD card to the HDD

### 3 Touch desired items following the screen display.

- It will return to the previous step by touching .
- (When [SELECT SCENES] is selected)  
When touched, the scene/still picture is selected and the  indication appears on the thumbnail. Touch the scene/still picture again to cancel the operation.
- (When [SELECT DATE] is selected)  
When touched, the date is selected and surrounded by red. Touch the date again to cancel the operation.
- Up to 99 scenes/still pictures or 99 dates can be set in succession.
- If 2 or more SD cards are necessary to copy, change the card following the instructions on the screen.

### 4 Touch [EXIT] when the copy complete message is displayed.

- The thumbnail view of the copy destination is indicated.


#### **When you stop copying halfway**

Touch [CANCEL] while copying.

#### **Approximate time for copying**

**When copying a recorded motion picture of full 4 GB size:**

5 minutes to 15 minutes

**To copy approx. 600 MB still pictures (Picture size ):**

3 minutes to 5 minutes

**If you wish to delete the motion pictures or still pictures after copying is complete, be sure to play back the motion pictures or still pictures before deleting them to check that they have been copied.**

- When the disc playback is selected while a DVD burner (optional) is connected, menus are not displayed.
- The time it takes for copying may be longer, depending on the following conditions:
  - The number of recorded scenes is large.
  - The temperature of the unit is high.
- If some motion pictures or still pictures have already been recorded to the copy destination, then the same date may be assigned or images may not display by date when the list by date is selected.
- Motion pictures that have been recorded on another device may not be copied. Data recorded on a PC with HD Writer AE 3.0, etc. cannot be copied.
- Protection and DPOF settings will be cleared on the copied motion pictures and still pictures when copying motion pictures and still pictures with protection and DPOF settings.
- The order in which the scenes or still pictures were copied cannot be changed.

# Connecting a DVD burner to copy to/ play back a disc

VIDEO PHOTO








Motion pictures or still pictures recorded with this unit can be copied to a DVD disc by connecting a DVD burner (optional) to this unit using a USB Connection Cable (supplied with DVD burner). The copied DVD disc can also be played back.

- Please read the operating instructions of the DVD burner for how to use it.
- iFrame scenes cannot be copied to disc. Copy to PC to make a backup. (→ 110)

## Preparing for copying/playing back

**We recommend using Panasonic DVD burner VW-BN01.**

### ■ About discs that can be used for copying

Disc type	DVD-RAM 	DVD-RW  / +RW 	DVD-R  / DVD-R DL  / +R  / +R DL 
Copy* <sup>1</sup>	○	○	○
Additional copy* <sup>2</sup>	○	—	—
Format* <sup>3</sup>	○	○	—

\*1 Use a new disc. You can additionally copy only to a DVD-RAM. When you copy to DVD-RW, DVD-R, DVD-R DL, +RW, +R or +R DL, the disc is automatically finalized to allow playback on other devices but any additional copying will not be possible.

\*2 Only DVD-RAM copied with the DVD burner or HD Writer AE 3.0 can make additional copies.

\*3 Connect this unit and a DVD burner before formatting. If you format a used disc, you can copy on that disc. Please be aware that if a disc is formatted, then all the data recorded on the disc will be erased. (→ 105)


- We recommend using the discs that have been recommended in the operating instructions of the DVD burner. Refer to the operating instructions of the DVD burner for details about recommended discs, disc handling etc.

# 1 Connect the AC adaptor (supplied with DVD burner) to the DVD burner.

- You cannot supply power to the DVD burner from this unit.

# 2 Connect this unit to the AC adaptor and change the mode to .

# 3 Connect this unit to the DVD burner with the USB Connection Cable (supplied with DVD burner).

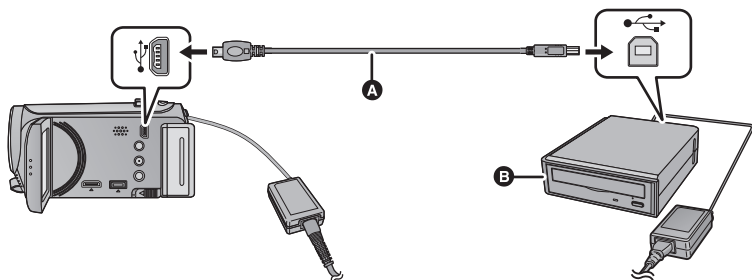

**A** USB Connection Cable (supplied with DVD burner)

**B** DVD burner (optional)

- Insert the plugs as far as they will go.

# 4 Insert the disc in the DVD burner.

- Insert the DVD disc with the recording side down when using the DVD burner.


# 5 Touch the desired item.

## [BURN DISC]:

Refer to page 102 for how to copy discs.

## [PLAY DISC]:

Refer to page 104 for how to play back the copied discs.

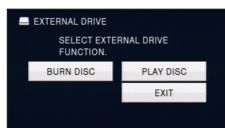

## *To terminate the connection with the DVD burner*

Touch [EXIT].

- Disconnect the USB Connection Cable from this unit.

# Copying to discs



---

- You cannot copy from multiple SD cards to 1 disc. (You can additionally copy only to a DVD-RAM.)
- You cannot copy motion pictures together with still pictures or motion pictures in a different picture quality (AVCHD picture quality and conventional normal picture quality) to the same disc.
- iFrame scenes cannot be copied to disc. Copy to PC to make a backup. (→ 110)
- **HDC-TM80**  
When copying a scene in the built-in memory to a disc that includes a scene that was relay-recorded, the continued scene that is on the SD card will be copied together to the disc.

**1** Connect this unit to the DVD burner to prepare for copying. (→ 100)

**2** Touch [BURN DISC].

**3** Touch the desired items following the instructions on the screen.

- It will return to the previous step by touching .
- (When [SELECT SCENES] is selected)  
When touched, the scene/still picture is selected and the  indication appears on the thumbnail. Touch the scene/still picture again to cancel the operation.
- (When [SELECT DATE] is selected)  
When touched, the date is selected and surrounded by red. Touch the date again to cancel the operation.
- Up to 99 scenes/99 dates can be selected in succession.

**4** Touch [START].

- When 2 or more discs are necessary for copying, follow the on-screen instructions to switch discs.
- You may need more discs than displayed number of discs when you are copying additionally to a used DVD-RAM.
- Eject the disc after copying is completed.
- When the copied disc is played back on another device and the list of scenes is displayed, they are ordered by date.

## ■ About recording formats when copying motion pictures

### [High Definition]:

The images recorded in high definition picture quality with this unit are copied as they are.

### [Standard] ([XP]/[SP]):

Images are converted into the original standard picture quality and then copied.

- Since [XP] has a higher picture quality compared to [SP], the data capacity becomes large so that you may need more discs for copying than [SP].

**Before you delete the data on the media after copying is complete, be sure to play back the discs to check that they have been copied to correctly. (→ 104)**

## Important Notice

- When connecting an optional DVD burner and this unit for copying a disc, do not insert a disc with recorded motion pictures in high definition picture quality into devices that do not support the AVCHD format. In some cases the disc may get stuck in the device. The disc will not play back on devices that do not support the AVCHD format.
- When inserting a disc containing recorded motion/still pictures into other devices, a message prompting you to format the disc may be displayed. Do not format the disc, since deleted data cannot be restored later.

## Approximate time for copying to a disc

To copy motion pictures to the full capacity of a disc

Disc type	Copy time		
	[AVCHD]	[Standard] ([XP])	[Standard] ([SP])
DVD-RAM	Approx. 50 min to 1 h 20 min	Approx. 1 h 30 min to 2 h 30 min	Approx. 3 h to 5 h
DVD-RW <sup>*</sup> / +RW <sup>*</sup>	Approx. 35 min to 1 h 15 min		
DVD-R <sup>*</sup> /+R <sup>*</sup>	Approx. 15 min to 45 min		

\* Even if the data capacity to be copied is small, the time it takes for copying may be about the same as the time shown in the table.

- When copying motion pictures in standard picture quality to a disc, the recordable time of [Standard] ([XP]) is approx. 1 hour and that of [Standard] ([SP]) is approx. 2 hours.

To copy approx. 600 MB still pictures (picture size  $\boxed{3M}$ )

Disc type	Copy time
DVD-RAM/DVD-RW/DVD-R/+RW/+R	Approx. 10 min to 30 min


- Copy time of DVD-R DL/+R DL is approximately 2 to 3 times that of DVD-R/+R.
- Depending on the following conditions or discs, the time it takes for copying may be longer than the above times. Wait until the end of copying is displayed.
  - When the number of recorded scenes is large
  - When the temperature of the DVD burner has become high

- 
- **The disc that was copied to can be played back by connecting this unit and a DVD burner.**
  - Do not turn off this unit or the DVD burner or disconnect the USB Connection Cable while copying. Also, do not shake this unit or the DVD burner.
  - It is impossible to stop copying halfway.
  - The order in which the scenes were copied cannot be changed.
  - Data that has been recorded on another device may not be copied.
  - When 2 or more discs are necessary for copying, the last scene copied to a disc is automatically divided to fit the space on the disc.
  - Copying may complete with more or less than the number of discs displayed when dividing of scenes was performed automatically etc.
  - For discs being copied using [Standard] ([XP])/[Standard] ([SP]), you cannot select Highlight Playback and [HIGHLIGHT] or [FACE] of Highlight & Time Frame Index.
  - The remaining copy time displayed while copying is the approximate time for a single disc.

## Playing back the copied disc

---

- **Only discs that have been copied by connecting this unit to the DVD burner or created with HD Writer AE 3.0 can be played back.**

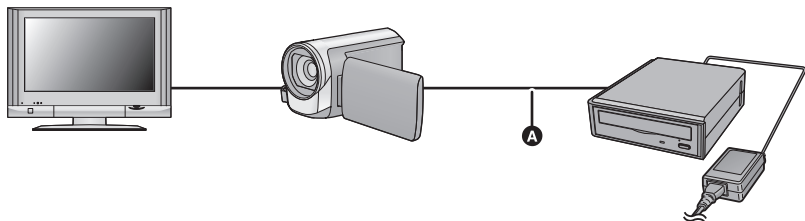


- **A** USB Connection Cable (supplied with DVD burner)

### **1 Connect this unit to the DVD burner to prepare for playback. (→ 100)**

- When playing back on a TV, connect this unit to the TV. (→ 92)

### **2 Touch the scene or still picture to be played back and then play it back.**

- The playback operation is performed the same as when playing back motion pictures or still pictures. (→ 38, 76)
- It will return to Step 5 on page 101 when  is selected in the thumbnail screen.

- 
- It is also possible to switch the media to play back by touching the play mode select icon. When the DVD burner is connected, [DISC] can be selected in [MEDIA] ([VIDEO] or [PICTURE]) can be selected in [VIDEO/PICTURE])



# Managing the copied disc

- Connect this unit to the DVD burner and then touch [PLAY DISC]. (→ 101)

## ■ Formatting discs

This is for initializing DVD-RAM, DVD-RW and +RW discs.

**Please be aware that if a disc is formatted, then all the data recorded on the disc will be erased. Back up important data on a PC etc.**

**MENU** : [DISC SETUP] → [FORMAT DISC]

- When formatting is complete, touch [EXIT] to exit the message screen.

- Connect this unit and the DVD burner to format discs.

You may no longer be able to use the discs if you format them on another device such as a PC etc.

## ■ Auto protect

You can protect (write protect) a DVD-RAM disc when copying motion pictures in high definition picture quality or DVD-RW disc when copying motion pictures or still pictures in high definition picture quality to the disc.

### 1 Select the menu.

**MENU** : [DISC SETUP] → [AUTO PROTECT] → [ON]

- If a disc that you copied to is inserted in another device without protecting it, a message may be displayed prompting you to format the disc. We recommend setting [AUTO PROTECT] to [ON] in order to prevent accidental deletion.

### 2 Copy to the disc. (→ 102)

- After copying, the disc is write-protected.

*To release the disc protection*

**MENU** : [DISC SETUP] → [CANCEL PROTECT]

- Touch [EXIT] and close the message screen after the auto protection is released.

## ■ Displaying disc information

Information, such as the type of recorded disc, the number of recorded scenes and whether or not the disc is finalized is displayed.




**MENU** : [DISC SETUP] → [DISC STATUS]

- Touch [EXIT] to exit the information screen.

# Dubbing with a Blu-ray disc recorder, video, etc.

## ■ Check before dubbing

Check the equipment used for dubbing.

Equipment used for dubbing	Dubbing picture quality	To dub
Equipment with SD card slot	<b>High-definition picture quality*</b>	Insert the SD card directly (→ 107) 
Equipment with USB terminal	<b>High-definition picture quality*</b>	Connect with supplied USB cable (→ 107) 
Equipment without SD card slot or USB terminal	<b>Standard picture quality</b> This can be played back on equipment not compatible with high-definition (AVCHD), so is convenient if you are dubbing for distribution.	Connect with supplied AV multi cable (→ 109) 

\* Some equipment may not be compatible with high-definition (AVCHD) picture quality. In such a case, connect with the AV multi cable and dub with standard picture quality. (→ 109)

- For the positions of the SD card slot, USB terminal, or terminal for connecting the AV multi cable, refer to the operating instructions of the equipment used.
- The iFrame scenes cannot be dubbed to SD cards or by connecting with the USB cable. To dub iFrame scenes, refer to page 109.

## Dubbing in high-definition picture quality

VIDEO PHOTO

You can dub using a Panasonic Blu-ray disc recorder or high-definition (AVCHD) compatible DVD recorder.


- Depending on the recorders or the media to be copied to, you may not be able to copy in high-definition (AVCHD) picture quality. For further details, see the operating instructions of your recorder.
- Note that the equipment described may not be available in certain countries and regions.

### ■ To dub using equipment with an SD card slot

You can dub by directly inserting an SD card.

- **HDC-TM80** / **HDC-HS80**


To copy scenes or still pictures from the built-in memory or HDD to an SD card, see page 98.

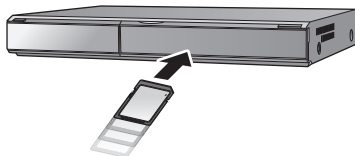

### ■ To dub using equipment with a USB terminal

You can dub by connecting a USB cable.

- Use the AC adaptor to free you from worrying about the battery running down.
- Turn on the unit (This function is available in all modes).



- A** USB cable (supplied)
- Insert the plugs as far as they will go.

### 1 Connect the unit to the Blu-ray disc recorder or high-definition (AVCHD) compatible DVD recorder.

- The USB function selection screen will appear on the screen of the unit.

### 2 Touch [RECORDER] on the screen of this unit.

- When you select an option other than [RECORDER], reconnect the USB cable.

- **HDC-SD80**

When using the battery, the LCD monitor turns off after about 5 seconds. Touch the screen to turn the LCD monitor on.

### 3 **HDC-TM80** / **HDC-HS80**

**Touch the media you wish to dub.**


- When using the battery, the LCD monitor turns off after about 5 seconds. Touch the screen to turn the LCD monitor on.

## 4 Dubbing through operations on the Blu-ray disc recorder or high-definition (AVCHD) compatible DVD recorder.


- **HDC-TM80** / **HDC-HS80**

Do not touch [CHANGE MEDIA] on the screen of the unit during dubbing.


### About the screen indication of the unit

- When the unit is accessing the SD card, card access icon (  ) appears on the unit screen or the access lamp is on.

- **HDC-TM80**

When the unit is accessing the built-in memory, built-in memory access icon (  ) appears on the unit screen or the access lamp is on.

- **HDC-HS80**

When the unit is accessing the HDD, HDD access icon (  ) appears on the unit screen or the HDD access lamp is on.


- Be careful not to disconnect the USB cable, AC adaptor or battery while the unit is accessing the media, as this may result in the loss of recorded content.

- 
- Do not use any other USB cables except the supplied one. (Operation is not guaranteed with any other USB cables.)
  - When this unit is connected to a Panasonic Blu-ray disc recorder or a DVD recorder using a USB cable while the unit is turned on, power is also supplied from the connected equipment to this unit.
  - For details on dubbing and playback methods, read the operating instructions of the Blu-ray disc recorder or DVD recorder.
  - When you connect the unit to a Blu-ray disc recorder, a dubbing operations screen may appear on the television connected to the Blu-ray disc recorder. In this case as well, perform the operations of steps 1 to 4.
  - You cannot change the mode of the unit or turn off the unit while it is connected to a Blu-ray disc recorder or DVD recorder. Disconnect the USB cable before performing either of these operations.
  - If the battery runs down during dubbing, a message will appear. Operate the Blu-ray disc recorder to cancel the dubbing.

### ■ Dubbing using equipment without an SD card slot or a USB terminal, or using a video device

You can dub by connecting an AV multi cable.

- Images are dubbed in standard quality.
- Use the AC adaptor to free you from worrying about the battery running down.

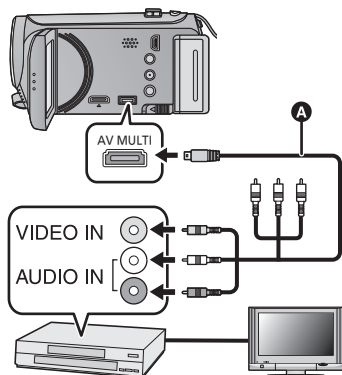

#### Change the video input on the video device and TV that this unit is connected to.

- The channel set will differ depending on the terminal to which the unit is connected.
  - See the operating instructions of the video device for details.
  - Insert the plugs as far as they will go.
  - Do not use any other AV multi cables except the supplied one.
- A** AV multi cable (supplied)

**1** Connect this unit to a video device and then change the mode to  .

**2** Start playback on this unit.

**3** Start recording on the connected device.

- To stop recording (dubbing), stop playback on this unit after stopping recording on the recorder.
- If the date and time display and function indication are not wanted, cancel them before dubbing. (→ 43, 94)

If the dubbed images are played back on a wide-screen TV, the images may be stretched vertically.

In this case, refer to the operating instruction for the device you are connecting to or read the operating instructions of the wide-screen TV and set the aspect ratio to 16:9.

# What you can do with a PC

## HD Writer AE 3.0

You can copy the motion/still picture data to the HDD of PCs or write to media like Blu-ray discs, DVD discs or SD cards using HD Writer AE 3.0, the software installed in the supplied CD-ROM.

Refer to the operating instructions of HD Writer AE 3.0 (PDF file) for details on how to use it.

### ■ Smart wizard

The Smart wizard screen is automatically displayed when you connect this unit to a PC with HD Writer AE 3.0 installed. (→ 118)



### Copy to PC:

You can copy motion/still picture data to the HDD of PCs.

### Copy to disc:

You can copy to disc in high definition picture quality or conventional standard picture quality (MPEG2 format).

- Select the function you wish to use and follow the on-screen instructions for easy copying.

What can be done with the HD Writer AE 3.0	Data type
<b>Copying data to a PC</b>	Motion picture and still picture
<b>Copying in BD/AVCHD format:</b> <ul style="list-style-type: none"> <li>• iFrame scenes cannot be copied to BD/AVCHD format.</li> </ul>	
<b>Copying in DVD-Video format:</b> <ul style="list-style-type: none"> <li>• Converted to conventional standard quality (MPEG2 format).</li> </ul>	Motion picture
<b>Editing:</b> Editing motion picture data copied on an HDD of a PC <ul style="list-style-type: none"> <li>• Dividing, Trimming, Still picture, Title, Effect, Transition, BGM, Delete partially</li> <li>• Converting the motion picture data to MPEG2</li> <li>• Converting part of motion picture into still picture</li> </ul>	
<b>Online sharing:</b> You can upload motion pictures on the Internet and share them with your family and friends.	
<b>Playing back on a PC:</b> Play back the motion picture data in high definition picture quality on a PC.	
<b>Formatting discs:</b> Depending on the type of disc that you use, formatting is necessary.	

- It is possible to play back on a PC using a Image Viewer Standard to Windows or commercially available image browsing software, as well as copying pictures to a PC using Windows Explorer.
- Please refer to page 122 for details about using a Mac.

### Important Notice

- When using an SDXC Memory Card, check the following support site.  
<http://panasonic.net/avc/sdcard/information/SDXC.html>
- Do not insert a disc recorded in AVCHD format with HD Writer AE 3.0 in a device that does not support the AVCHD format. In some cases the disc may get stuck in the device. The disc will not play back on devices that do not support the AVCHD format.
- When inserting a disc containing recorded motion pictures into other devices, a message prompting you to format the disc may be displayed. Do not format the disc, since deleted data cannot be restored later.

- **HDC-TM80** / **HDC-HS80**  
It is impossible to write data to the built-in memory or HDD on this unit from a PC.
- Motion pictures that have been recorded on another device cannot be written to the software supplied with this unit. To write motion picture data recorded with the Panasonic High Definition Video Camera sold previously, use the HD Writer supplied with the unit.
- We cannot guarantee operation if you use software other than that supplied to read/write motion picture.
- Do not start the software supplied with this unit and other software at the same time. Close any other software first.

### ■ About Conversion Assist Function

When you want to convert the recording quality and write to media, the “Conversion Assist Function”, which is a linking function between this unit and the HD Writer AE 3.0, is activated by connecting this unit to the PC with the USB cable. When the “Conversion Assist Function” is used, it is possible to write to media faster than when operating only on PC.

- Please refer to page 118 for details about the connection of this unit and a PC.
- Refer to the operating instructions of the software for details. (→ 121)

# End User License Agreement

---

Before opening the CD-ROM package, please read the following.

You ("Licensee") are granted a license for the Software defined in this End User License Agreement ("Agreement") on condition that you agree to the terms and conditions of this Agreement. If Licensee does not agree to the terms and conditions of this Agreement, promptly return the Software to Panasonic Corporation ("Panasonic"), its distributors or dealers from which you made the purchase.

## Article 1 License

Licensee is granted the right to use the software, including the information recorded or described on the CD-ROM, instruction manuals, and any other media provided to Licensee (collectively "Software"), but all applicable rights to patents, copyrights, trademarks and trade secrets in the Software are not transferred to Licensee.

## Article 2 Use by a Third Party

Licensee may not use, copy, modify, transfer or allow any third party, whether free of charge or not, to use, copy or modify the Software, except as expressly provided for in this Agreement.

## Article 3 Restrictions on Copying the Software

Licensee may make a single copy of the Software in whole or a part solely for back-up purposes.

## Article 4 Computer

Licensee may use the Software only on one computer, and may not use it on more than one computer.

## Article 5 Reverse Engineering, Decompiling or Disassembly

Licensee may not reverse engineer, decompile, or disassemble the Software, except to the extent either of them is permitted under law or regulation of the country where Licensee resides. Panasonic, or its distributors will not be responsible for any defects in the Software or damage to Licensee caused by Licensee's reverse engineering, decompiling, or disassembly of the Software.

## Article 6 Indemnification

The Software is provided "AS-IS" without warranty of any kind, either expressed or implied, including, but not limited to, warranties of non-infringement, merchantability and/or fitness for a particular purpose. Further, Panasonic does not warrant that the operation of the Software will be uninterrupted or error free. Panasonic or any of its distributors will not be liable for any damage suffered by Licensee arising from or in connection with Licensee's use of the Software.

## Article 7 Export Control

Licensee agrees not to export or re-export to any country the Software in any form without the appropriate export licenses under regulations of the country where Licensee resides, if necessary.

## Article 8 Termination of License

The right granted to Licensee hereunder will be automatically terminated if Licensee contravenes any of the terms and conditions of this Agreement. In this event, Licensee must destroy the Software and related documentation together with all the copies thereof at Licensee's own expense.



## Operating environment

- Even if the system requirements mentioned in this owner's manual are fulfilled, some PCs cannot be used.
- A CD-ROM drive is necessary to install the supplied software applications. (A compatible Blu-ray disc/DVD writer drive and media are necessary for writing to a Blu-ray disc/DVD.)
- Operation is not guaranteed in the following cases.
  - When 2 or more USB devices are connected to a PC, or when devices are connected through USB hubs or by using extension cables.
  - Operation on an upgraded OS.
  - Operation on an OS other than the one pre-installed.
- This software is not compatible with Microsoft Windows 3.1, Windows 95, Windows 98, Windows 98SE, Windows Me, Windows NT and Windows 2000.

### ■ Operating environment for HD Writer AE 3.0

<b>PC</b>	IBM PC/AT compatible PC
<b>OS</b>	Windows 7 (32 bit/64 bit) Starter/Home Basic/Home Premium/Professional/Ultimate Windows Vista (32 bit) Home Basic/Home Premium/Business/Ultimate (SP1/SP2) Windows XP (32 bit) (SP3)
<b>CPU</b>	Intel Pentium 4 2.8 GHz or higher (including compatible CPU) <ul style="list-style-type: none"> <li>● Intel Core 2 Duo 2.16 GHz or higher or AMD Athlon 64 X2 Dual-Core 5200+ or higher is recommended when using playback function or MPEG2 output function.</li> <li>● Intel Core 2 Quad 2.6 GHz or higher is recommended when using editing or Continuous Photo Playback function.</li> </ul>
<b>RAM</b>	Windows 7: 1 GB or more (32 bit)/2 GB or more (64 bit) Windows Vista: 1 GB or more Windows XP: 512 MB or more (1 GB or more recommended)

<b>Display</b>	High Color (16 bit) or more (32 bit or more recommended) Desktop resolution of 1024×768 pixels or more (1920×1080 pixels or more recommended) Windows 7/Windows Vista: DirectX 9.0c compatible video card (DirectX 10 recommended) Windows XP: DirectX 9.0c compatible video card Compatible with DirectDraw overlay PCI Express™ × 16 compatible recommended Video memory of 256 MB or more recommended
<b>Free hard disk drive space</b>	Ultra DMA — 100 or more 450 MB or more (for installing the software) <ul style="list-style-type: none"> <li>When writing to a DVD/Blu-ray disc/SD, more than double the amount of free space as the disc being created is necessary.</li> </ul>
<b>Sound</b>	DirectSound Support
<b>Interface</b>	USB port [Hi-Speed USB (USB 2.0)]
<b>Other requirements</b>	Mouse or equivalent pointing device Internet connection

- Supplied CD-ROM is available for Windows only.
- Input is not supported in languages other than English, German, French, Simplified Chinese and Russian.
- Operation cannot be guaranteed on all Blu-ray disc/DVD drives.
- Operation is not guaranteed on Microsoft Windows Vista Enterprise, Windows XP Media Center Edition, Tablet PC Edition and Windows 7 Enterprise.
- This software is not compatible with a multi-boot environment.
- This software is not compatible with a multi-monitor environment.
- If using Windows XP, an administrative account user only can use this software. If using Windows Vista/Windows 7, administrative account and standard account users only can use this software. (An administrative account user should install and uninstall this software.)

### ■ To use the HD Writer AE 3.0

You will need a high performance PC depending on the functions to be used. It may not properly play back or properly operate depending on the environment of the PC used. Refer to the operating environment and notes.

- 
- Operation during the playback may become slow if the CPU or memory is not fulfilling the requirements of the operating environment.
  - Always use the most current driver for the video card.
  - Always make sure there is enough capacity on the HDD in the PC. It may become inoperable or the operation may stop suddenly if the capacity gets low.

## ■ Operating environment for the card reader function (mass storage)

<b>PC</b>	IBM PC/AT compatible PC
<b>OS</b>	Windows 7 (32 bit/64 bit) Windows Vista (32 bit) (SP1/SP2) Windows XP (32 bit) (SP3)
<b>CPU</b>	Windows 7/Windows Vista: 1.0 GHz or higher Windows XP: Intel Pentium III 450 MHz or higher or Intel Celeron 400 MHz or higher
<b>RAM</b>	Windows 7: 1 GB or more (32 bit)/2 GB or more (64 bit) Windows Vista Home Basic: 512 MB or more Windows Vista Home Premium/Business/Ultimate/Enterprise: 1 GB or more Windows XP: 128 MB or more (256 MB or more recommended)
<b>Interface</b>	USB port
<b>Other requirements</b>	Mouse or equivalent pointing device

- The USB equipment operates with the driver installed as standard in the OS.


# Installation

When installing the software, log on to your computer as the Administrator or with a user name with equivalent authorization. (If you do not have authorization to do this, consult your manager.)

- Before starting the installation, close all applications that are running.
- Do not perform any other operations on your PC while the software is being installed.
- Explanation of operations and screens is based on Windows 7.

## 1 Insert the CD-ROM into the PC.

- The following screen is displayed automatically. Click [Run setup.exe] → [Yes].
- If Windows 7 is in use, or the following screen is not displayed automatically, select [Start] → [Computer] (or double-click on [Computer] on the desktop), and then double-click [Panasonic].

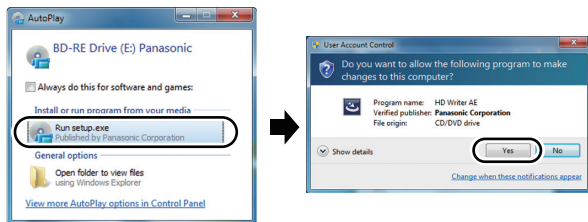


## 2 Click [Next].

## 3 Read the [End User License Agreement], then place a check beside [I accept the terms of the license agreement] if you agree to them and click [Next].

## 4 Select the country or region where you live, then click [Next].


- If the country or region cannot be selected, select [NTSC Area].
- When the confirmation message appears, click [Yes].

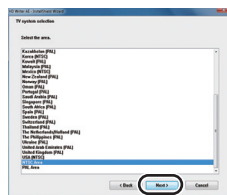

## 5 Select where the application is to be installed, then click [Next].

## 6 Select [Yes] or [No] to create shortcut.


- A message regarding the playback in the environment used may be displayed depending on the performance of the PC used. Click [OK] after confirming.

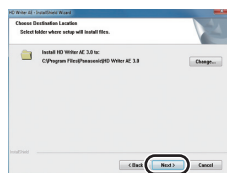

**7** When installation is complete, some notes will appear.  
**Check the contents, then close the window.**

**8** Select [Yes, I want to restart my computer now.], then click [Finish].


The PC must be rebooted for the application to work.

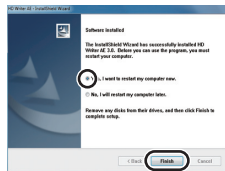

## ■ Uninstalling HD Writer AE 3.0


Follow the steps below to uninstall any software applications that you no longer require.

**1** Select [Start] → [Control Panel] → [Uninstall a program].

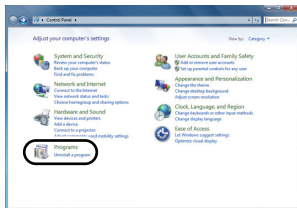


**2** Select [HD Writer AE 3.0], then click [Uninstall].

- Proceed with the uninstallation by following the on-screen instructions.
- After uninstalling the software, be sure to reboot the PC.

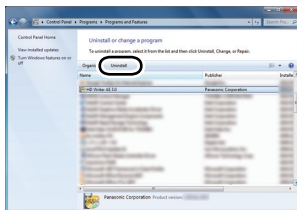

## Connecting to a PC

- Connect this unit to the PC after the software applications are installed.
- Remove the supplied CD-ROM from your PC.

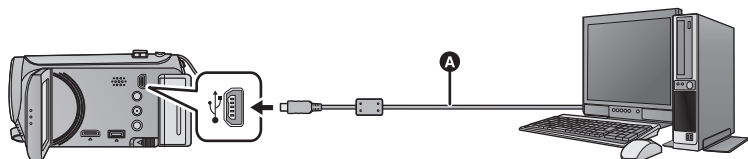

- A** USB cable (supplied)
- Insert the plugs as far as they will go.

### 1 Connect this unit to the AC adaptor.

- It is possible to use the unit connected to the PC with the batteries only, but you will not be able to write data into the unit. Use the AC adaptor to free you from worrying about the battery running down.
- Connect with the AC adaptor when using the Conversion Assist Function.

### 2 Turn on the unit.

- This function is available in all modes.

### 3 Connect this unit to a PC.


- The USB function selection screen will appear.

### 4 Touch [PC] on the screen of this unit.

- The Smart wizard screen is automatically displayed when HD Writer AE 3.0 is installed.
- This unit is automatically recognized as an external drive of the PC. (→ 120)
- When you select an option other than [PC], reconnect the USB cable.
- When using the battery, the LCD monitor turns off after about 5 seconds. Touch the screen to turn the LCD monitor on.




- 
- Do not use any other USB cables except the supplied one. (Operation is not guaranteed with any other USB cables.)
  - When this unit is connected to a PC using a USB cable while the unit is turned on, power is also supplied from the connected equipment to this unit.
  - **When the unit is connected to a PC, it cannot be turned off. Disconnect the USB cable, before turning this unit off.**
  - When performing reading/writing between a PC and an SD card, be aware that some SD card slots built into PCs and some SD card readers are not compatible with the SDHC Memory Card or SDXC Memory Card.
  - When using an SDXC Memory Card, check the following support site.  
**<http://panasonic.net/avc/sdcard/information/SDXC.html>**

## ■ To disconnect USB cable safely

Select the  icon in task tray displayed on the PC, and then click [Eject Panasonic Camcorder].

- Depending on your PC's settings, this icon may not be displayed.

### About the screen indication of the unit

- Do not disconnect the USB cable, the battery or the AC adaptor while the access lamp is on or card access icon (  ) appears on the unit screen.
- **HDC-TM80**  
Do not disconnect the USB cable, the battery or the AC adaptor while the access lamp is on or built-in memory access icon (  ) appears on the unit screen.
- **HDC-HS80**  
Do not disconnect the USB cable, the battery or the AC adaptor while the HDD access lamp is on or HDD access icon (  ) appears on the unit screen.
- If the screen does not change when the unit is operated while connected to a PC, disconnect the battery and/or AC adaptor, wait approximately 1 minute, reconnect the battery and/or AC adaptor, wait approximately 1 minute again, and then turn the unit back on. (Data may be destroyed when above operation is performed while accessing the SD card, built-in memory or HDD.)

## ■ Charging the battery by connecting it to different devices

When using the battery, if you turn off the unit and connect it to a PC, Panasonic Blu-ray disc recorder or Panasonic DVD recorder, the battery will charge.

- **When connecting this unit to a PC for the first time, make sure to connect this unit to the PC with this unit turned on.**
- Insert the USB cable securely all the way. It will not operate properly if it is not inserted all the way.
- Do not use any other USB cables except the supplied one. (Operation is not guaranteed with any other USB cables.)
- Be sure to connect the unit directly to the PC, Blu-ray disc recorder or DVD recorder.
- During charging, the status indicator flashes.
- You cannot charge when the status indicator flashes rapidly, or when it does not light at all. Charge using the AC adaptor. (→ 21)
- It will take 2 or 3 times longer to charge compared to when using the AC adaptor.
- If the status indicator flashes at a particularly fast or slow rate, refer to page 137.

## About the PC display


When the unit is connected to a PC, it is recognized as an external drive.

- Removable disk (Example:  CAM\_SD (F:) ) is displayed in [Computer].

We recommend using HD Writer AE 3.0 to copy or write back motion picture data. Using Windows Explorer or other programs on the PC to copy, move or rename files and folders recorded with this unit will result in them being unusable with HD Writer AE 3.0.


It is impossible to write data to the built-in memory or HDD on the unit from a PC.

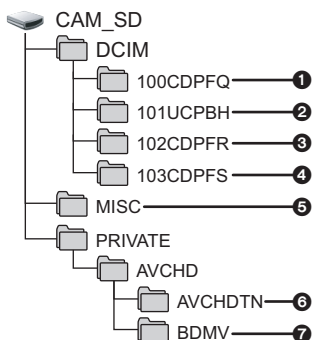

### Example folder structure of an SD card:



 / 
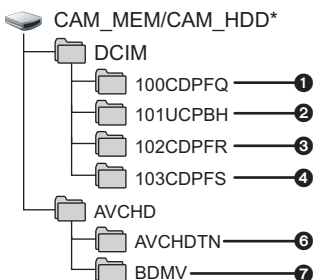
### Example folder structure of built-in memory or HDD:



\* [CAM\_MEM] is displayed when using the , and [CAM\_HDD] is displayed when using the .

The following data will be recorded.

- ① Up to 999 still pictures in JPEG format ([S1000001.JPG] etc.)
- ② iFrame format motion picture files ([S1000001.MP4] etc.)
- ③ JPEG format still pictures recorded in Hi-speed Burst Shooting Mode
- ④ JPEG format still pictures created from the motion picture
- ⑤ The DPOF setting files
- ⑥ The motion picture thumbnails
- ⑦ AVCHD format motion picture files ([00000.MTS] etc.)

### Copying your still pictures to your PC

#### Card reader function (mass storage)

Still pictures recorded with this unit can be copied to the PC with Explorer or other programs.

- 1 Double click the folder that contains the still pictures. ([DCIM] → [100CDPFQ] etc.)
- 2 Drag and drop the still pictures onto the destination folder (on the PC's HDD).

- Do not delete the SD card's folders. Doing so may make the SD card unusable in this unit.
- When data not supported by this unit has been recorded on a PC, it will not be recognized by this unit.
- Always use this unit to format SD cards.




## Starting HD Writer AE 3.0

- To use the software, log on as an Administrator or as user name for standard user account (only for Windows 7/Windows Vista).  
The software cannot be used with the user name for a guest account.

(On the PC)

**Select [Start] → [All Programs] → [Panasonic] → [HD Writer AE 3.0] → [HD Writer AE].**

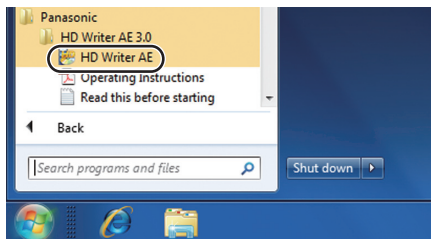

- For details on how to use the software applications, read the PDF operating instructions of the software.

## Reading the operating instructions of the software applications

- You will need Adobe Acrobat Reader 5.0 or later or Adobe Reader 7.0 or later to read the PDF operating instructions.

**Select [Start] → [All Programs] → [Panasonic] → [HD Writer AE 3.0] → [Operating Instructions].**

## If using Mac

- HD Writer AE 3.0 is not available for Mac.
- iMovie'11 supported. For details about iMovie'11, please contact Apple Inc.
- There are some limitations in the functions when iMovie'11 is used. Refer to page 132 for details.

### ■ Operating environment

<b>PC</b>	Mac
<b>OS</b>	Mac OS X 10.6.3
<b>CPU</b>	Intel Core Duo or better
<b>RAM</b>	1 GB or more
<b>Interface</b>	USB port

- Even if the system requirements mentioned in this owner's manual are fulfilled, some PCs cannot be used.
- The USB equipment operates with the driver installed as standard in the OS.
- Supplied CD-ROM is available for Windows only.

### ■ Copying still pictures on PC

#### 1 Connect this unit to a PC via the supplied USB cable.

- The USB function selection screen will appear.

#### 2 Touch [PC] on the screen of this unit.

- This unit is automatically recognized as an external drive of Mac.
- When you select an option other than [PC], reconnect the USB cable.
- When using the battery, the LCD monitor turns off after about 5 seconds. Touch the screen to turn the LCD monitor on.

#### 3 Double-click [CAM\_SD] displayed on the desktop.

- For users who have [HDC-TM80], [CAM\_SD] and [CAM\_MEM] are displayed on the desktop and for users who have [HDC-HS80], [CAM\_SD] and [CAM\_HDD] are displayed on the desktop.
- Files are stored in [100CDPFQ] or [102CDPFR] folder etc. in the [DCIM] folder.

#### 4 Using a drag-and-drop operation, move the pictures you want to acquire or the folder storing those pictures to any different folder on the PC.

### ■ To disconnect USB cable safely

Drag [CAM\_SD] disk icon to the [Trash], and then disconnect the USB cable.

- For users who have [HDC-TM80], [CAM\_SD] and [CAM\_MEM] are displayed on the desktop and for users who have [HDC-HS80], [CAM\_SD] and [CAM\_HDD] are displayed on the desktop.

- Do not remove the SD card from this unit when this unit is connected to the PC using a USB cable.


# Indications

\*1  only\*2  only

## ■ Recording indications

Motion Picture Recording Mode


Still Picture Recording Mode

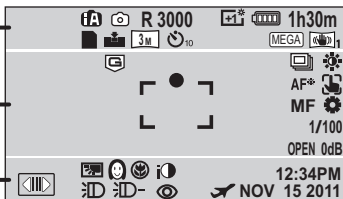

A



Intelligent Auto Mode (→ 36)

 Manual Mode (→ 72)



Scene Mode (→ 60)

 **(Red)** Recording


 **(Green)** Recording pause


**0h00m00s** Elapsed recording time (→ 32)


("h" is an abbreviation for hour, "m" for minute and "s" for second.)


 Remaining battery power (→ 23)

**1h30m** Remaining battery time (→ 23)

 Built-in memory recording possible status\*1

 HDD recording possible status\*2

 **(White)** Card recording possible status

 **(Green)** Recognizing the card

 /  /  /  / 

Motion picture recording mode (→ 61)

**R 1h20m** Remaining time for motion picture recording (→ 32)

 Relay Recording (→ 62)\*1



Power LCD (→ 45)



Image Stabilizer (→ 50)/Optical Image Stabilizer Lock (→ 53)

 **(White)** Still picture recording icon

 **(Red)** Recording still picture

**R3000** Remaining number of still pictures (→ 35)

 Picture Quality (→ 70)































Number of recording pixels for still pictures (→ 35, 69, 70, 77)

In Playback Mode, the picture size is not displayed for still pictures recorded with other products that have different picture sizes from the sizes shown above.

 **10/2** Self-Timer Recording (→ 58)

 **(MEGA)** MEGA OIS (→ 34)

<b>B</b>	
	HDD Falling detection (→ 9) <sup>2</sup>
	PRE-REC (→ 55)
	Zoom Microphone (→ 67)
	Wind Noise Canceler (→ 67)
	Picture adjustment (→ 68)
	Digital cinema color (→ 66)
	AF/AE tracking (→ 52)
	Touch zoom (→ 51)
	Touch shutter (→ 53)
<b>MF</b>	Manual Focus (→ 75)
 	White Balance (→ 73)
<b>1/100</b>	Shutter Speed (→ 74)
<b>OPEN/F2.0</b>	Iris value (→ 74)
<b>0dB</b>	Gain value (→ 74)
	Focus indication (→ 34)
	Hi-Speed Burst Shooting (→ 70)
<b>AF*</b>	AF assist lamp (→ 71)

<b>C</b>	
	Display Touch Menu (→ 28)
	Backlight Compensation (→ 58)
	Soft Skin Mode (→ 58)
	Tele Macro (→ 59)
	Intelligent Contrast Control (→ 55)
	Microphone Level (→ 67)
	Video light (→ 57)
	Smile Shot (→ 56)
	Fade (White), Fade (Black) (→ 55)
	Color Night Rec function (→ 59)
	Intelligent Exposure (→ 58)
	Photo light (→ 57)
	Photo light Level (→ 57)
	Red-Eye Reduction (→ 58)
	World time setting (→ 42)
<b>NOV 15 2011</b>	Date indication (→ 29)
<b>12:34PM</b>	Time indication (→ 29)

## ■ Playback indications



Display during playback (→ 38, 76)

<b>0h00m00s</b>	Playback Time (→ 38)
<b>No.10</b>	Scene Number
	Repeat Playback (→ 78)
	Resume Playback (→ 79)
<b>100-0001</b>	Still picture folder/file name
1	DPOF already set (to more than 1) (→ 89)
	Protected motion pictures/ still pictures (→ 88)
	iFrame recorded scene (→ 38)
	AVCHD recorded scene (→ 38)
	Relay-recorded scene (→ 62) <sup>*1</sup>
	Still picture recorded using Smile Shot (→ 56)

## ■ Indication of connection to other devices

	Accessing the card (→ 108, 119)
	Accessing the built-in memory (→ 108, 119) <sup>*1</sup>
	Accessing the HDD (→ 108, 119) <sup>*2</sup>

## ■ Confirmatory indications

<b>-- (Time display)</b>	The built-in battery is low. (→ 29)
	Warning for recording yourself (→ 30)
	SD card is not inserted or is non-compatible.

## ■ Confirmatory indications when a DVD burner is connected

	Disc Playback (→ 104)
	Scene copied in [Standard]([XP])
	Scene copied in [Standard]([SP])

/ / / / / / /

Disc type (→ 100)

# Messages

Major confirmation/error messages to be indicated on the screen in text.

\*1 **HDC-TM80** only

\*2 **HDC-HS80** only

## **PERIODICALLY MAKE BACK UP OF DATA IN BUILT-IN MEMORY.\*1/ RECOMMEND DATA BACK UP PERIODICALLY.\*2**

We recommend backing up important recorded motion pictures and still pictures periodically to a PC, DVD disc etc. to protect it. (→ 100, 110) This message does not indicate that there is a problem with this unit.

## **HDD BACKUP RECOMMENDED.\*2**

There is a possible problem with the HDD. Copy the motion pictures and still pictures stored on the HDD to a PC or a DVD disc immediately (→ 100, 110), detach the power and contact consumer support. (→ 152, 153)

## **HDD ERROR OCCURRED. PLEASE TURN UNIT OFF, THEN TURN ON AGAIN.\*2**

Access to HDD failed. Turn on the unit again. Make sure not to shock or impact the unit.

## **CANNOT OPERATE DUE TO LOW TEMPERATURE.\*2**

The internal temperature of this unit is extremely low so it cannot be operated. If "Please Wait." appears after this message, wait a while without turning the unit off. It may take time until the unit can be used.

## **CHECK CARD.**

This card is not compatible or it cannot be recognized by the unit. If this message appears even though motion pictures and still pictures are recorded on an SD card, the card may be unstable. Reinsert the SD card, then turn the unit off and then on again.

## **THIS BATTERY CANNOT BE USED.**

- Use a battery that is compatible with this unit. (→ 20)  
If using a Panasonic battery compatible with this unit, remove the battery and then insert it again. If the message appears even after repeating this several times, this unit needs repair. Detach the power and contact consumer support. (→ 152, 153) Do not attempt to repair it by yourself.
- You are attempting to connect an AC adaptor not compatible with this unit. Use the supplied AC adaptor. (→ 21)

## **PLEASE CHECK EXTERNAL DRIVE OR DISC.**



A disc that cannot be used when connecting the unit to the DVD burner has been inserted, or the DVD burner is not recognized properly. Connect the USB Connection Cable again and insert a disc to copy the data. (→ 100)

## About recovery

---

If faulty management information is found, the messages may appear and a repair is performed. (Repairing may take time depending on the error.)

**SOME SCENES NEED REPAIRING. PLAY SCENES TO BE REPAIRED.  
(IRREPARABLE SCENES WILL BE DELETED.)**

- The above message is displayed when abnormal management information is detected when the scenes are displayed in thumbnail. To perform the repair, touch the scene with  in the thumbnail, and start the playback. **Please be aware that if the repair fails, scenes with  will be deleted.**
- Use a sufficiently charged battery or the AC adaptor.
- Depending on the condition of the data, it may not be possible to completely repair the data.
- If recovery fails, it will not be possible to play back scenes recorded before the unit turned off.
- When data recorded on another device is recovered, it may not be possible to play back the data on this unit or the other device.
- If recovery fails, turn the unit off and on again after waiting a while. If recovery fails repeatedly, format a media on the unit. Please be aware that if a media is formatted, then all the data recorded on the media will be erased.
- If the thumbnail information is recovered, displaying the thumbnails may become slower.

# Troubleshooting

## Power




Problem	Check points
<p><b>This unit cannot be turned on.</b></p> <p><b>This unit does not stay on long enough.</b></p> <p><b>Battery runs down quickly.</b></p>	<ul style="list-style-type: none"> <li>● Charge the battery again to ensure it is sufficiently charged. (→ 21)</li> <li>● In cold places, the battery using time becomes shorter.</li> <li>● The battery has a limited life. If the operating time is still too short even after the battery is fully charged, the battery has worn out and needs to be replaced.</li> </ul>
<p><b>This unit is turned off automatically.</b></p>	<ul style="list-style-type: none"> <li>● If the unit turns off when you turn off the power to the TV using the TV remote control, the VIERA Link is at work. If you are not using the VIERA Link, set [VIERA Link] to [OFF]. (→ 96)</li> <li>● When this unit is connected to a DVD burner to copy or play back images (a disc is being accessed), the unit turns off automatically if the USB Connection Cable is removed.</li> </ul>
<p><b>This unit cannot be operated though it is turned on.</b></p> <p><b>This unit does not operate normally.</b></p>	<ul style="list-style-type: none"> <li>● Remove the battery or AC adaptor, wait about 1 minute and then reconnect the battery or AC adaptor. Then about 1 minute later, turn on the unit again. (Conducting the above operation while the media is being accessed may damage the data on the media.)</li> <li>● If normal operation is still not restored, detach the power connected, and contact consumer support. (→ 152, 153)</li> </ul>
<p><b>“ERROR OCCURRED. PLEASE TURN UNIT OFF, THEN TURN ON AGAIN.” is displayed.</b></p>	<ul style="list-style-type: none"> <li>● The unit has automatically detected an error. Restart the unit by turning the unit off and on.</li> <li>● The unit will be turned off in about 1 minute if the unit is not turned off and on.</li> <li>● Repair is needed if it is repeatedly displayed, even if it is restarted. Detach the power connected, contact consumer support. (→ 152, 153) Do not attempt to repair the unit yourself.</li> </ul>

## Indication




Problem	Check points
<p><b>Remaining battery indication is not displayed properly.</b></p>	<ul style="list-style-type: none"> <li>● The remaining battery capacity indication is an approximation. If the remaining battery capacity indication is not displayed correctly, fully charge the battery, discharge it and then charge it again.</li> </ul>



## Recording

Problem	Check points
<p><b>The unit arbitrarily stops recording.</b></p>	<ul style="list-style-type: none"> <li>● Use an SD card that can be used for motion picture recording. (→ 24)</li> <li>● The recordable time may have shortened due to the deterioration of the data writing speed or repeated recording and deletion. Using the unit, format the SD card, built-in memory or HDD. (→ 46, 47)</li> <li>● If [AGS] is [ON], record in the normal horizontal position or set [AGS] to [OFF]. (→ 65)</li> <li>● <b>HDC-HS80</b> If the unit is exposed to strong vibrations or shocks while recording on HDD, recording may stop to protect the HDD. If the unit is used in a place with loud sounds, the recording may stop due to sound vibrations. Recording data on an SD card is recommended in these places.</li> </ul>
<p><b>Auto focus function does not work.</b></p>	<ul style="list-style-type: none"> <li>● Switch to Intelligent Auto Mode.</li> <li>● If you are trying to record a scene which is hard to bring into focus in Auto Focus Mode, use the Manual Focus Mode to adjust the focus. (→ 37, 75)</li> </ul>
<p><b>Color balance of images is strange when recording in a place such as a gymnasium.</b></p>	<ul style="list-style-type: none"> <li>● In a place with multiple light sources, such as a gymnasium or a hall, set the white balance setting to  (Indoor mode 2). If you cannot record clearly with the  (Indoor mode 2), set it to  (Manual adjustment mode). (→ 73)</li> </ul>
<p><b>Color or brightness of the image changes, or you may see horizontal bars in the image.</b></p> <p><b>The LCD monitor flickers indoors.</b></p>	<ul style="list-style-type: none"> <li>● Color or brightness of the image may change, or you may see horizontal bars in the image when the object is recorded under fluorescent light, mercury light or sodium light, etc., but this is not a malfunction.</li> <li>● In Motion Picture Recording Mode, record in Intelligent Auto Mode or set the shutter speed to 1/60 in areas where the power supply frequency is 60 Hz, or 1/100 in areas of 50 Hz.</li> <li>● In Still Picture Recording Mode, this will not affect the recorded image.</li> </ul>
<p><b>Object seems to be warped.</b></p>	<ul style="list-style-type: none"> <li>● Object seems to be warped slightly when the object moves across the image very fast, but this is because the unit is using MOS for the image sensor. This is not a malfunction.</li> </ul>


## Playback

Problem	Check points
<p><b>Scenes/still pictures cannot be played back.</b></p>	<ul style="list-style-type: none"> <li>Any scenes/still pictures where the thumbnails are displayed as  cannot be played back.</li> </ul>
<p><b>Scenes cannot be deleted.</b></p>	<ul style="list-style-type: none"> <li>Release the protect setting. (→ 88)</li> <li>Any scenes/still pictures where the thumbnails are displayed as  cannot be deleted. If the scenes/still pictures are unnecessary, format the media to erase the data. (→ 46, 47) Please be aware that if a media is formatted then all the data recorded on the media is erased and cannot be recovered. Back up important data on a PC, disc etc.</li> </ul>
<p><b>White round spots like soap bubbles appear on the recorded picture.</b></p>	<ul style="list-style-type: none"> <li>If you take a picture with the Photo light in a dark place or indoors, white round spots may appear on the picture caused by the Photo light reflecting of particles of dust in the air. This is not a malfunction. A characteristic of this is that the number of round spots and their position differ in every picture.</li> </ul> <div style="text-align: right; margin-top: 10px;">  </div>

## With other products

Problem	Check points
<p><b>Although this unit is correctly connected to a TV, images cannot be seen.</b></p> <p><b>The images are squeezed horizontally.</b></p>	<ul style="list-style-type: none"> <li>● Please read the operating instructions of your TV and select the channel that matches the input used for the connection.</li> <li>● Change the [TV ASPECT] setting to match the aspect ratio of the TV. (→ 94)</li> <li>● Change the setting of the unit depending on the cable connecting to the TV. (→ 95)</li> </ul>
<p><b>If the SD card is inserted in another device, it is not recognized.</b></p>	<ul style="list-style-type: none"> <li>● Check that the device is compatible with the capacity or type of SD card (SD Memory Card/SDHC Memory Card/SDXC Memory Card) that you inserted. Refer to the operating instructions of the device for details.</li> </ul>
<p><b>When connected by the USB cable, this unit is not detected by the other devices.</b></p>	<ul style="list-style-type: none"> <li>● When connected to other devices using only the battery, reconnect using the AC adaptor.</li> </ul>
<p><b>VIERA Link does not work.</b></p>	<p>(Setting on this unit)</p> <ul style="list-style-type: none"> <li>● Connect with a HDMI mini cable (optional). (→ 96)</li> <li>● Touch [MENU], then touch [SETUP] → [VIERA Link] → [ON]. (→ 96)</li> <li>● Turn the unit off and then back on again.</li> </ul> <p>(Setting on other devices)</p> <ul style="list-style-type: none"> <li>● If the TV input does not switch automatically, switch the input using the TV remote control.</li> <li>● Check the VIERA Link setting on the connected device.</li> <li>● Please refer to the operating instructions of the connected device.</li> </ul>
<p><b>The power of the DVD burner cannot be turned on.</b></p>	<ul style="list-style-type: none"> <li>● When the unit is connected to the DVD burner, use the respective AC adaptors for both this unit and the DVD burner.</li> </ul>
<p><b>Cannot copy scenes on the SD card by connecting to other equipment with the USB cable.</b></p>	<ul style="list-style-type: none"> <li>● Other equipment might have not recognized the SD card. Unplug the USB cable once, and reconnect it.</li> </ul>

## With a PC

Problem	Check points
<b>When connected by the USB cable, this unit is not detected by the PC.</b>	<ul style="list-style-type: none"> <li>● After re-inserting the SD card into the unit, reconnect the supplied USB cable.</li> <li>● Select another USB terminal on the PC.</li> <li>● Check the operating environment. (→ 113,122)</li> <li>● Connect the supplied USB cable again after restarting the PC and turning on this unit again.</li> </ul>
<b>When the USB cable is disconnected, an error message will appear on the PC.</b>	<ul style="list-style-type: none"> <li>● To disconnect the USB cable safely, double-click the  icon in the task tray and follow the instructions on the screen.</li> </ul>
<b>Cannot see the PDF operating instructions for HD Writer AE 3.0.</b>	<ul style="list-style-type: none"> <li>● You will need Adobe Acrobat Reader 5.0 or later or Adobe Reader 7.0 or later to read the PDF operating instructions for HD Writer AE 3.0.</li> </ul>
<b>Cannot import AVCHD scenes with iMovie'11.</b>	<ul style="list-style-type: none"> <li>● You may not be able to import AVCHD scenes with iMovie'11 when both AVCHD scenes and iFrame scenes are recorded on a media (an SD card, built-in memory or HDD). In such a case, first copy all the iFrame scenes data to iMovie'11, delete all the iFrame scenes data on the media, and then import the AVCHD scenes with iMovie'11.</li> </ul>

## Others

Problem	Check points
<b>Item other than the touched one is selected.</b>	<ul style="list-style-type: none"> <li>● Calibrate the touch screen. (→ 48)</li> </ul>
<b>If the SD card is inserted in this unit, it is not recognized.</b>	<ul style="list-style-type: none"> <li>● If the SD card is formatted on a PC, it may not be recognized by this unit. Use this unit to format SD cards. (→ 46, 47)</li> </ul>

## ■ If AVCHD scenes do not change smoothly when played back on another device

The images may be still for several seconds at the joins between the scenes if the following operations are performed when multiple scenes have been continuously played back using another unit.

- Just how smoothly the scenes will be played back depends on the playback unit. Depending on the unit used, the images may stop moving and become still for a moment even when none of the following conditions are applicable.
- A continuous recording of motion picture data that exceeds 4 GB may momentarily stop at every 4 GB of data when played back with another device.
- It may not play back smoothly when the editing of scenes was done with the HD Writer AE 3.0, but it will play back smoothly if you set the seamless settings in the HD Writer AE 3.0. Refer to the operating instructions for the HD Writer AE 3.0.

<b>Principal reasons for not playing back smoothly</b>
● <b>When the scenes were recorded on different dates</b>
● <b>When scenes lasting under 3 seconds have been recorded</b>
● <b>When PRE-REC was used for recording</b>
● <b>When deleting scenes</b>
● <b>When selected scenes are copied between an SD card and the built-in memory/HDD</b>
● <b>When selected scenes are copied to a disc in a connected DVD burner</b>
● <b>When scenes recorded with more than 99 scenes on the same date</b>

## Cautions for use

### About this unit

**The unit and the SD card become warm during use. This is not a malfunction.**

**Keep this unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).**

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect this unit, disturbing the pictures and/or sound.
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor. Then reinsert the battery or reconnect AC adaptor and turn this unit on.

**Do not use this unit near radio transmitters or high-voltage lines.**

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.

**Make sure to use the supplied cords and cables. If you use optional accessories,**

**use the cords and the cables supplied with them.**

**Do not extend the cords and the cables.**

**Do not spray insecticides or volatile chemicals onto the unit.**

- If the unit is sprayed with such chemicals, its body may be marred and the surface finish may peel off.
- Do not leave rubber or plastic products in contact with the unit for a long time.

**When you use the unit in a sandy or dusty place such as a beach, do not let sand or fine dust get into the body and terminals of the unit.**

**Also, keep the unit away from sea water.**

- Sand or dust may damage the unit. (Care should be taken when inserting and removing a card.)
- If sea water splashes onto the unit, wipe off the water with a well wrung cloth. Then wipe the unit again with a dry cloth.

**When carrying the unit, do not drop or bump it.**

- A strong impact can break the unit's casing, causing it to malfunction.

### Cleaning

- Before cleaning, detach the battery or pull the AC cable from the AC outlet, and then wipe the unit with a soft, dry cloth.
- If the unit is very dirty, dip a cloth in water and squeeze firmly, and then wipe the unit with the damp cloth. Next, dry the unit with a dry cloth.
- Use of benzene, paint thinner, alcohol, or dishwashing liquid may alter the camera body or peel the surface finish. Do not use these solvents.
- When using a chemical dust cloth, follow the instructions that came with the cloth.

**Do not use the unit for surveillance purposes or other business uses.**

- This unit was designed for consumer intermittent use. It was not intended for continuous use, or for any industrial or commercial application resulting in prolonged use.
- In certain situations, continuous use could cause the unit to overheat and cause a malfunction. Such use is strongly discouraged.

**When you are not going to use the unit for an extended time**

- When storing the unit in a cupboard or cabinet, it is recommended that you place a desiccant (silica gel) in with it.


HDC-TM80 / HDC-HS80

**When disposing of or giving away this unit, note that:**

- Formatting and deletion simply change the file management information and cannot be used to completely erase the data in built-in memory or HDD of this unit. The data can be recovered using commercially available software or the like.
- We recommend that you physically format the built-in memory or HDD before disposing of or giving away this unit.


HDC-TM80

To physically format the built-in memory, connect the unit via the AC adaptor, select [SETUP] → [FORMAT MEDIA] → [Built-inMemory] from the menu, and then press and hold the recording start/stop button on the screen below for about 3 seconds. When the built-in memory data deletion screen appears, select [YES], and then follow the on-screen instructions:

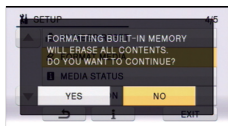

HDC-HS80

To physically format the HDD, connect the unit via the AC adaptor, select [SETUP] → [FORMAT MEDIA] → [HDD] from the menu, and then press and hold the recording start/stop button on the screen below for about 3 seconds. When the HDD data deletion screen appears, select [YES], and then follow the on-screen instructions:

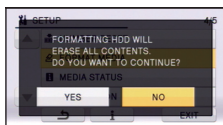

- Please look after the data in your built-in memory or HDD carefully. Panasonic will not be held responsible in the unlikely case that private data is divulged.

## About the battery

The battery used in this unit is a rechargeable lithium-ion battery. It is susceptible to humidity and temperature and the effect increases the more the temperature rises or falls. In cold areas, the full charge indication may not appear or the low battery indication may appear about 5 minutes after starting use. At high temperatures, the protection function may be triggered, making it impossible to use the unit.

### Be sure to detach the battery after use.

- If the battery is left attached, a minute amount of current continues to flow even if the unit is off. Keeping the unit in this state may result in over discharge of the battery. This may result in you not being able to use the battery even after it is charged.
- The battery should be stored in the vinyl bag so metal does not come into contact with the terminals.
- The battery should be stored in a cool place free from humidity, with as constant temperature as possible. (Recommended temperature: 15 °C to 25 °C (59 °F to 77 °F), Recommended humidity: 40%RH to 60%RH)
- Extremely high temperatures or low temperatures will shorten the life of the battery.
- If the battery is kept in high-temperature, high-humidity, or oily-smoky places, the terminals may rust and cause malfunctions.
- To store the battery for a long period of time, we recommend you charge it once every year and store it again after you have completely used up the charged capacity.
- Dust and other matter attached to the battery terminals should be removed.

**Prepare spare batteries when going out for recording.**

- Prepare batteries enough to last for 3 to 4 times the period you are planning to record for. Cold places such as a ski resort can shorten recording time.

**If you drop the battery accidentally, check to see if the terminals are damaged.**

- Inserting a battery with damaged terminals can damage the unit.

**Do not throw an old battery into fire.**

- Heating a battery or throwing it into a fire may result in an explosion.

**If the operating time is very short even after the battery has been recharged, the battery has worn out. Please purchase a new battery.**



## About the AC adaptor

- If the temperature of the battery is extremely high or extremely low, charging may take time or the battery may not be charged.
- If you use the AC adaptor near a radio, radio reception may be disturbed. Keep the AC adaptor 1 m (3.3 feet) or more away from the radio.
- When using the AC adaptor, it may generate whirring sounds. However, this is normal.
- After use, be sure to disconnect the AC adaptor. (If it is left connected, a minute amount of current is consumed.)
- Always keep the electrodes of the AC adaptor and battery clean.

## About status indicator during charging

**When the status indicator is flashing at a particularly fast or slow rate, the following should be considered.**

**Flashing with approx. 4 second period (off for approx. 2 seconds, on for approx. 2 seconds):**

- When the battery is over discharged or the temperature of the battery is too high or low. It can be charged, but it may take a few hours to complete the charging normally.
- It will flash in 2 second intervals when normal charging resumes. Even in such cases, it may start flashing in 4 second intervals until charging is completed depending on the conditions of use.

**Flashing with approx. 0.5 second period (off for approx. 0.25 second, on for approx. 0.25 second):**

- The battery is not charged. Remove the battery from the unit, and try charging again.
- Check that the terminals of the unit or battery are not dirty or covered with a foreign object, and connect the battery correctly once again. If a foreign object or dirt is present, turn off the unit before removing.
- The battery or environment is at an extremely high or low temperature. Wait until the temperature has returned to an appropriate level and try charging again. If you are still unable to charge, there may be a fault in the unit, battery or AC adaptor.

**Off:**

- Charging has finished.
- If the status indicator stays off despite the charging being unfinished, there may be a fault in the unit, battery or AC adaptor. Refer to page 136 for details on the battery.


## About the SD card

**When disposing of or giving away the SD card, note that:**

- Formatting and deletion of this unit or computer only changes the file management information and does not completely delete the data in the SD card.
- It is recommended that the SD card is physically destroyed or the SD card is physically formatted using this unit when disposing of or giving away the SD card.


**HDC-SD80**

To physically format the SD card, connect the unit via the AC adaptor, select [SETUP] → [FORMAT CARD] → [YES] from the menu, and then press and hold the recording start/stop button on the screen below for about 3 seconds. When the SD card data deletion screen appears, select [YES], and then follow the on-screen instructions.

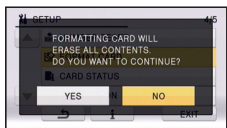

**HDC-TM80 / HDC-HS80**

To physically format the SD card, connect the unit via the AC adaptor, select [SETUP] → [FORMAT MEDIA] → [SD CARD] from the menu, and then press and hold the recording start/stop button on the screen below for about 3 seconds. When the SD card data deletion screen appears, select [YES], and then follow the on-screen instructions.

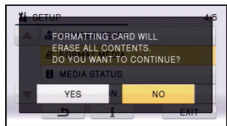

- The customer is responsible for the management of the data in the SD card.

## LCD monitor

- When the LCD monitor gets dirty, wipe it with a soft cloth such as eye glass cleaner.
- Do not touch the LCD monitor with your finger nails, or rub or press with strong force.
- It may become hard to see or hard to recognize the touch when the LCD protection sheet is affixed.
- In a place with drastic temperature changes, condensation may form on the LCD monitor. Wipe it with a soft cloth such as eye glass cleaner.
- When the unit has become very cold, for example due to storage in a cold area, its LCD monitor will be slightly darker than usual immediately after the unit is turned on. The normal brightness will be restored when the unit's internal temperature rises.

Extremely high precision technology is employed to produce the LCD Monitor screen featuring a total of approximately 230,000 dots. The result is more than 99.99% effective dots with a mere 0.01% of the dots inactive or always lit. However, this is not a malfunction and does not affect the recorded picture.

## About personal information

After you have set up the face recognition function, personal information will be held in this unit and included in recorded images.

- When the unit is serviced, or given away/disposed of, the personal information should be deleted in the interests of protecting personal information. (→ 88)

### Indemnity

- Information, including personal information, may be changed or lost as a result of mistaken operation, static electricity effects, accident, breakage, repair or other handling. It should be noted before use that Panasonic does not accept any responsibility for direct or indirect problems which occur as the result of the change to or loss of the information including personal information.

## About condensation

When condensation forms on the unit, the lens will cloud up and the unit may not work properly. Make every effort to ensure that condensation does not form. If it does form, take the actions described below.

### Causes of condensation

**Condensation takes place when the ambient temperature or humidity is changed as follows.**

- When this unit is brought inside from the cold (e.g. a ski slope) to a warm room.
- When this unit is moved from an air-conditioned car to outside.
- When a cold room has been warmed up quickly.
- When cool wind from an air conditioner is directly blown onto this unit.
- After rain showers.
- When this unit is in a very humid place where the air is thick with steam. (e.g. a heated swimming pool)

### Helpful hint

If, for example, you have used this unit for recording on a ski slope and are taking it into a heated room, place the unit inside a plastic bag, remove as much of the air from inside the bag as possible, then seal the bag. Leave the unit for about an hour in the room so the temperature of the unit is close to the ambient temperature of the room, then use it.

# About copyright

## ■ Carefully observe copyright laws

**Whatever you have recorded and created can be used for your personal entertainment only. Under copyright laws, other materials cannot be used without obtaining permission from the holders of the copyrights.**

## ■ Licenses

- SDXC Logo is a trademark of SD-3C, LLC.
- "AVCHD" and the "AVCHD" Logo are trademarks of Panasonic Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories.  
Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- VIERA Link™ is a trademark of Panasonic Corporation.
- EZ Sync™ is a trademark of Panasonic Corporation.
- HDAVI Control™ is a trademark of Panasonic Corporation.
- x.v.Color™ is a trademark.
- Microsoft®, Windows® and Windows Vista® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.
- IBM and PC/AT are registered trademarks of International Business Machines Corporation of the U.S.
- Intel®, Core™, Pentium® and Celeron® are the registered trademarks or trademarks

of Intel Corporation in the United States and other countries.

- AMD Athlon™ is a trademark of Advanced Micro Devices, Inc.
- iMovie and Mac are trademarks of Apple Inc., registered in the U.S. and other countries.
- Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

# Recording modes/approximate recordable time

- SD cards are only mentioned with their main memory size. The stated times are the approximate recordable times for continuous recording.

Recording mode		[HA]	[HG]	[HX]	[HE]
Picture size		1920×1080	1920×1080	1920×1080	1920×1080
SD card	4 GB	30 min	40 min	1 h	1 h 30 min
	16 GB	2 h	2 h 40 min	4 h 10 min	6 h 40 min
	64 GB	8 h 30 min	11 h	16 h 50 min	27 h 30 min
<b>Built-in memory</b> HDC-TM80	16 GB	2 h	2 h 40 min	4 h 10 min	6 h 40 min
<b>Built-in memory</b> HDC-HS80 HDD	120 GB	15 h 50 min	20 h 30 min	31 h 20 min	51 h

- A** Favors image quality  
**B** Favors recording time






Recording mode		[iFrame]
Picture size		960×540
SD card	4 GB	19 min
	16 GB	1 h 20 min
	64 GB	5 h 20 min
<b>Built-in memory</b> HDC-TM80	16 GB	1 h 20 min
<b>Built-in memory</b> HDC-HS80 HDD	120 GB	10 h





- If recording for long periods, prepare batteries for 3 or 4 times the period you wish to record for. (→ 22)
- The default setting is [HG] Mode.
- Maximum continuously recordable time for one scene: 12 hours
- The recording is paused once when the recording time for one scene exceeds 12 hours, and the recording will automatically resume after a few seconds.
- If a recording with a lot of action is recorded, the recording time is reduced.
- The recordable time may be reduced if short scenes are recorded repeatedly.
- Use time indicated in table above the row of 4 GB as a guideline for the time that can be copied onto one DVD disc (4.7 GB).




# Approximate number of recordable pictures

- SD cards are only mentioned with their main memory size. The stated number is the approximate number of recordable pictures.

(When [QUALITY] is set to )

Picture size		 2.6M	 0.3M	 2.8M
		1856×1392	640×480	2064×1376
Aspect ratio		4:3		3:2
SD card	4 GB	2600	30000	2500
	16 GB	10000	122000	10000
	64 GB	43000	492000	42000
 HDC-TM80 Built-in memory	16 GB	10000	122000	10000
 HDC-HS80 HDD	120 GB	86000	899100	81000

Picture size		 3M	 2.1M
		2304×1296	1920×1080
Aspect ratio		16:9	
SD card	4 GB	2400	3600
	16 GB	10000	14000
	64 GB	40000	59000
 HDC-TM80 Built-in memory	16 GB	10000	14000
 HDC-HS80 HDD	120 GB	75000	110000

- When [QUALITY] is set to , the numbers of recordable pictures will take more than the above mentioned.
- The number of recordable pictures depends on whether  and  are used together and on the subject being recorded.
- Maximum number of recordable pictures that can be displayed is 99999.  
If the number of recordable pictures exceeds 99999, the number will not change when the picture is taken until the number of recordable pictures gets less than 99999.
- The memory capacity indicated on the label of an SD card is the total of the capacity for copyright protection and management and the capacity which can be used on the unit, a PC etc.

# Specifications

## High Definition Video Camera

Information for your safety

<b>Power source:</b>	DC 5.0 V (When using AC adaptor) DC 3.6 V (When using battery)	
<b>Power consumption:</b>	Recording;	Charging;
	HDC-SD80	HDC-SD80
	4.5 W	7.7 W
	HDC-TM80	HDC-TM80
	4.5 W	7.7 W
	HDC-HS80	HDC-HS80
	5.4 W	7.7 W

### Signal system:

1080/60i, 540/30p

### Recording format:

[HA]/[HG]/[HX]/[HE]; AVCHD format compliant  
[iFrame]; MPEG-4 AVC file format compliant (.MP4)

### Image sensor:

1/5.8" 1MOS image sensor

Total; 1500 K

Effective pixels;

Motion picture; 1300 K to 1120 K (16:9)

Still picture; 970 K (4:3), 1100 K (3:2), 1300 K to 1120 K (16:9)

**Lens:** Auto Iris, 34× Optical Zoom, F1.8 to F4.0

Focal length; 2.38 mm to 81 mm

Macro (Full range AF)

35 mm equivalent;

Motion picture; 33.7 mm to 1240 mm (16:9)

Still picture; 41.3 mm to 1405 mm (4:3), 38.1 mm to 1298 mm (3:2), 33.7 mm to 1240 mm (16:9)

Minimum focus distance;

Normal; Approx. 3 cm (1.2") (Wide)/Approx. 1.6 m (5.3 feet) (Tele)

Tele macro; Approx. 70 cm (28") (Tele)

Intelligent auto Macro; Approx. 1 cm (0.4") (Wide)/Approx. 70 cm (28") (Tele)

### Zoom:

i.Zoom OFF 37×, 42× i.Zoom, 90×/2000× Digital Zoom

(Using image sensor effective area)

### Image stabilizer function:

Optical (Hybrid Optical Image Stabilizer, Active Mode, Optical Image Stabilizer Lock Function)

**Monitor:**

2.7" wide LCD monitor (Approx. 230 K dots)

**Microphone:**

Stereo (with a zoom microphone)

**Speaker:**

1 round speaker, dynamic type

**White balance adjustment:**

Auto tracking white balance system

**Standard illumination:**

1,400 lx

**Minimum required illumination:**

Approx. 7 lx (1/30 with Low light mode in the Scene mode)

Approx. 1 lx with the Color Night Rec function

**AV multi connector video output level:**

Component video output level;

Y; 1.0 Vp-p, 75  $\Omega$ , Pb; 0.7 Vp-p, 75  $\Omega$ , Pr; 0.7 Vp-p, 75  $\Omega$

AV video output level;

1.0 Vp-p, 75  $\Omega$ , NTSC system

**HDMI mini connector video output level:**

HDMI™ (x.v.Color™) 1080i/480p

**AV multi connector audio output level (Line):**

316 mV, 600  $\Omega$ , 2 ch

**HDMI mini connector audio output level:**

AVCHD; Dolby Digital/Linear PCM

iFrame; Linear PCM

**USB:**

Reader/writer function

SD card; Read/Write (No copyright protection support)

HDC-TM80

Built-in memory; Read only

HDC-HS80

HDD; Read only

Hi-Speed USB (USB 2.0), USB terminal Type Mini AB

USB host function (for DVD burner)

Battery charging function (Charges from USB terminal when the main unit is off)

**Photo light:**

Available range; Approx. 1.2 m (3.9 feet)



**Dimensions:**

HDC-SD80 / HDC-TM80

51.5 mm (W)×59.0 mm (H)×109 mm (D)

[2.02" (W)×2.32" (H)×4.29" (D)] (excluding projecting parts)

HDC-HS80

60.0 mm (W)×64.0 mm (H)×109 mm (D)

[2.37" (W)×2.51" (H)×4.29" (D)] (excluding projecting parts)

**Mass (Weight):**

HDC-SD80

Approx. 192 g (Approx. 0.42 lbs.)

[without battery (supplied) and an SD card (optional)]

HDC-TM80

Approx. 193 g (Approx. 0.43 lbs.)

[without battery (supplied)]

HDC-HS80

Approx. 265 g (Approx. 0.58 lbs.)

[without battery (supplied)]

**Mass (Weight) in operation:**

HDC-SD80

Approx. 236 g (Approx. 0.52 lbs.)

[with battery (supplied) and an SD card (optional)]

HDC-TM80

Approx. 235 g (Approx. 0.52 lbs.)

[with battery (supplied)]

HDC-HS80

Approx. 307 g (Approx. 0.68 lbs.)

[with battery (supplied)]

**Operating temperature:**

0 °C to 40 °C (32 °F to 104 °F)

**Operating humidity:**

10%RH to 80%RH

**Battery operation time:**

See page 22

## ■ Motion pictures

### Recording media:

SD Memory Card (FAT12 and FAT16 system compliant)

SDHC Memory Card (FAT32 system compliant)

SDXC Memory Card (exFAT system compliant)

Refer to page 24 for details on SD cards usable in this unit.

HDC-TM80

Built-in memory; 16 GB

HDC-HS80

HDD; 120 GB

### Compression:

MPEG-4 AVC/H.264

### Recording mode and transfer rate:

[HA]; Approx. 17 Mbps (VBR)

[HG]; Approx. 13 Mbps (VBR)

[HX]; Approx. 9 Mbps (VBR)

[HE]; Approx. 5 Mbps (VBR)

[iFrame]; Approx. 28 Mbps (VBR)

Refer to page 141 for the recordable time.

### Picture size:

[HA]/[HG]/[HX]/[HE]; 1920×1080/60i

[iFrame]; 960×540/30p

### Audio compression:

AVCHD; Dolby Digital (2 ch)

iFrame; AAC (2 ch)

## ■ Still pictures

### Recording media:

SD Memory Card (FAT12 and FAT16 system compliant)

SDHC Memory Card (FAT32 system compliant)

SDXC Memory Card (exFAT system compliant)

Refer to page 24 for details on SD cards usable in this unit.

**HDC-TM80**

Built-in memory; 16 GB

**HDC-HS80**

HDD; 120 GB

### Compression:

JPEG (Design rule for Camera File system, based on Exif 2.2 standard),

DPOF corresponding

### Picture size:

Picture aspect [4:3]; 1856×1392/640×480

Picture aspect [3:2]; 2064×1376

Picture aspect [16:9]; 2304×1296/1920×1080

Refer to page 142 for the number of recordable pictures.

## AC adaptor

Information for your safety

<b>Power source:</b>	AC 110 V to 240 V, 50/60 Hz
<b>Power consumption:</b>	12 W
<b>DC output:</b>	DC 5.0 V, 1.6 A

### Dimensions:









46 mm (W)×25 mm (H)×75.5 mm (D) [1.8" (W)×1.0" (H)×3.0" (D)]

### Mass (Weight):

Approx. 115 g (Approx. 0.25 lbs.)



Specifications may change without prior notice.

## Optional accessories

Accessory No.	Figure	Description
VW-BC10PP		Battery charger
VW-VBK180*1		Rechargeable Lithium Ion Battery Pack
VW-VBK360*1		Rechargeable Lithium Ion Battery Pack
RP-CDHM15 RP-CDHM30		HDMI mini cable
VW-LDC103PP*2		Video DC Light
VZ-LL10PP		Light bulb for video DC light
VW-SK12PP		Shoe adaptor
VW-ACK180PP		Accessory kit

\*1 Please refer to page 22, concerning the battery charging time and available recording time.

\*2 To use the VW-LDC103PP, the shoe adaptor/VW-SK12PP and the battery pack/VW-VBG130, VW-VBG260 are required. To charge the battery pack/VW-VBG130, VW-VBG260, the AC adaptor/VW-AD21PP-K, VW-AD20PP-K is required.

Accessory No.	Figure	Description
RP-SDN16GU1A RP-SDN08GU1A RP-SDN04GU1A RP-SDN02GU1A		Class 4 16 GB SDHC Memory Card Class 4 8 GB SDHC Memory Card Class 4 4 GB SDHC Memory Card Class 4 2 GB SD Memory Card
RP-SDW64GU1K RP-SDW48GU1K RP-SDW32GU1K RP-SDW16GU1K RP-SDW08GU1K RP-SDW04GU1K		Class 10 64 GB SDXC Memory Card Class 10 48 GB SDXC Memory Card Class 10 32 GB SDHC Memory Card Class 10 16 GB SDHC Memory Card Class 10 8 GB SDHC Memory Card Class 10 4 GB SDHC Memory Card
VW-BN01		DVD burner

**NOTE:**

Accessories and/or model numbers may vary by country. Please consult your local dealer.

Product numbers correct as of Dec. 2010. These may be subject to change.

# Accessory Order Form (For USA and Puerto Rico Customers)

Please photocopy this form when placing an order.

1. Model # \_\_\_\_\_  
 2. Items Ordered

Accessory #	Description	Price Each	Quantity	Total Price

Subtotal	
Your State & Local Sales Tax	
Shipping & Handling	6.95
Total Enclosed	

3. Method of payment (check one)

- Check of Money Order enclosed (NO C.O.D.SHIPMENTS)  
 VISA                      Credit Card # \_\_\_\_\_  
 MasterCard              Expiration Date \_\_\_\_\_  
 Discover                      Customer Signature \_\_\_\_\_

Make Check or Money Order Payable to: PANASONIC ACCESSORIES

(Please do not send cash)

4. Shipping information (UPS delivery requires complete street address)

Ship To:  
 Mr. \_\_\_\_\_  
 Mrs. \_\_\_\_\_  
 Ms. \_\_\_\_\_  
 First                                      Last                                      Phone#: \_\_\_\_\_  
 \_\_\_\_\_  
 Street Address                                      Day (    ) \_\_\_\_\_  
 \_\_\_\_\_  
 City                                      State                      Zip                                      Night (    ) \_\_\_\_\_

TO OBTAIN ANY OF OUR ACCESSORIES YOU CAN DO ANY OF  
 THE FOLLOWING:  
 VISIT YOUR LOCAL PANASONIC DEALER  
 OR  
 CALL PANASONIC'S ACCESSORY ORDER LINE AT 1-800-332-5368  
 [6 AM-6 PM M-F, PACIFIC TIME]  
 OR  
 MAIL THIS ORDER TO: PANASONIC SERVICE AND TECHNOLOGY COMPANY ACCESSORY ORDER OFFICE  
 20421 84th Avenue South Kent, WA. 98032

In CANADA, please contact your local Panasonic dealer for more information on Accessories.

# Limited Warranty (ONLY FOR U.S.A. AND PUERTO RICO)

Panasonic Consumer Electronics Company,  
Division of Panasonic Corporation of North America  
One Panasonic Way, Secaucus, New Jersey 07094

## Panasonic Camcorder Products Limited Warranty

### Limited Warranty Coverage (For USA and Puerto Rico Only)

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

Product or Part Name	Parts	Labor
Camcorder	1 year	90 days
Rechargeable Batteries (defective exchange)	10 days	Not Applicable
SD Memory Cards (defective exchange)	90 days	Not Applicable

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. This Limited Warranty excludes both parts and labor for non-rechargeable batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is".

### Carry-In or Mail-In Service

To find a service center please visit <http://www.panasonic.com/help> or call 1-800-211-PANA (7262).

When shipping the unit, carefully pack, include all accessories, and send it prepaid, adequately insured and preferably in the original carton. When shipping Lithium Ion batteries please visit our Web Site at [www.panasonic.com/BatteryHandling](http://www.panasonic.com/BatteryHandling) as Panasonic is committed to providing the most up to date information. Include a letter detailing the complaint, a return address and provide a daytime phone number where you can be reached. A valid registered receipt is required under the Limited Warranty.

**IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD, THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.**

### Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE".**

**THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.**

(As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but for illustration only.)

**ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.**

#### ***Customer Services Directory (United States and Puerto Rico)***

**Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:**

**<http://www.panasonic.com/help>**

**or, contact us via the web at:**

**<http://www.panasonic.com/contactinfo>**

You may also contact us directly at:

1-800-211-PANA (7262)

Monday-Friday 9am-9pm, Saturday-Sunday 10am-7pm EST

**For hearing or speech impaired TTY users, TTY: 1-877-833-8855**

#### ***Accessory Purchases (United States and Puerto Rico)***

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pstc.panasonic.com>

Or, send your request by E-mail to:

[npcparts@us.panasonic.com](mailto:npcparts@us.panasonic.com)

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only)

(Monday-Friday 9am-9pm EST)

Panasonic Service and Technology Company

20421 84th Avenue South, Kent, WA 98032

(We accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

**For hearing or speech impaired TTY users, TTY: 1-866-605-1277**

As of December 2010



# Warranty (For Canadian Customers)

## Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

### PANASONIC PRODUCT – LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship under normal use and for a period as stated below from the date of original purchase agrees to, at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by Panasonic Canada Inc.

#### Camcorder Products - One (1) year, parts and labour

This warranty is given only to the original purchaser, or the person for whom it was purchased as a gift, of a Panasonic brand product mentioned above sold by an authorized Panasonic dealer in Canada and purchased and used in Canada, which product was not sold "as is", and which product was delivered to you in new condition in the original packaging.

**IN ORDER TO BE ELIGIBLE TO RECEIVE WARRANTY SERVICE HEREUNDER, A PURCHASE RECEIPT OR OTHER PROOF OF DATE OF ORIGINAL PURCHASE, SHOWING AMOUNT PAID AND PLACE OF PURCHASE IS REQUIRED**

#### **LIMITATIONS AND EXCLUSIONS**

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by Panasonic Canada Inc., or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, improper batteries, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than an Authorized Servicer, or damage that is attributable to acts of God.

Dry cell batteries are also excluded from coverage under this warranty. Rechargeable batteries are warranted for ninety (90) days from date of original purchase.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY. (As examples, this warranty excludes damages for lost time, travel to and from the Authorized Servicer, loss of or damage to media or images, data or other memory or recorded content. This list of items is not exhaustive, but for illustration only.)

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable. This warranty gives you specific legal rights and you may have other rights which vary depending on your province or territory.

#### **WARRANTY SERVICE**

For product operation and information assistance, please contact:

Our Customer Care Centre: Telephone: 1-800-995-8649  
Fax #: (905) 238-2360  
Email link: [camcorderconciierge@ca.panasonic.com](mailto:camcorderconciierge@ca.panasonic.com)

For defective product exchange within the warranty period, please contact the original dealer or our Customer Care Centre.

# Index

## ■ A

AC adaptor	21, 137
AF assist lamp	71
AF/AE tracking	52
Alert sound	45
Approximate number of recordable pictures	142
Aspect ratio	69
Auto focus	37
Auto Ground-Directional Standby (AGS)	65
Auto protect	105
Auto slow shutter	66
Automatic face framing	65
Automatic white balance	37
AV multi connector	17, 92, 109
AV multi connector output	95
AVCHD	8

## ■ B

Backlight compensation	58
Battery	20, 136
Battery capacity indication	23
Built-in memory	8

## ■ C

Cancel protect	105
Card	24
Card status	47
Changing the display style	43
Charging time	22
Cleaning	134
Color night rec function	59
Component out	95
Component terminal	92
Conversion Assist Function	111
Copy	
Disc	102
Dubbing	106, 109
From built-in memory to SD card	98
From HDD to SD card	98
From SD card to built-in memory	98
From SD card to HDD	98
Creating still picture from motion picture	77

## ■ D

Date and time display	43
Date and time setting	29
Delete	85
Deleting personal information	88
Demo mode	48
Digital cinema color	66
Digital zoom	61
Direct playback	77
Disc status	105
Dividing a scene (AVCHD)	86
Dividing a scene to partially delete (iFrame)	87

DPOF setting	89
DVD burner	100

## ■ E

Economy	44
Extra optical zoom	49

## ■ F

Face recognition	62
Fade	55
Fade color	55
Focus	34, 75
Format disc	105
Formatting	46, 47
Frame-by-frame playback	76

## ■ G

Gain	74
Grip belt	19
Guide display	41
Guideline	59

## ■ H

HD Writer AE 3.0	110, 121
HDD	8
HDMI mini connector	17, 92, 96
HDMI resolution	95
Highlight playback	81
Highlight&Time frame index	78
Hi-speed burst shooting mode	70
HYBRID O.I.S.	50

## ■ I

i.Zoom	61
iFrame	8
Image stabilizer function	50
Indications	123
Initial setting	46
Intelligent auto mode	36
Intelligent contrast control	55
Intelligent exposure	58
Iris	74

## ■ L

Language	48
LCD monitor	18, 30, 138
LCD set	45
Limited Warranty (Canada)	153
Limited Warranty (USA and Puerto Rico)	151

## ■ M


Manual focus	75
Manual recording	72
Media select	31
Media status	48
Menu	28, 41
MF assist	75
Microphone level	67
Mode switch	27

Motion picture compatibility	40	Soft skin mode	58
■ <b>N</b>		Still picture compatibility	40
Name display	65	Stylus pen	27, 48
Number reset	46	■ <b>T</b>	
■ <b>O</b>		Tele macro	59
O.I.S. LOCK	53	Touch function icons	51
Operation icons	54	Touch Menu	28
Optical image stabilizer demo	48	Touch screen	27
■ <b>P</b>		Touch screen calibration	48
Photo light	57	Touch Shutter	53
Photo light level	57	Touch Zoom	51
Picture adjustment	68	Tripod receptacle	18
Picture quality	70	TV aspect	94
Picture size	69	■ <b>V</b>	
Playback Operations	76	Video light	57
Playback zoom	79	VIERA Link	96
Playing back motion pictures		Volume adjustment	40
by date	80	■ <b>W</b>	
Power button	26	White balance	73
Power LCD	45	Wind noise canceler	67
PRE-REC	55	World time setting	42
Protect	88	■ <b>Z</b>	
■ <b>Q</b>		Zoom	49
Quick power on	44	Zoom microphone	67
Quick start	44	Zoom mode	61
■ <b>R</b>			
Recordable time	22, 141		
Recording button icon	30		
Recording format	8		
Recording modes	61		
Recording time elapsed	32		
Recovery	127		
Red-eye reduction	58		
Relay information canceling	91		
Relay recording	62		
Relay scene combining	90		
Remaining number of still pictures	35		
Remaining time left for recording	32		
Repeat playback	78		
Resume playback	79		
■ <b>S</b>			
Scene mode	60		
Scene protect	88		
SD Memory Card	24		
SD Speed Class Rating	24		
SDHC Memory Card	24		
SDXC Memory Card	24		
Self recording	30		
Self-timer recording	58		
Shooting guide	66		
Shutter sound	71		
Shutter speed	74		
Simultaneous recording	35		
Skip playback	76		
Slide show	39, 83		
Slow-motion playback	76		
Smile shot	56		

# Spanish Quick Use Guide/Guía española para el uso rápido


## ■ Insertar la batería

Meta la batería insertándola en la dirección señalada en la figura.

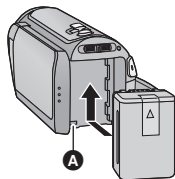


- A** Introduzca la batería hasta que haga clic y se cierre.

## ■ Carga de la batería

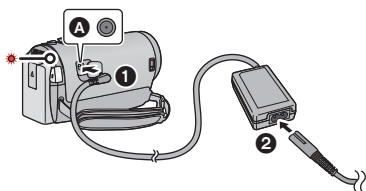

- A** Terminal de entrada de CC  
**1** Conecte el adaptador de CA al terminal de entrada de CC.  
**2** Conecte el cable de CA al adaptador de CA, luego a la toma de CA.
- El indicador de estado parpadeará de color rojo en un intervalo de 2 segundos, indicando que comenzó la carga. El indicador de estado se apaga cargado completamente la batería.

## ■ Insertar/extraer una tarjeta SD

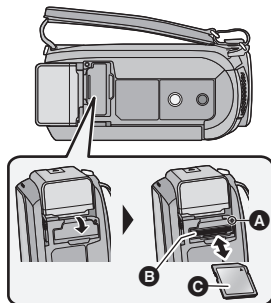


### Lámpara de acceso [ACCESS] **A**

- Cuando el dispositivo accede a la tarjeta SD o a la memoria integrada, se enciende el testigo de acceso.
  - Verificar que la lámpara de acceso se haya apagado.
- 1) Abra la tapa de la tarjeta SD e introduzca (retire) la tarjeta SD en (de) la ranura correspondiente **B**.
    - Coloque el lado de la etiqueta **C** en la dirección mostrada en la figura y empújela hasta que tope manteniéndola derecha.
    - Presione el centro de la tarjeta SD, luego sáquela fuera recta.
  - 2) Cierre de forma segura la tapa de la tarjeta SD.
    - Círrrelo firmemente hasta que haga clic.

## ■ Encender/apagar la unidad

### Encender y apagar el dispositivo con el botón de alimentación

Abra el monitor LCD y presione el botón de alimentación para encender la unidad.

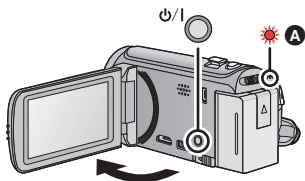

- A** El indicador de estado se ilumina.
- Para apagar la unidad, mantenga pulsado el botón de alimentación hasta que el indicador de estado se apague.

### Encendido y apagado del monitor LCD


El dispositivo se enciende al abrir el monitor LCD, y se apaga al cerrarlo.

#### Para encender la unidad






- A** El indicador de estado se ilumina.

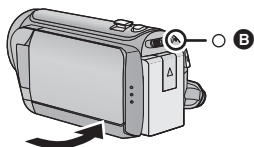
#### Para apagar la unidad






- B** El indicador de estado se apaga.

## ■ Selección del modo

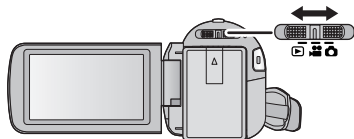Utilice el selector de modo para cambiar el modo a  ,  o  .




	<b>Modo de grabación de películas (→ 32)</b>
	<b>Modo de grabación de fotografías (→ 34)</b>
	<b>Modo de reproducción (→ 38, 76)</b>

## ■ Cómo usar la pantalla táctil

Puede actuar directamente tocando el monitor LCD (pantalla táctil) con el dedo. Es más sencillo utilizar el lápiz electrónico (suministrado) para operaciones detalladas o bien si es difícil de actuar con los dedos.


### Toque

Toque y suelte la pantalla táctil para seleccionar el icono o la imagen.

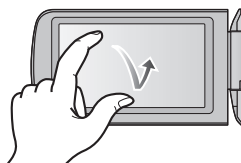



### Deslice mientras toca

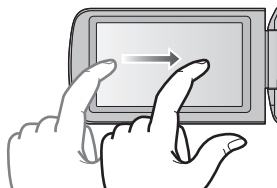
Mueva su dedo mientras pulsa la pantalla táctil.



## Menú táctil

Toque  para visualizar el menú de deslizamiento.

Toque ◀ (lado izquierdo)/ ▶ (lado derecho) de  en el menú táctil para cambiar los iconos de operación.

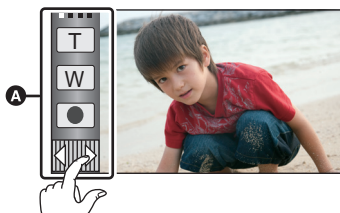



A Menú táctil

## ■ Selección del idioma

- 1) Toque [MENU], luego toque [CONFIGURAR] → [LANGUAGE].
- 2) Toque el idioma deseado.


## ■ Seleccionar un medio para grabar [HDC-TM80/HDC-HS80]


- 1) Cambie el modo a  o a .
- 2) Seleccione el menú.



**MENU** : [SELEC MEDIO]

- 3) Toque el medio para grabar las películas o fotografías.
  - Toque [VÍDEO/TARJETA SD] o [IMAGEN/TARJETA SD] para grabar en la tarjeta SD.  
**[HDC-TM80]**  
Toque [VÍDEO/MEM INTERNA] o [IMAGEN/MEM INTERNA] para grabar en la memoria integrada.  
**[HDC-HS80]**  
Toque [VÍDEO/DISCO DURO] o [IMAGEN/DISCO DURO] para grabar en la HDD.
  - El medio se selecciona de forma separada para las películas o fotografías y se resalta en amarillo.
- 4) Toque [ENTRAR].

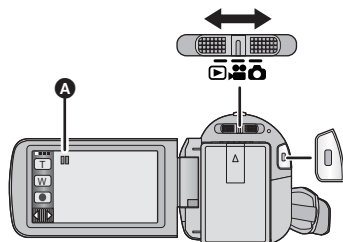

## ■ Grabación de películas


- 1) Cambie el modo a .
- 2) Abra el monitor LCD.
- 3) Pulse el botón de inicio/parada de grabación para iniciar la grabación.




A Cuando comienza a grabar,  cambia a .

## ■ Grabación de películas

- 1) Cambie el modo a .
- 2) Abra el monitor LCD.
- 3) Para tomar una imagen pulse el botón  a tope.

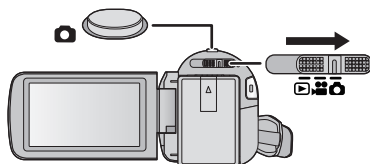




## ■ Reproducción de película/ fotografía

- 1) Cambie el modo a .
- 2) Toque el icono de selección del modo de reproducción **A**.



- 3) **[HDC-SD80]**  
Seleccione el [VIDEO/FOTO] que desea reproducir.
  - [HDC-TM80] / [HDC-HS80]**  
Seleccione el [SOPORTE] y [VIDEO/FOTO] que desea reproducir.
- Toque [ENTRAR].
  - 4) Toque la escena o la fotografía que desea reproducir.



- **B** **[AVCHD]** se visualiza cuando se toca [AVCHD] o **[iFrame]** se visualiza cuando se toca [iFrame] en el paso 3.
- Para visualizar la siguiente (anterior) página:
  - Deslice la vista en miniatura hacia arriba (hacia abajo) mientras la toca.
  - Cambie el menú táctil y luego toque  (arriba)/  (abajo) en la barra de desplazamiento de la miniatura. 

- 5) Seleccione la operación de reproducción tocando el icono de operación.



- **C** Icono de funcionamiento
- Los iconos de operación y la visualización de la pantalla desaparecerán cuando no se realiza una función por un período específico de tiempo. Para volver a visualizarla, toque la pantalla.

### (Reproducción de películas)

- ▶/||: Reproducción/Pausa
- ◀◀: Rebobinado (durante la reproducción)
- ▶▶: Avance rápido (durante la reproducción)
- : Detener la reproducción y visualizar las miniaturas.

### (Reproducción de fotografías)

- ▶/||: Iniciar o hacer una pausa en la presentación de diapositivas (reproducción de las fotografías que contiene en orden numérico).
- ◀||: Reproducción de la imagen anterior.
- ||▶: Reproducción de la siguiente imagen.
- : Detener la reproducción y visualizar las miniaturas.

**Panasonic Consumer Electronics Company,  
Division of Panasonic Corporation of North America**  
One Panasonic Way, Secaucus, NJ 07094

**Panasonic Canada Inc.**  
5770 Ambler Drive, Mississauga, Ontario, L4W 2T3



VQT3M62  
F0411TC0