

# Guide for AG-CX10 clip import from SD card on (Win) EDIUS Workgroup 9 Ver. 9.51

The screenshot shows the EDIUS Workgroup 9.51 interface. The Source Browser on the left displays a folder tree with 'P2' selected. A yellow box highlights this 'P2' folder, and a yellow arrow points to the 'P2' folder in the main folder tree. The folder tree shows the following structure:

- FOLDER
- Cinema RAW
- Datacam
- Audio CD/DVD
  - D:[I-O DATA DVDP-AUT]
- GF
- Infinity
- K2 (FTP)
- P2
  - F:[A050]
  - G:[CAA0008853]
- RED
- Removable Media
  - F:[A050]
    - AVCHD
    - Video

## <Import P2>

① Select [P2]¥[drive name] on Source Browser to display thumbnail.


## <Import AVCHD>

① Select [Removable Media]¥[drive name]¥[AVCHD] on Source Browser to display thumbnail.

## <Import MOV,MP4>

① Select [Removable Media]¥[drive name]¥[Video] on Source Browser to display thumbnail.

# Guide for AG-CX10 clip import from SD card on (Win) EDIUS Workgroup 9 Ver. 9.51

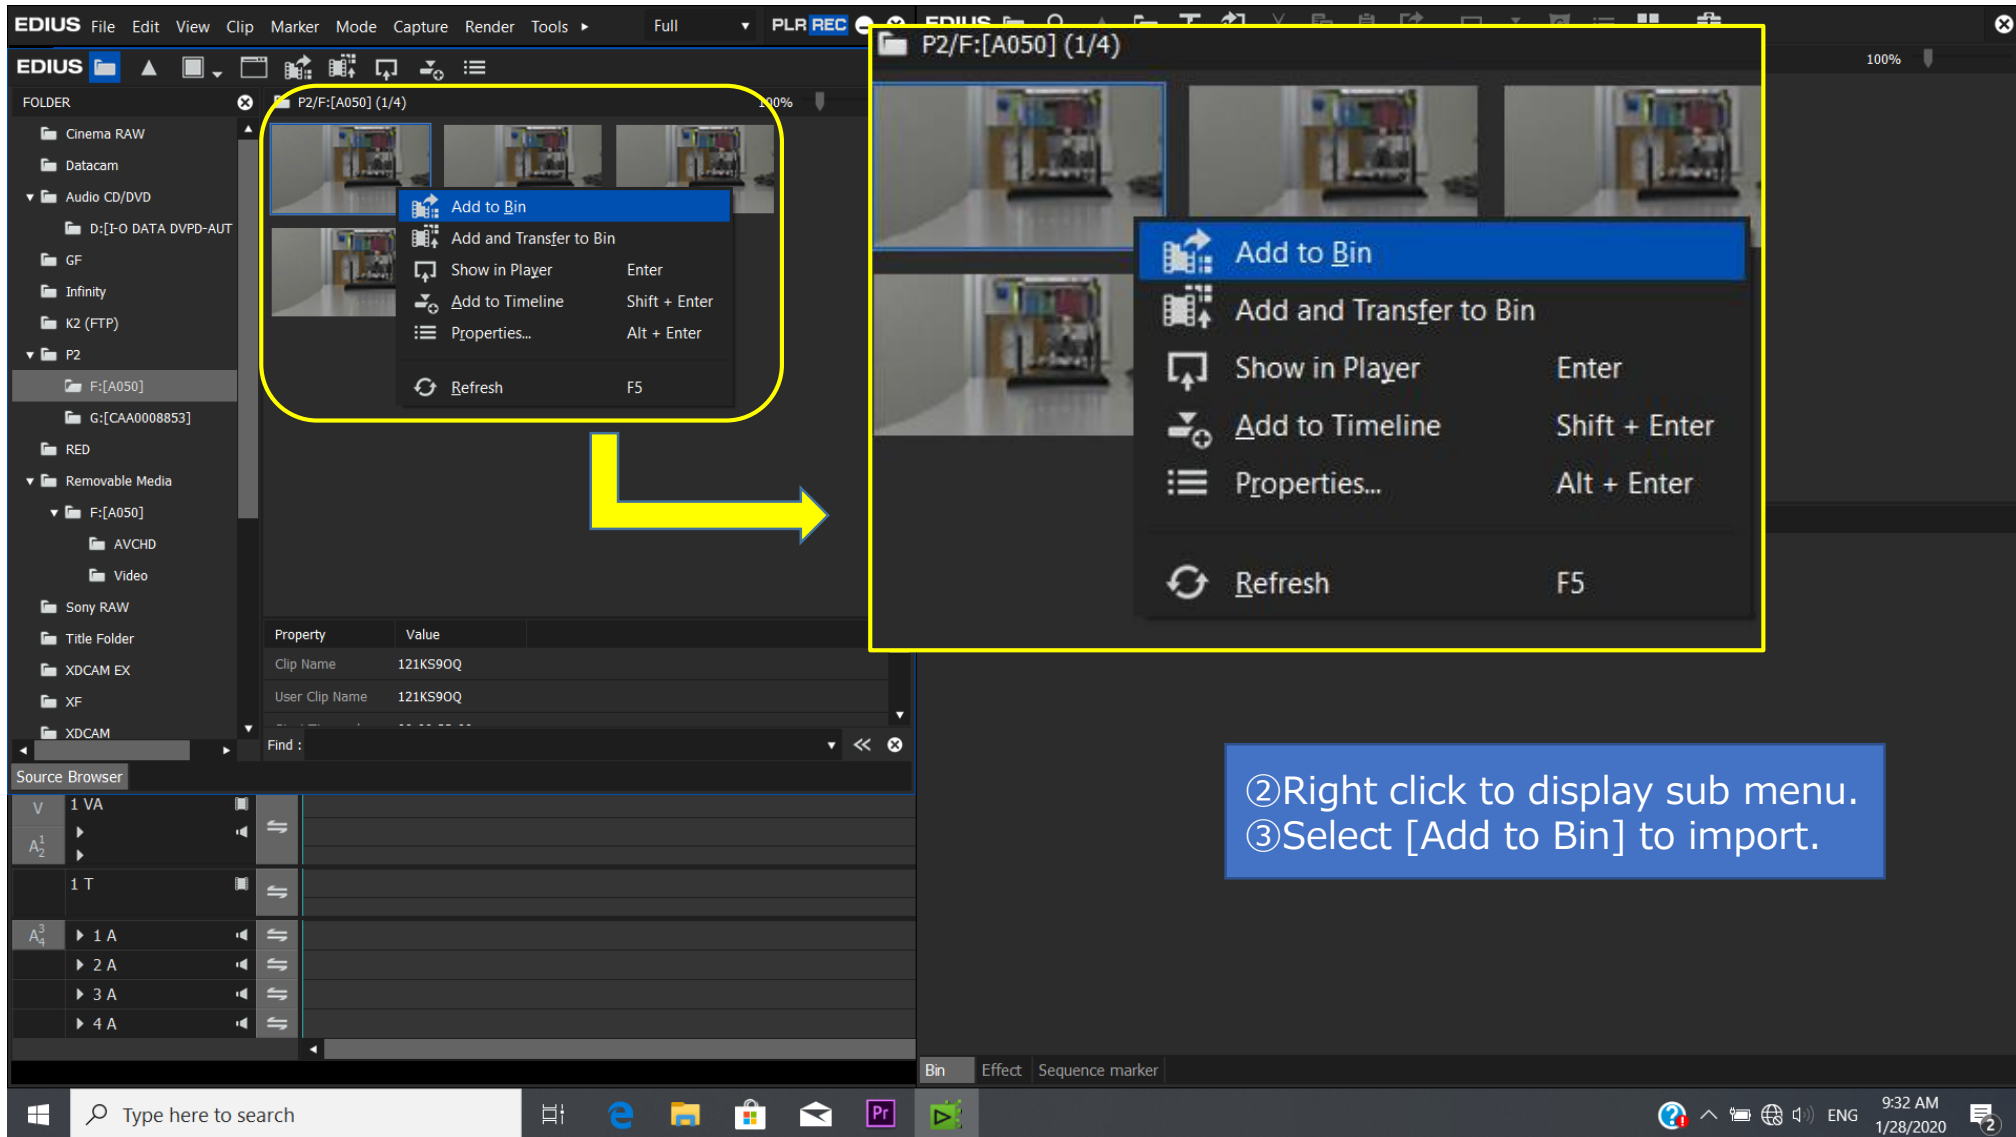

The screenshot shows the EDIUS Workgroup 9.51 interface. The Source Browser on the left displays a folder structure for 'P2' containing 'F:[A050]'. A yellow box highlights the context menu for a clip in the 'P2/F:[A050] (1/4)' folder. The context menu options are:

- Add to Bin
- Add and Transfer to Bin
- Show in Player Enter
- Add to Timeline Shift + Enter
- Properties... Alt + Enter
- Refresh F5

A yellow arrow points from the 'Add to Bin' option in the context menu to the 'Add to Bin' option in the sub-menu. The sub-menu options are:

- Add to Bin
- Add and Transfer to Bin
- Show in Player Enter
- Add to Timeline Shift + Enter
- Properties... Alt + Enter
- Refresh F5

②Right click to display sub menu.  
③Select [Add to Bin] to import.

# Guide for AG-CX10 clip import from SD card on (Win) EDIUS Workgroup 9 Ver. 9.51

**Import**

**Select clips and right-click.**

**Set as Sequence**

**Recommended procedure to import spanned clips -**

- ① Display thumbnails in a bin from Source Browser.
- ② Sequence clips in playback order.
- ③ Select all the necessary clips and right-click to display sub menu.
- ④ Select [Set as Sequence].
- ⑤ Clips are consolidated as one clip.